




IC1301
PCM1734EB-E2
AUDIO D/A CONVERTER

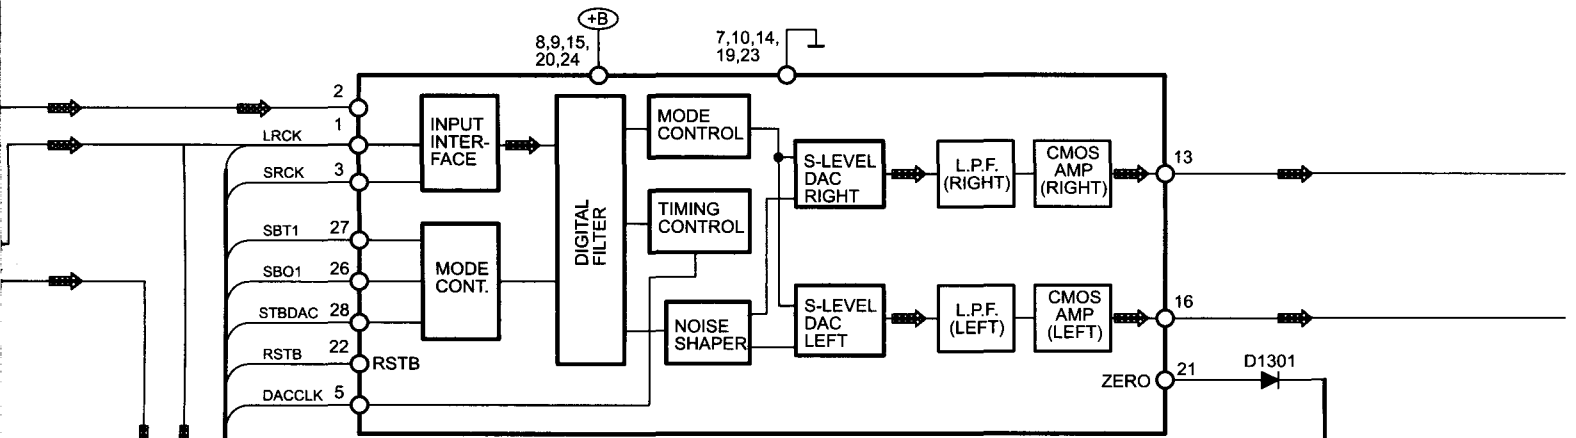



IC1303
PCM1734EB-E2
AUDIO D/A CONVERTER

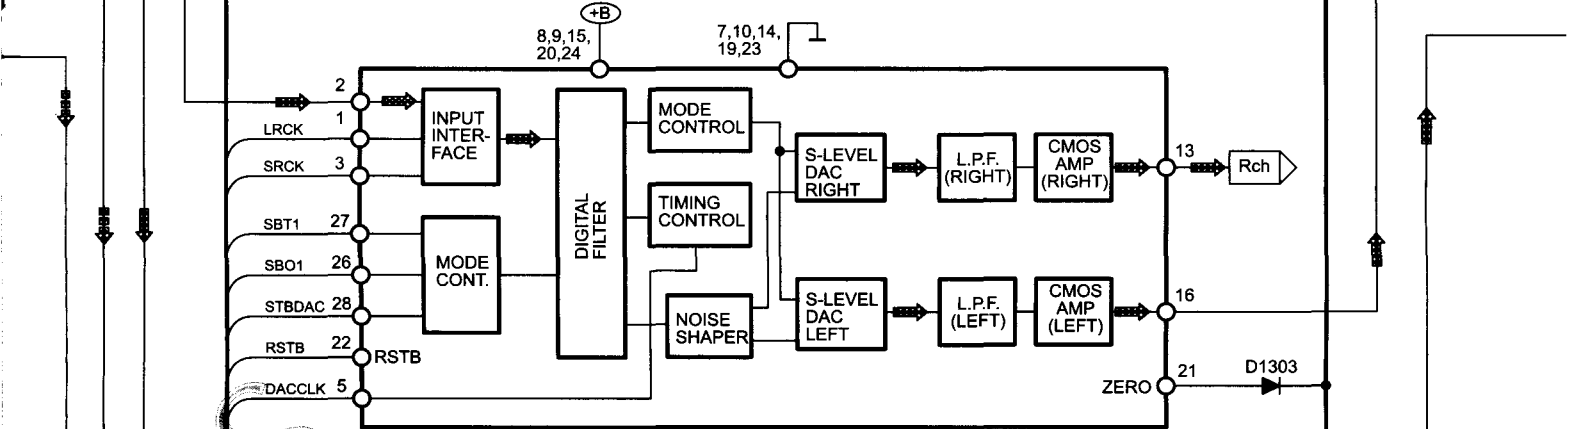


IC1302
PCM1734EB-E2
AUDIO D/A CONVERTER

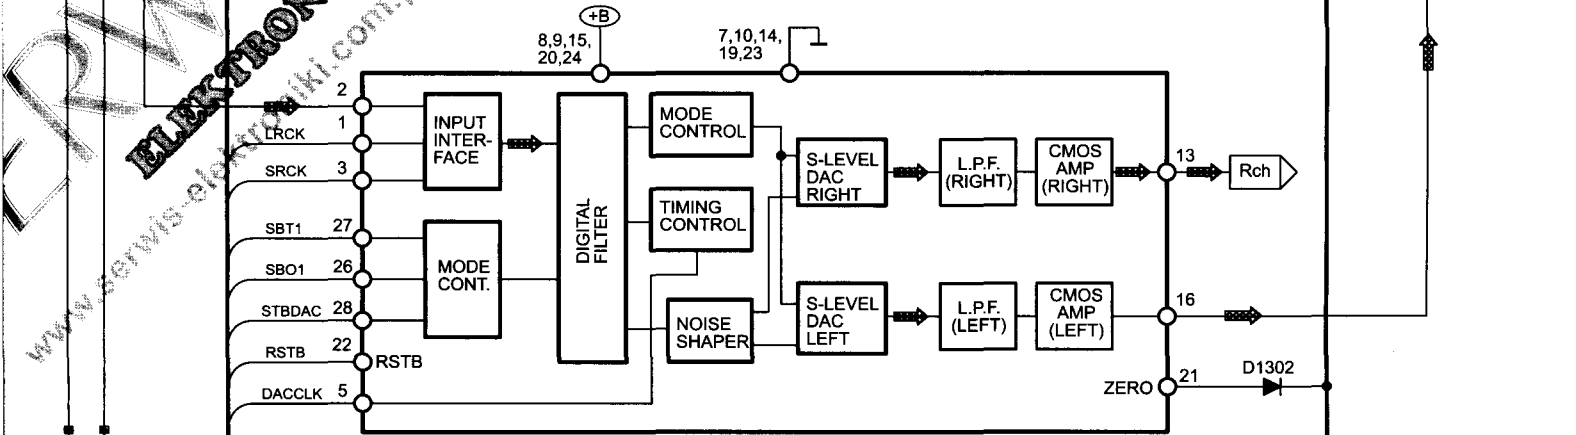

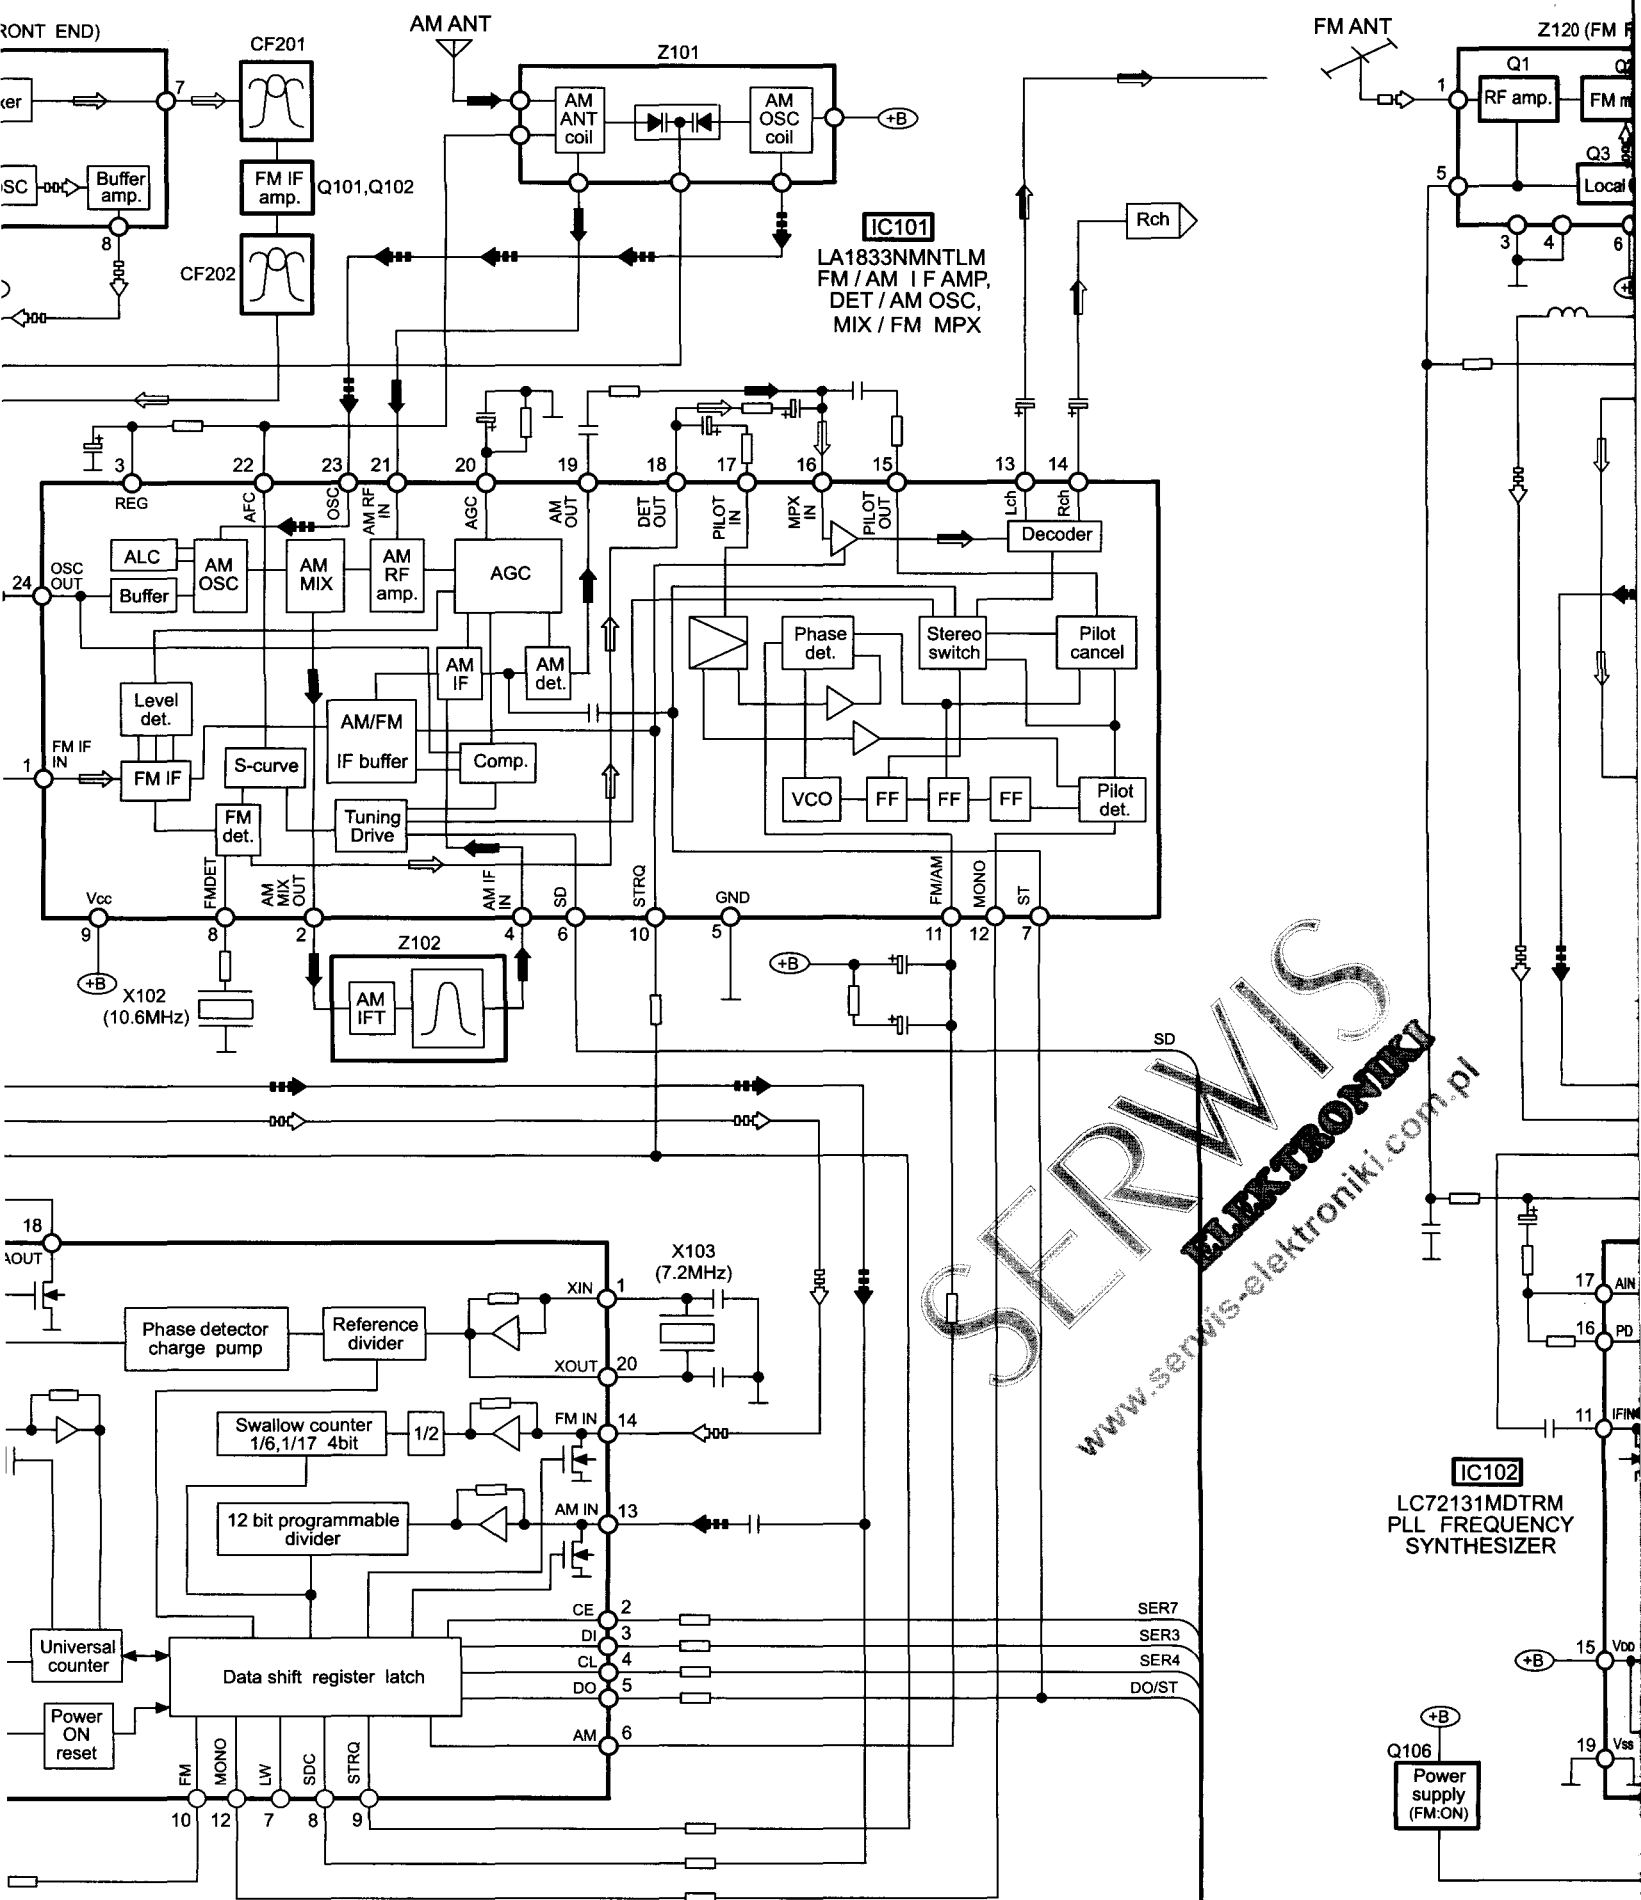


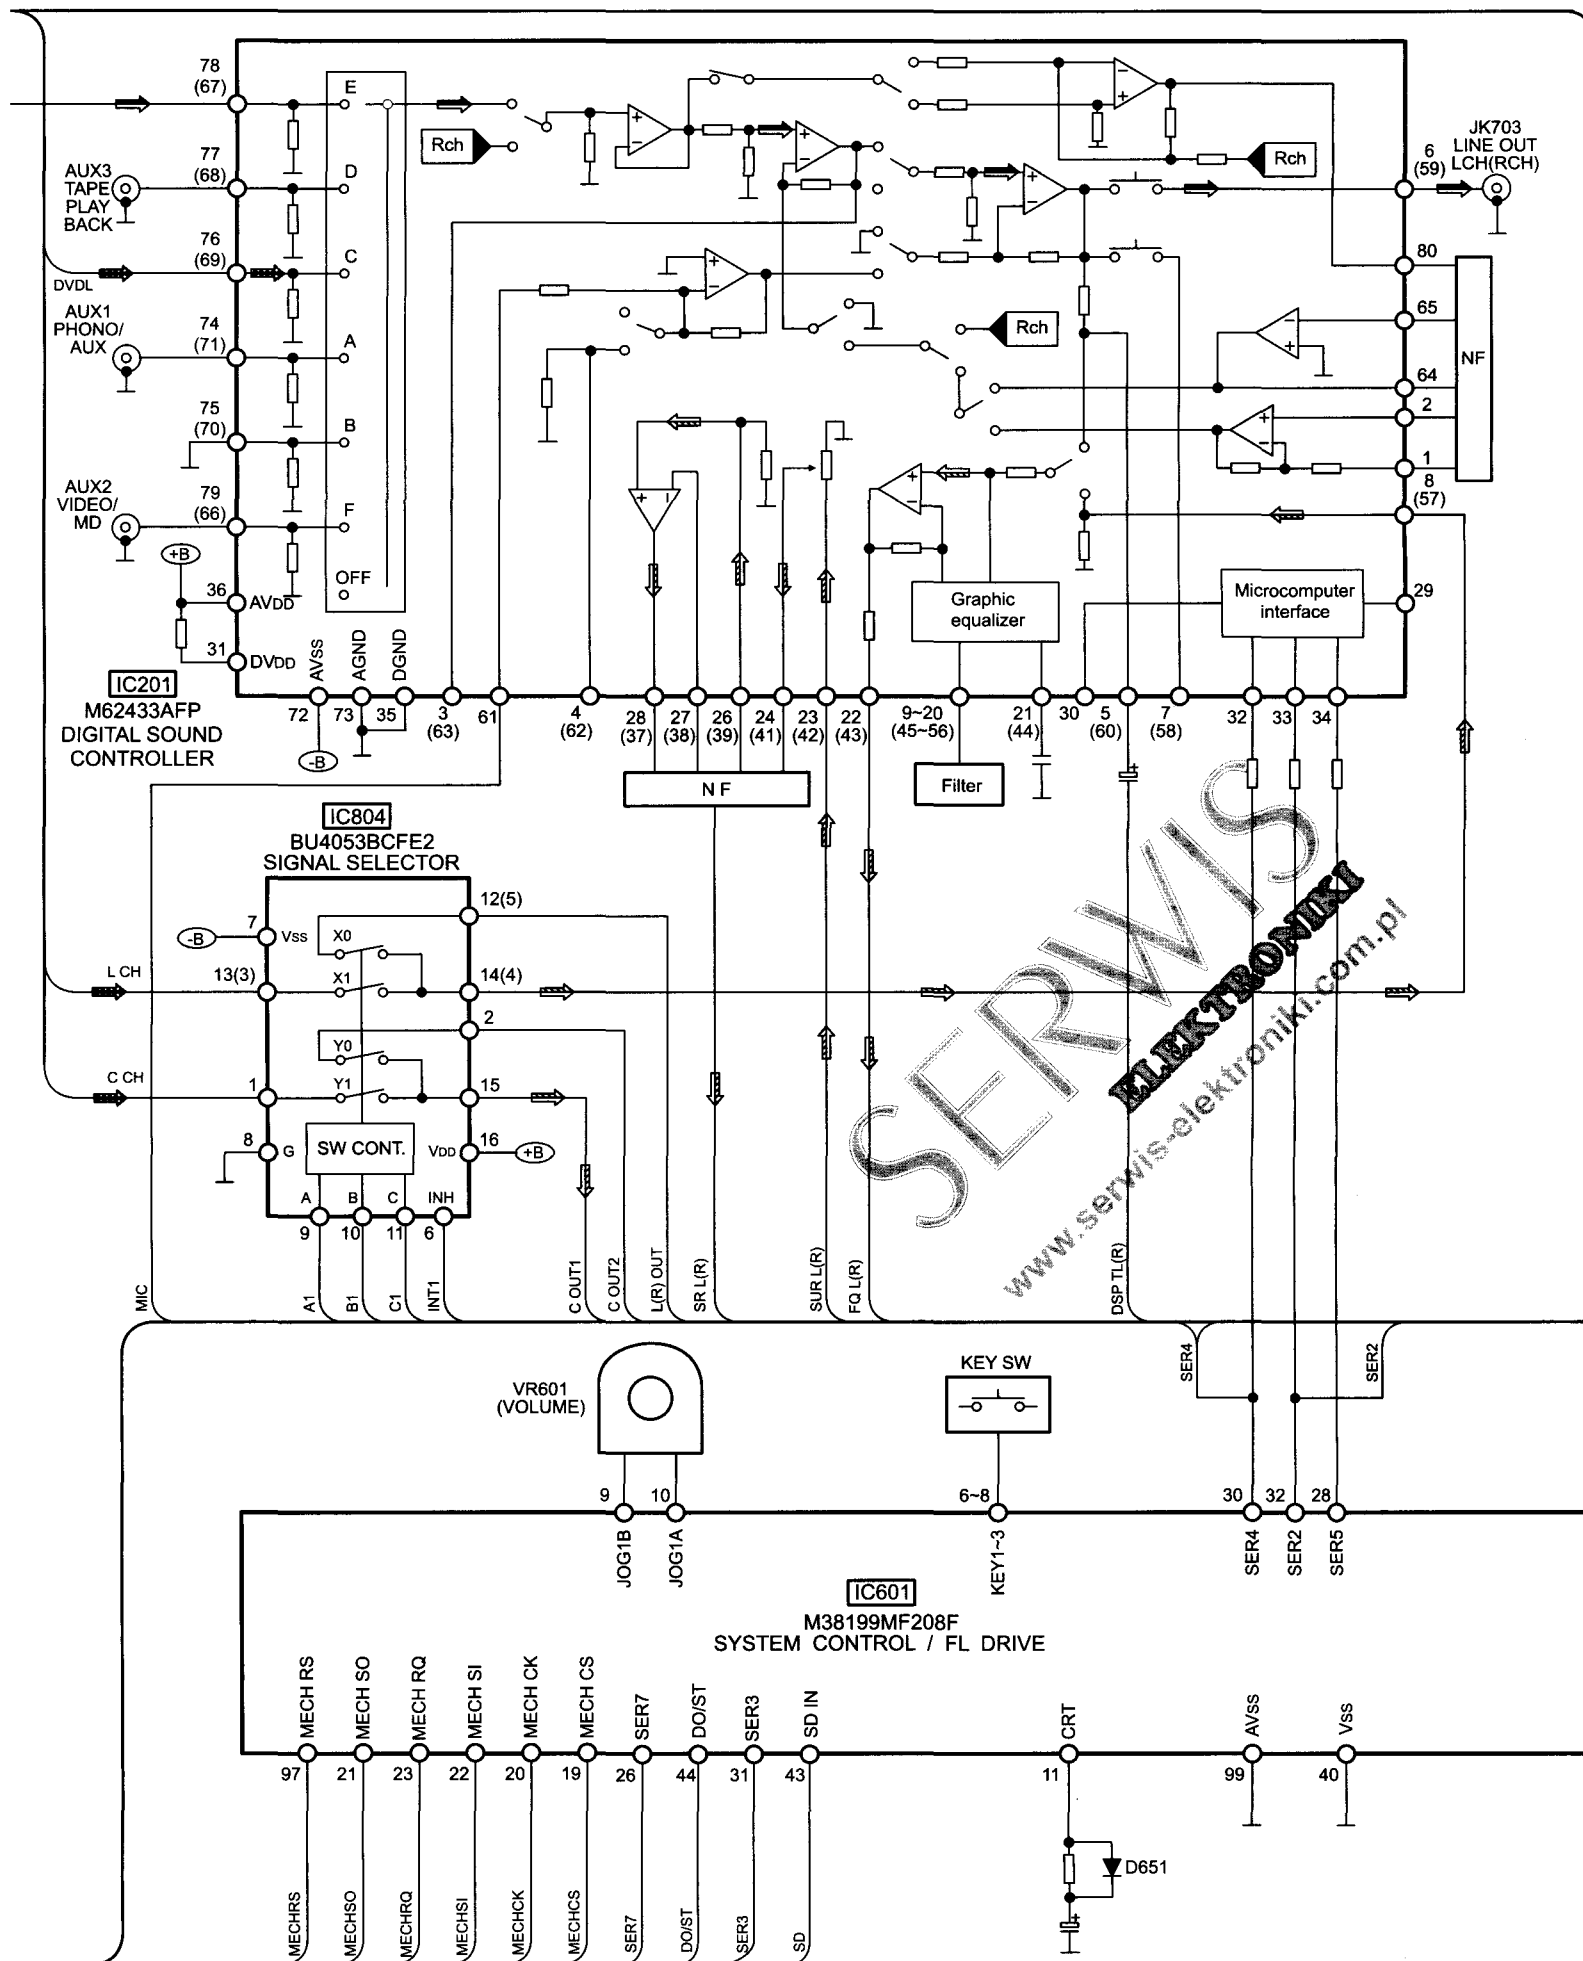


IC801
TC9472F-001
DIGITAL SOUND
CONTROLLER

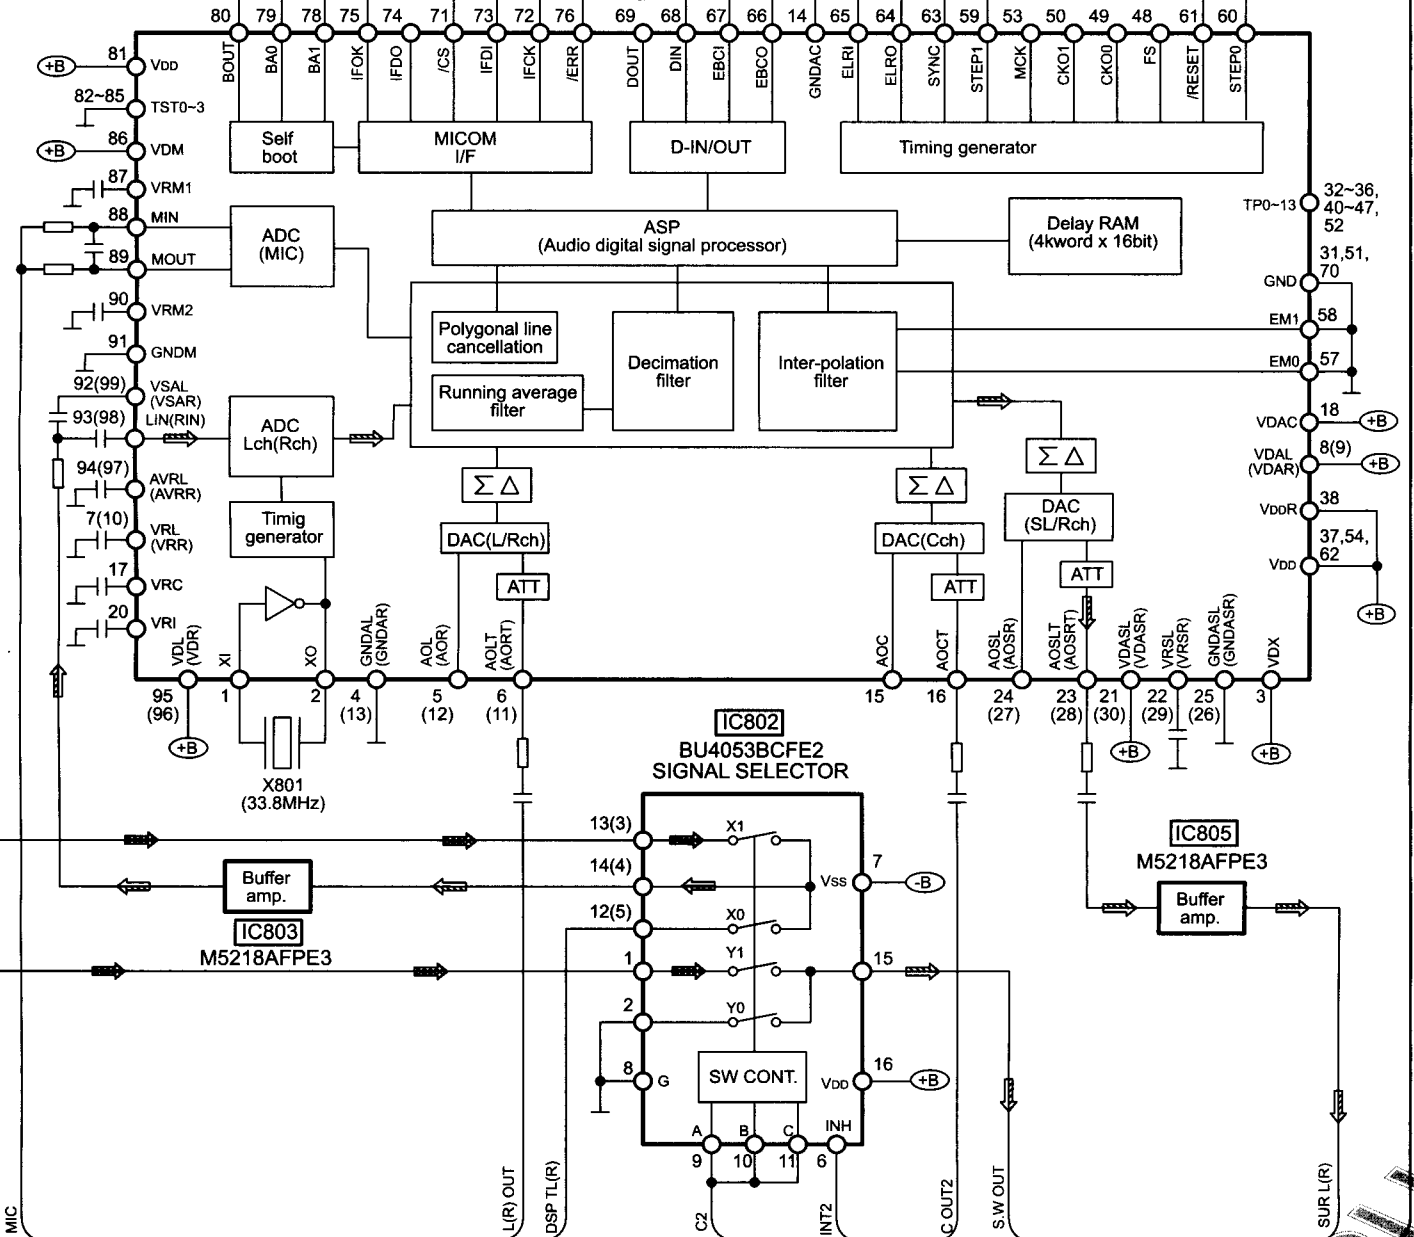


IC802
BU4053BCFE2
SIGNAL SELECTOR

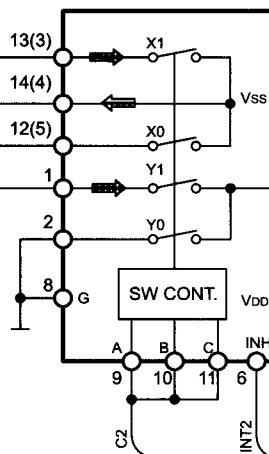

IC805
M5218AFPE3
Buffer amp.

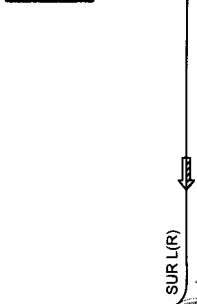

IC601
M38199MF208F
SYSTEM CONTROL / FL DRIVE

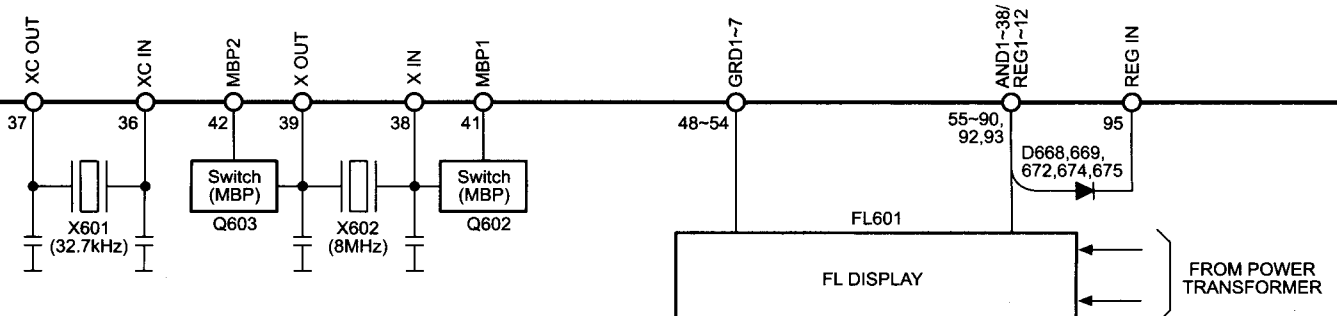


— : +B signal line → : Audio signal line ⇨ : Center speaker signal line
 - - - : -B signal line ⇨ : Surround speaker signal line ⇨ : Subwoofer speaker signal line




D MOTOR CIRCUIT

G DVD CIRCUIT

E CD DETACT CIRCUIT



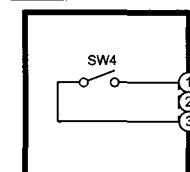



F SPINDLE POSITION CIRCUIT

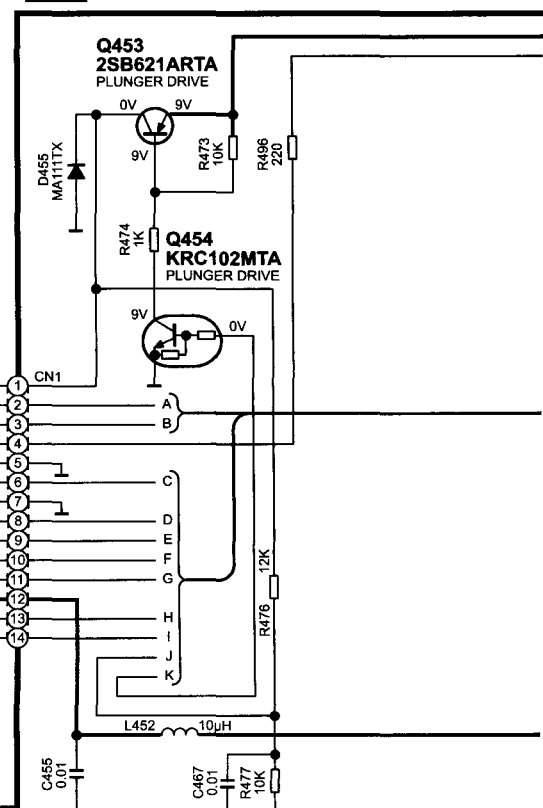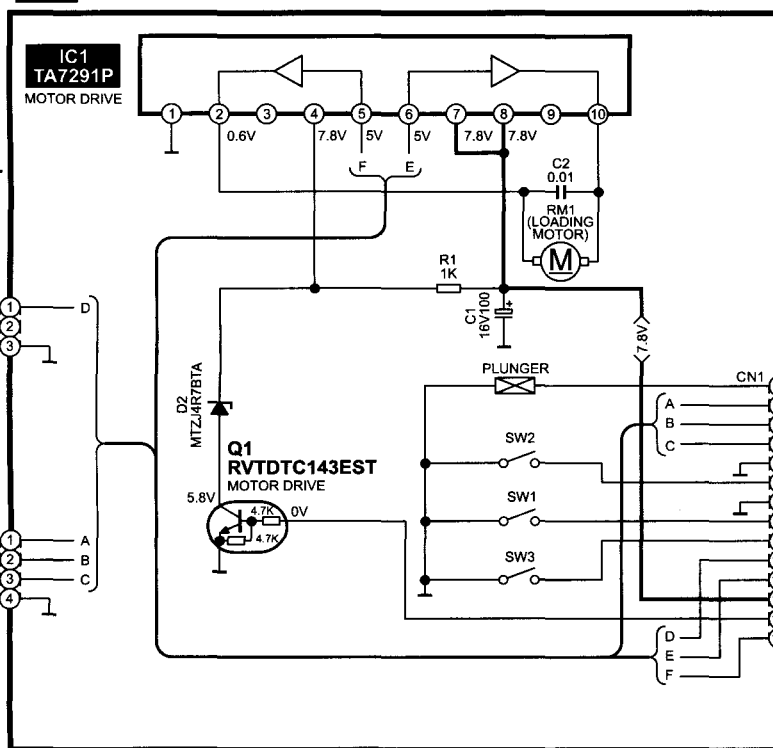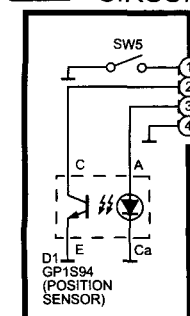




TO A
 DVD SERVO
 CIRCUIT
 (P6251)


TO B
 DAC CIRCUIT
 (CN1304)

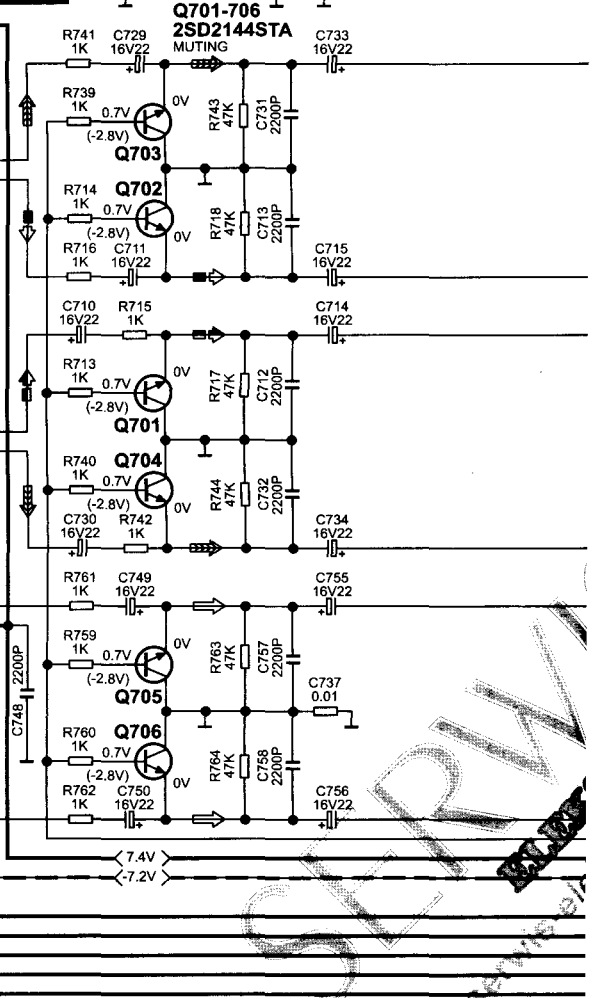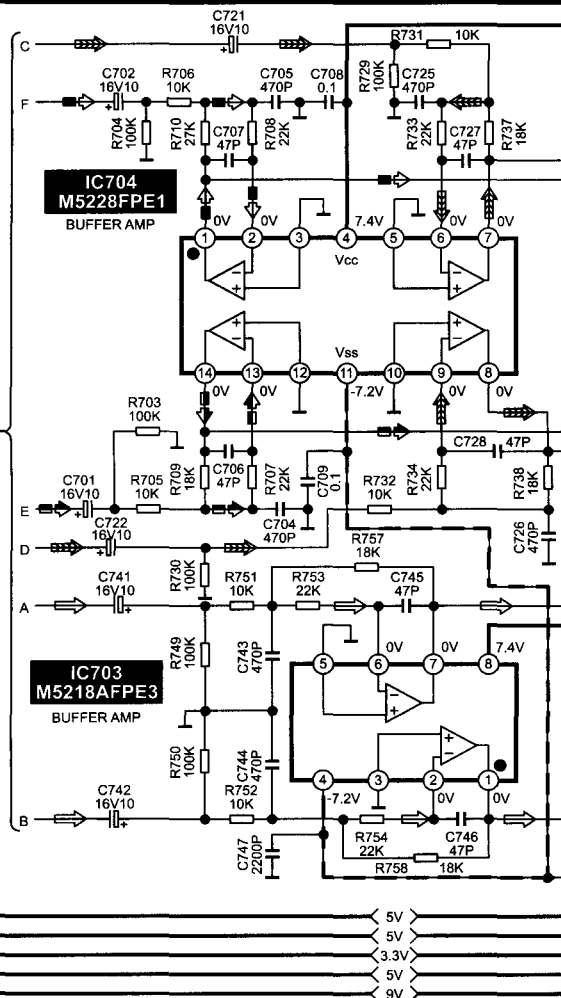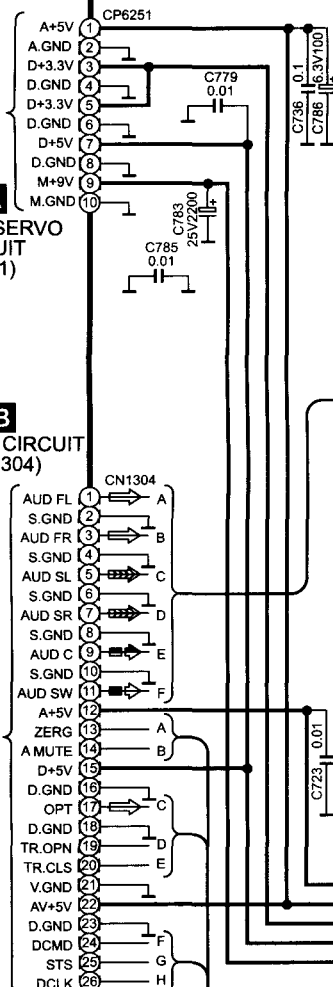


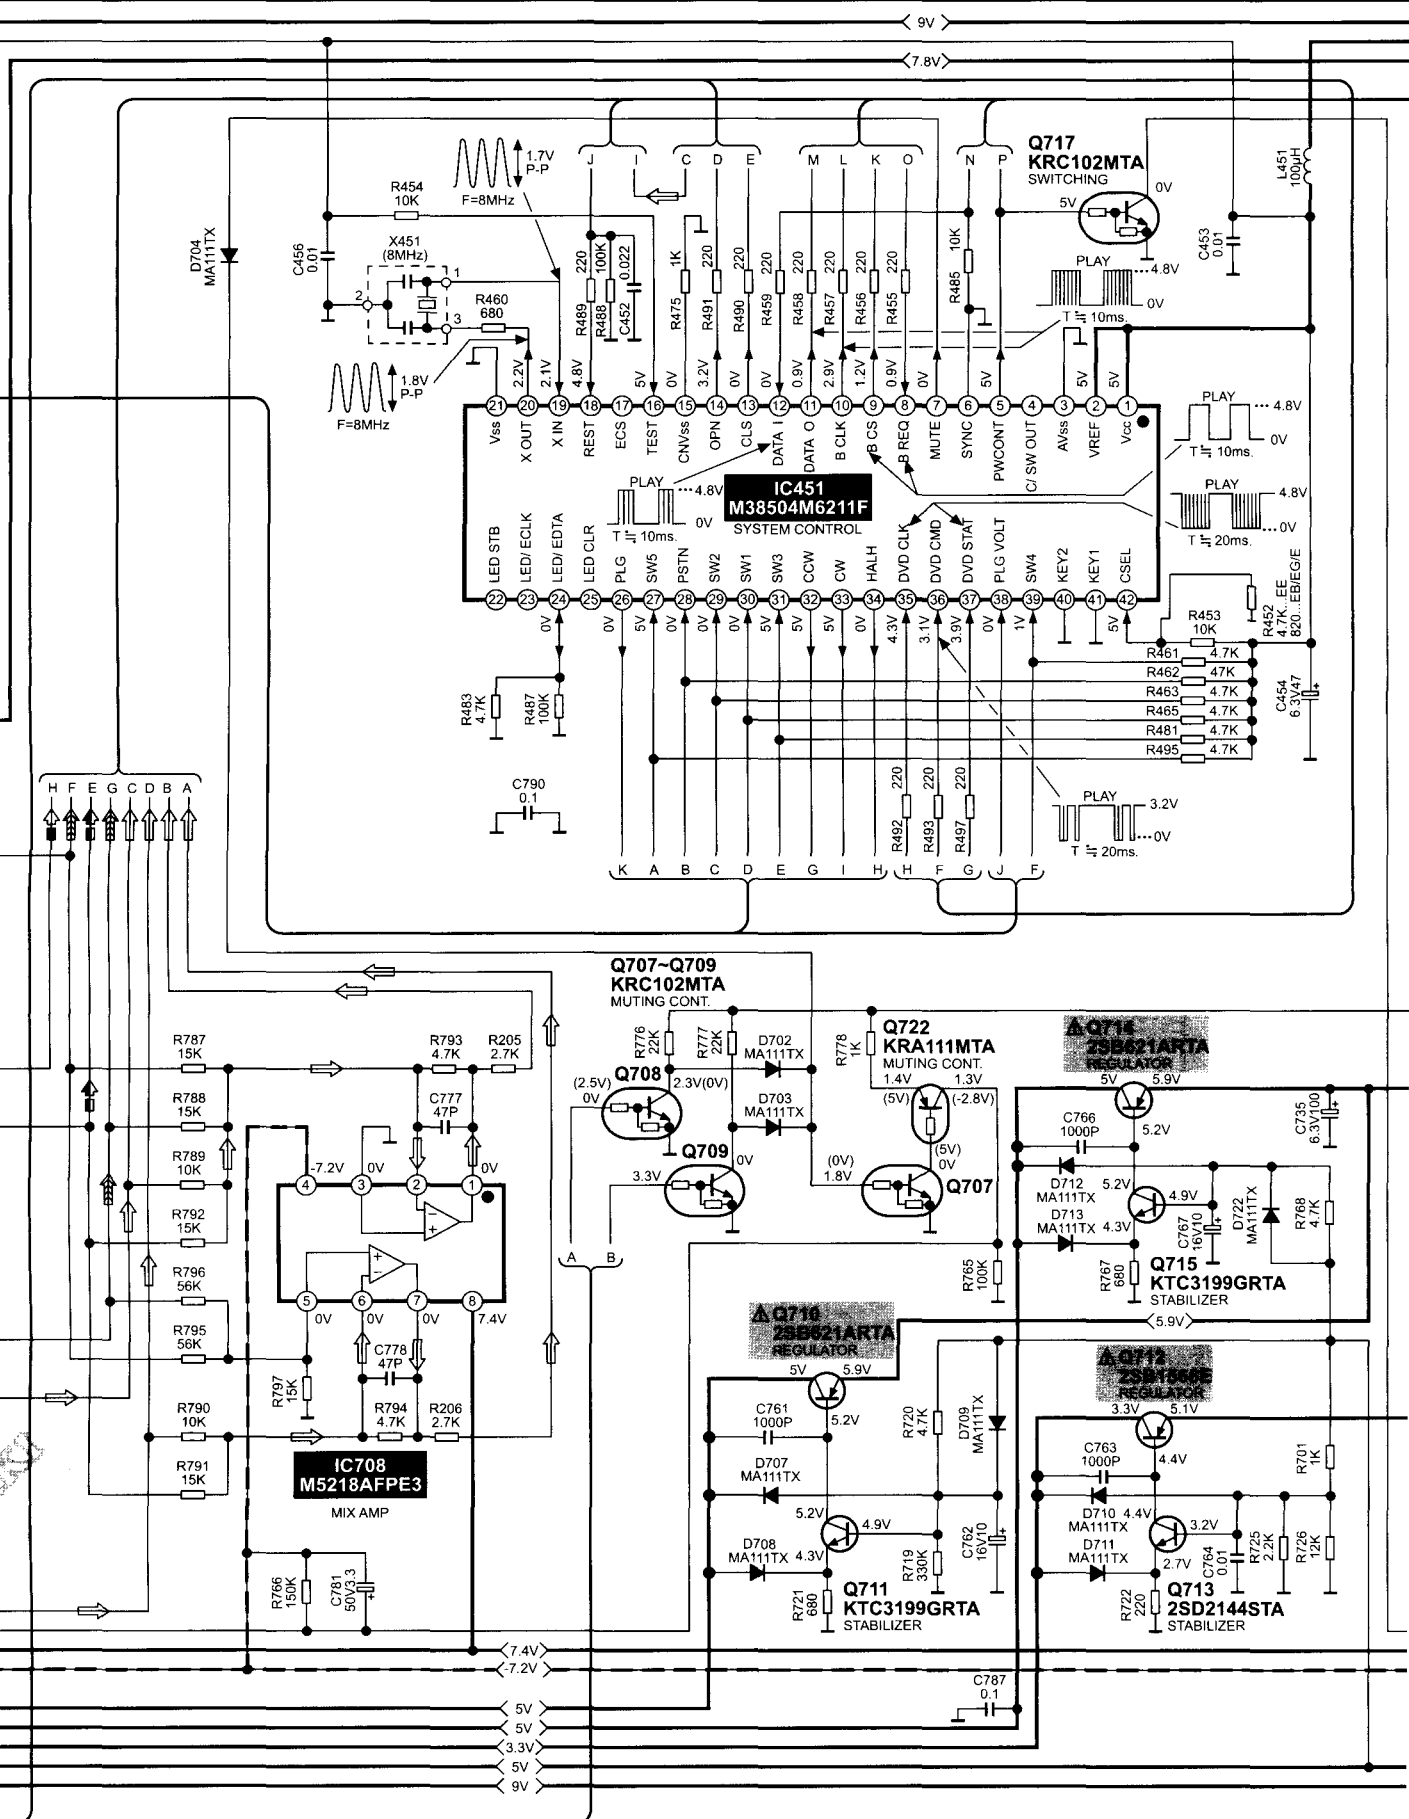

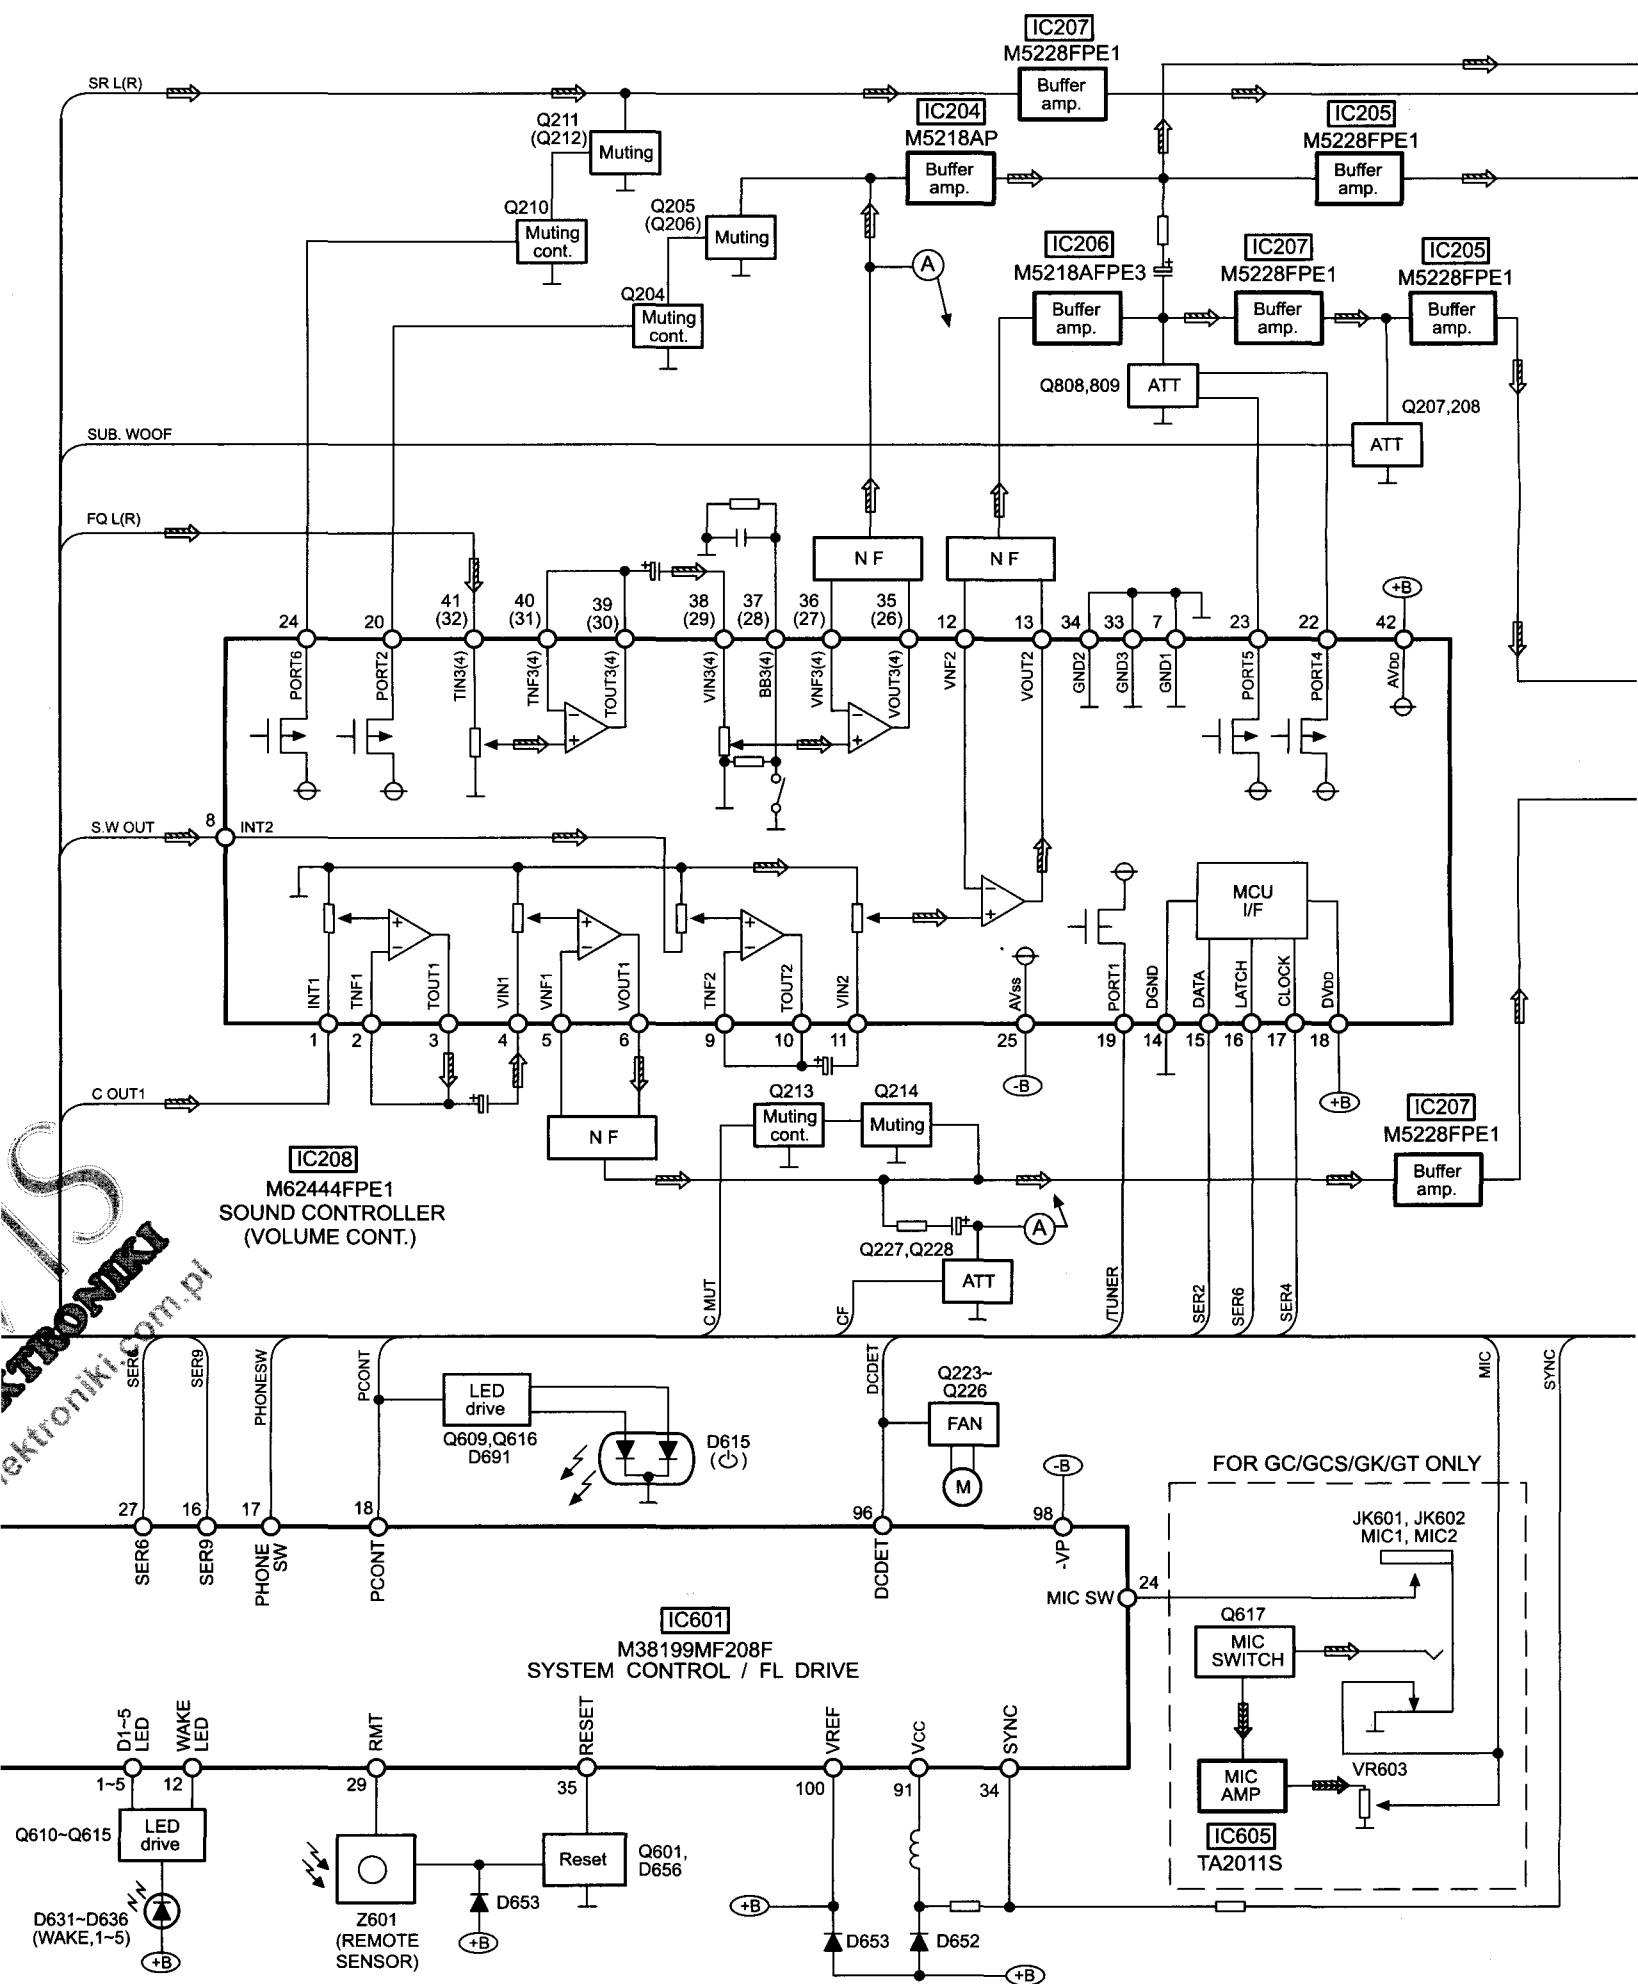

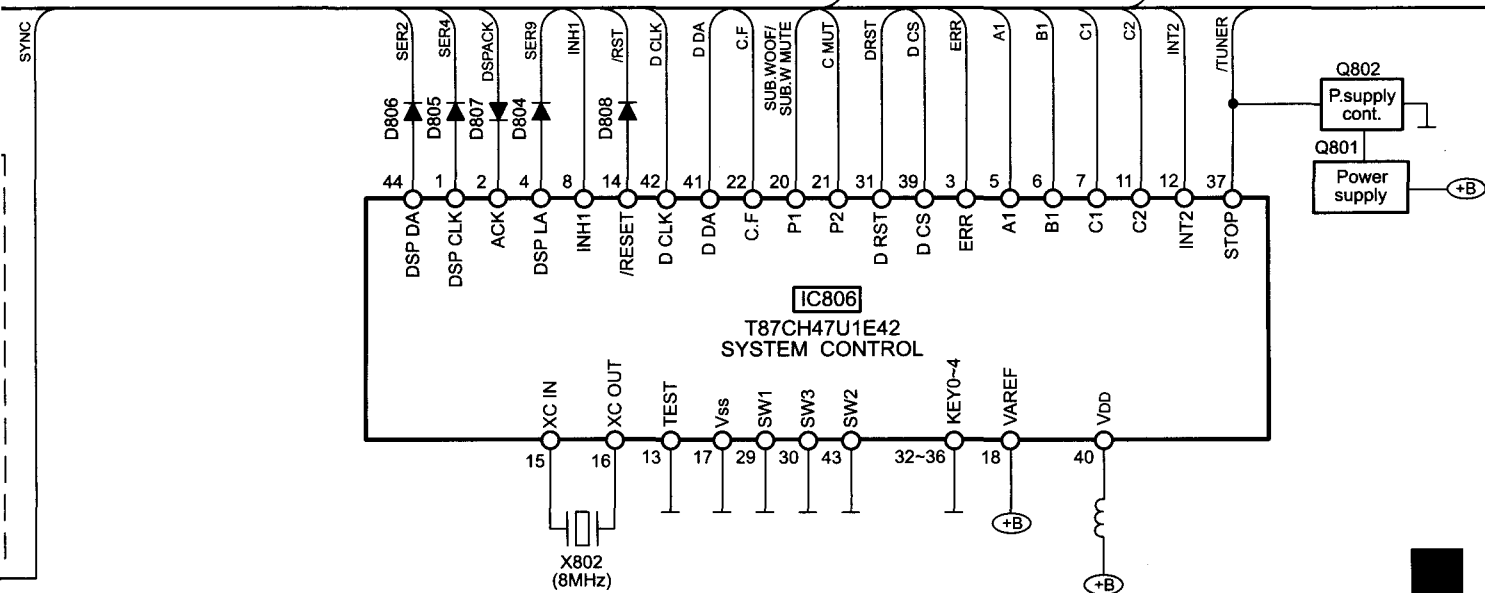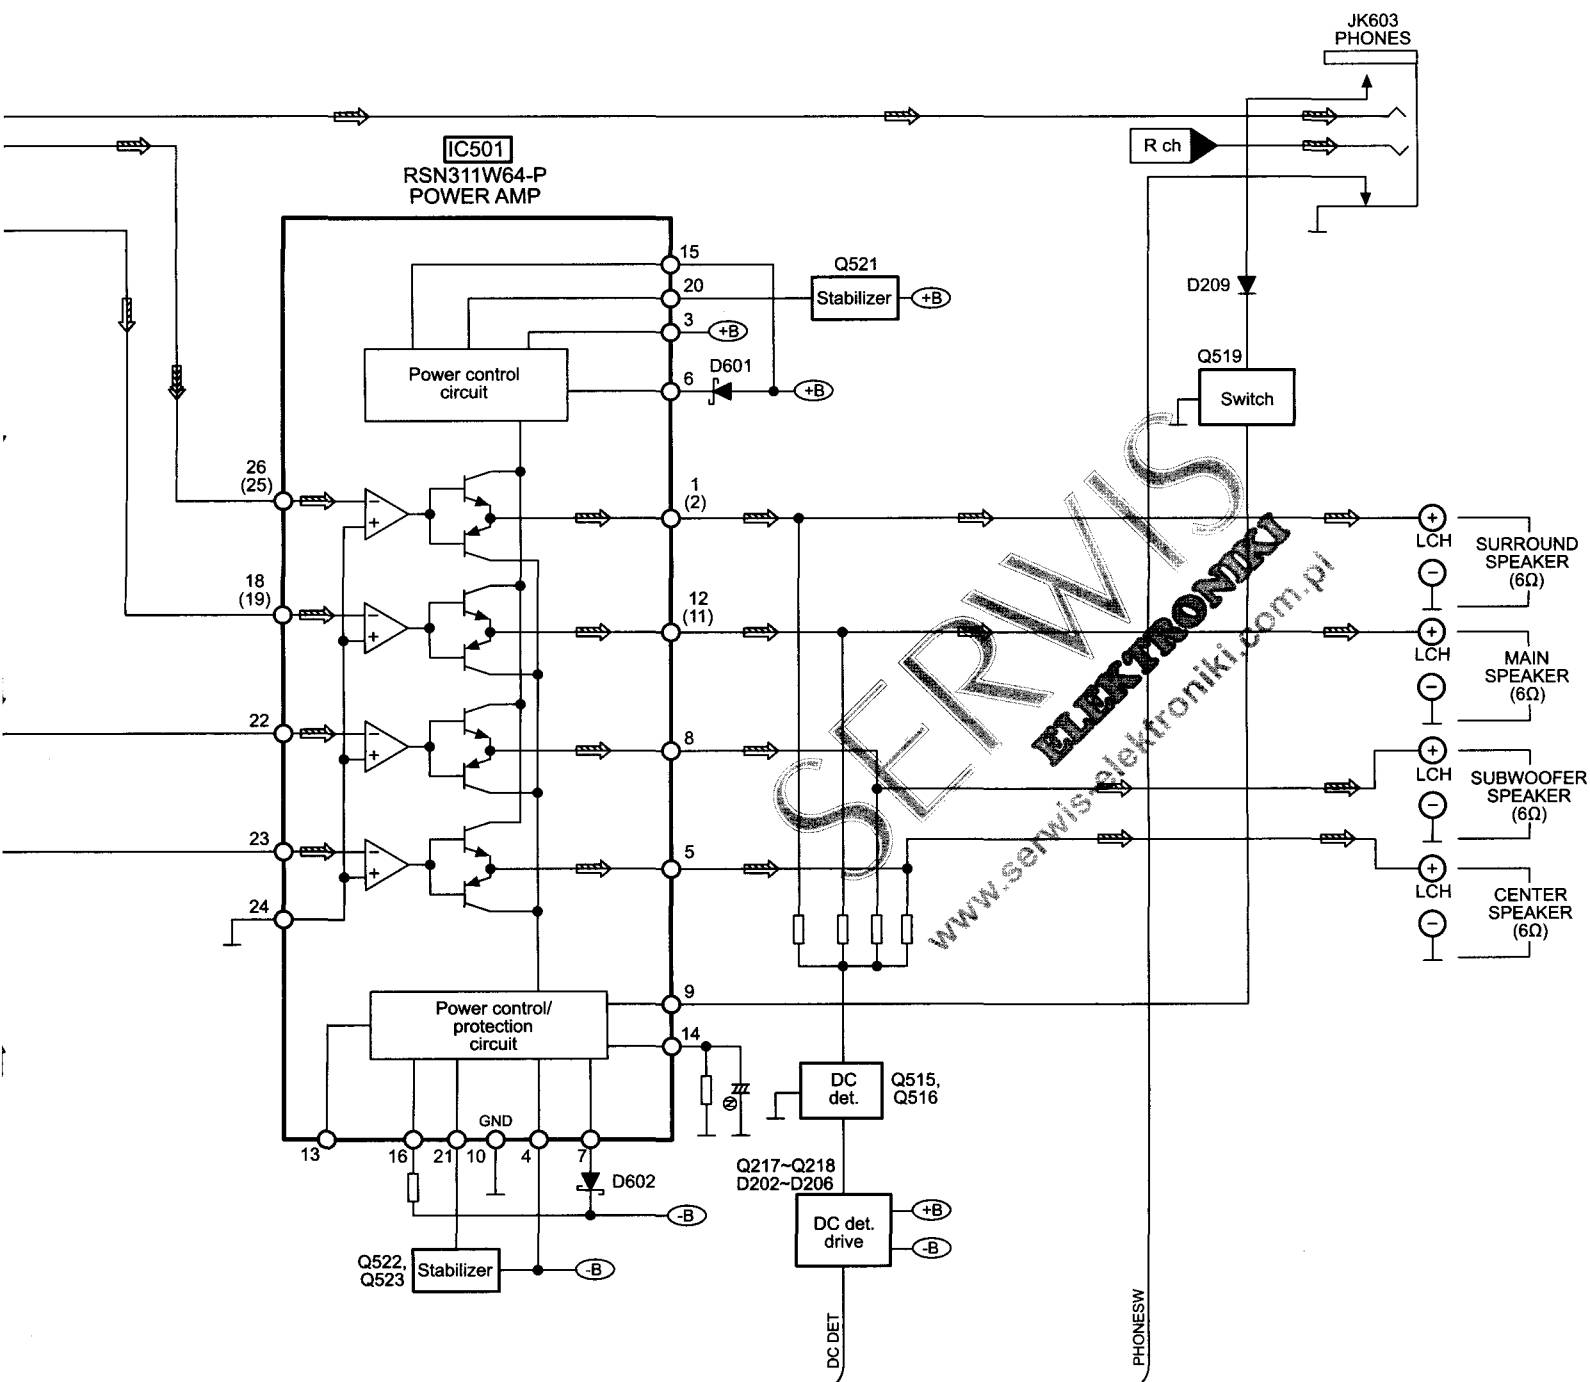

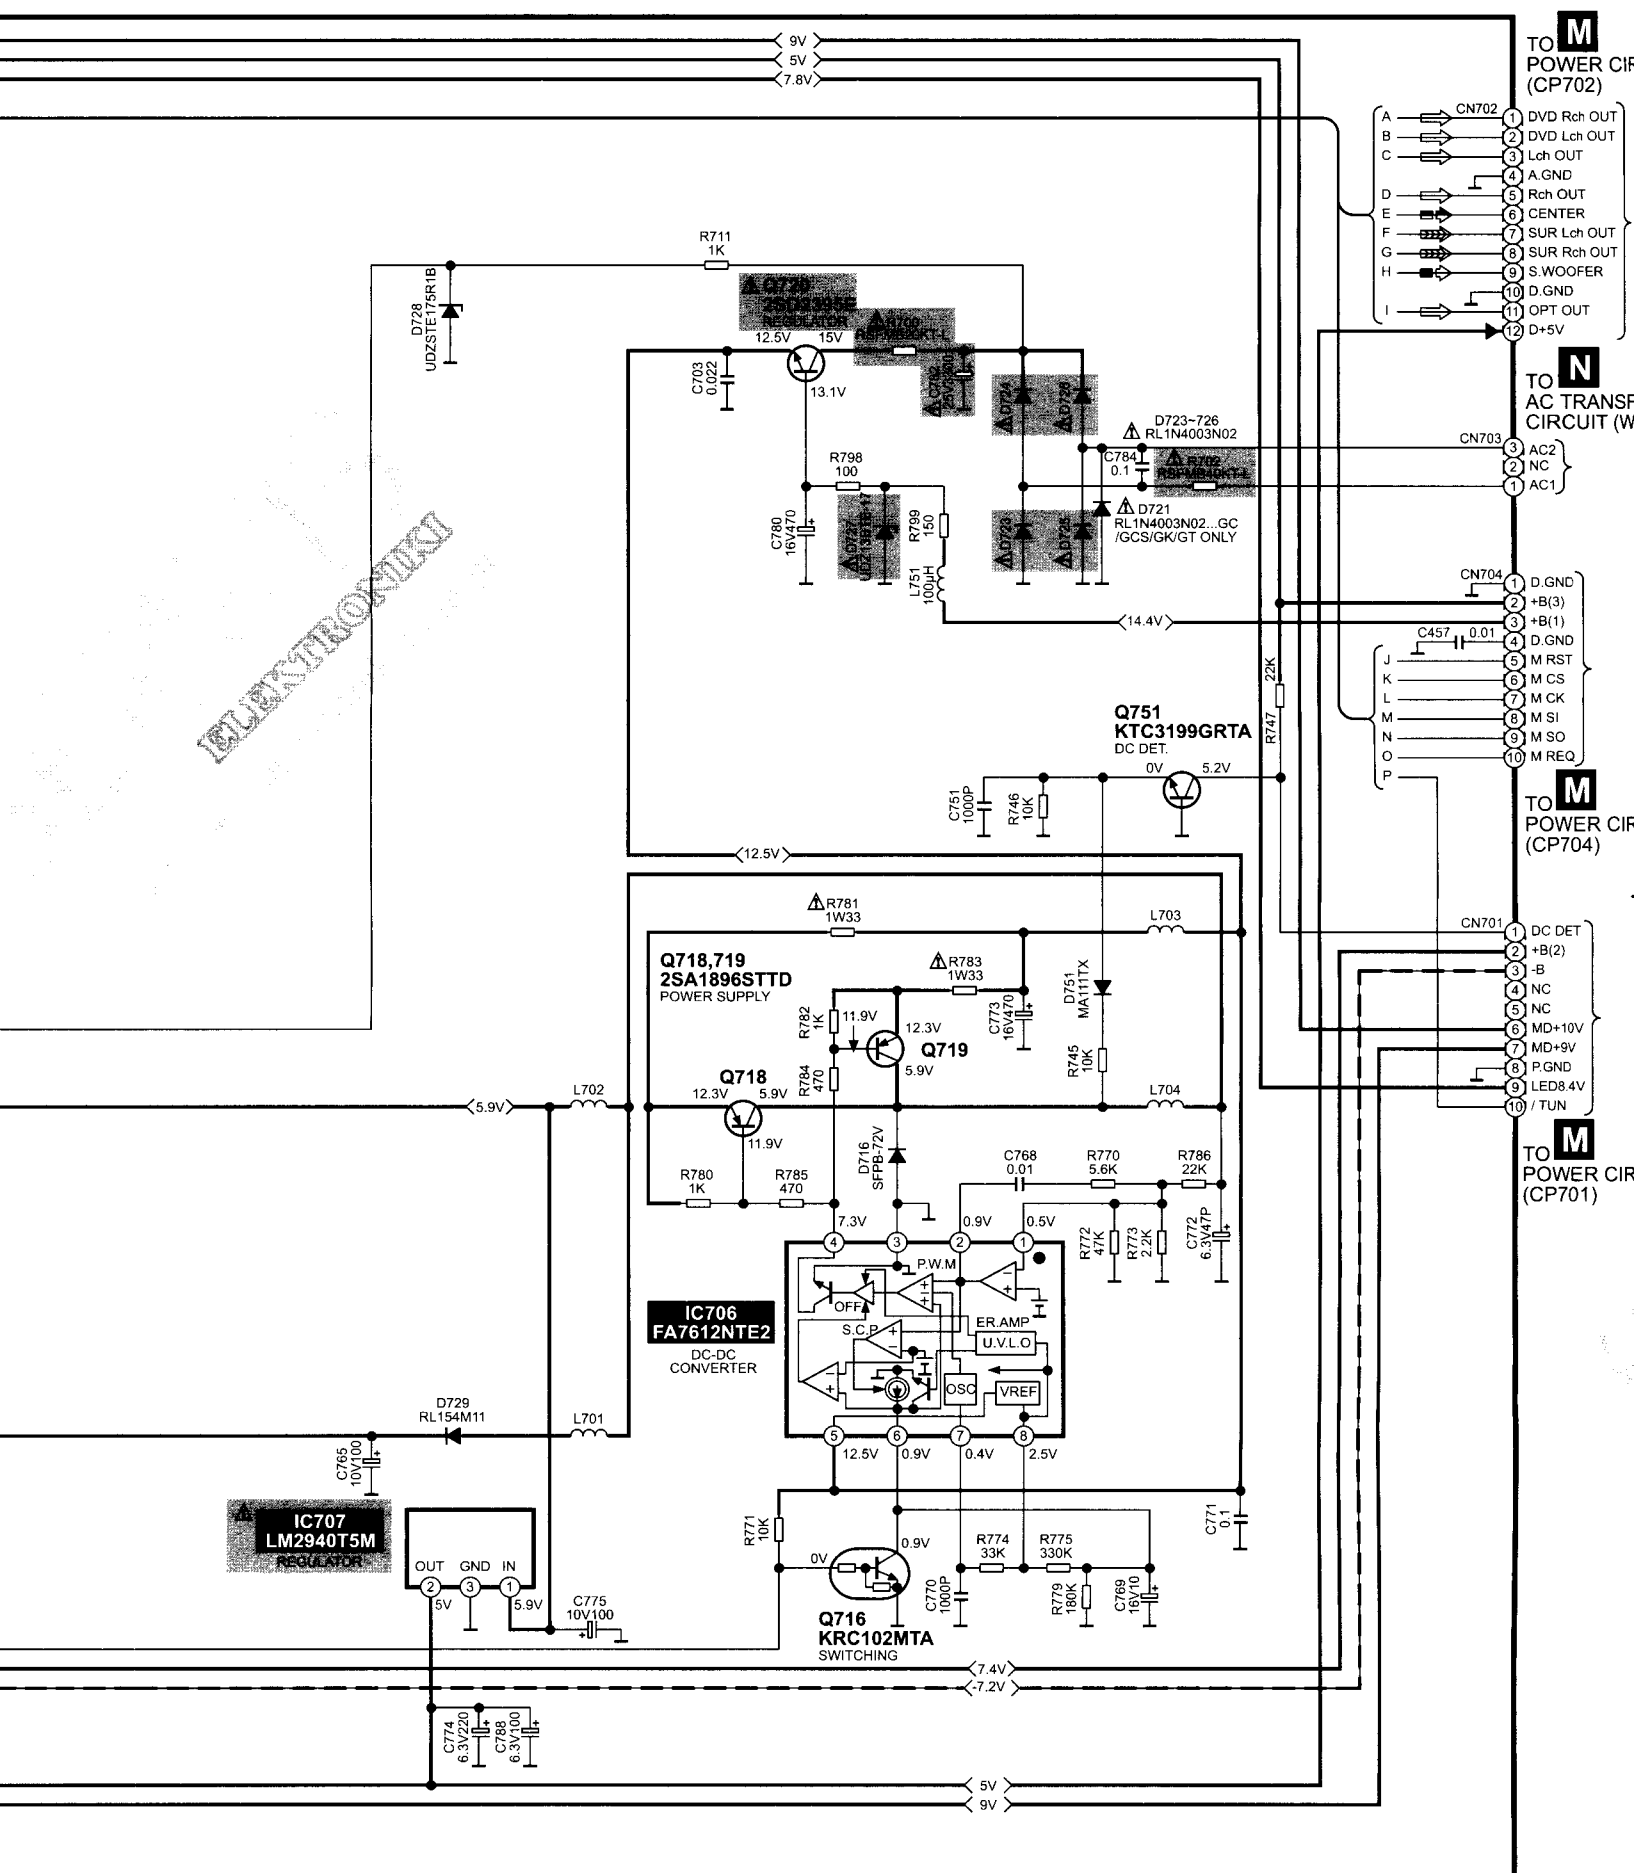

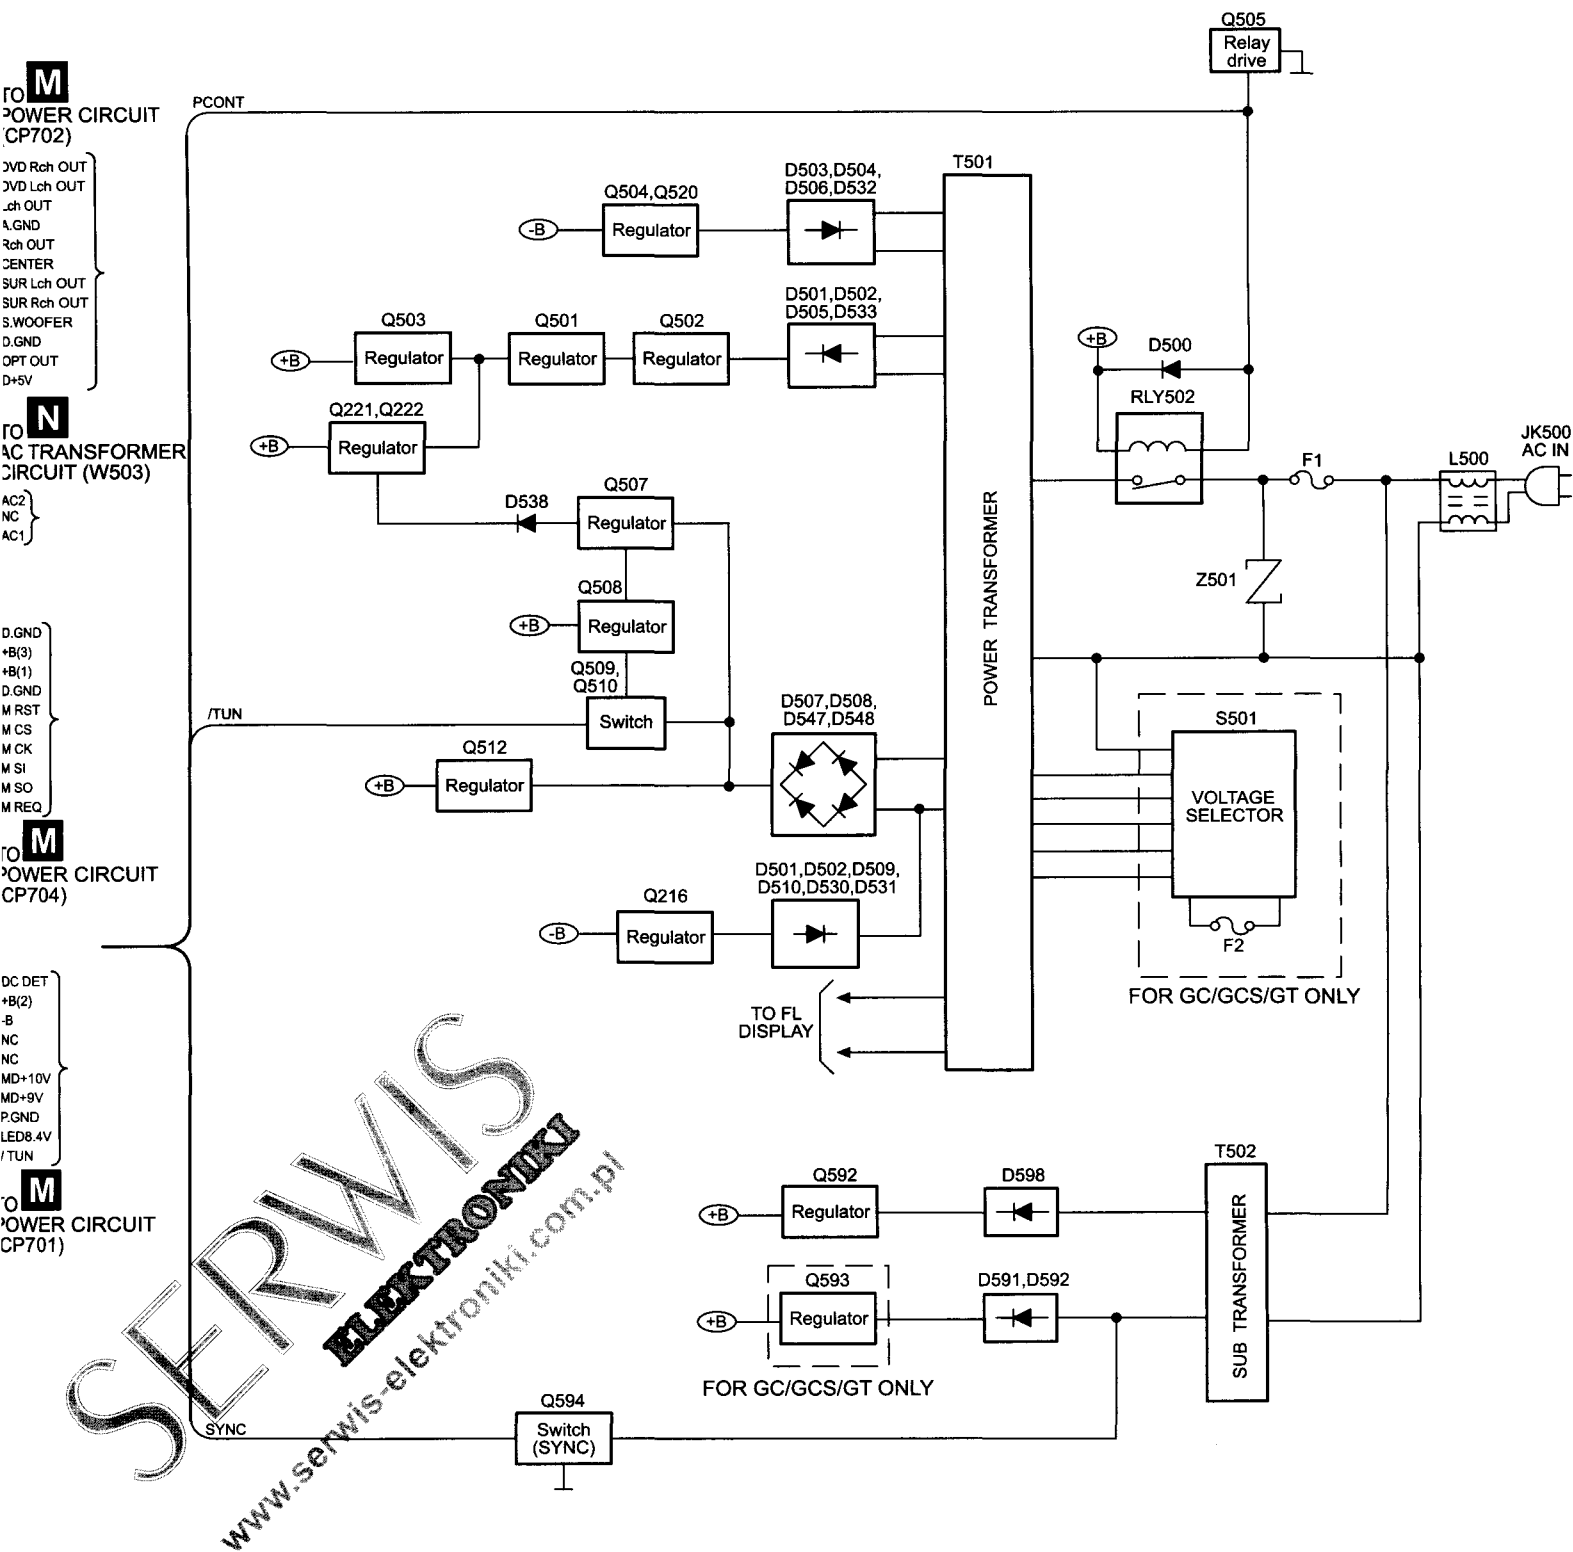


DW_SE11/2008

Kino Domowe Panasonic
SA-HT80 (strona 2/6)

DAC CIRCUIT



CONNECTOR CIRCUIT

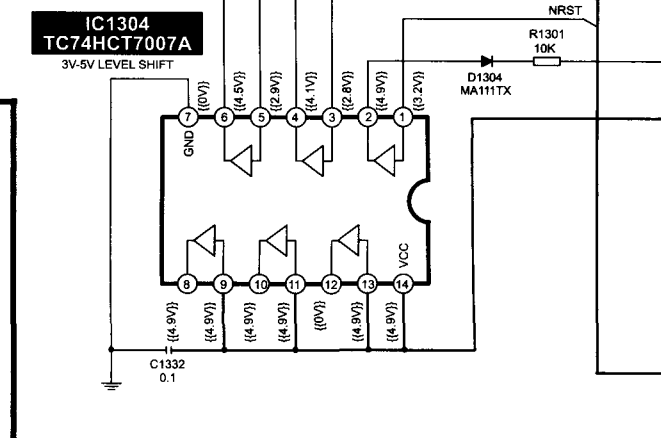


For GC/GCS/GK/GT only

For GC/GCS/GK

For GC/GCS/GK

— : +B signal line  : DVD Video signal Line

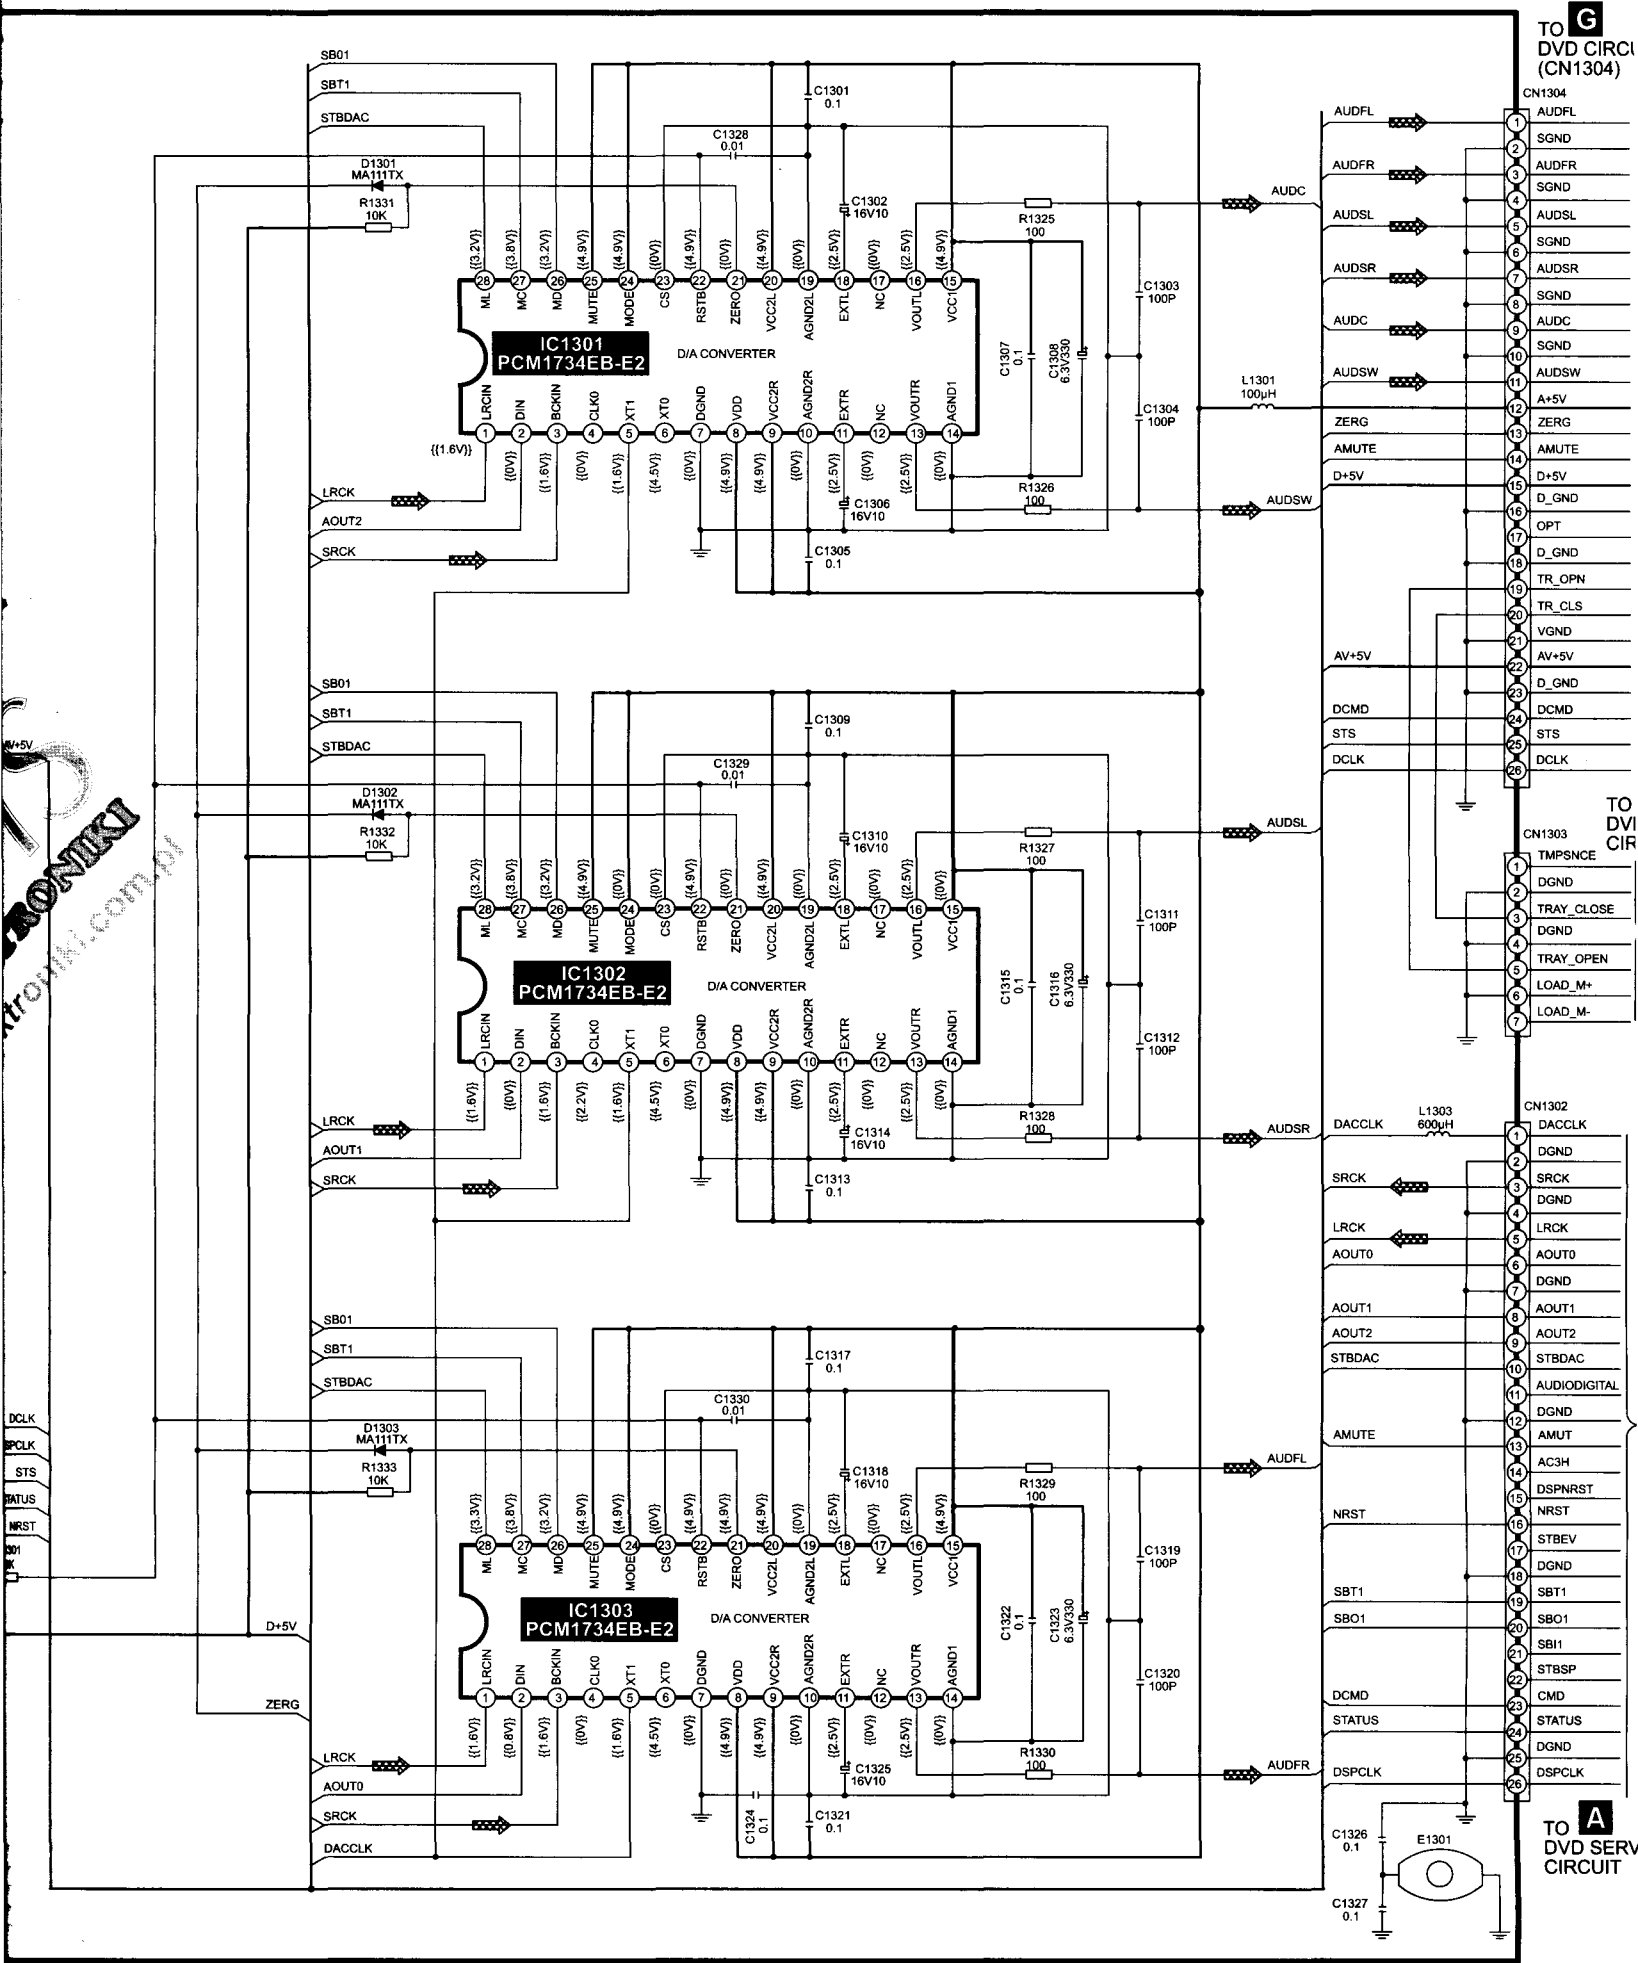

GC/GCS/GK/GT only

For GN only


NEL CIRCUIT


— : +B signal line - - - : -B signal line

TO DVD CIRCUIT (CN1304)

TO DVD CIRCUIT (CN1303)


TO DVD SERV CIRCUIT (A)

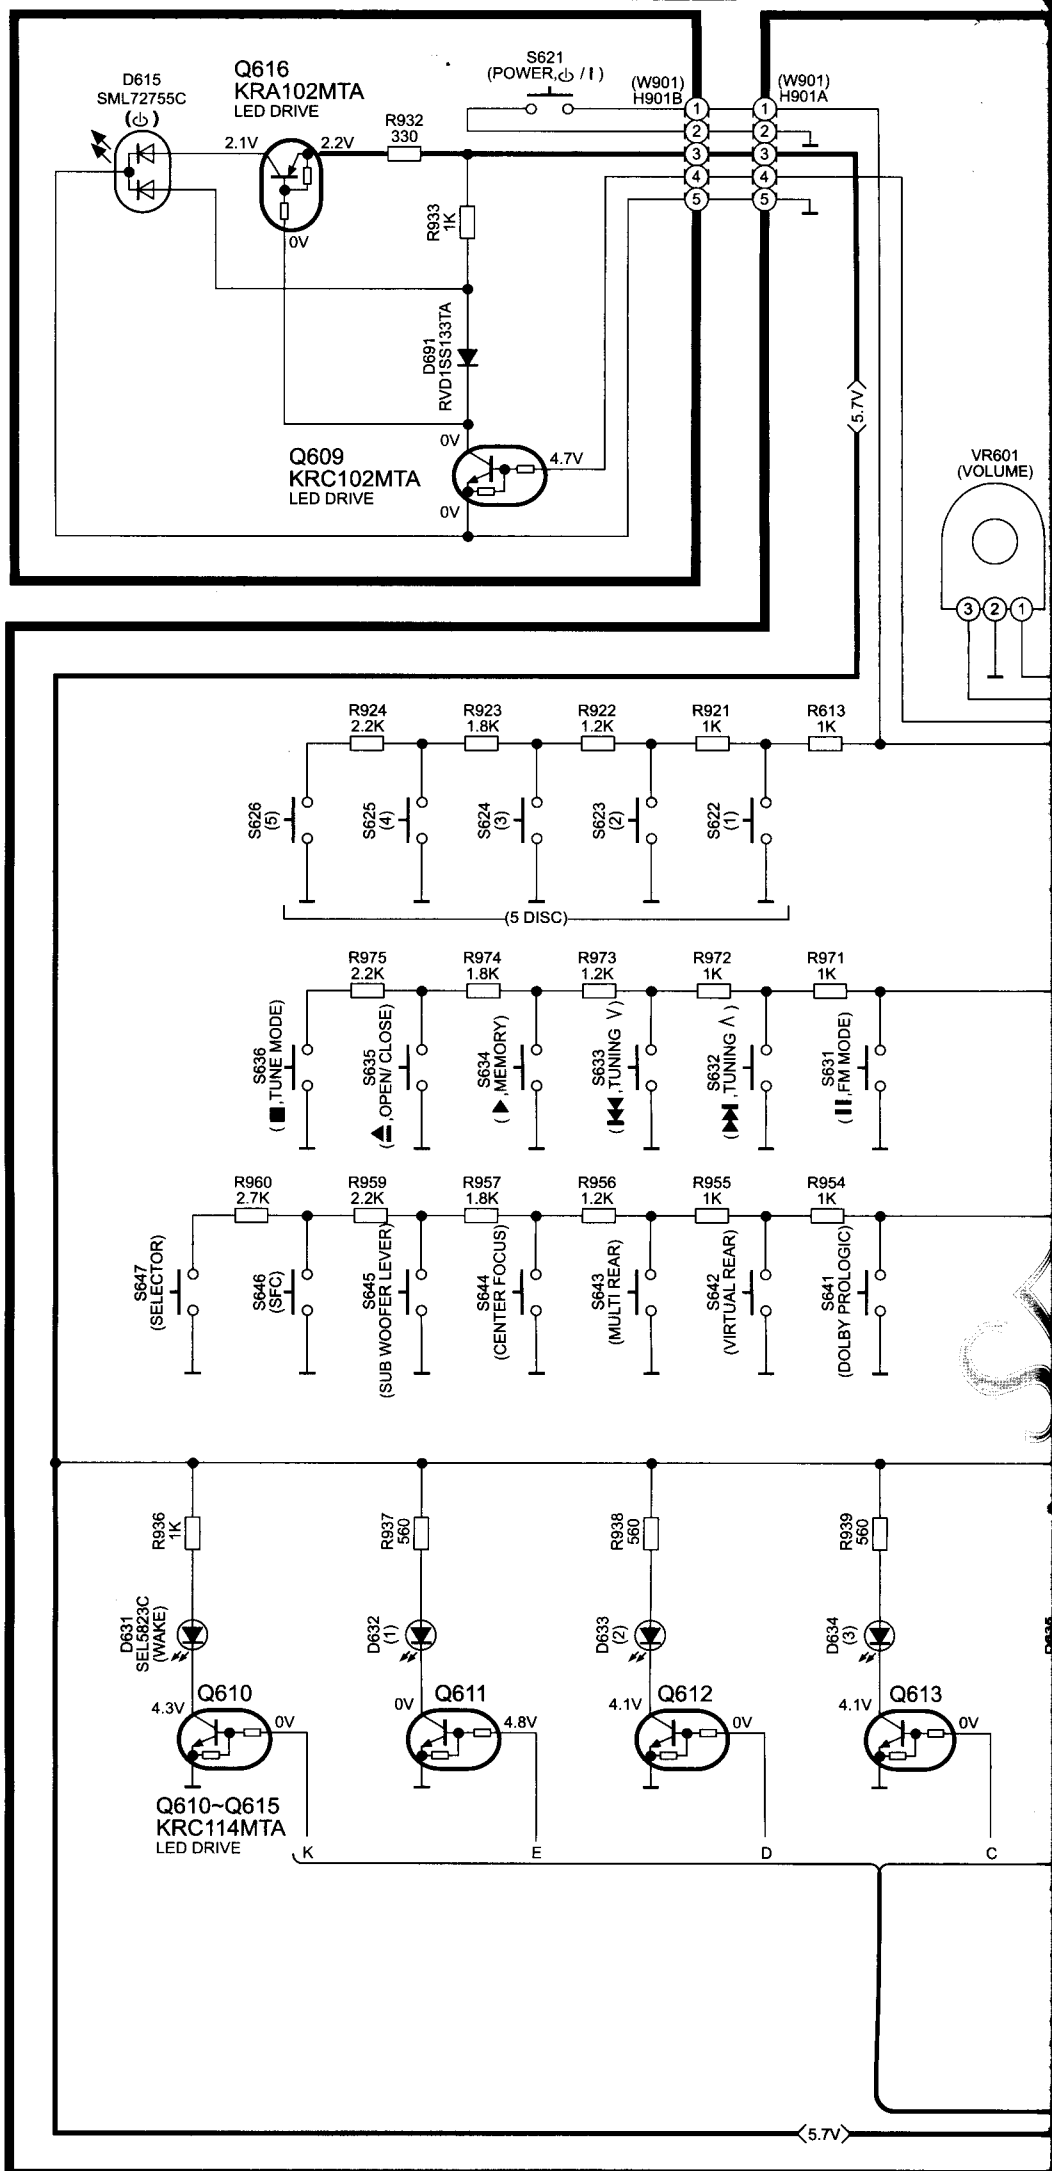



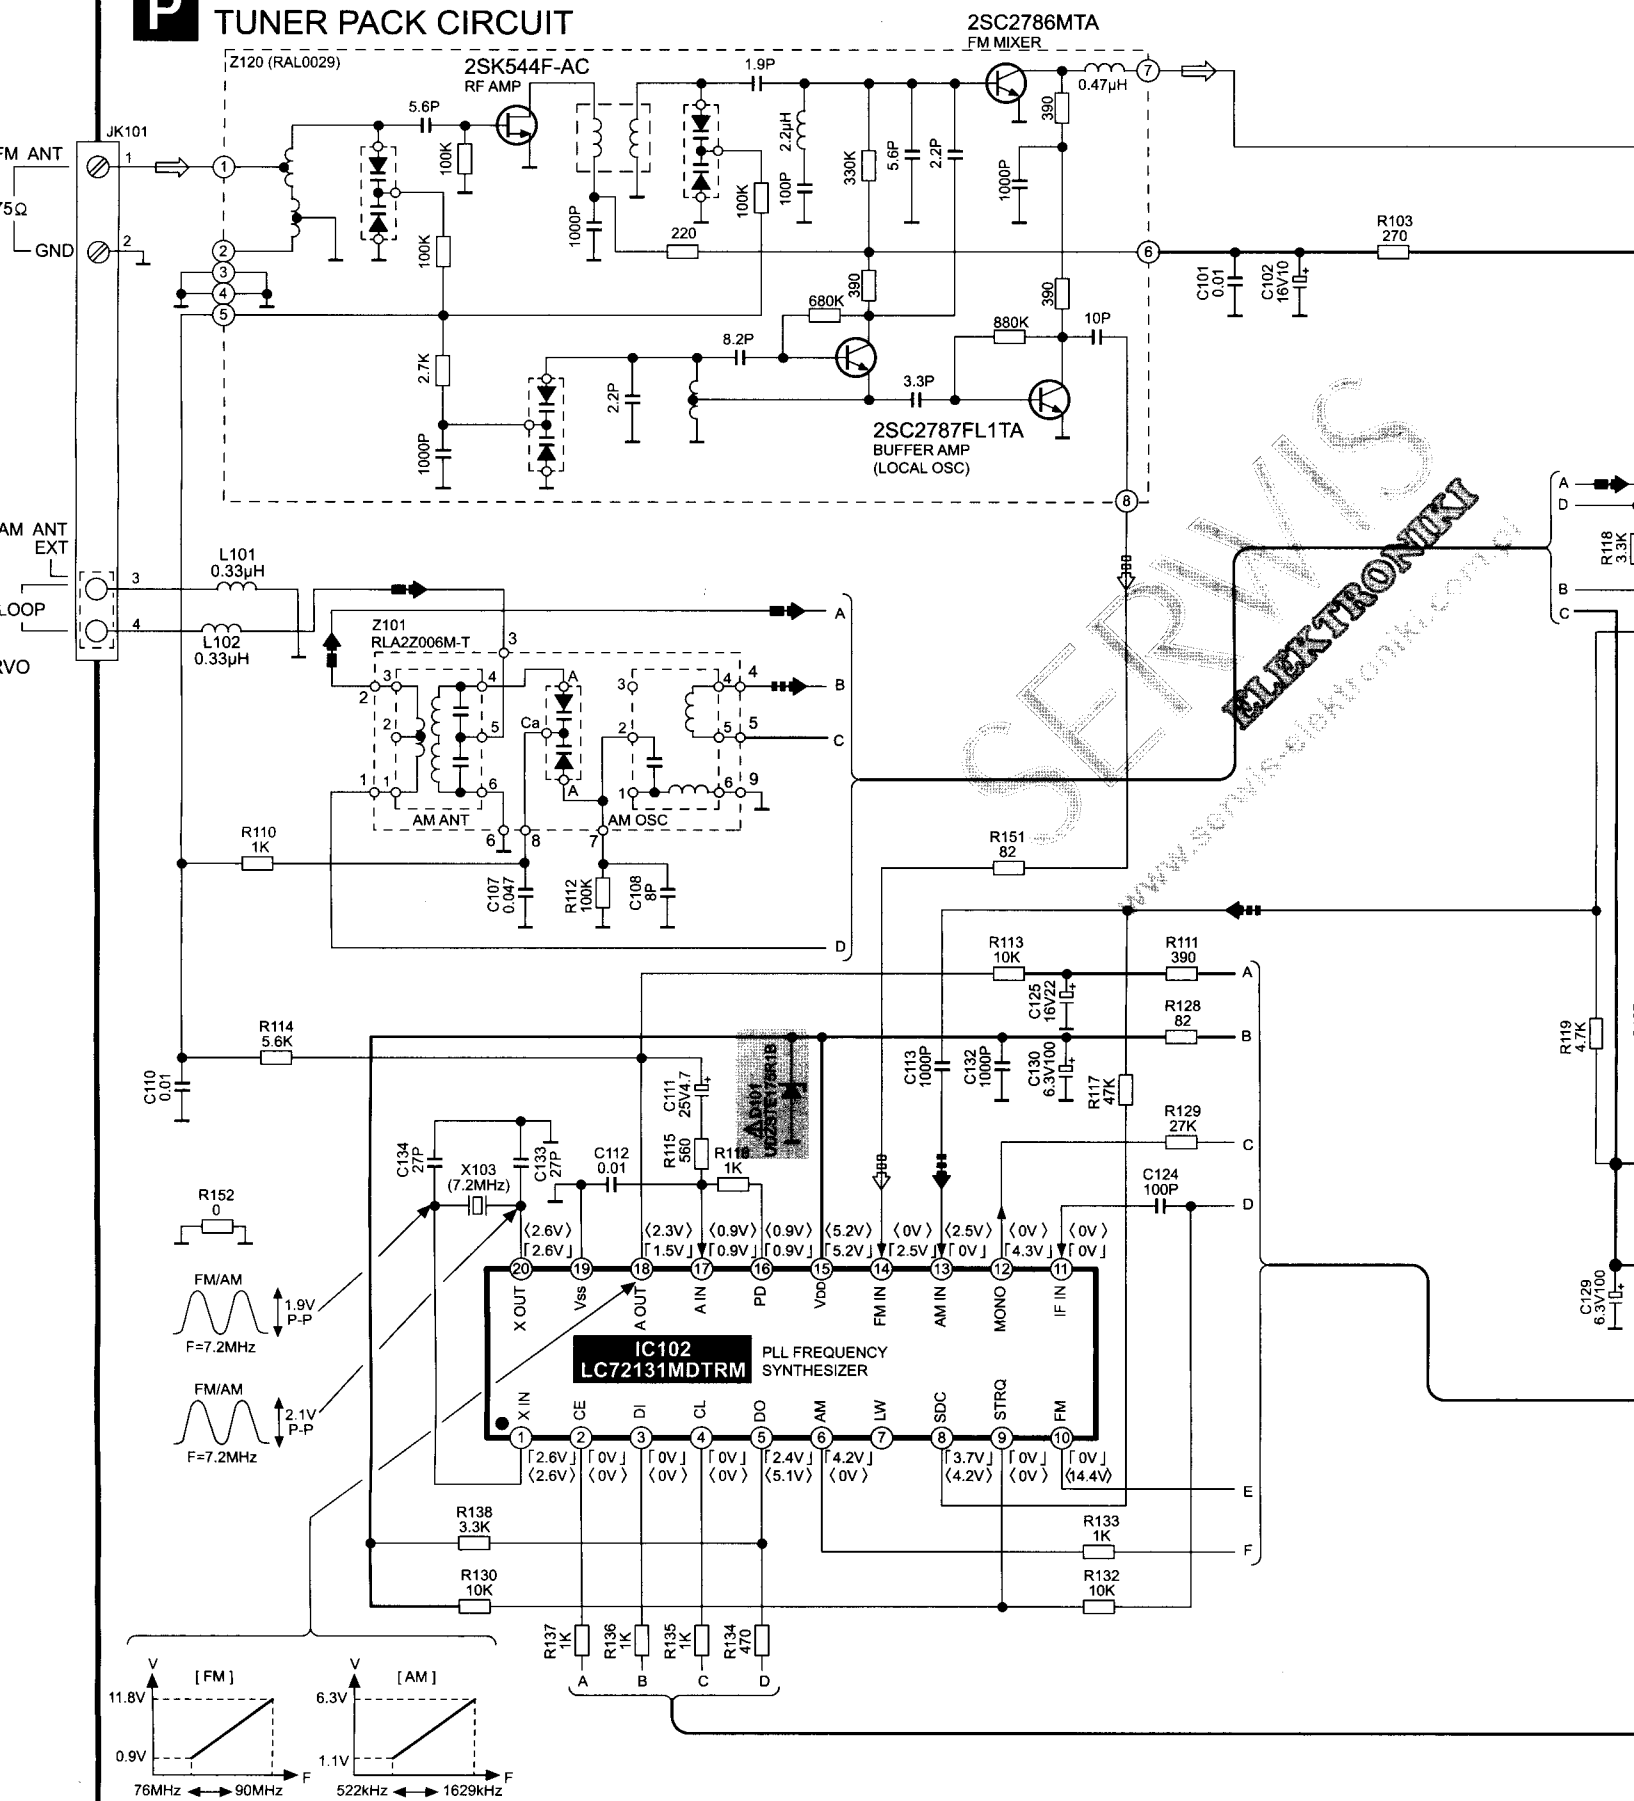


For GC/GCS/GT only

For GN only

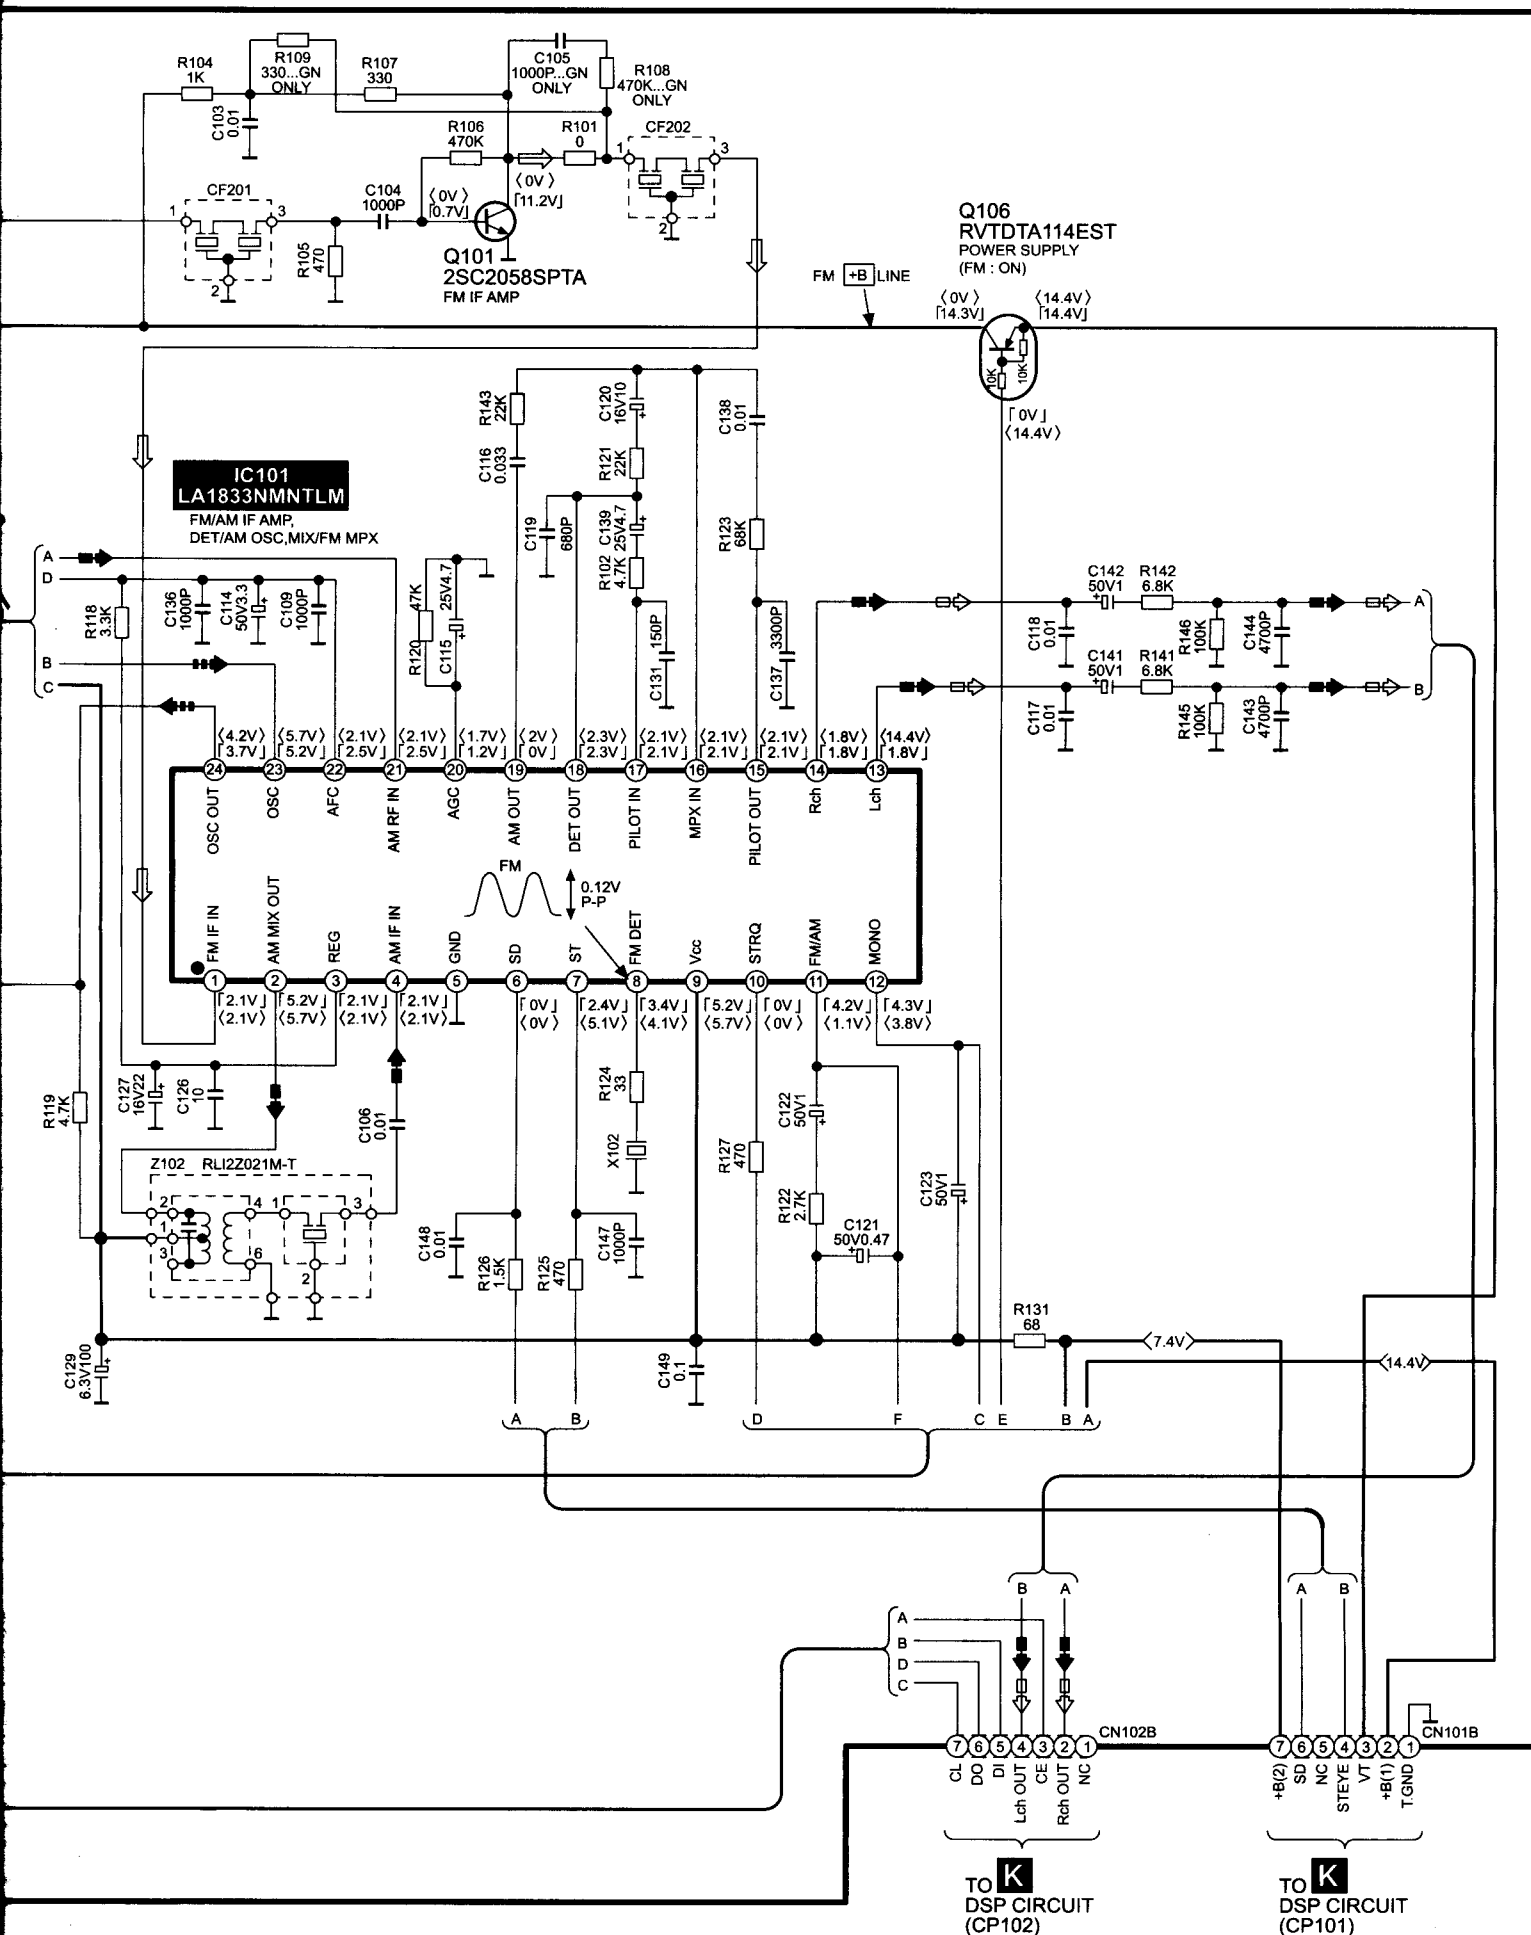

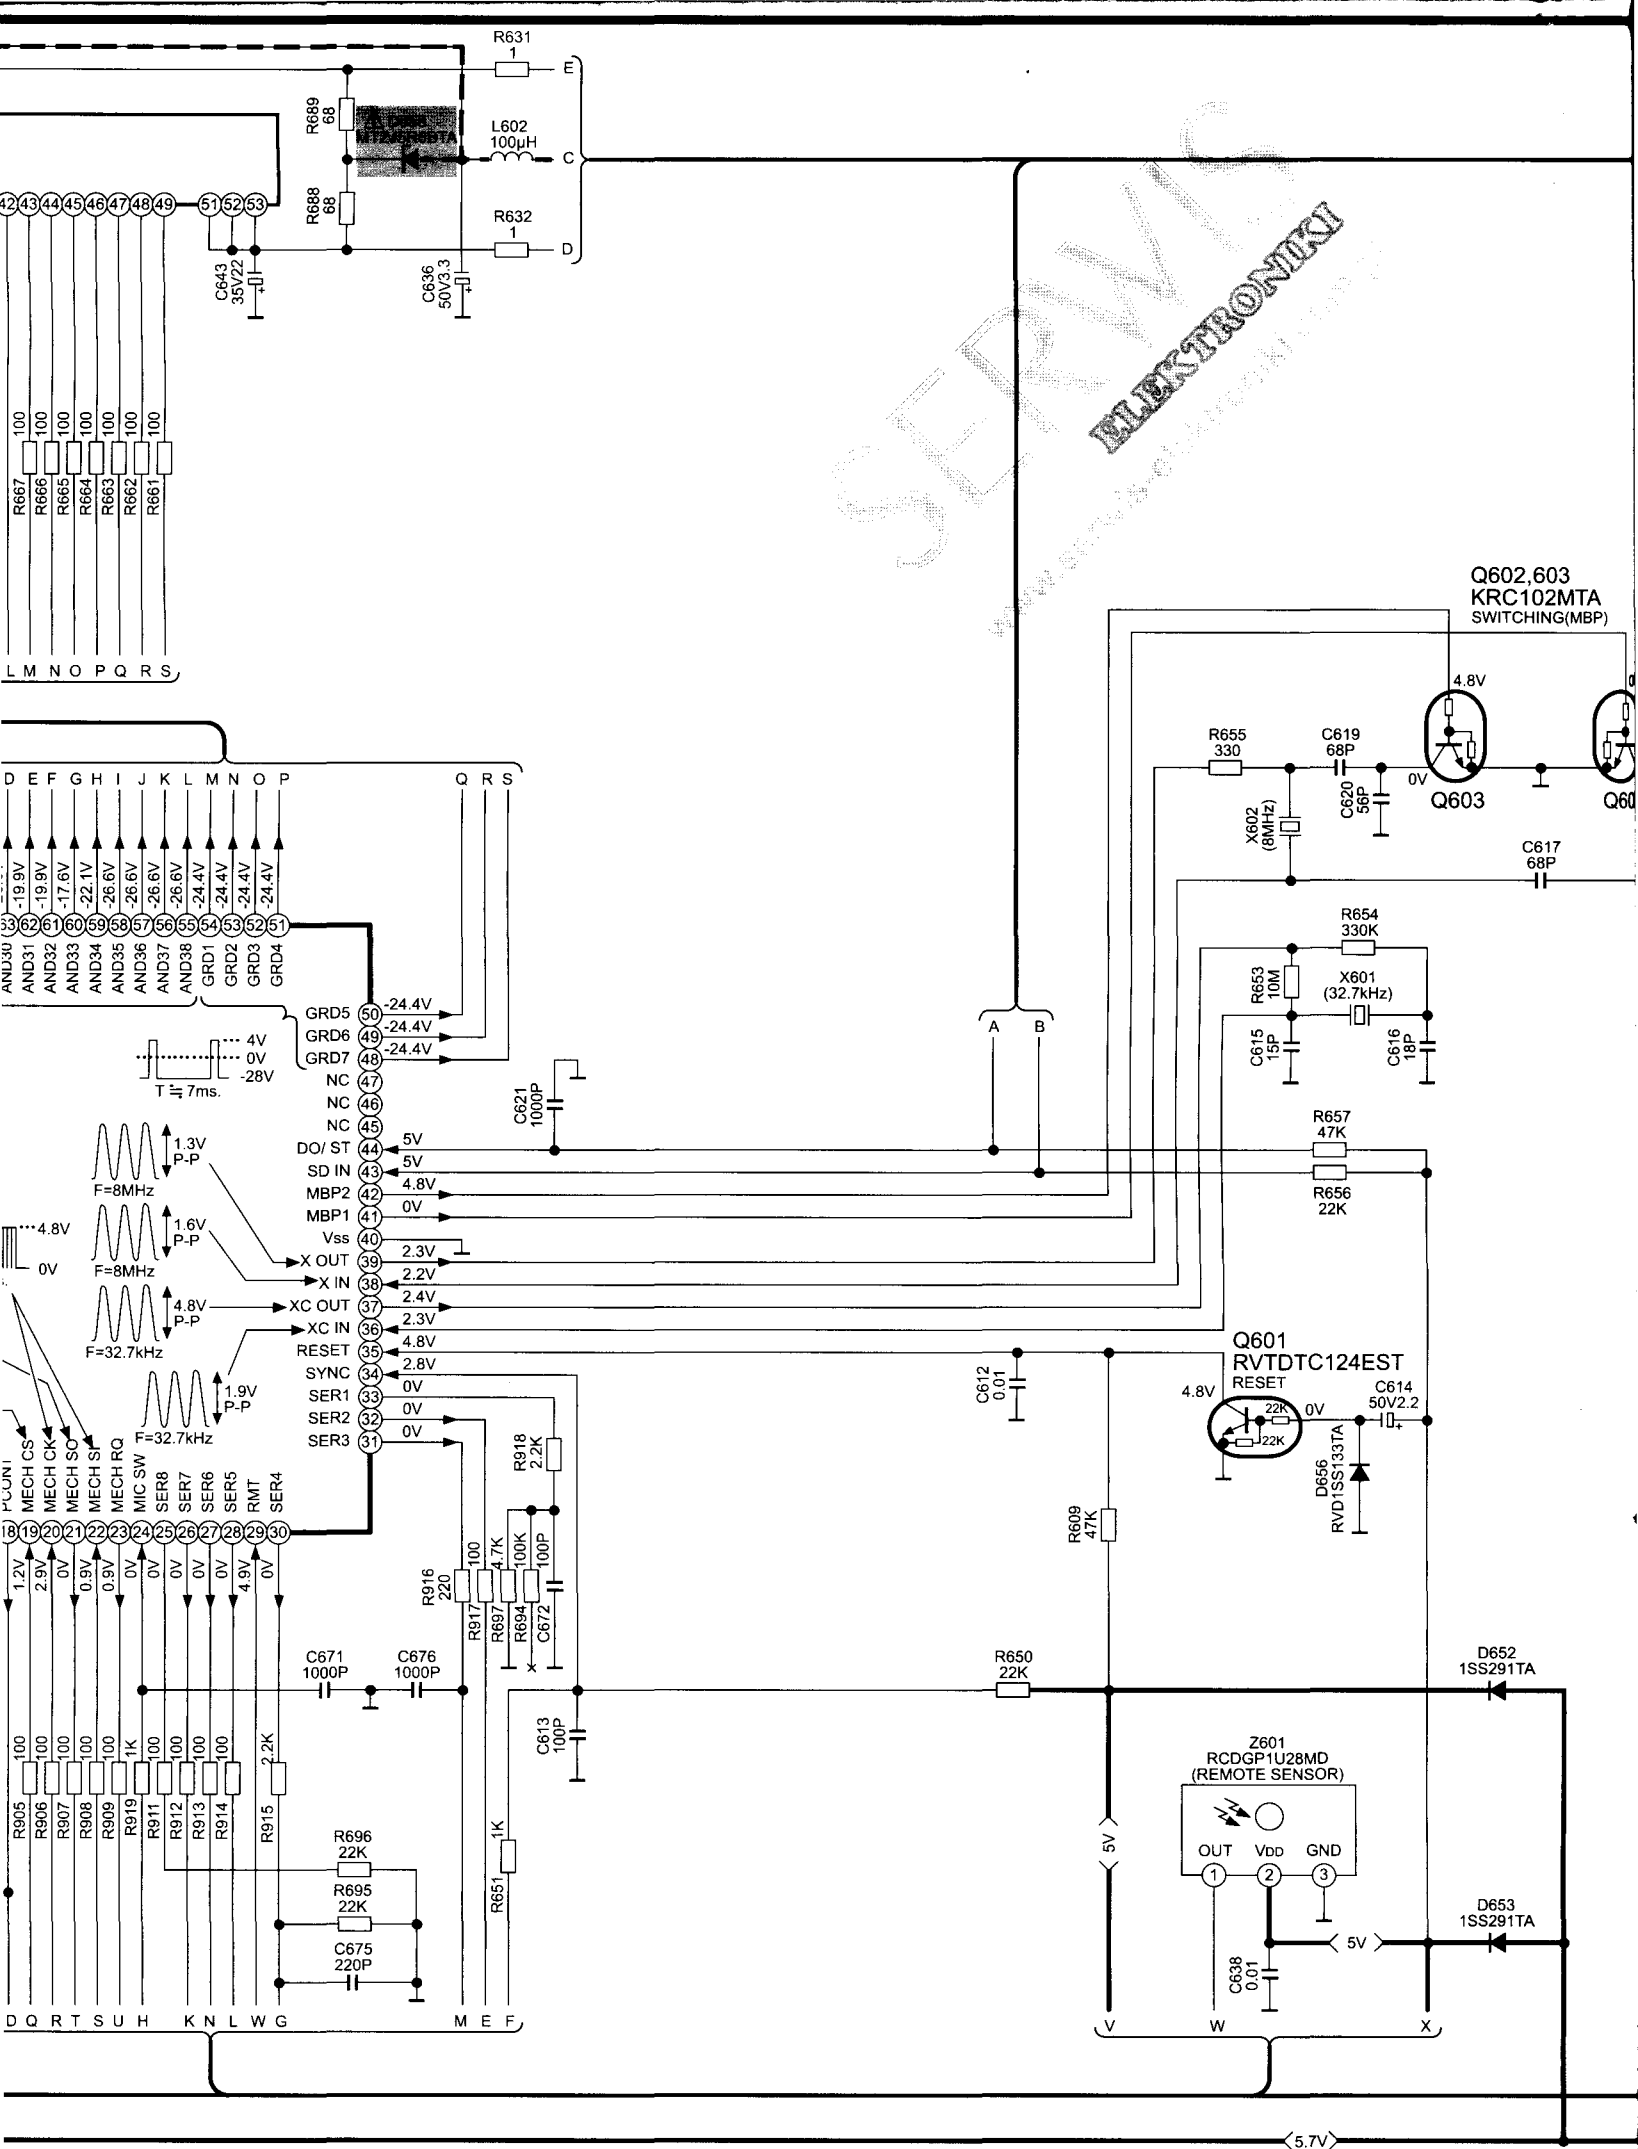

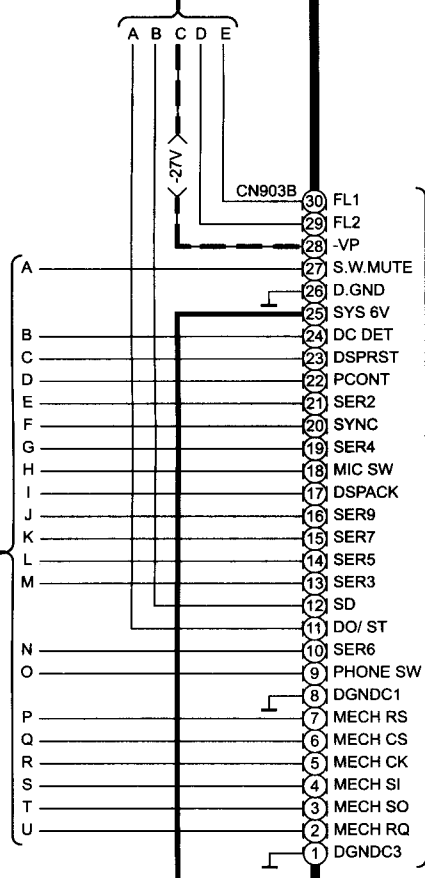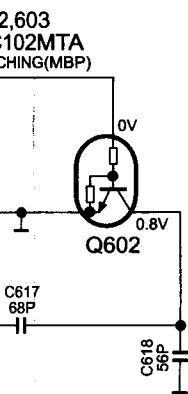






TO **M**
POWER CIRCUIT
(CN903A)

For GC/GCS/GK/GT only

For GN only

K**DSP CIRCUIT**


— : +B signal line □ : FM signal line ⇨ : Audio signal line ⇨ : Center speaker signal line
 - - - : -B signal line ■ : AM signal line ⇨ : Surround speaker signal line ⇨ : Subwoofer speaker signal line

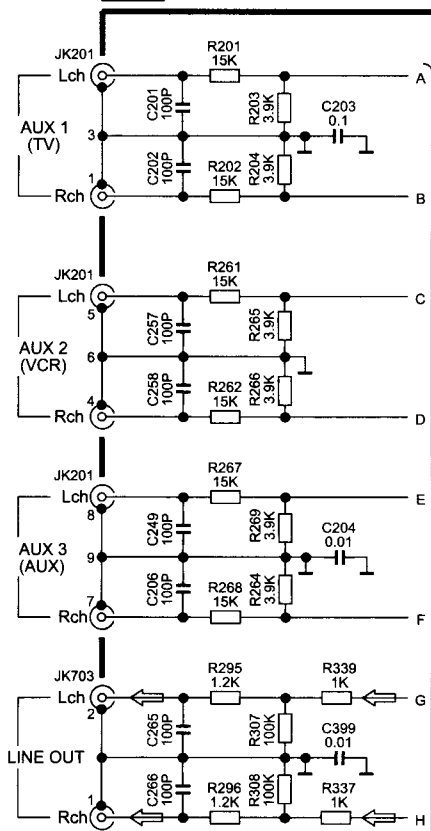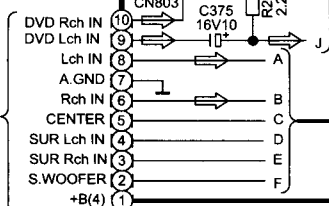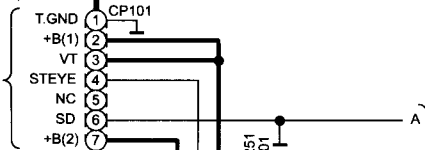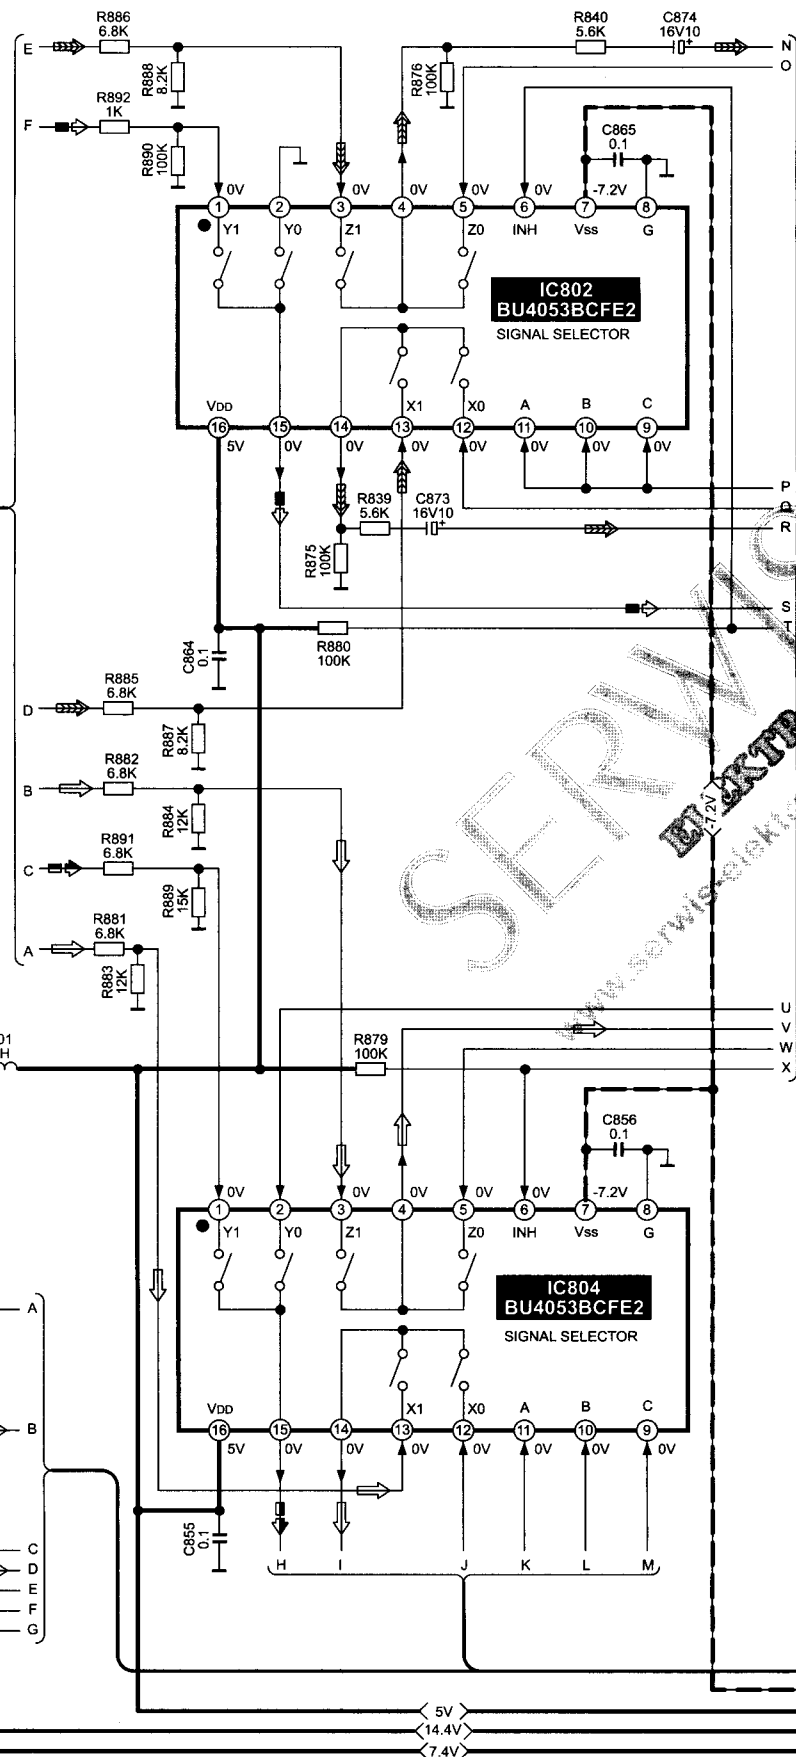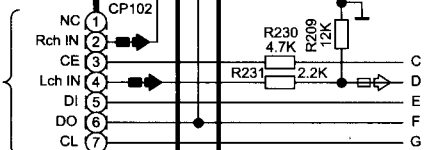
M
 TO POWER CIRCUIT
 (CP803)

H
 TO TUNER CIRCUIT
 (CN101B)

H
 TO TUNER CIRCUIT
 (CN102B)
**L****MIC CIRCUIT**

(FOR GN ONLY)

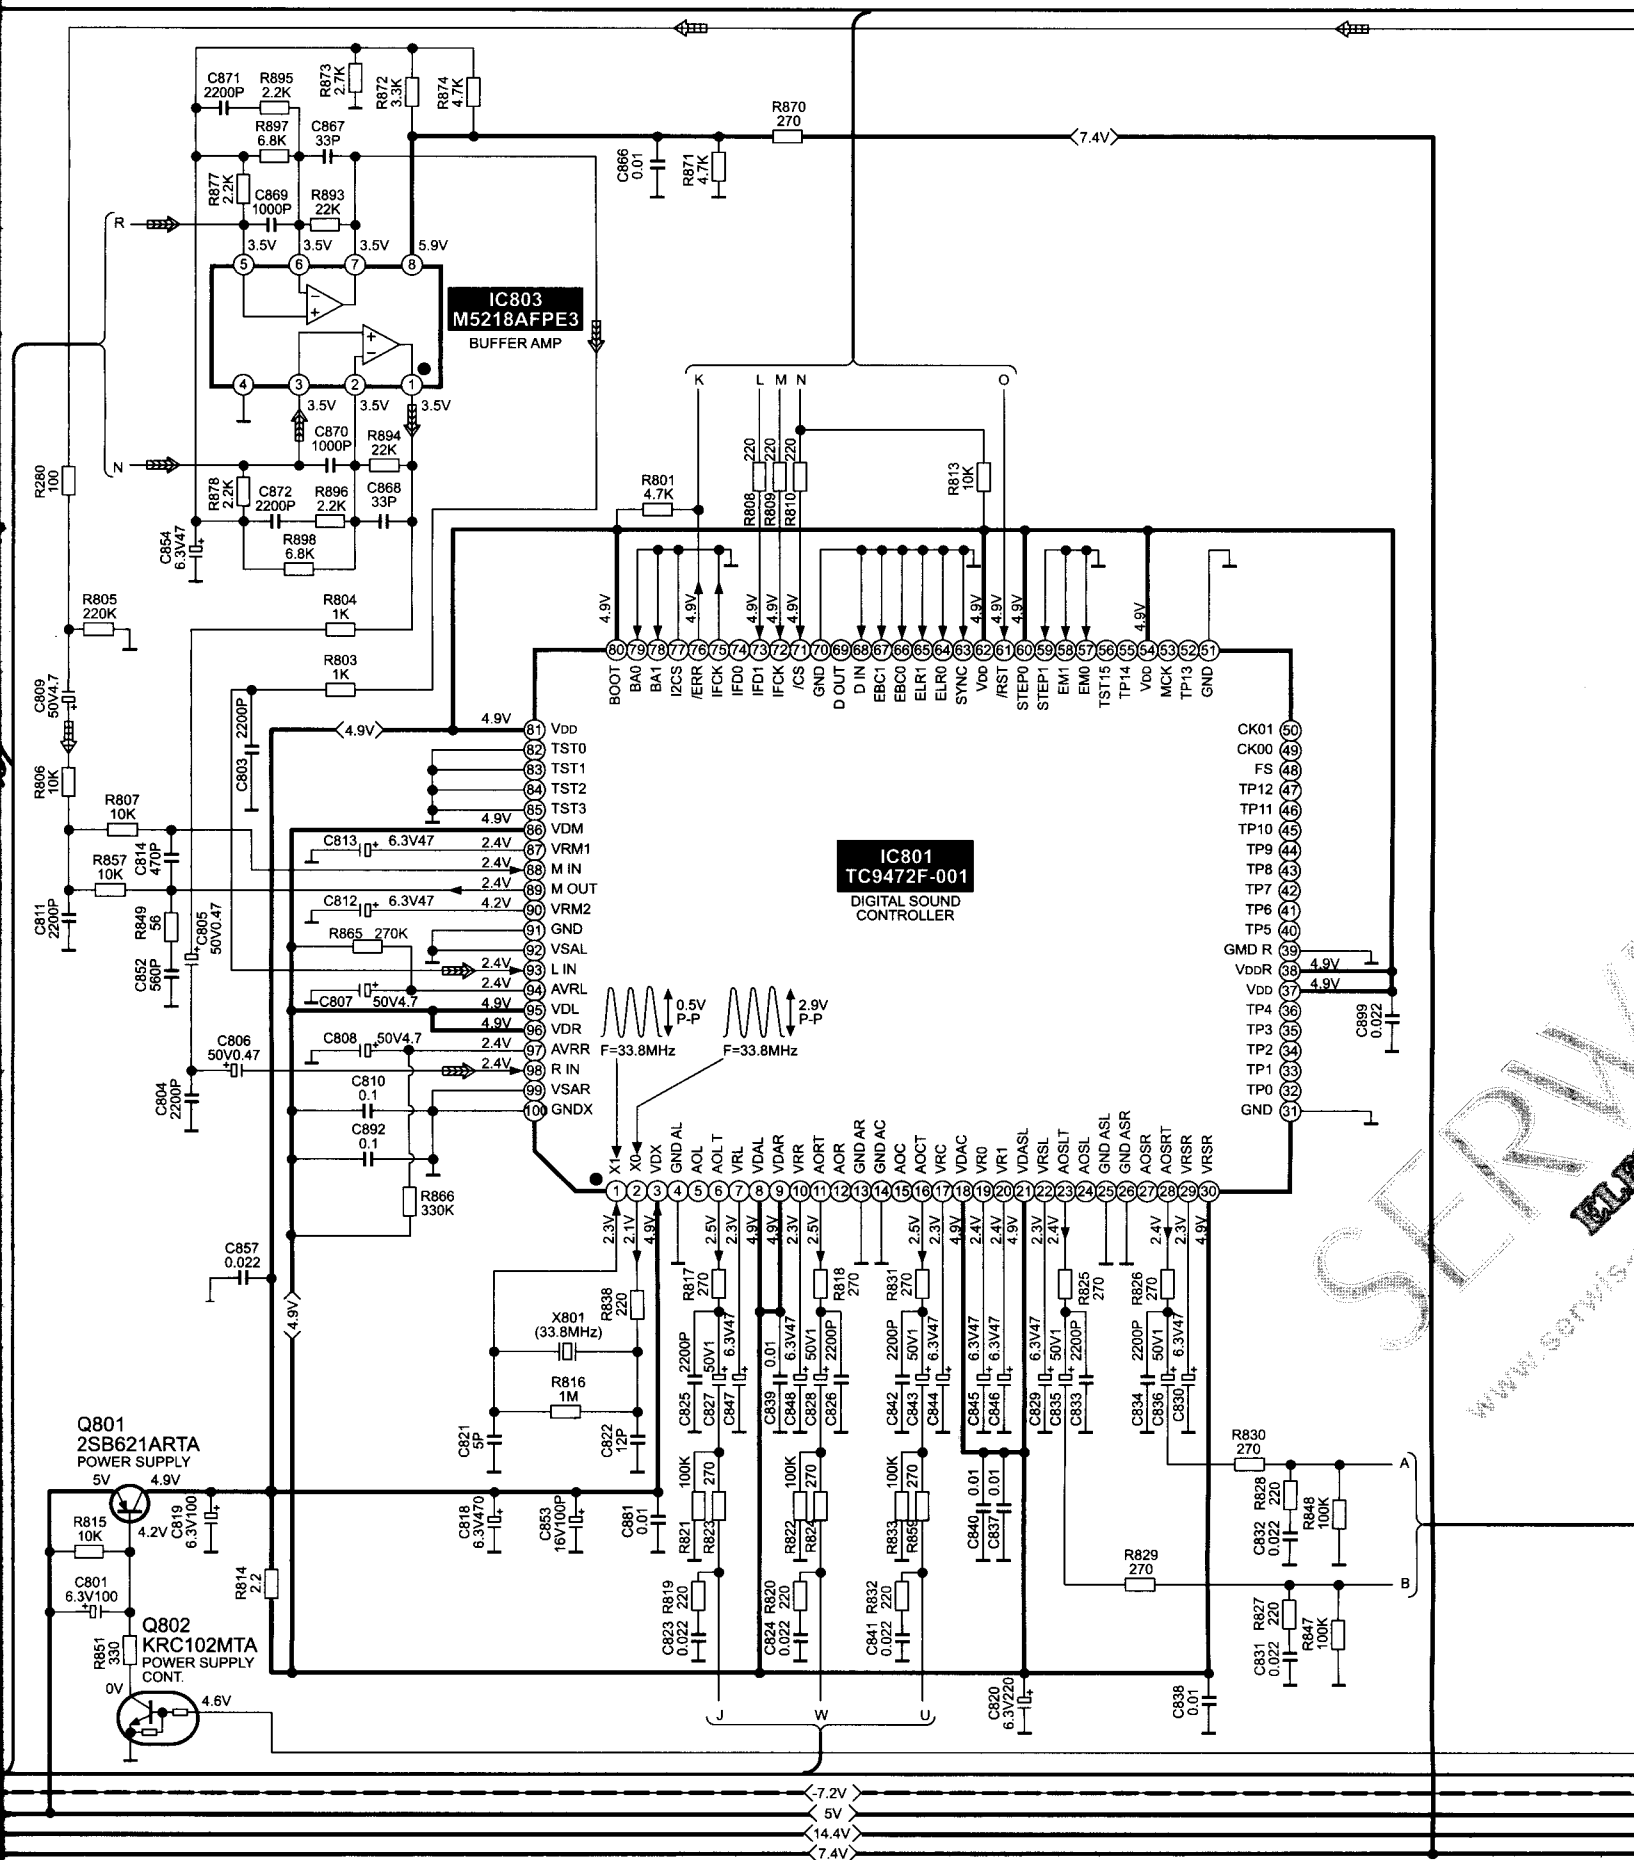— : +B signal line ⇨ : Audio signal line

— : +B signal line  : Surround speaker signal line
 - - - : -B signal line  : Mic signal line




POWER CIRCUIT
 (FOR GC/GCS/GT ONLY)

— : +B signal line
 - - - : -B signal line


L MIC CIRCUIT (FOR GN ONLY)


— : +B signal line ⇨ : Audio signal line

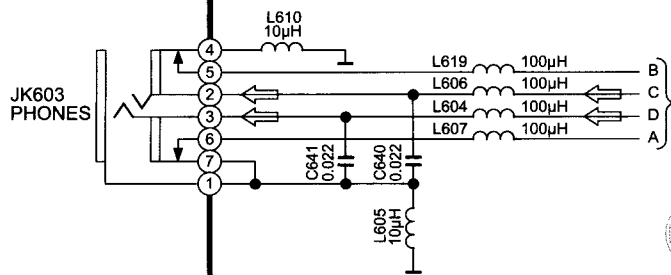


L MIC CIRCUIT (FOR GC/GCS/GK/GT ONLY)

— : +B signal line ⇨ : Audio signal line ⇨ : Mic signal line

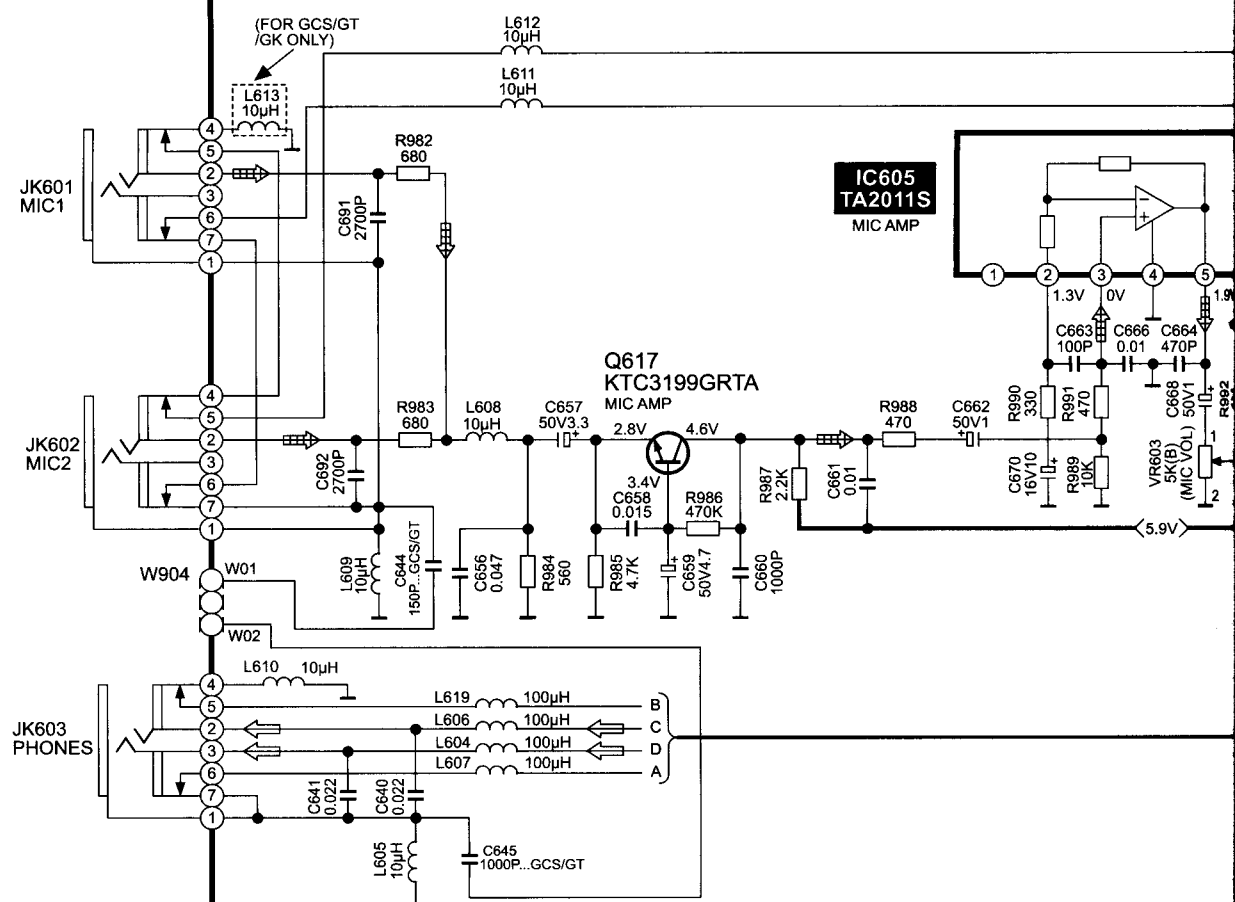


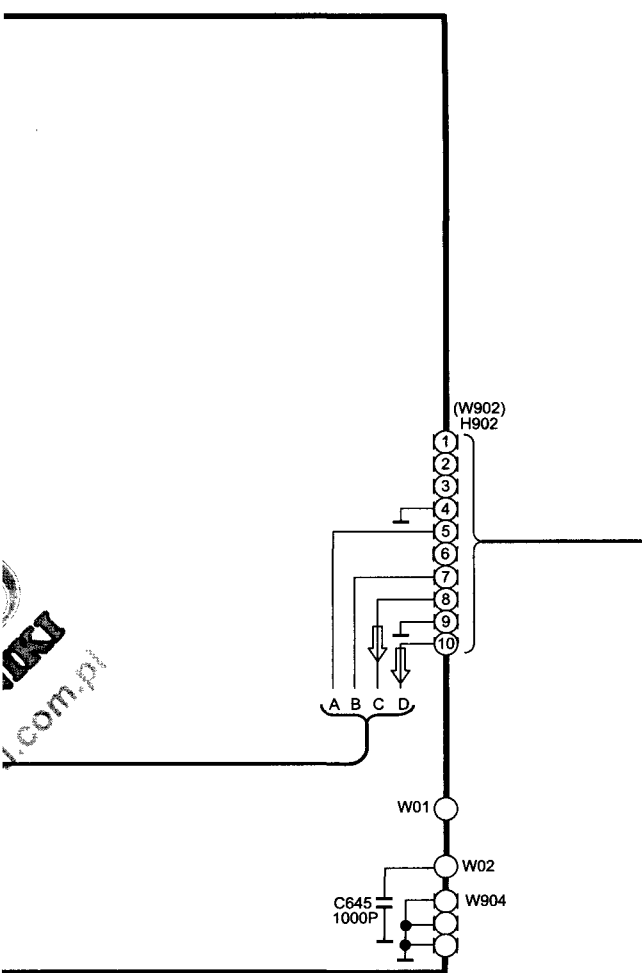


⏏ Mic signal line

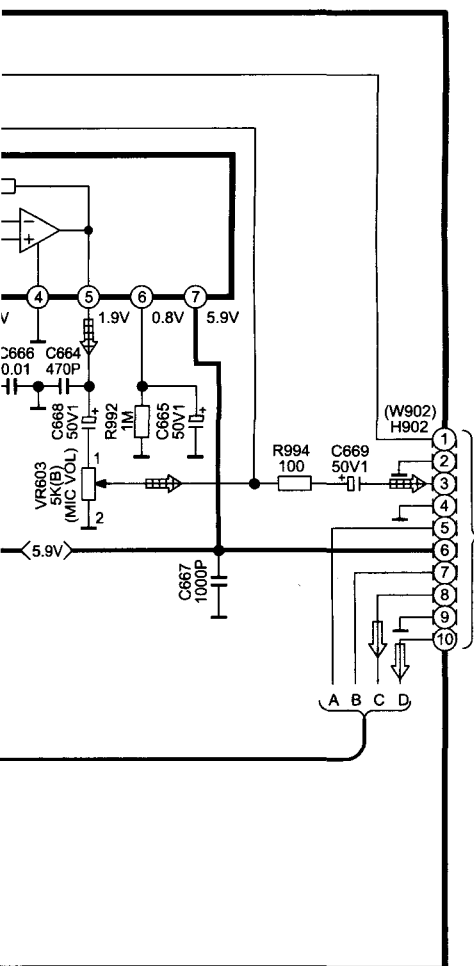


TO **K**
DSP CIRCUIT
(CN801)

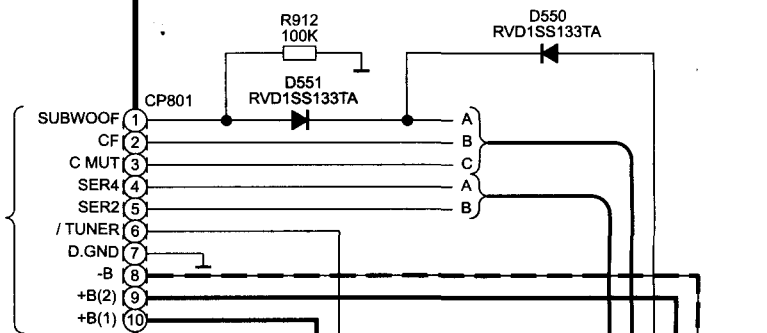



TO **K**
DSP CIRCUIT
(CN802)

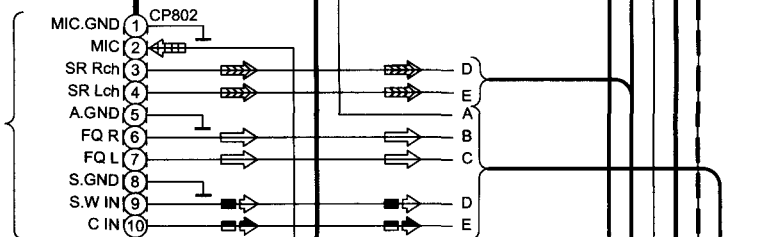

TO **K**
DSP CIRCUIT
(CN804)

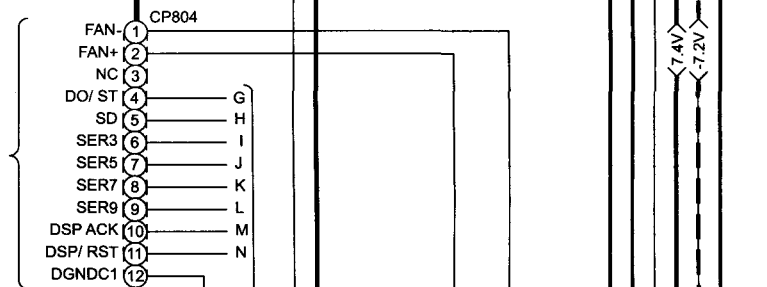



TO **G**
DVD CIRCUIT
(CN704)

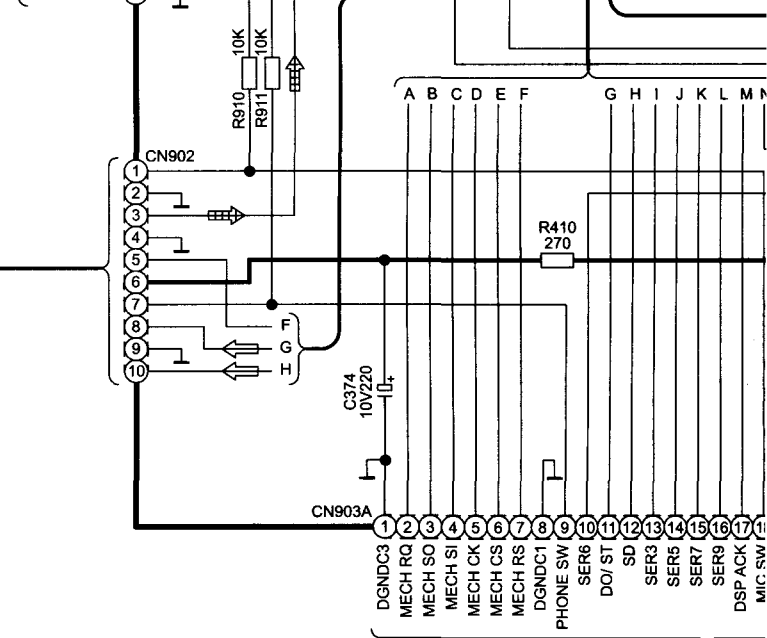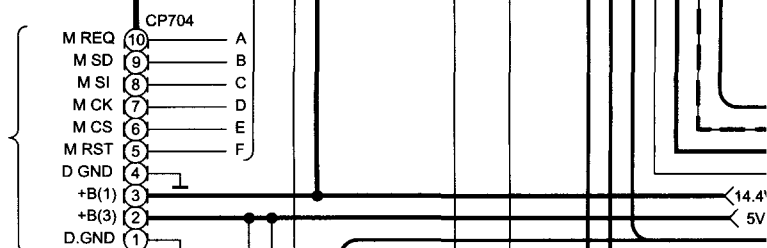

TO **J**
PANEL CIR
(CN903B)



 


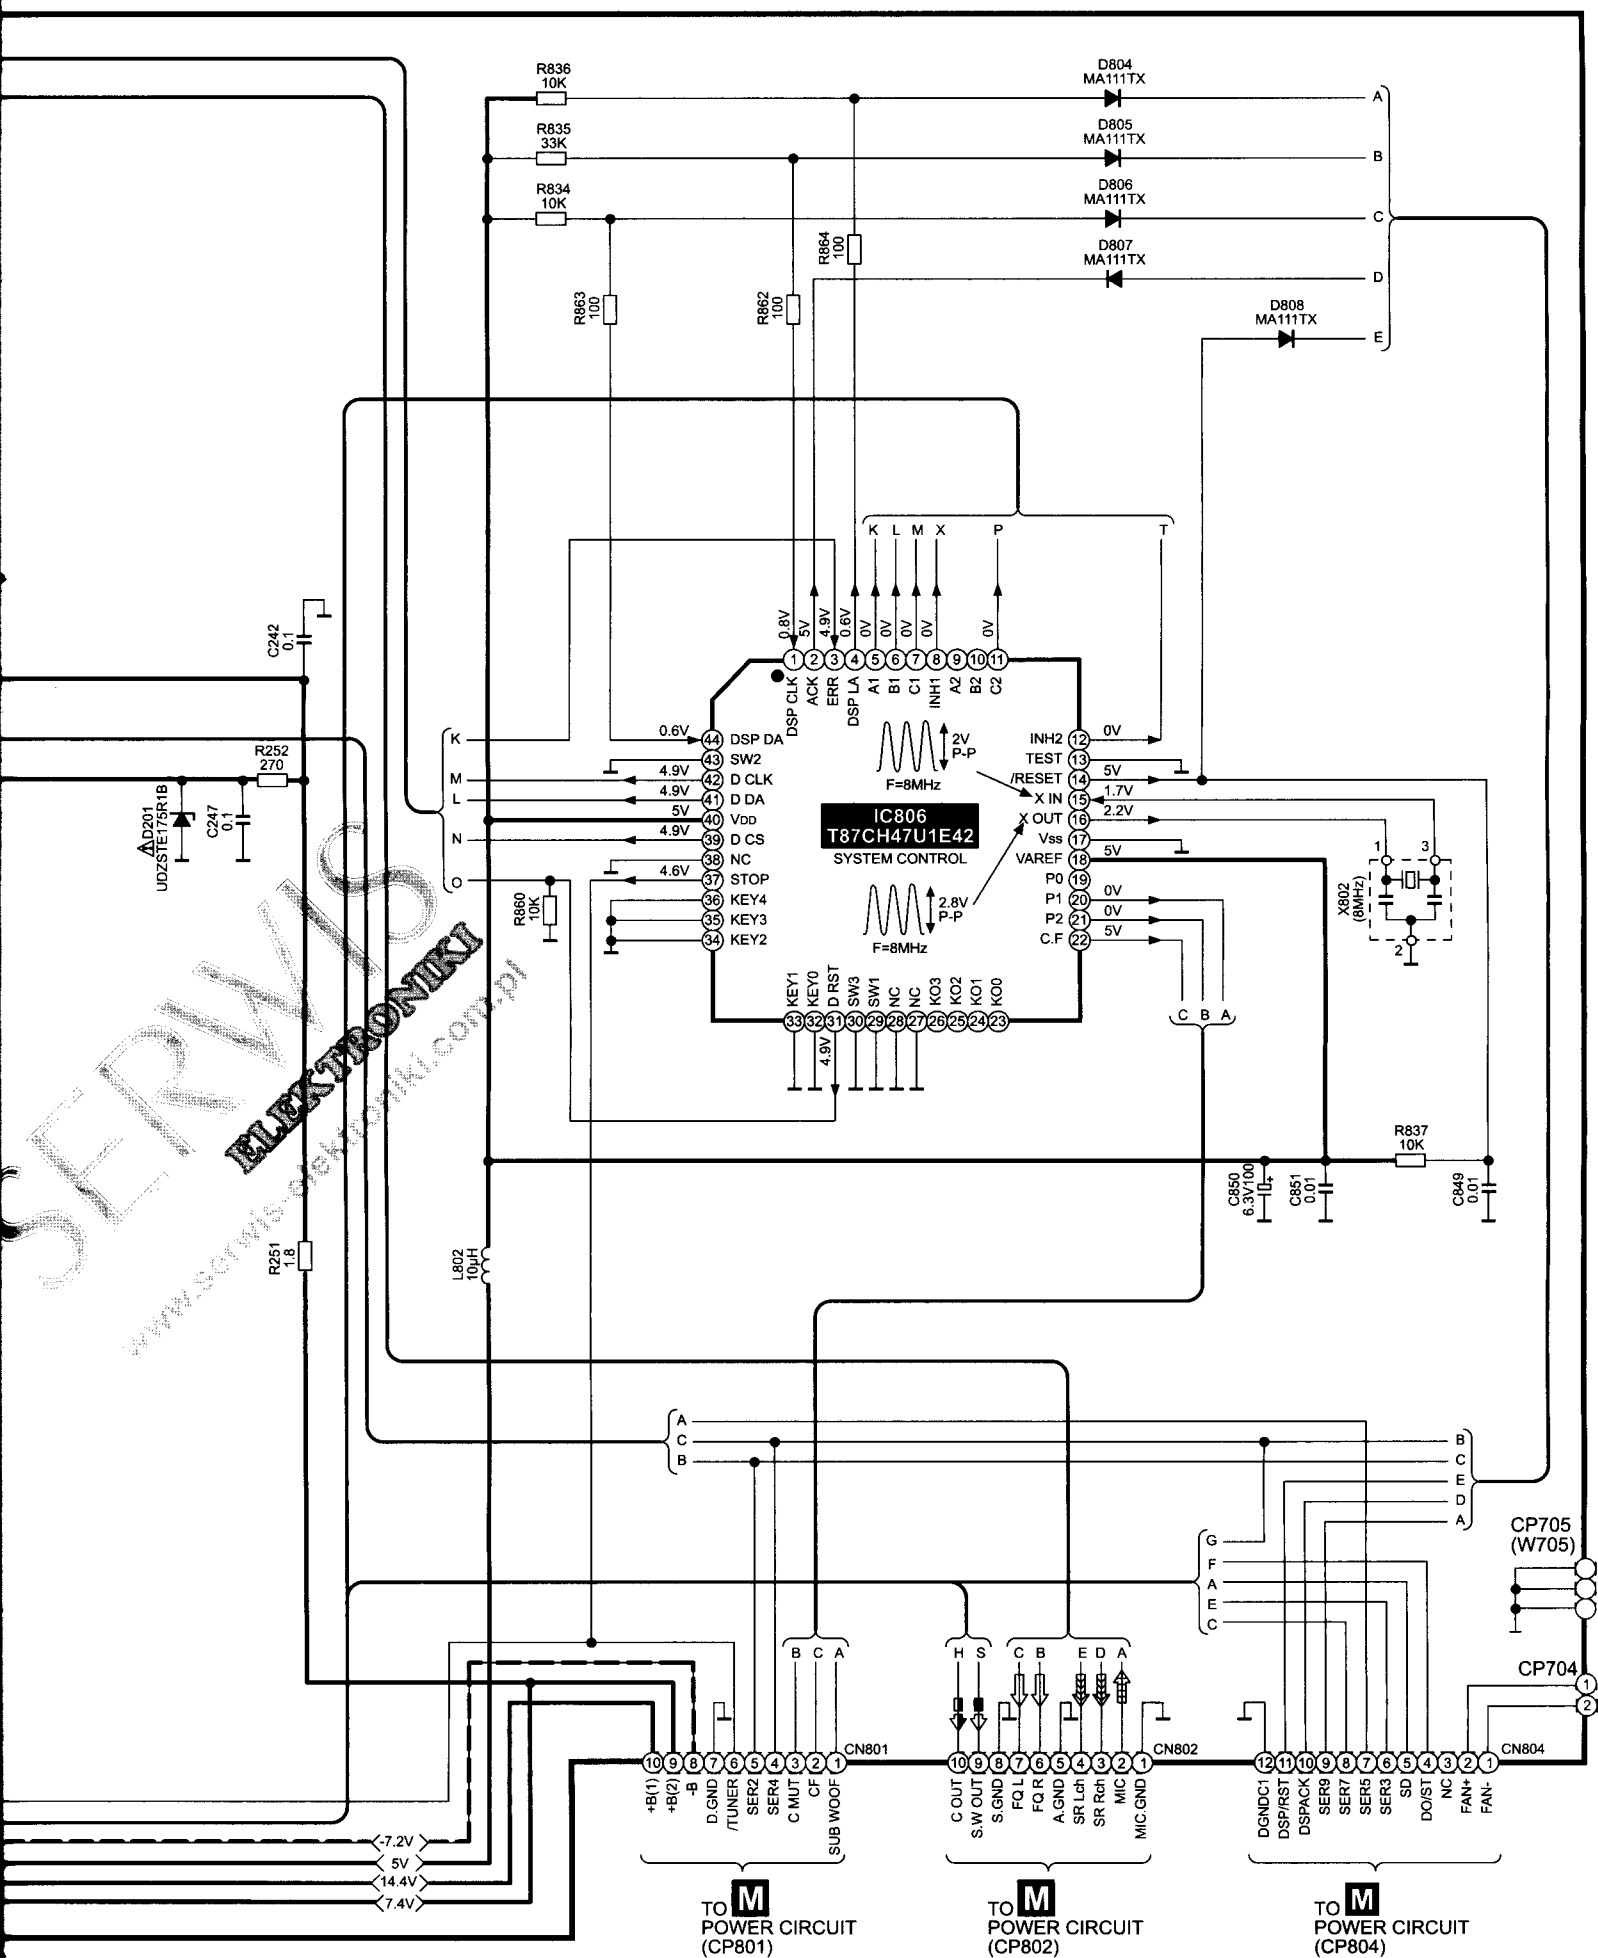


TO **K**
DSP CIRCUIT
(CN803)


TO **G**
DVD CIRCUIT
(CN702)

TO **B**
DAC CIRCUIT
(W1305)

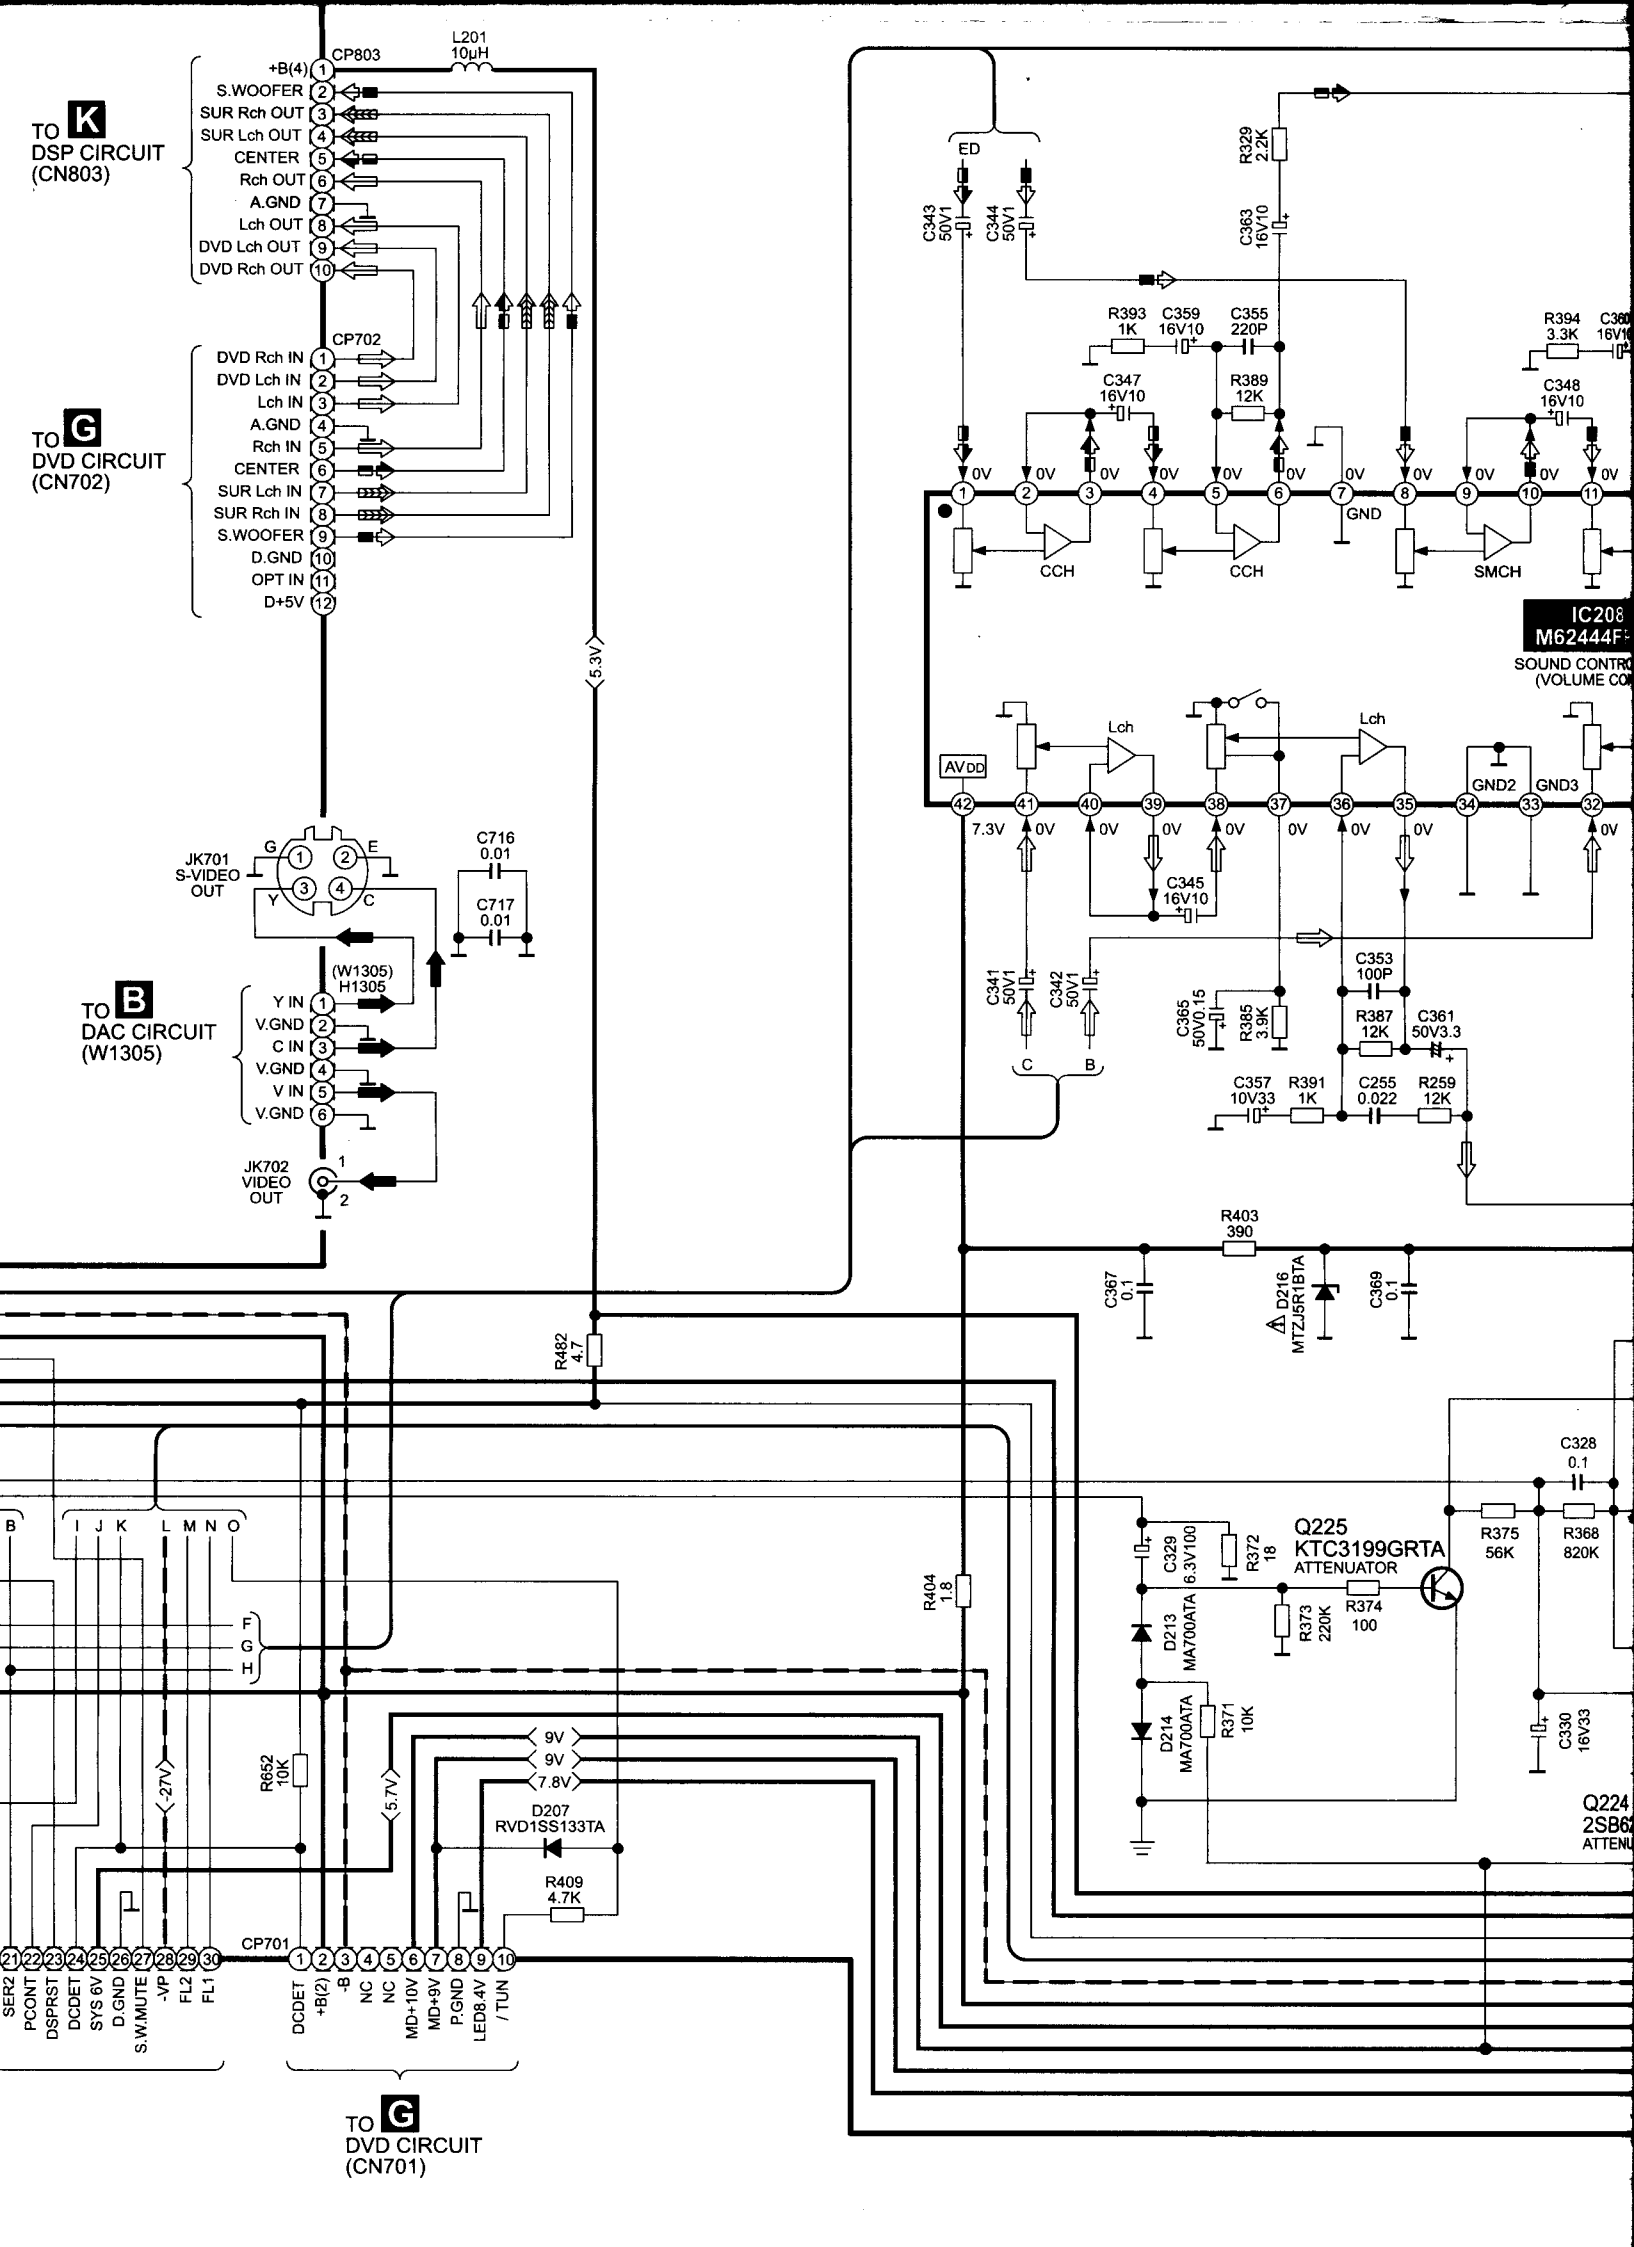

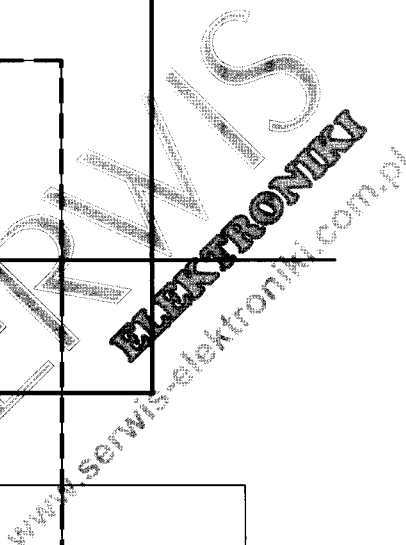

— : +B signal line ➡ : Audio signal line ➡ : Center speaker signal line
 - - - : -B signal line ➡ : Surround speaker signal line ➡ : Subwoofer signal line

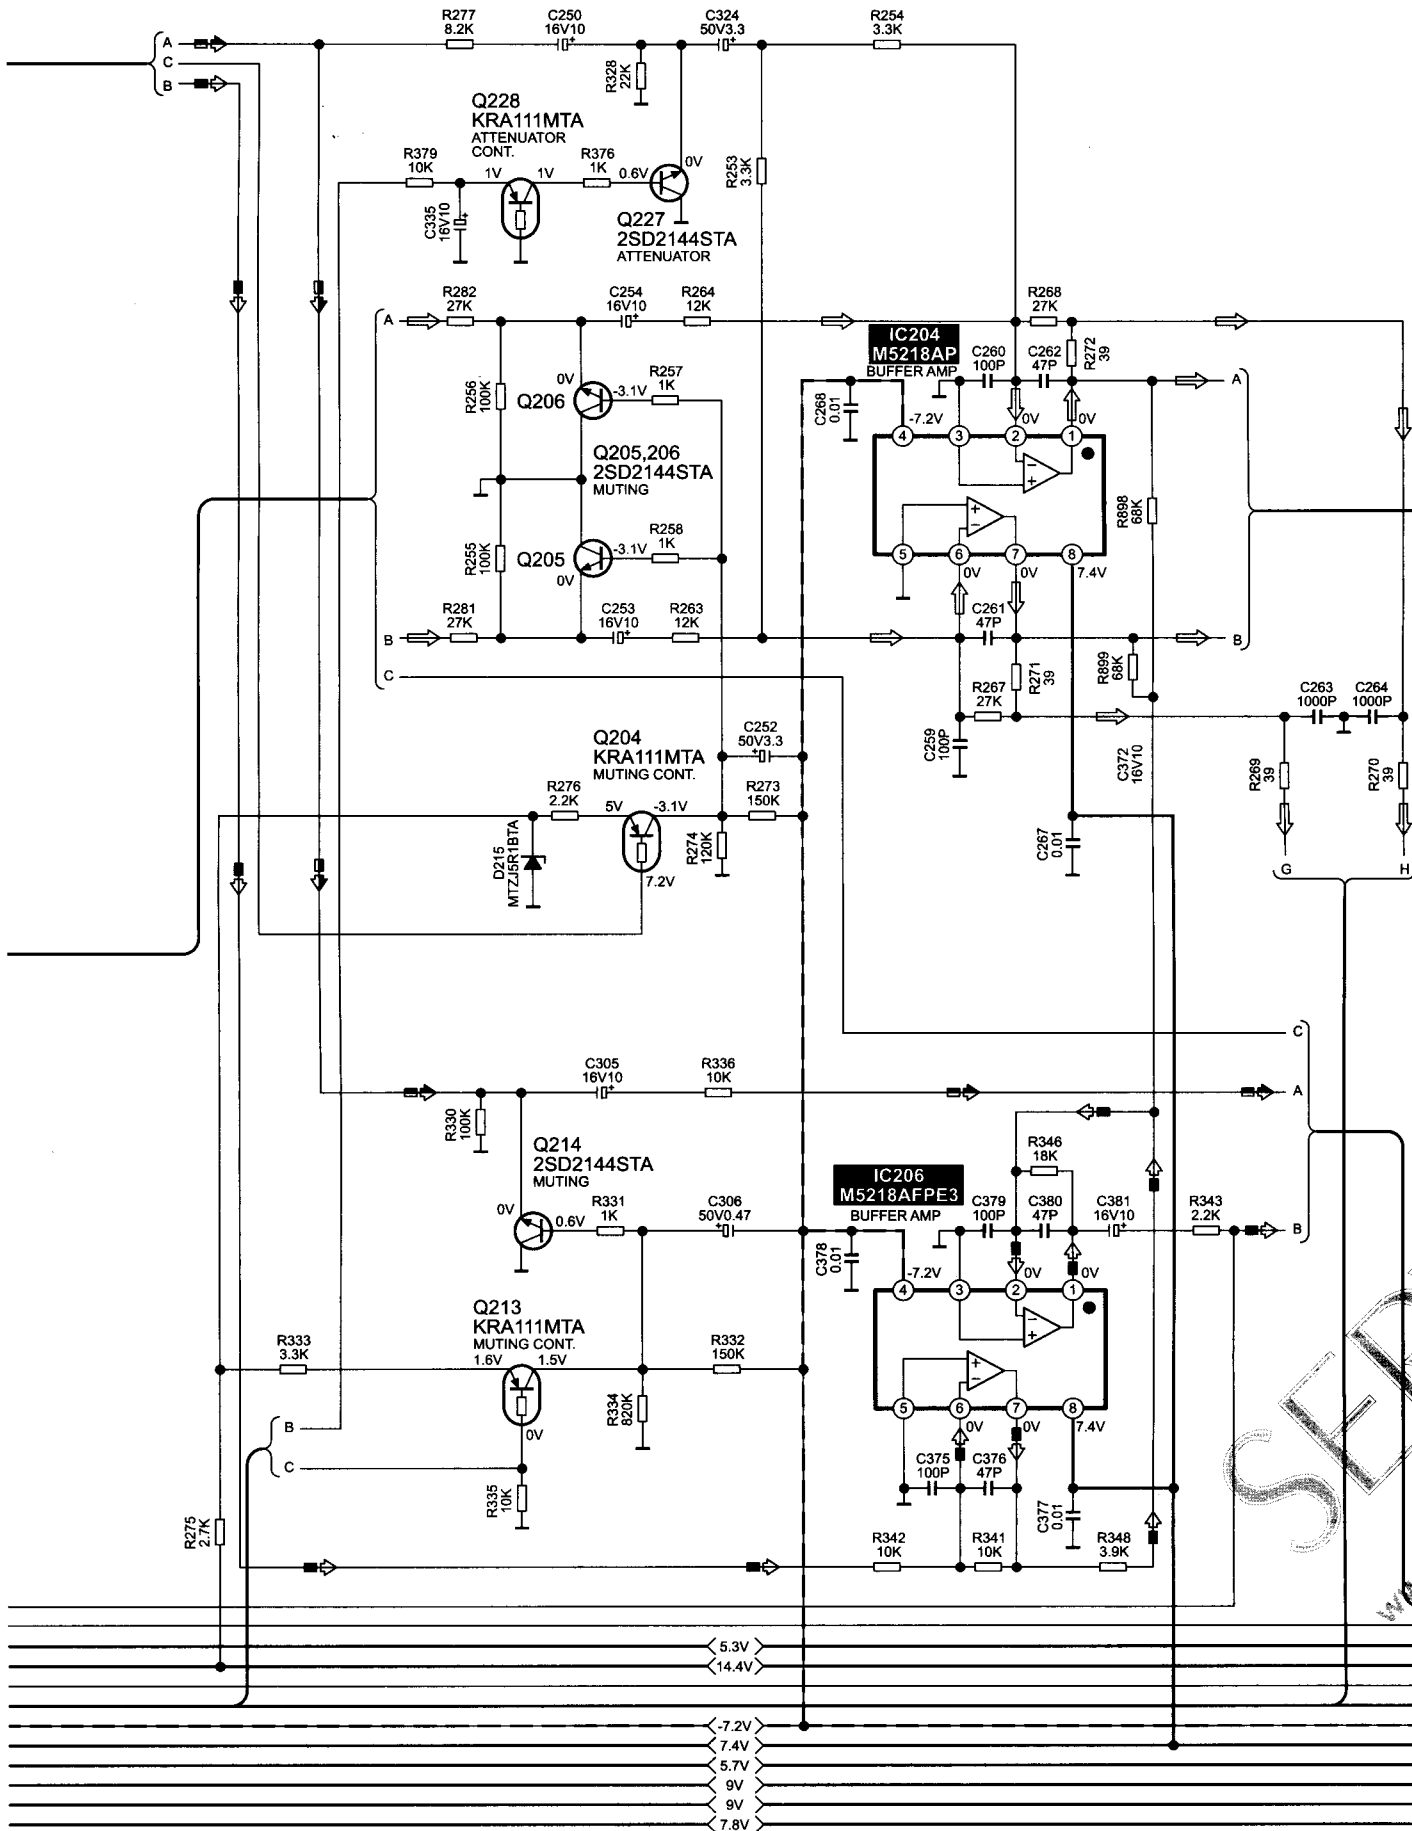


For GK only

For GN only

M POWER CIRCUIT
(FOR GN/GK ONLY)

— : +B signal line ➡ : Video signal line ➡ : Surround speaker signal line ➡ : Center speaker signal line
 - - - : -B signal line ➡ : Audio signal line ➡ : Mic signal line ➡ : Subwoofer speaker signal line

: Center speaker signal line : AM signal line
 : Subwoofer speaker signal line : FM signal line

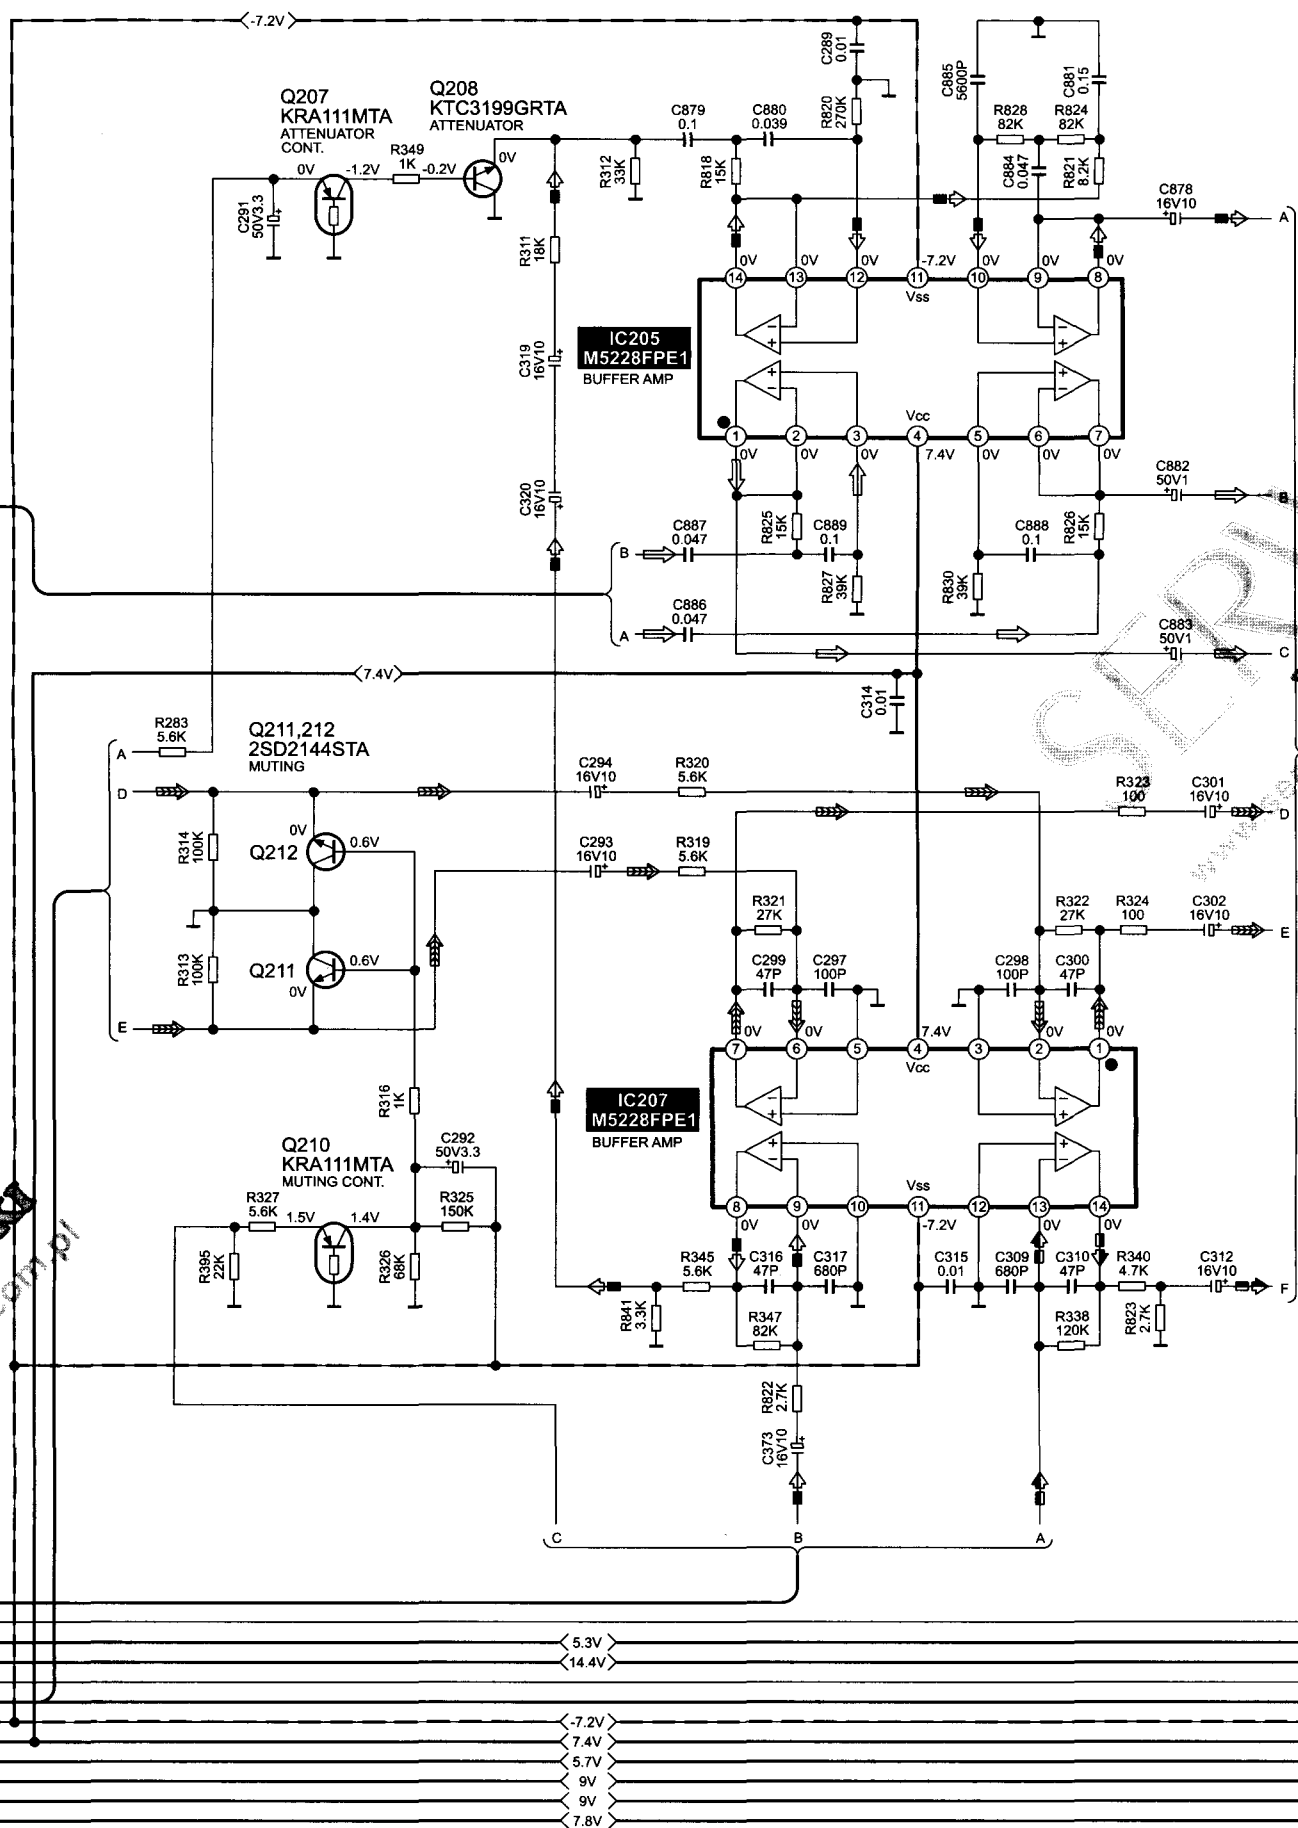

TO **K**
DSP CIRCUIT
(CN801)

TO **K**
DSP CIRCUIT
(CN802)

TO **K**
DSP CIRCUIT
(CN804)

TO **G**
DVD CIRCUIT
(CN704)


TO **K**
DSP CIRCUIT
(CN803)


TO **G**
DVD CIRCUIT
(CN702)

TO **B**
DAC CIRCUIT
(W1305)


TO **J**
PANEL CIRCUIT
(CN903B)


TO **G**
DVD CIRCUIT
(CN701)

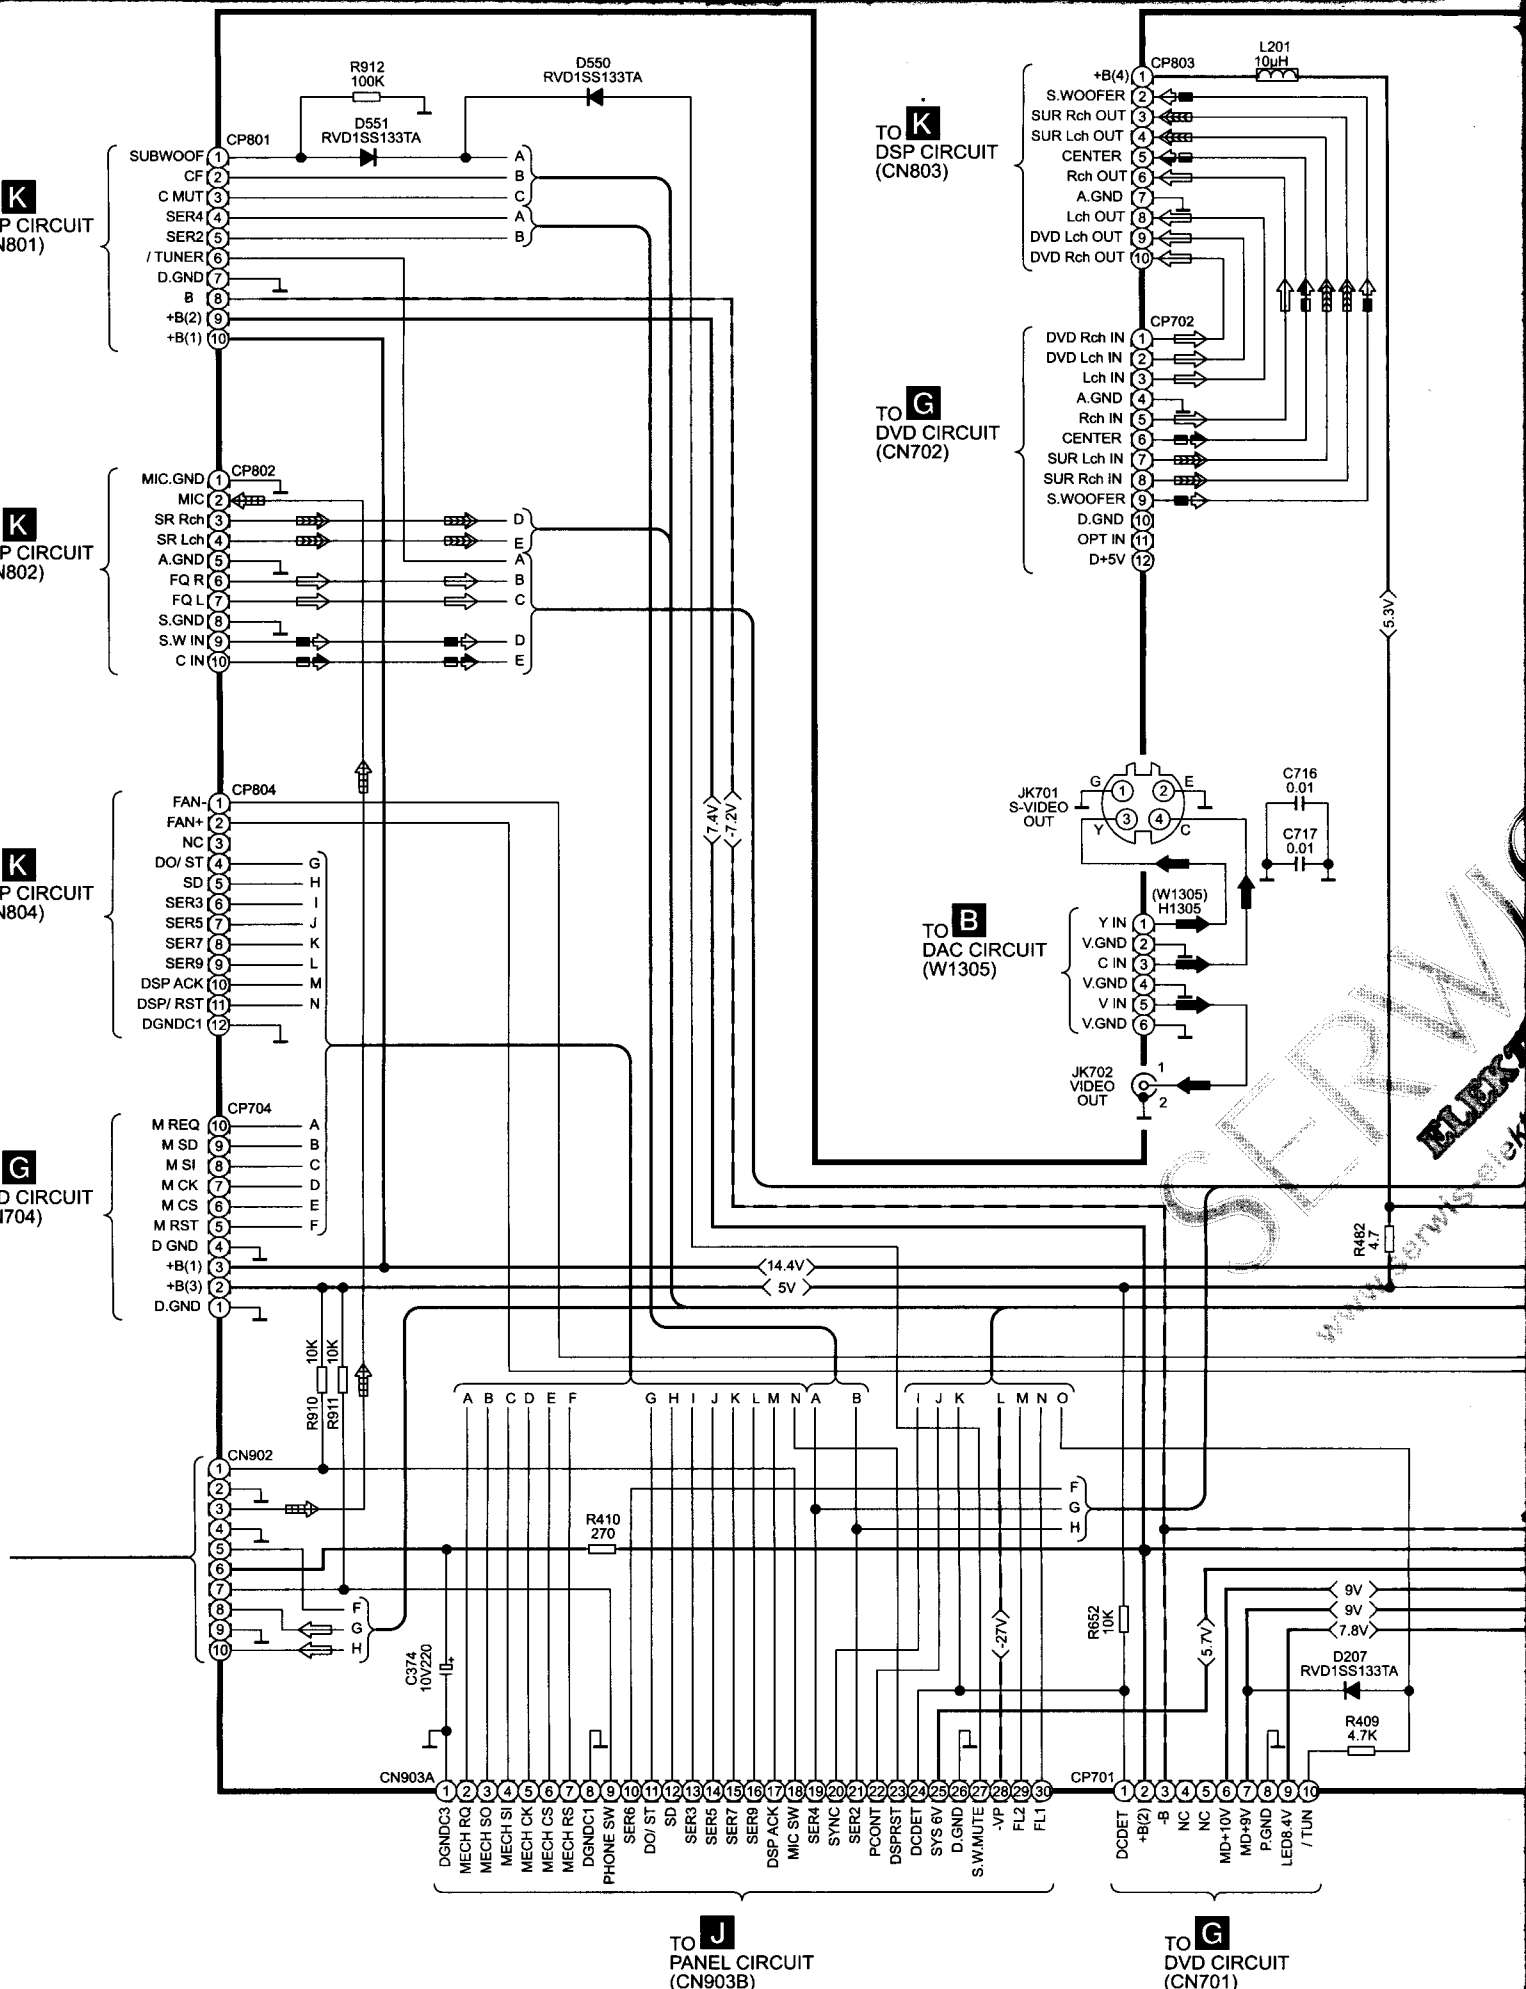


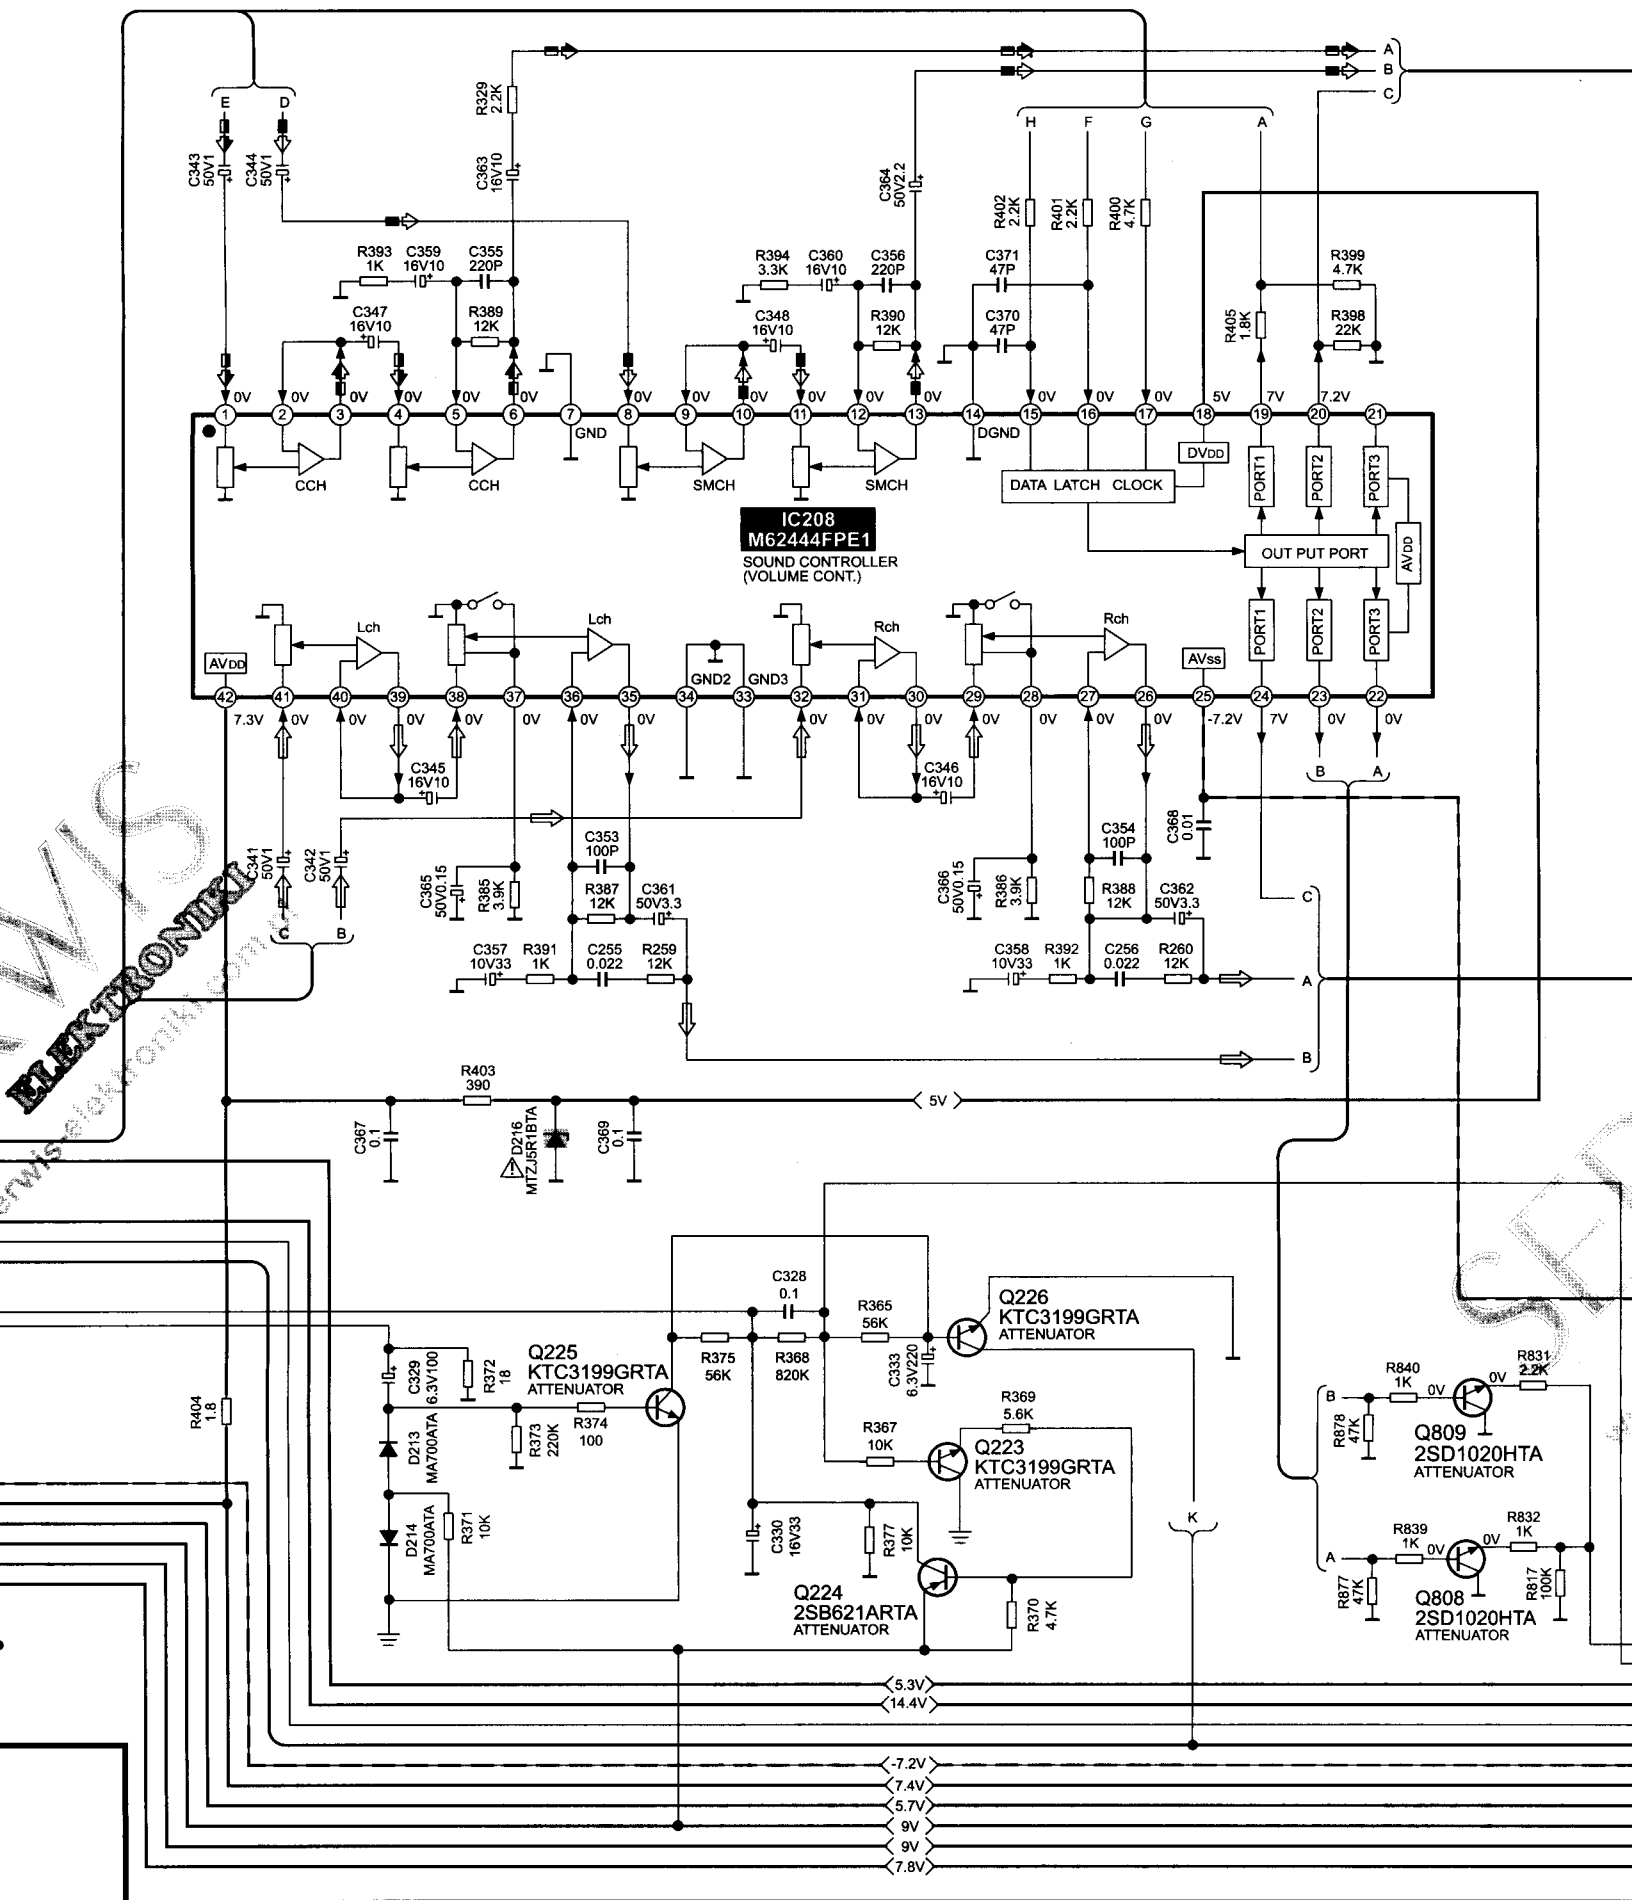


IC501
RSN311W64-P
POWER AMP

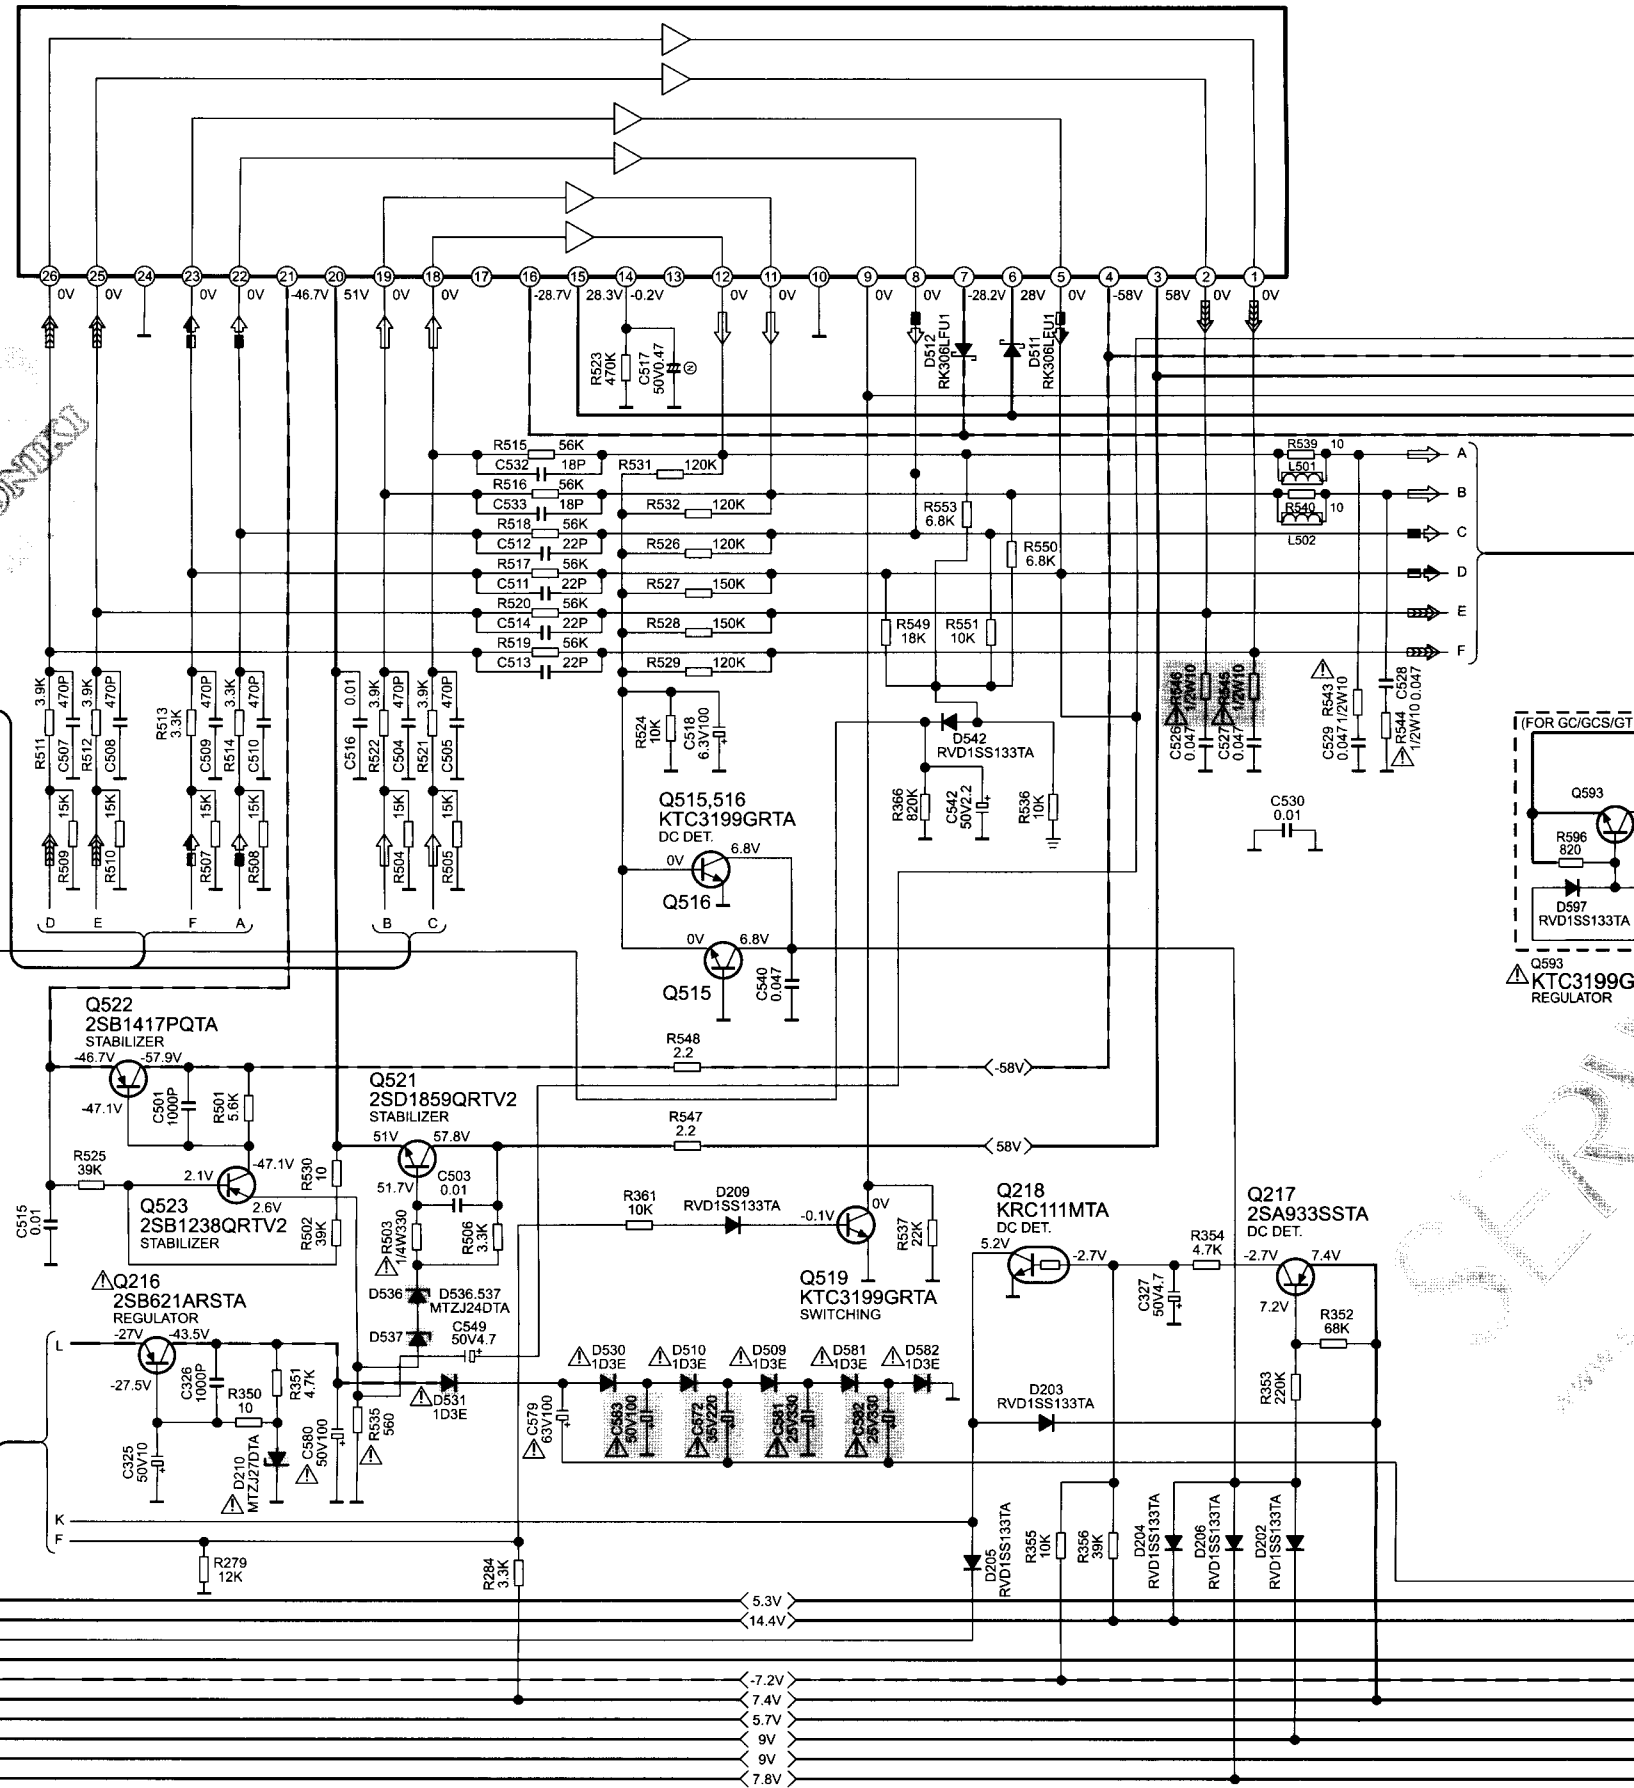



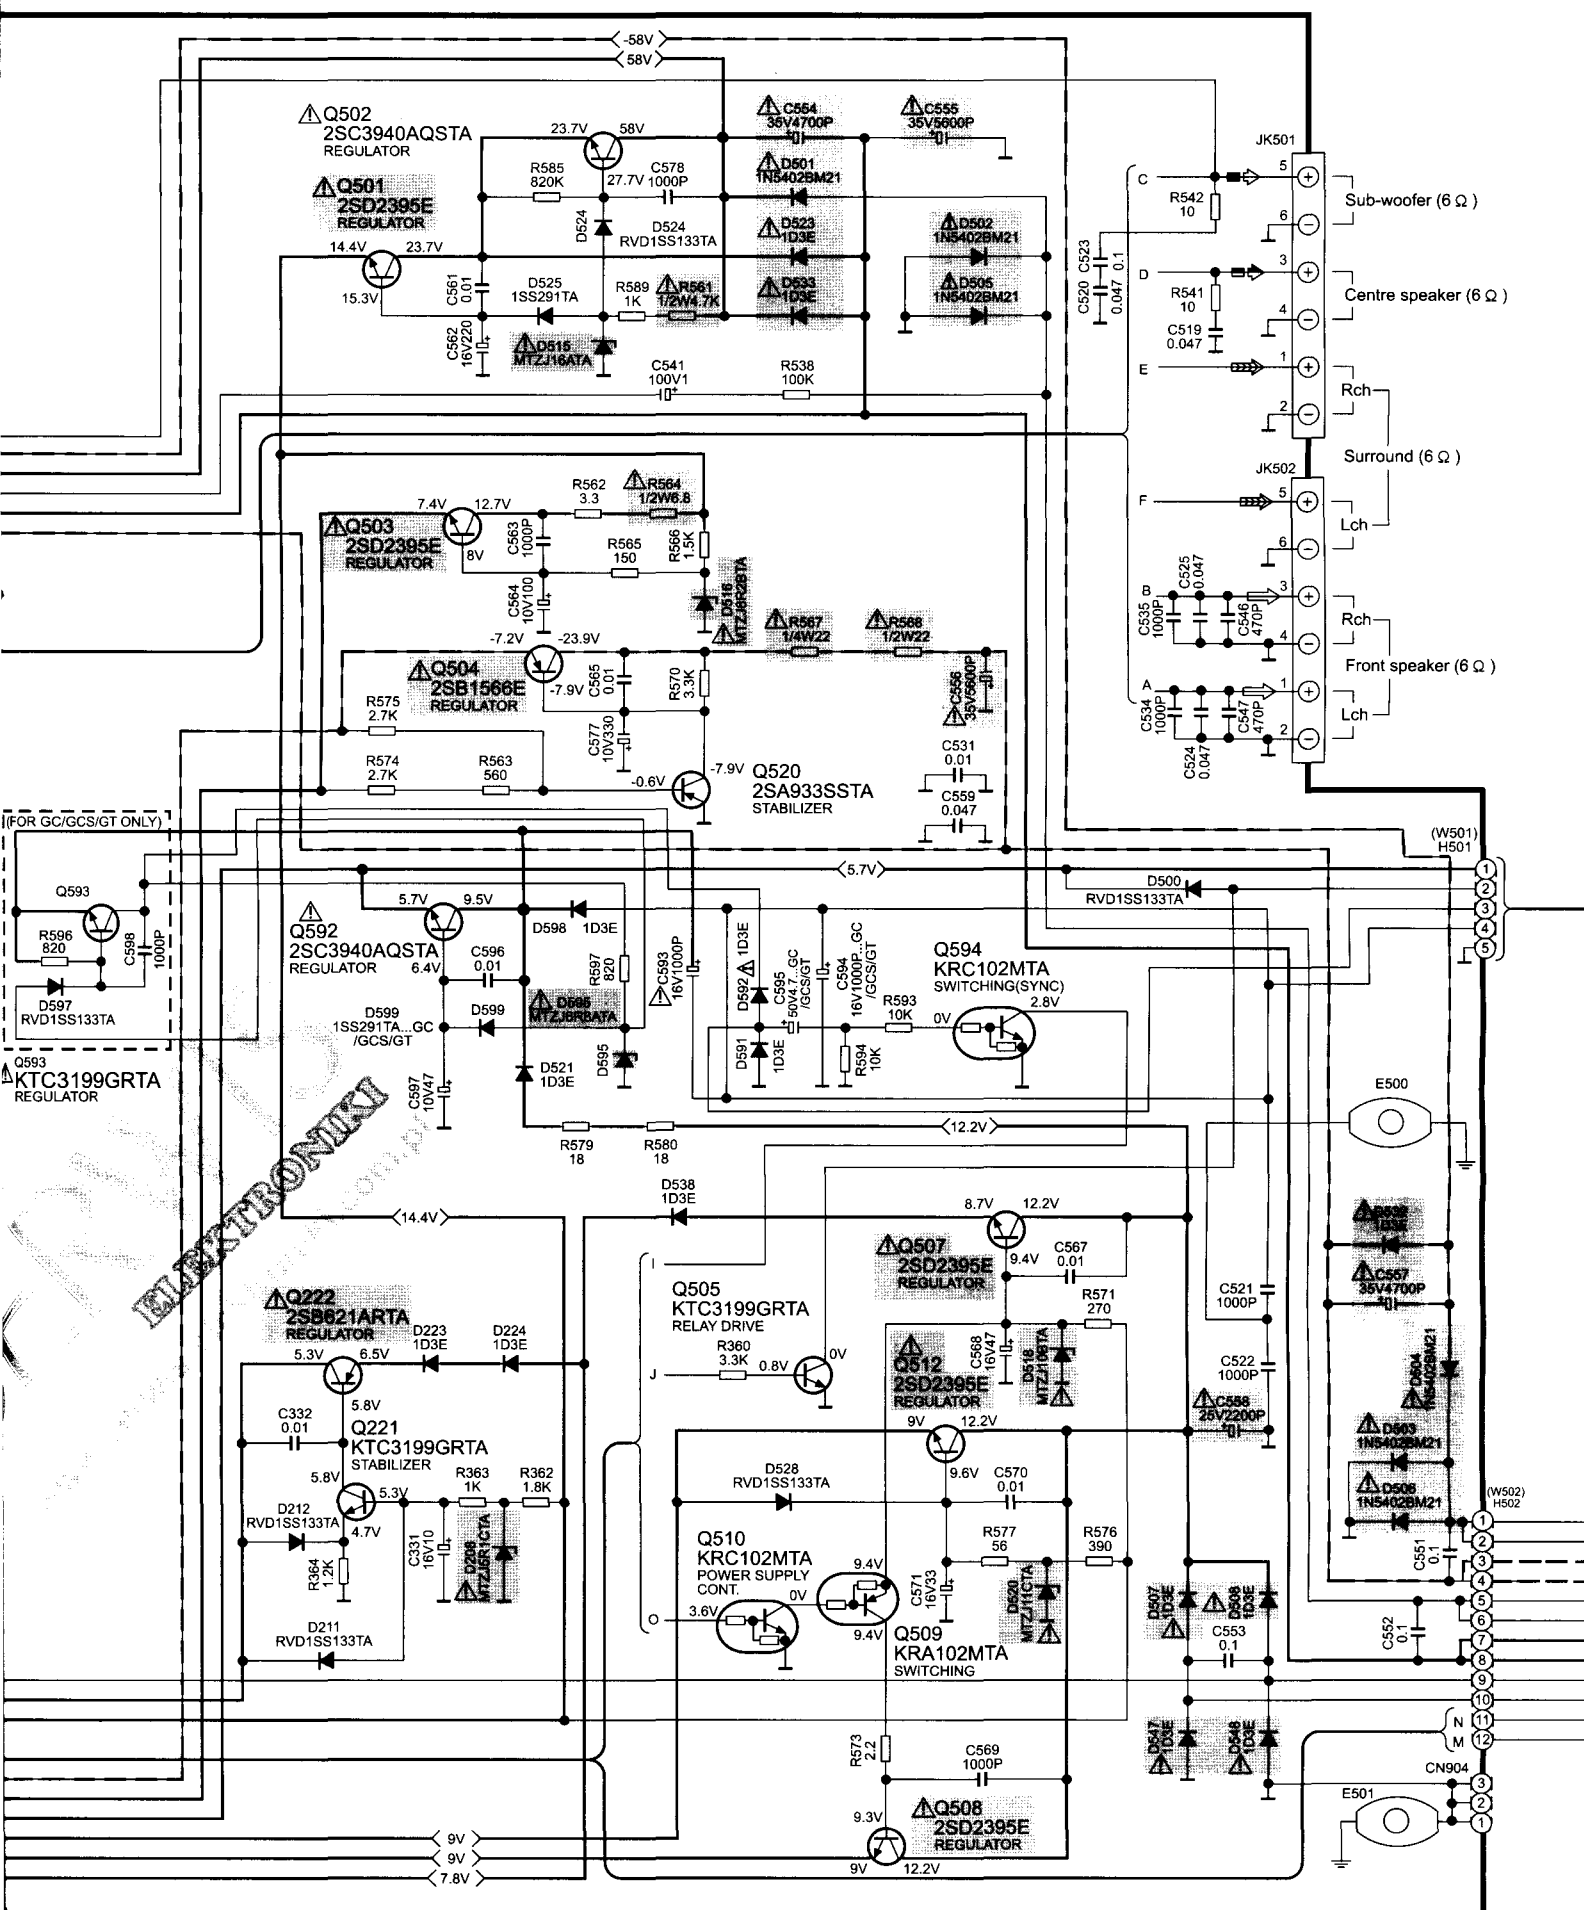


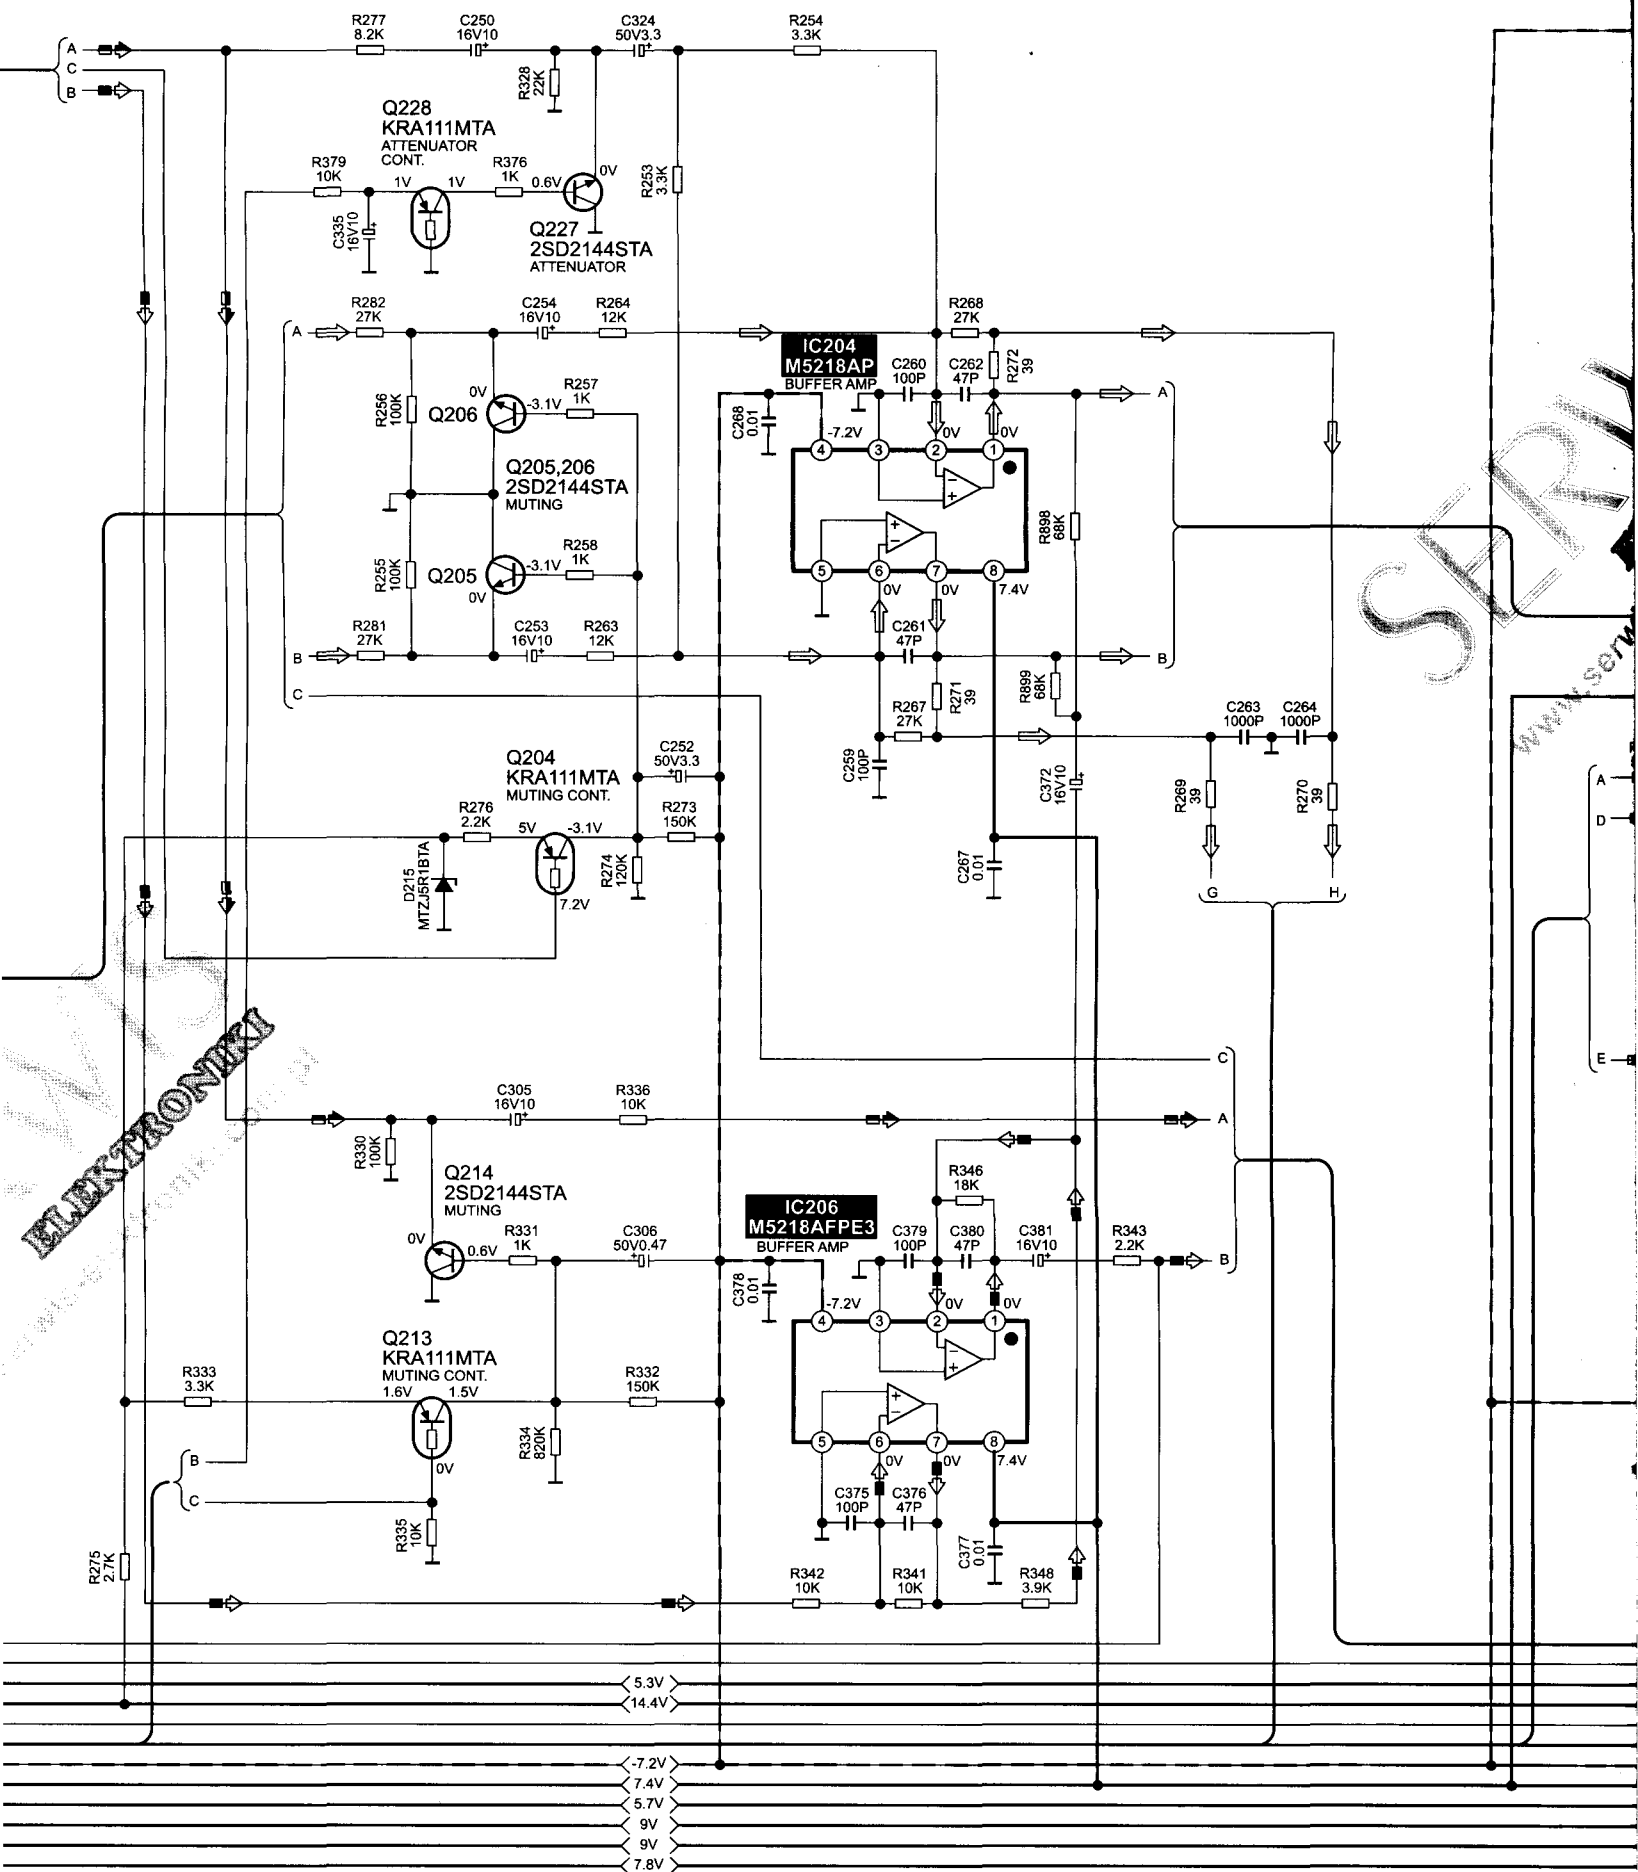

 



IC501
RSN311W64-P
 POWER AMP

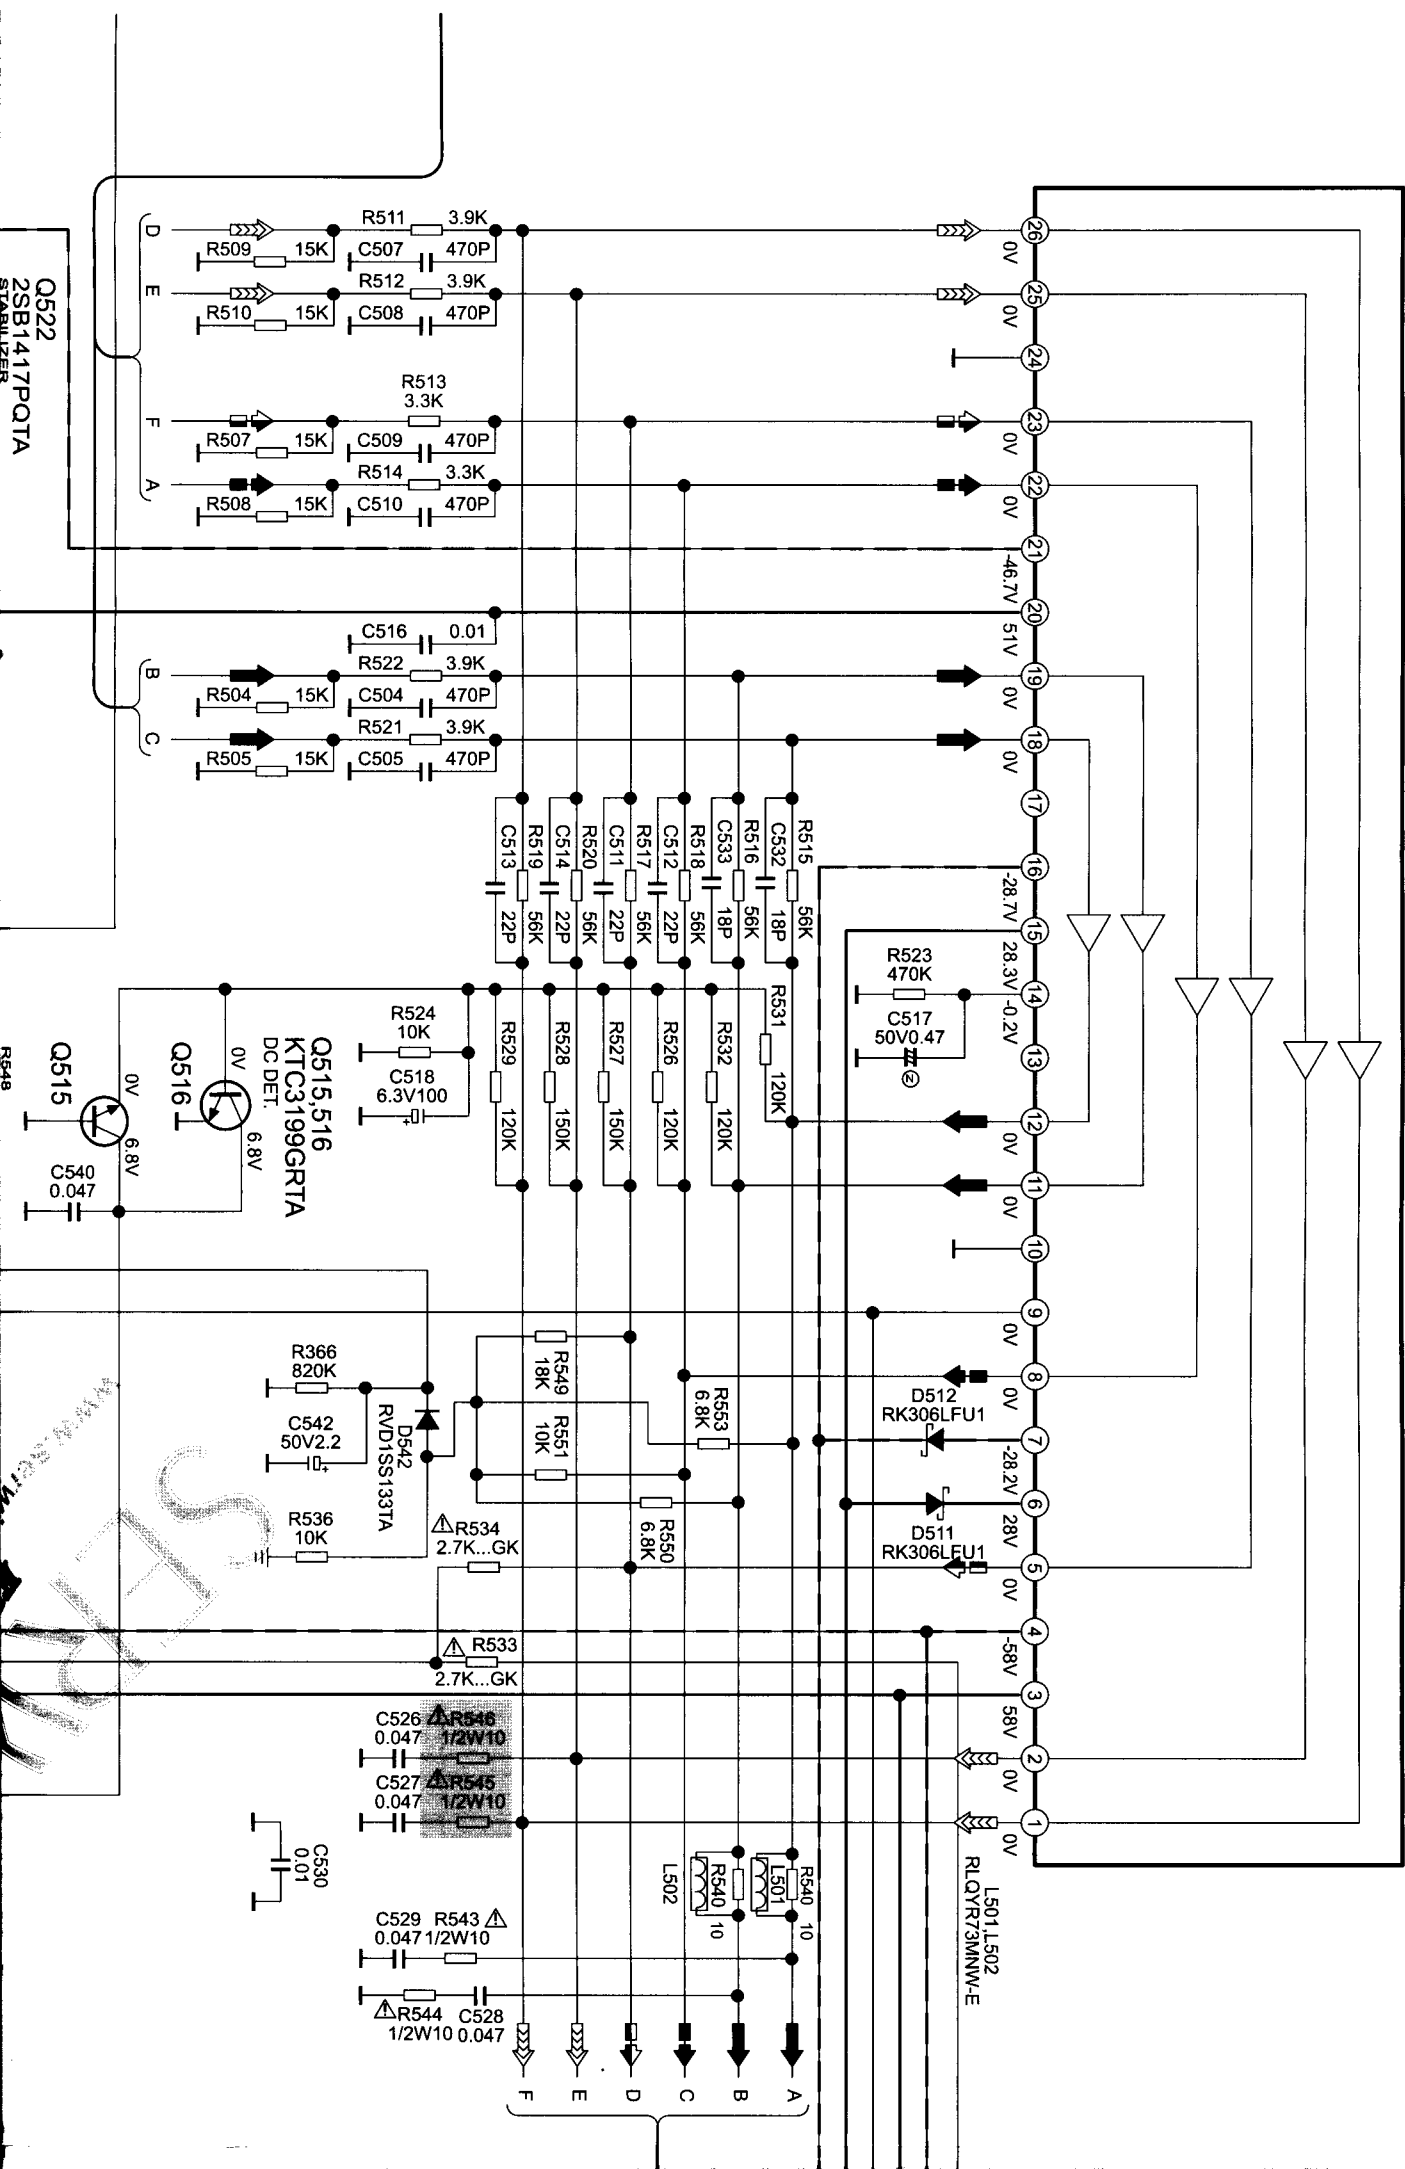

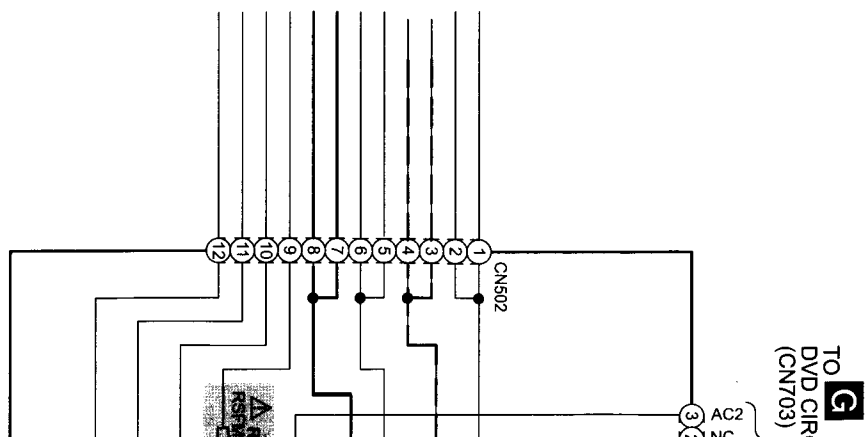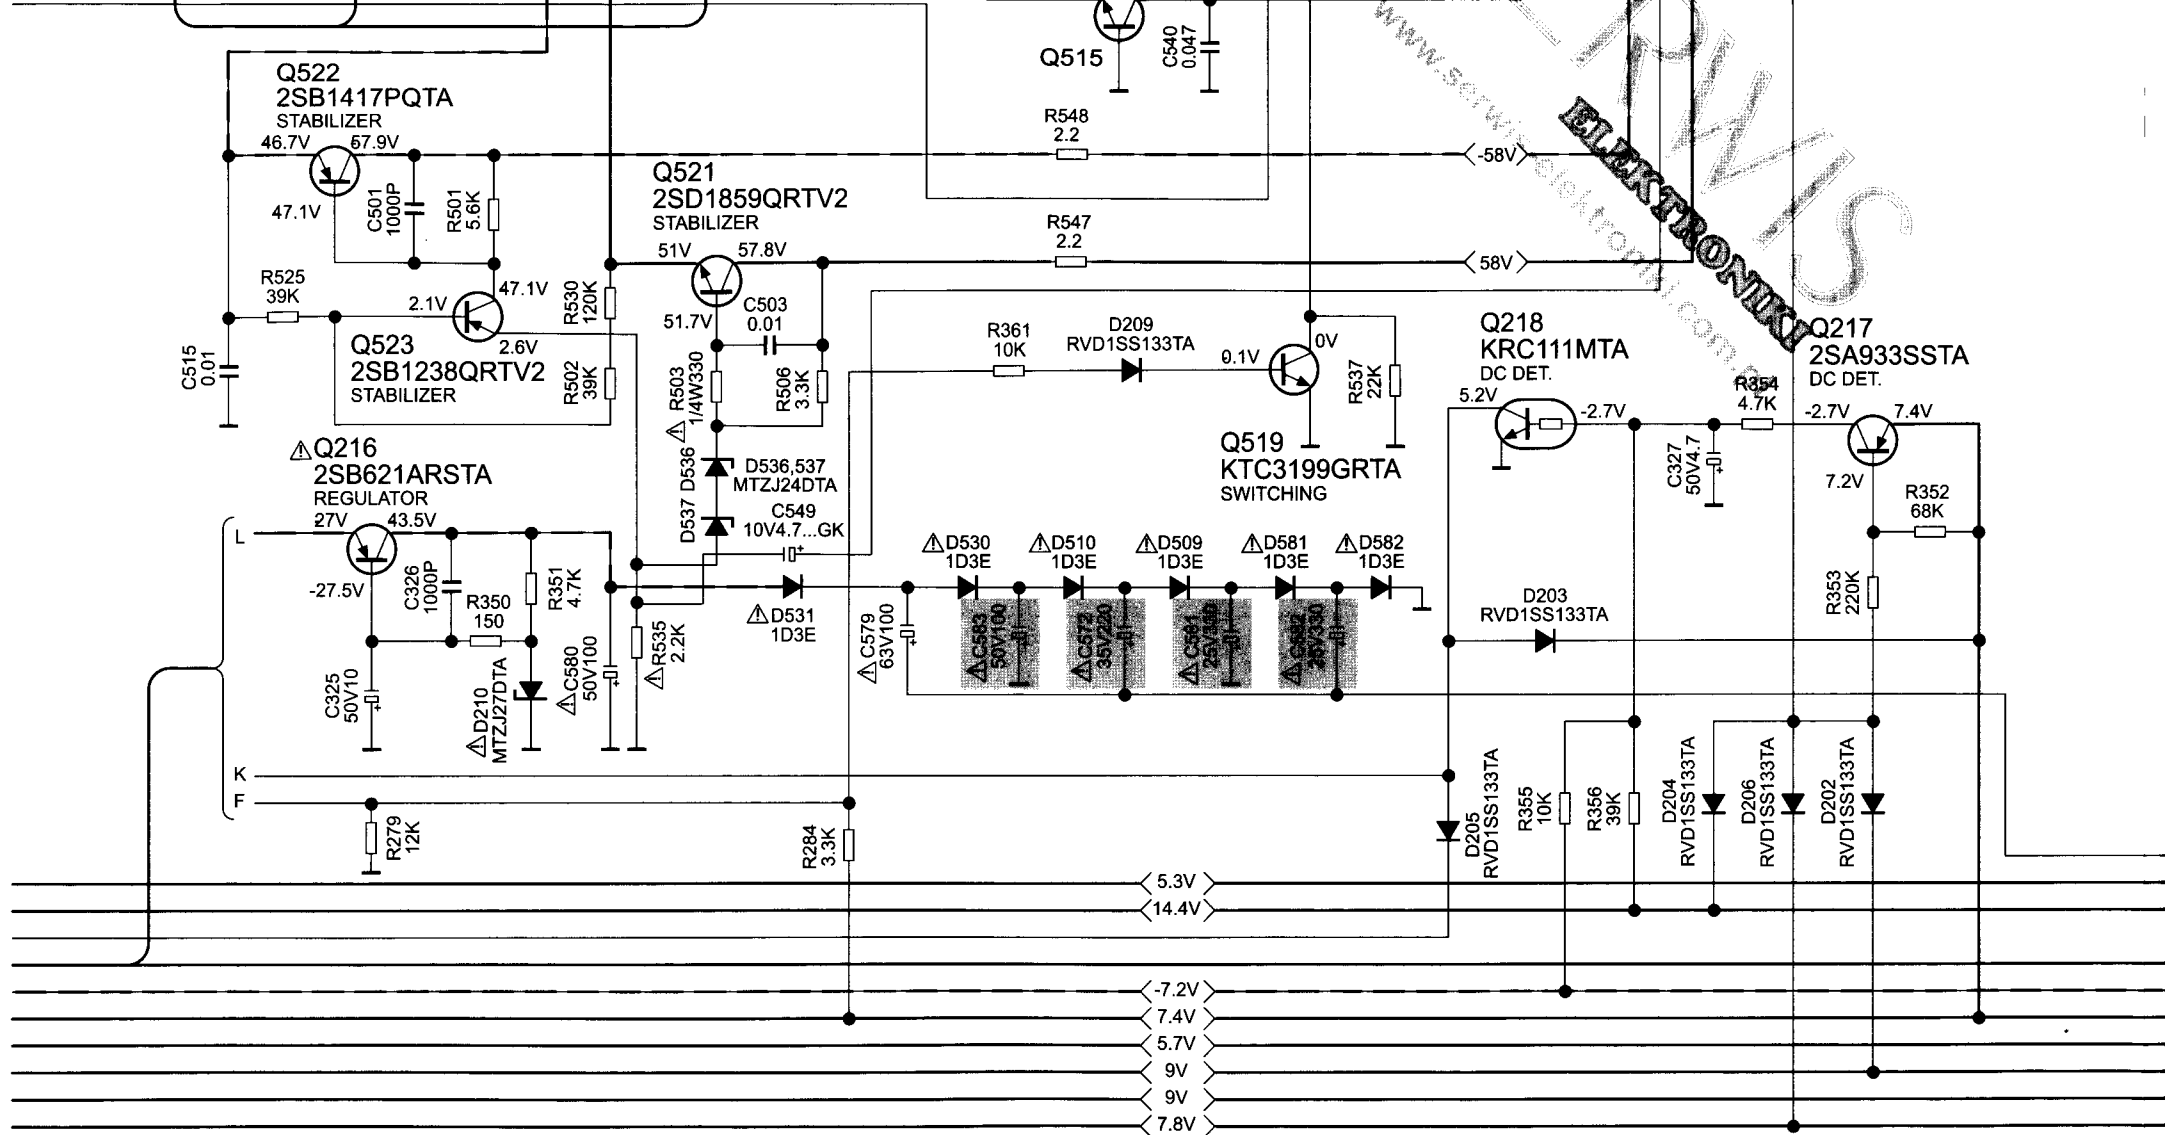

— : +B signal line ➡ : AM signal line
 - - - : -B signal line ⇨ : FM signal line

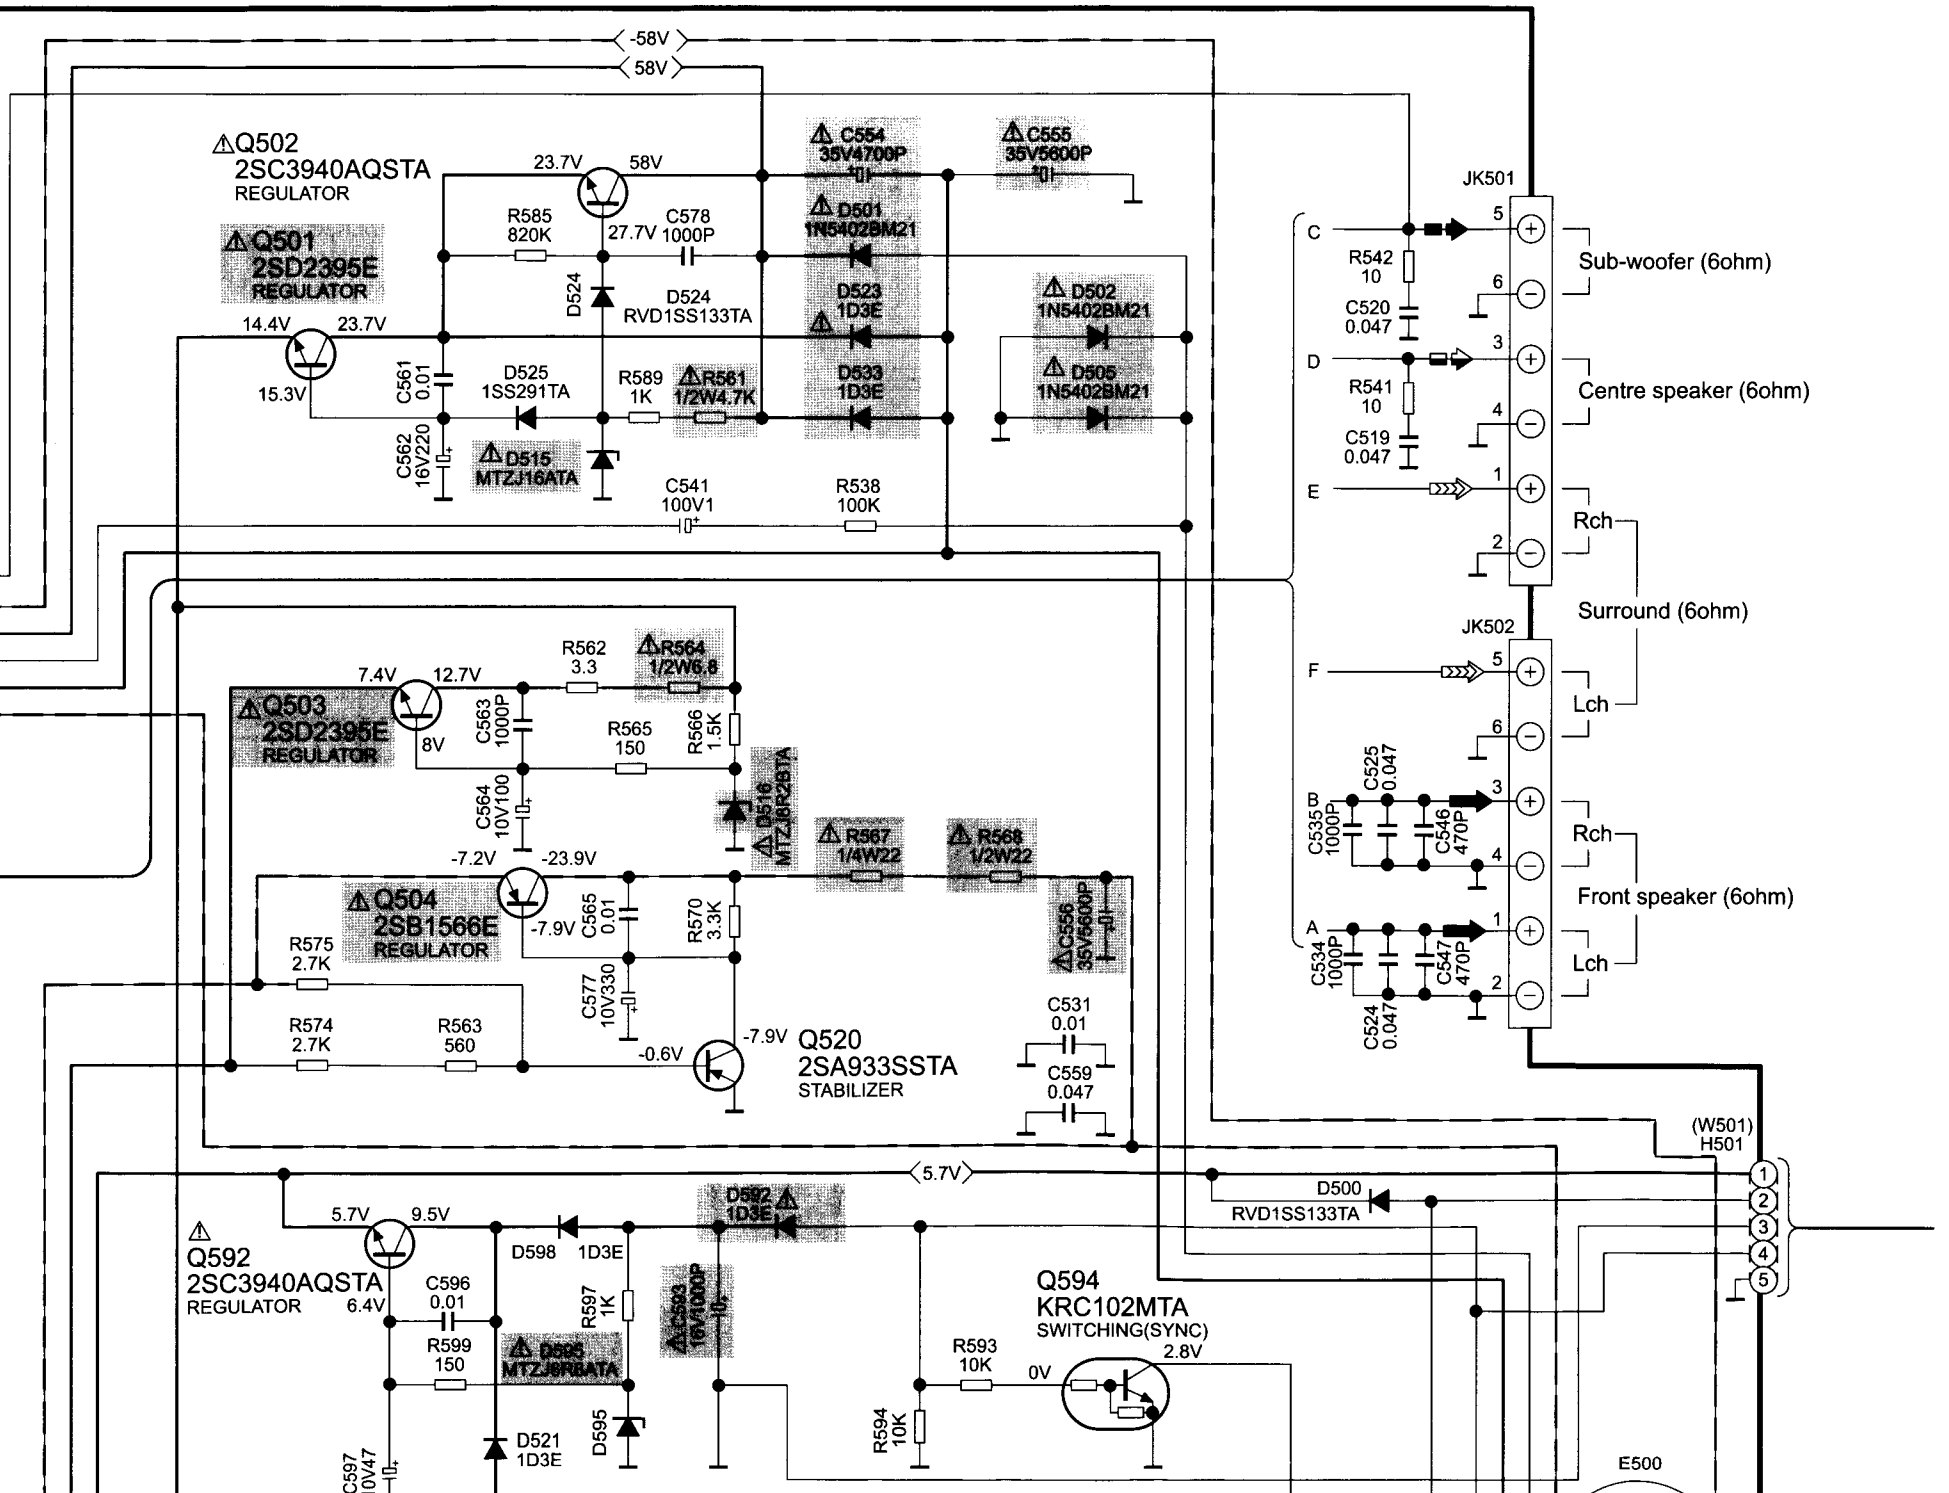


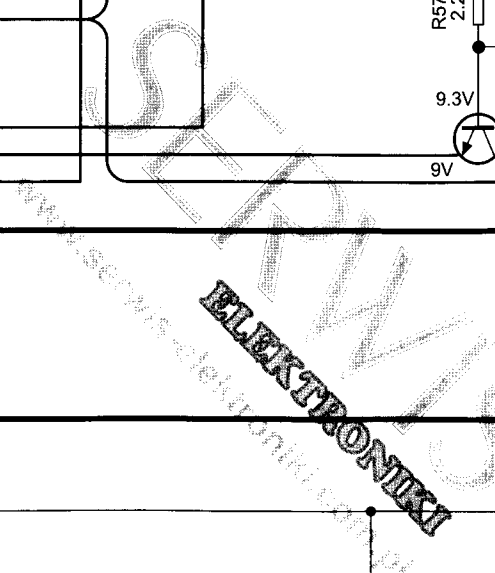

CUIT (FOR GK ONLY) — : +B signal line


■■■ : AM signal line
 ■■■ : AM OSC signal line
 □◇ : FM signal line
 □◇ : FM OSC signal line

BACK CIRCUIT

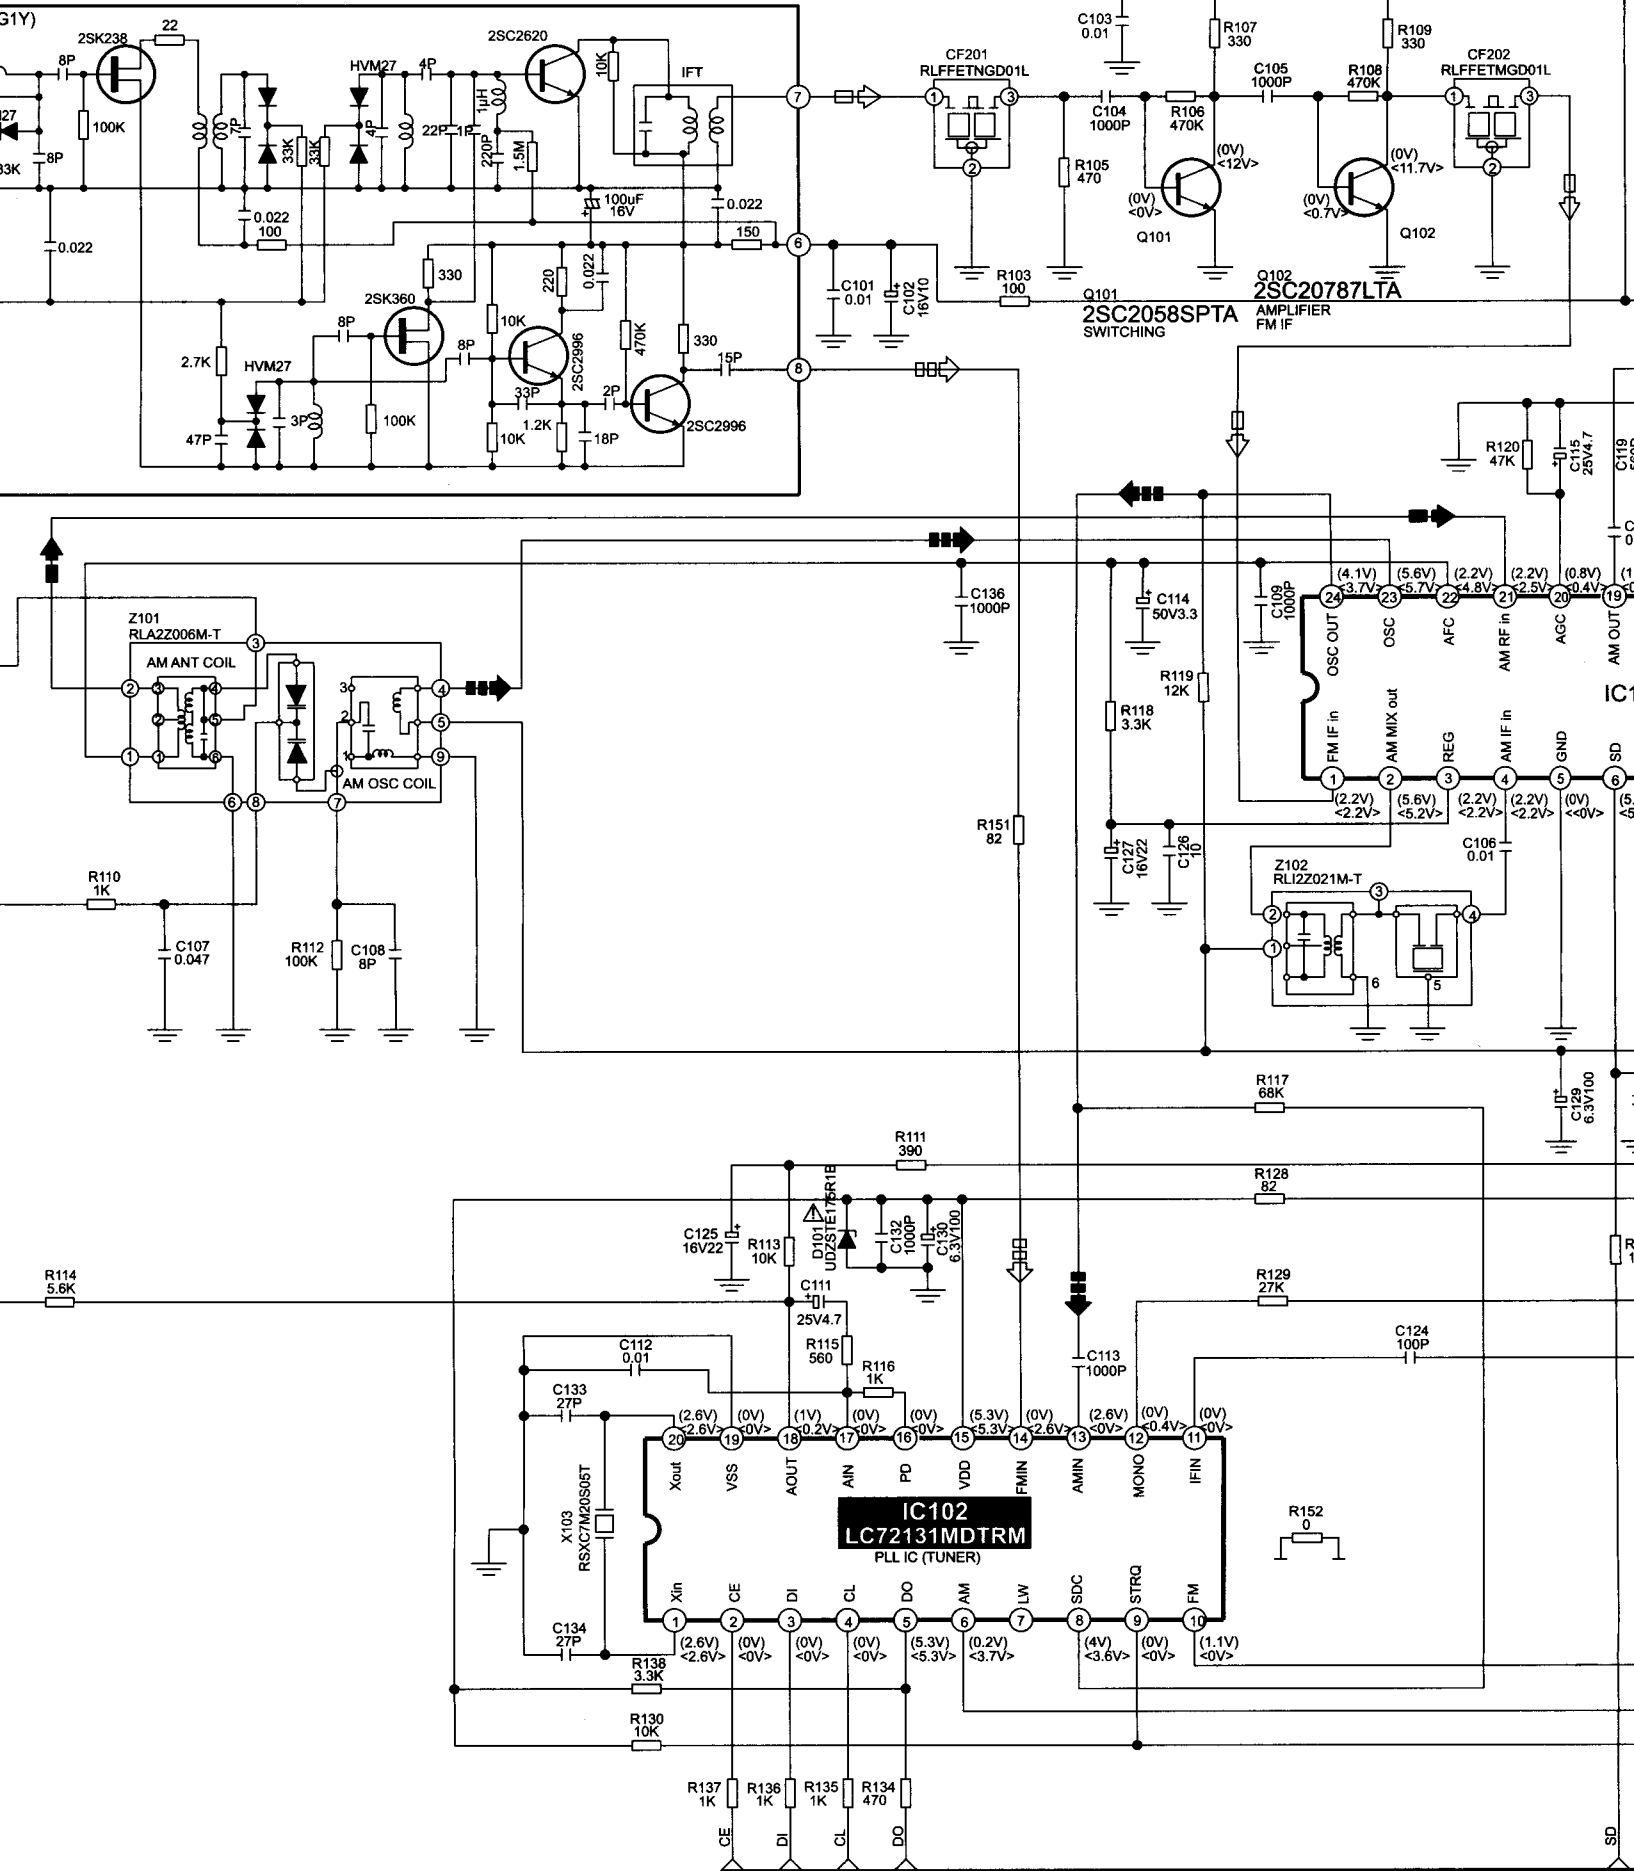


—— : +B signal line
 - - - : -B signal line



O AC INLET CIRCUIT (FOR GC/GCS/GT ONLY)

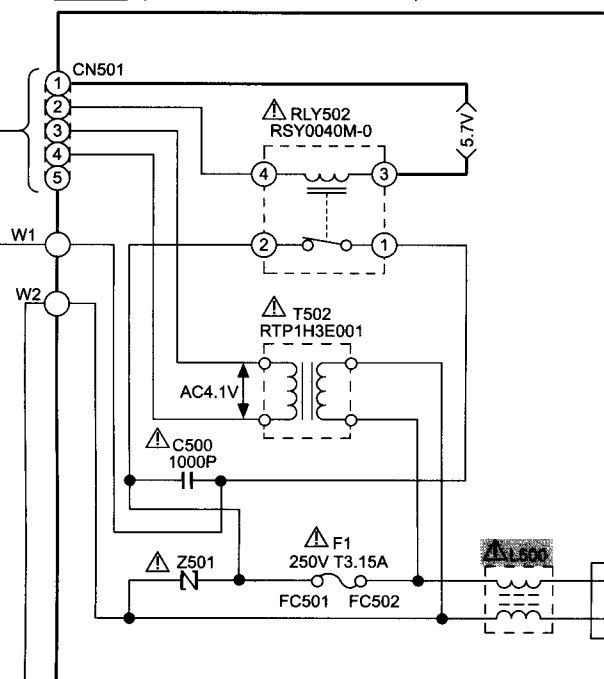

N AC TRANSFORMER CIRCUIT (FOR GC/GCS/GT ONLY)

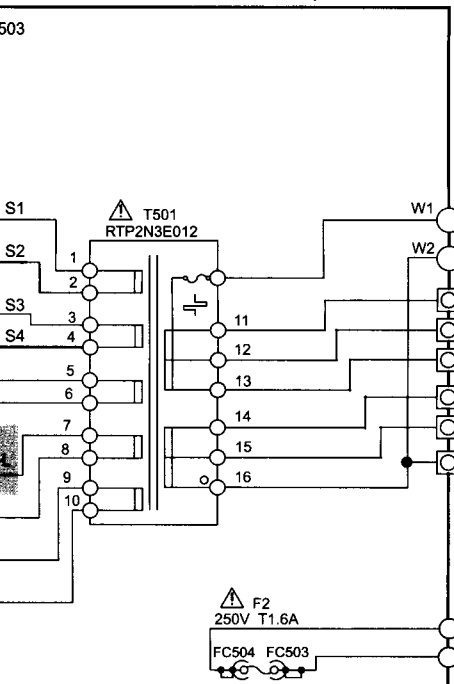

Q VOLTAGE SELECTOR CIRCUIT (FOR GC/GCS/GT ONLY)

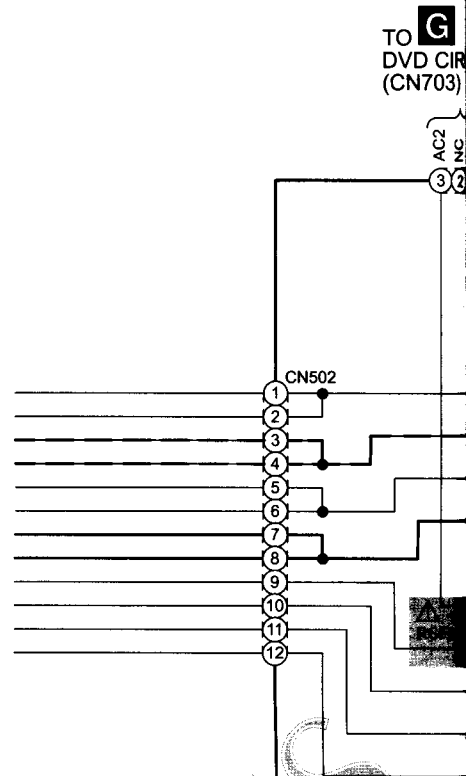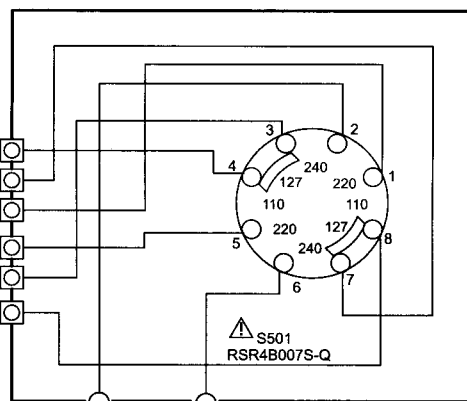

SERVIS
 ELEKTRONIKI
 www.servis-elektroniki.com

AC INLET CIRCUIT (FOR GN/GK ONLY)

— : +B signal line
- - - : -B signal line

TO DVD CIRCUIT
(CN703)

AC TRANSFORMER CIRCUIT (FOR GN/GK ONLY)

