
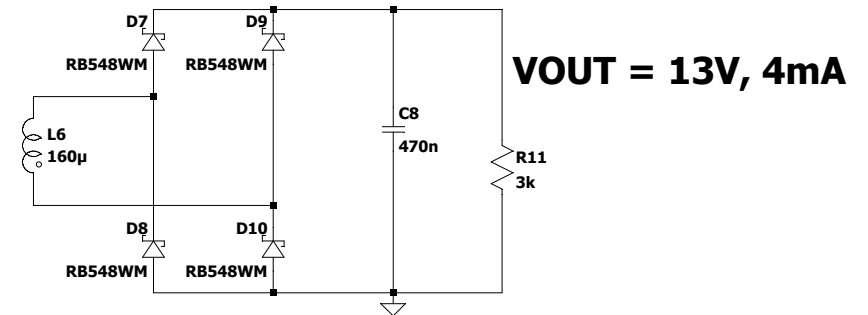
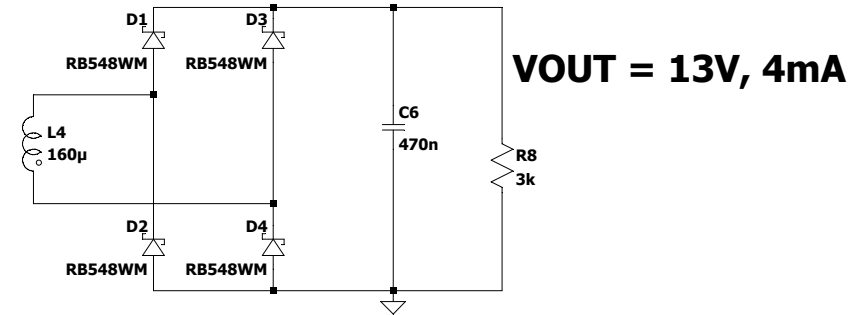
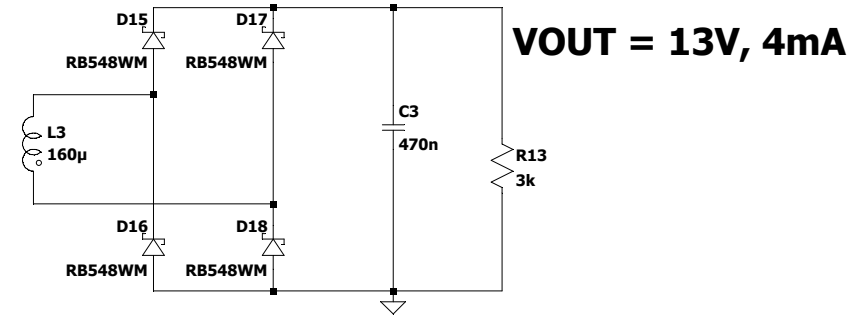
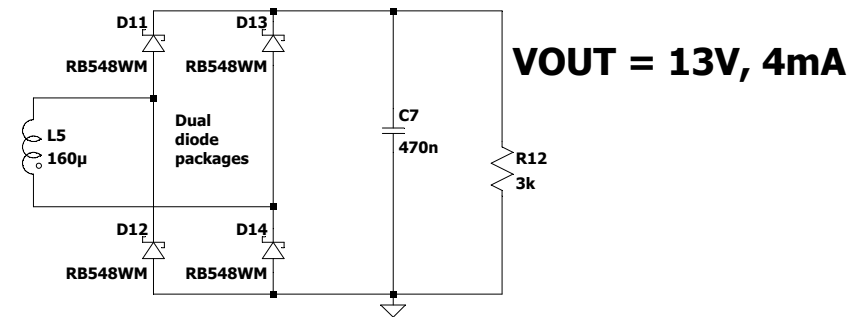


PUSH-PULL Transformer driver

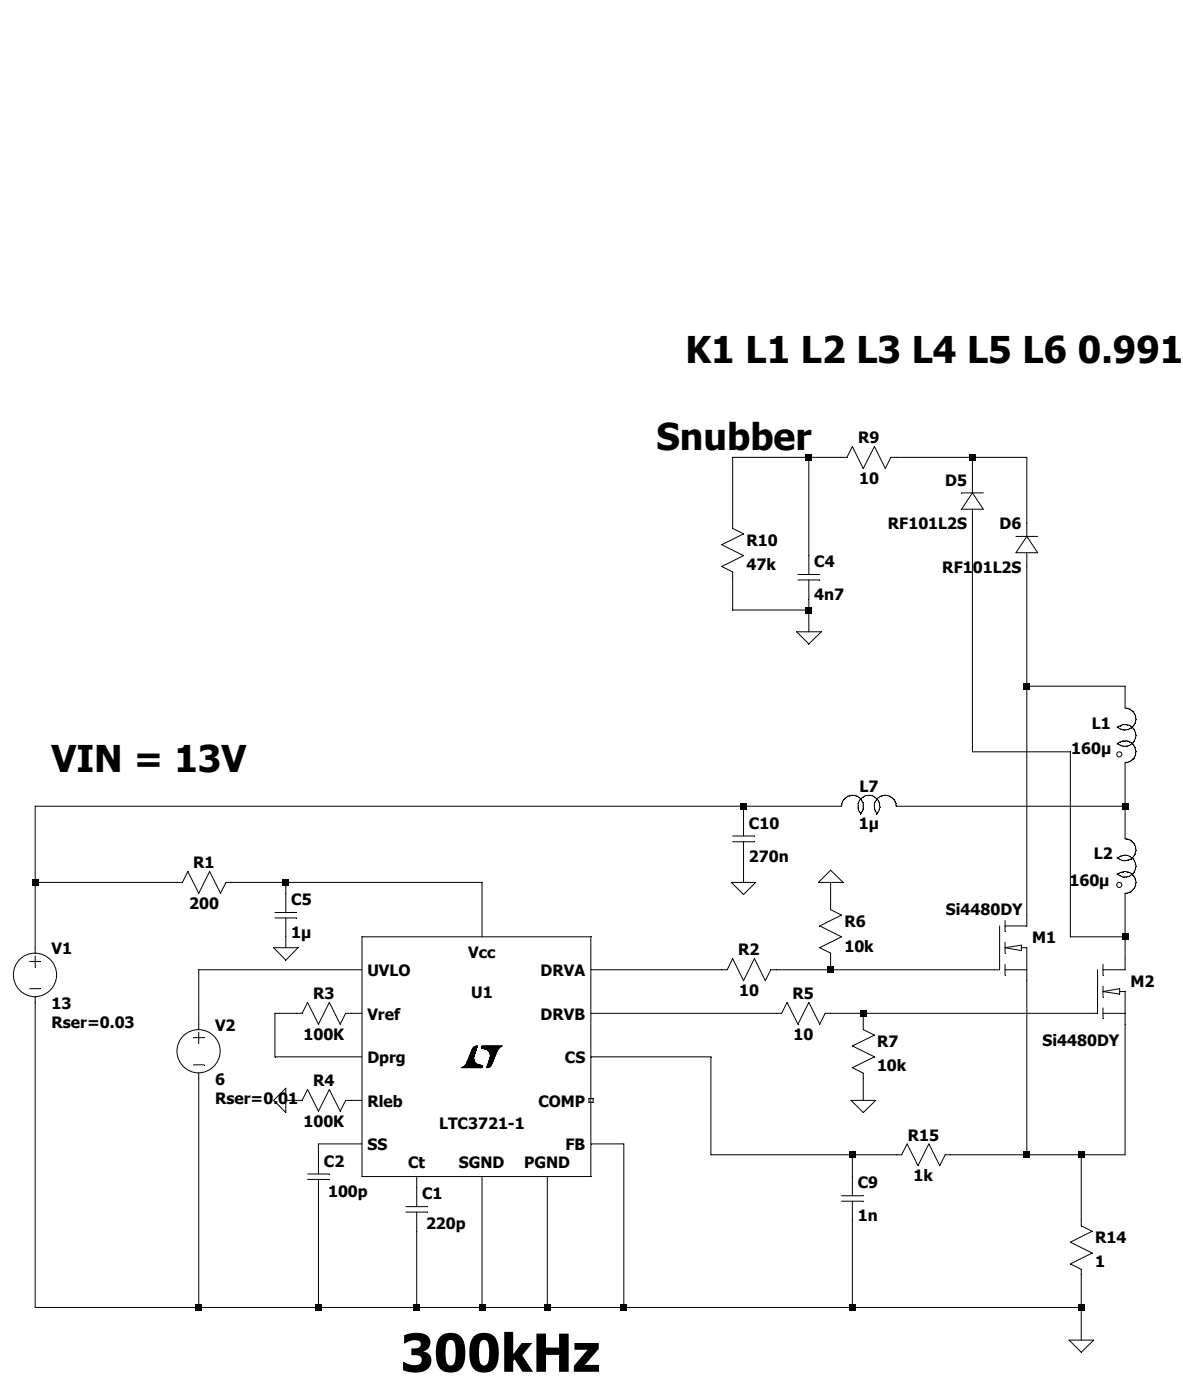

.tran 0 8m 0 startup

--- C:\Users\leem2am\Downloads\Push pull transformer driver.asc ---