


VCR Mode or SCART Connector Mode : This mode is enabled by a low state on Pin 23.  $V_{23} < 2.1V$  !  
- Transmitter search and tuning. In order to accelerate the capture, a "Video Identification" stage will detect the presence or the absence of a video signal on input Pin127, and deliver accordingly a signal called "Mute".

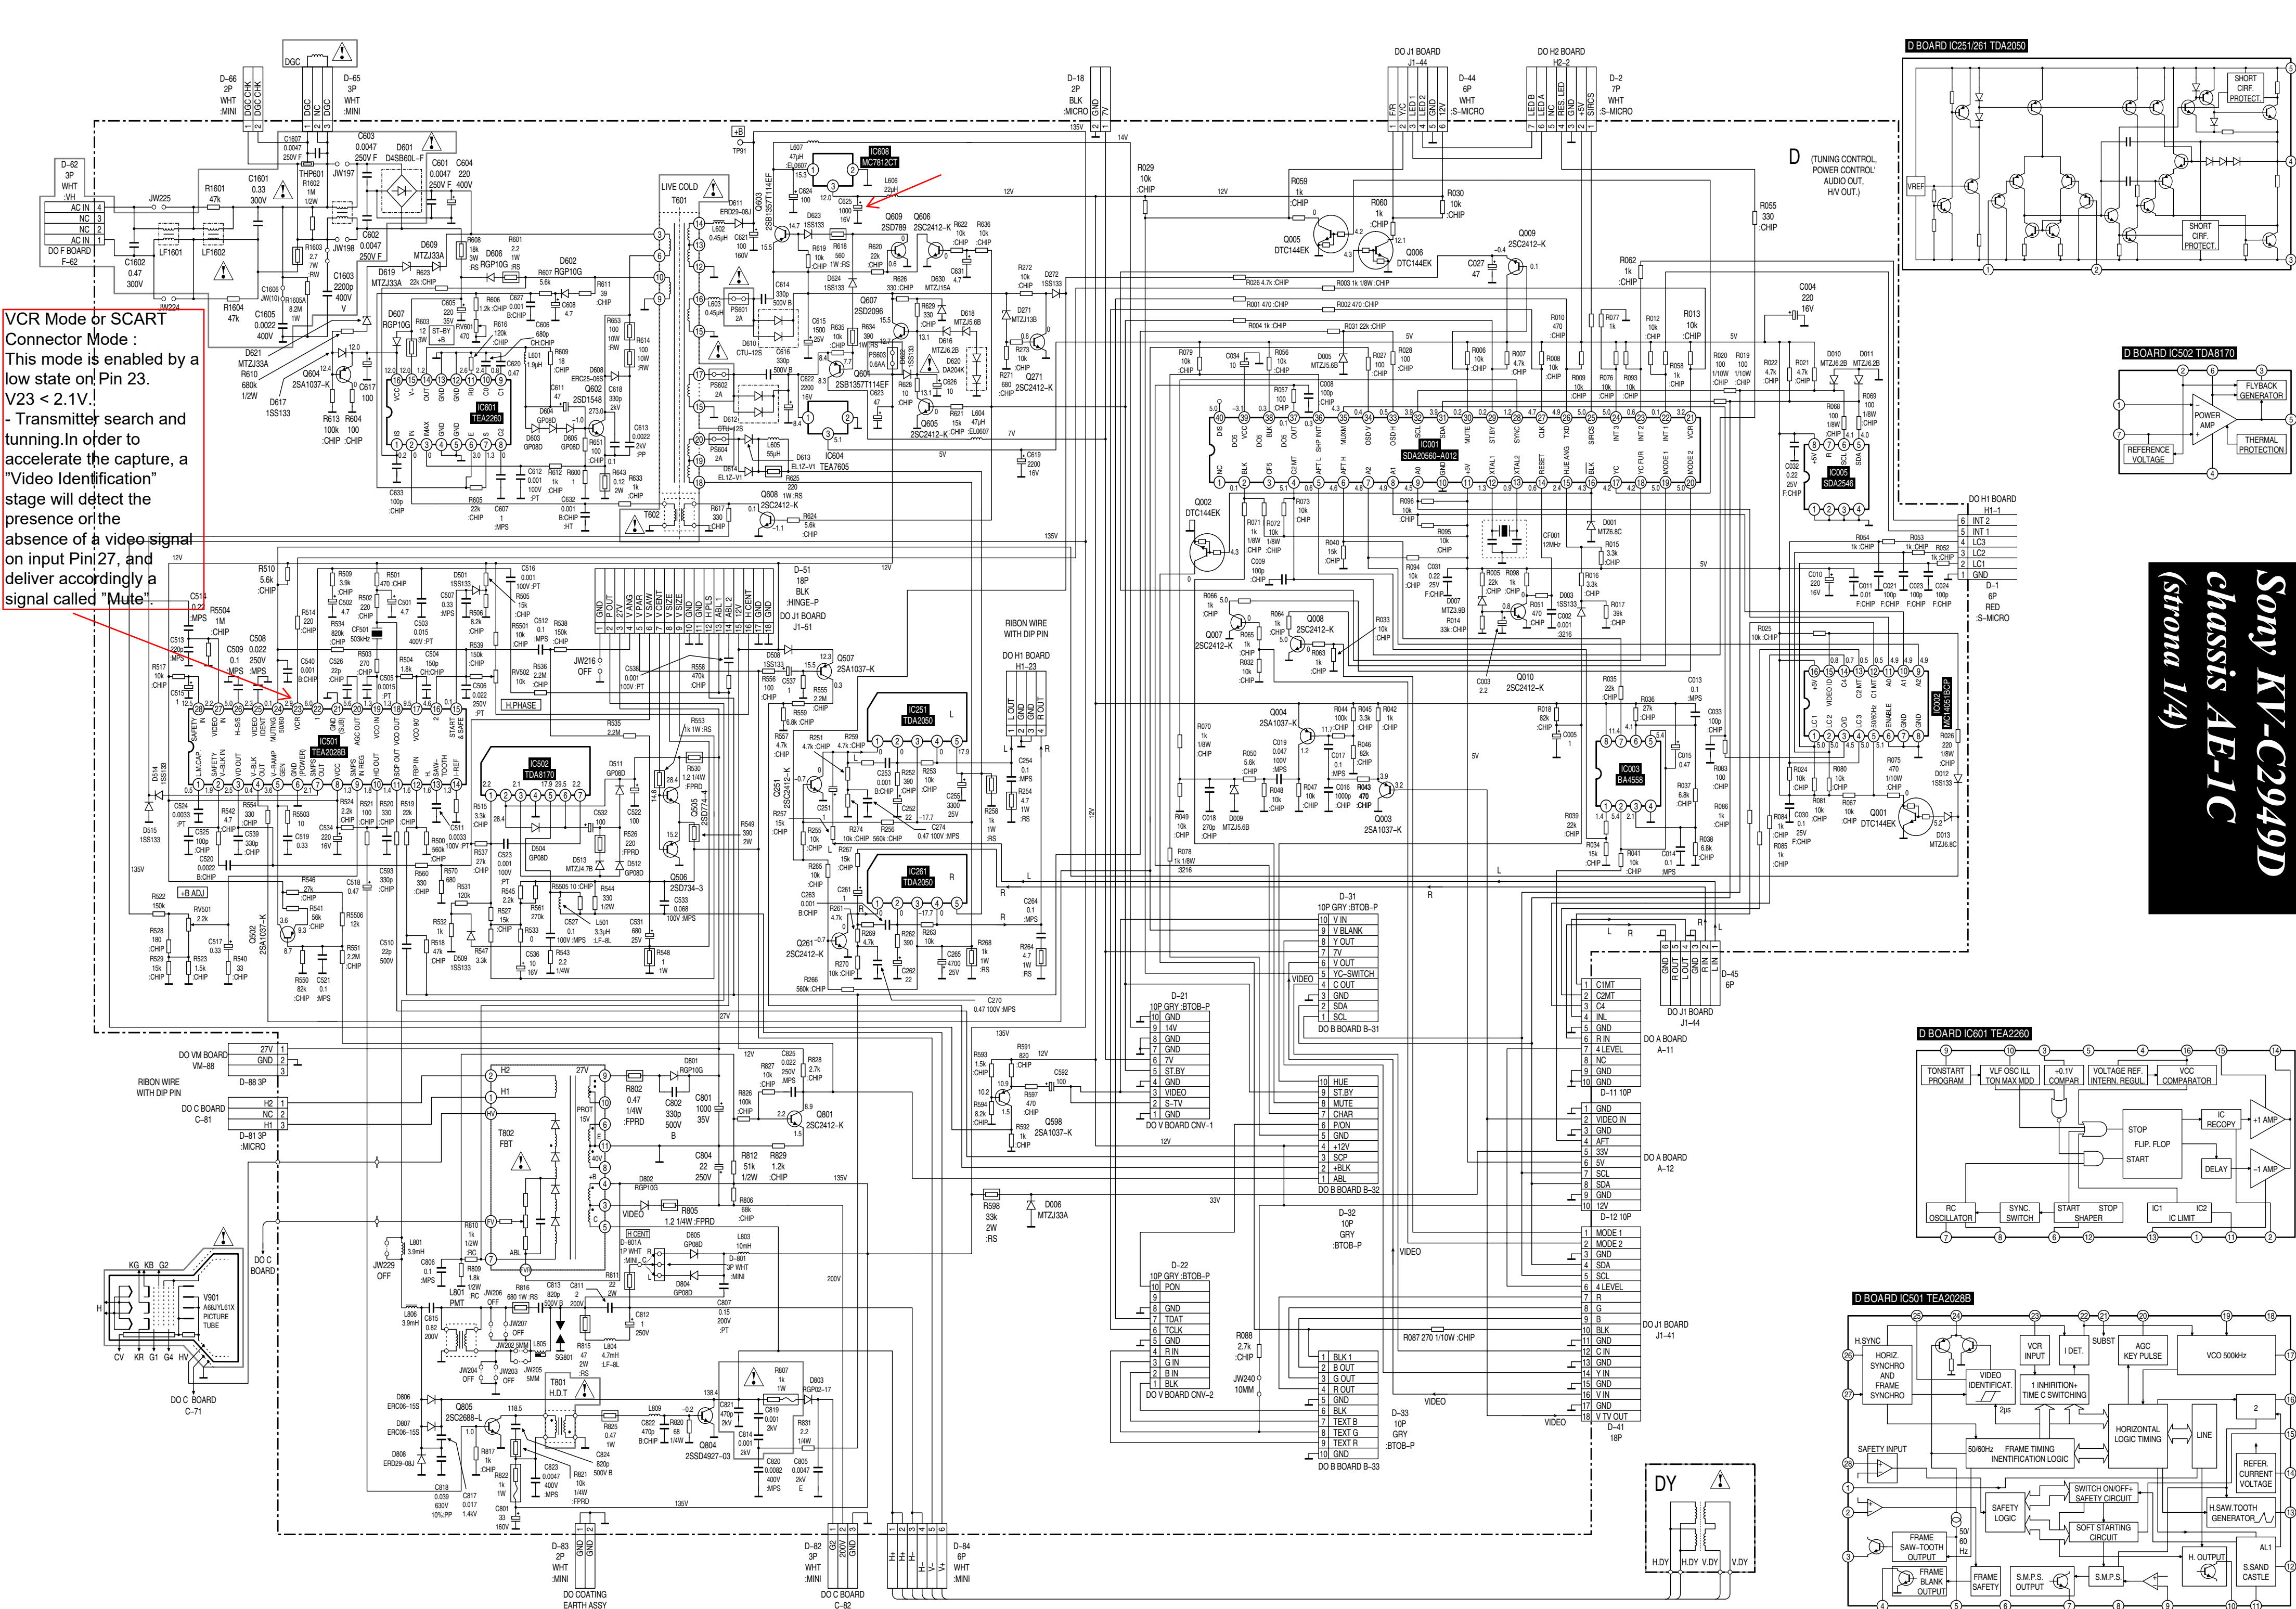




# Sony KV-C2949D

## chassis AE-1C

(strona 2/4)

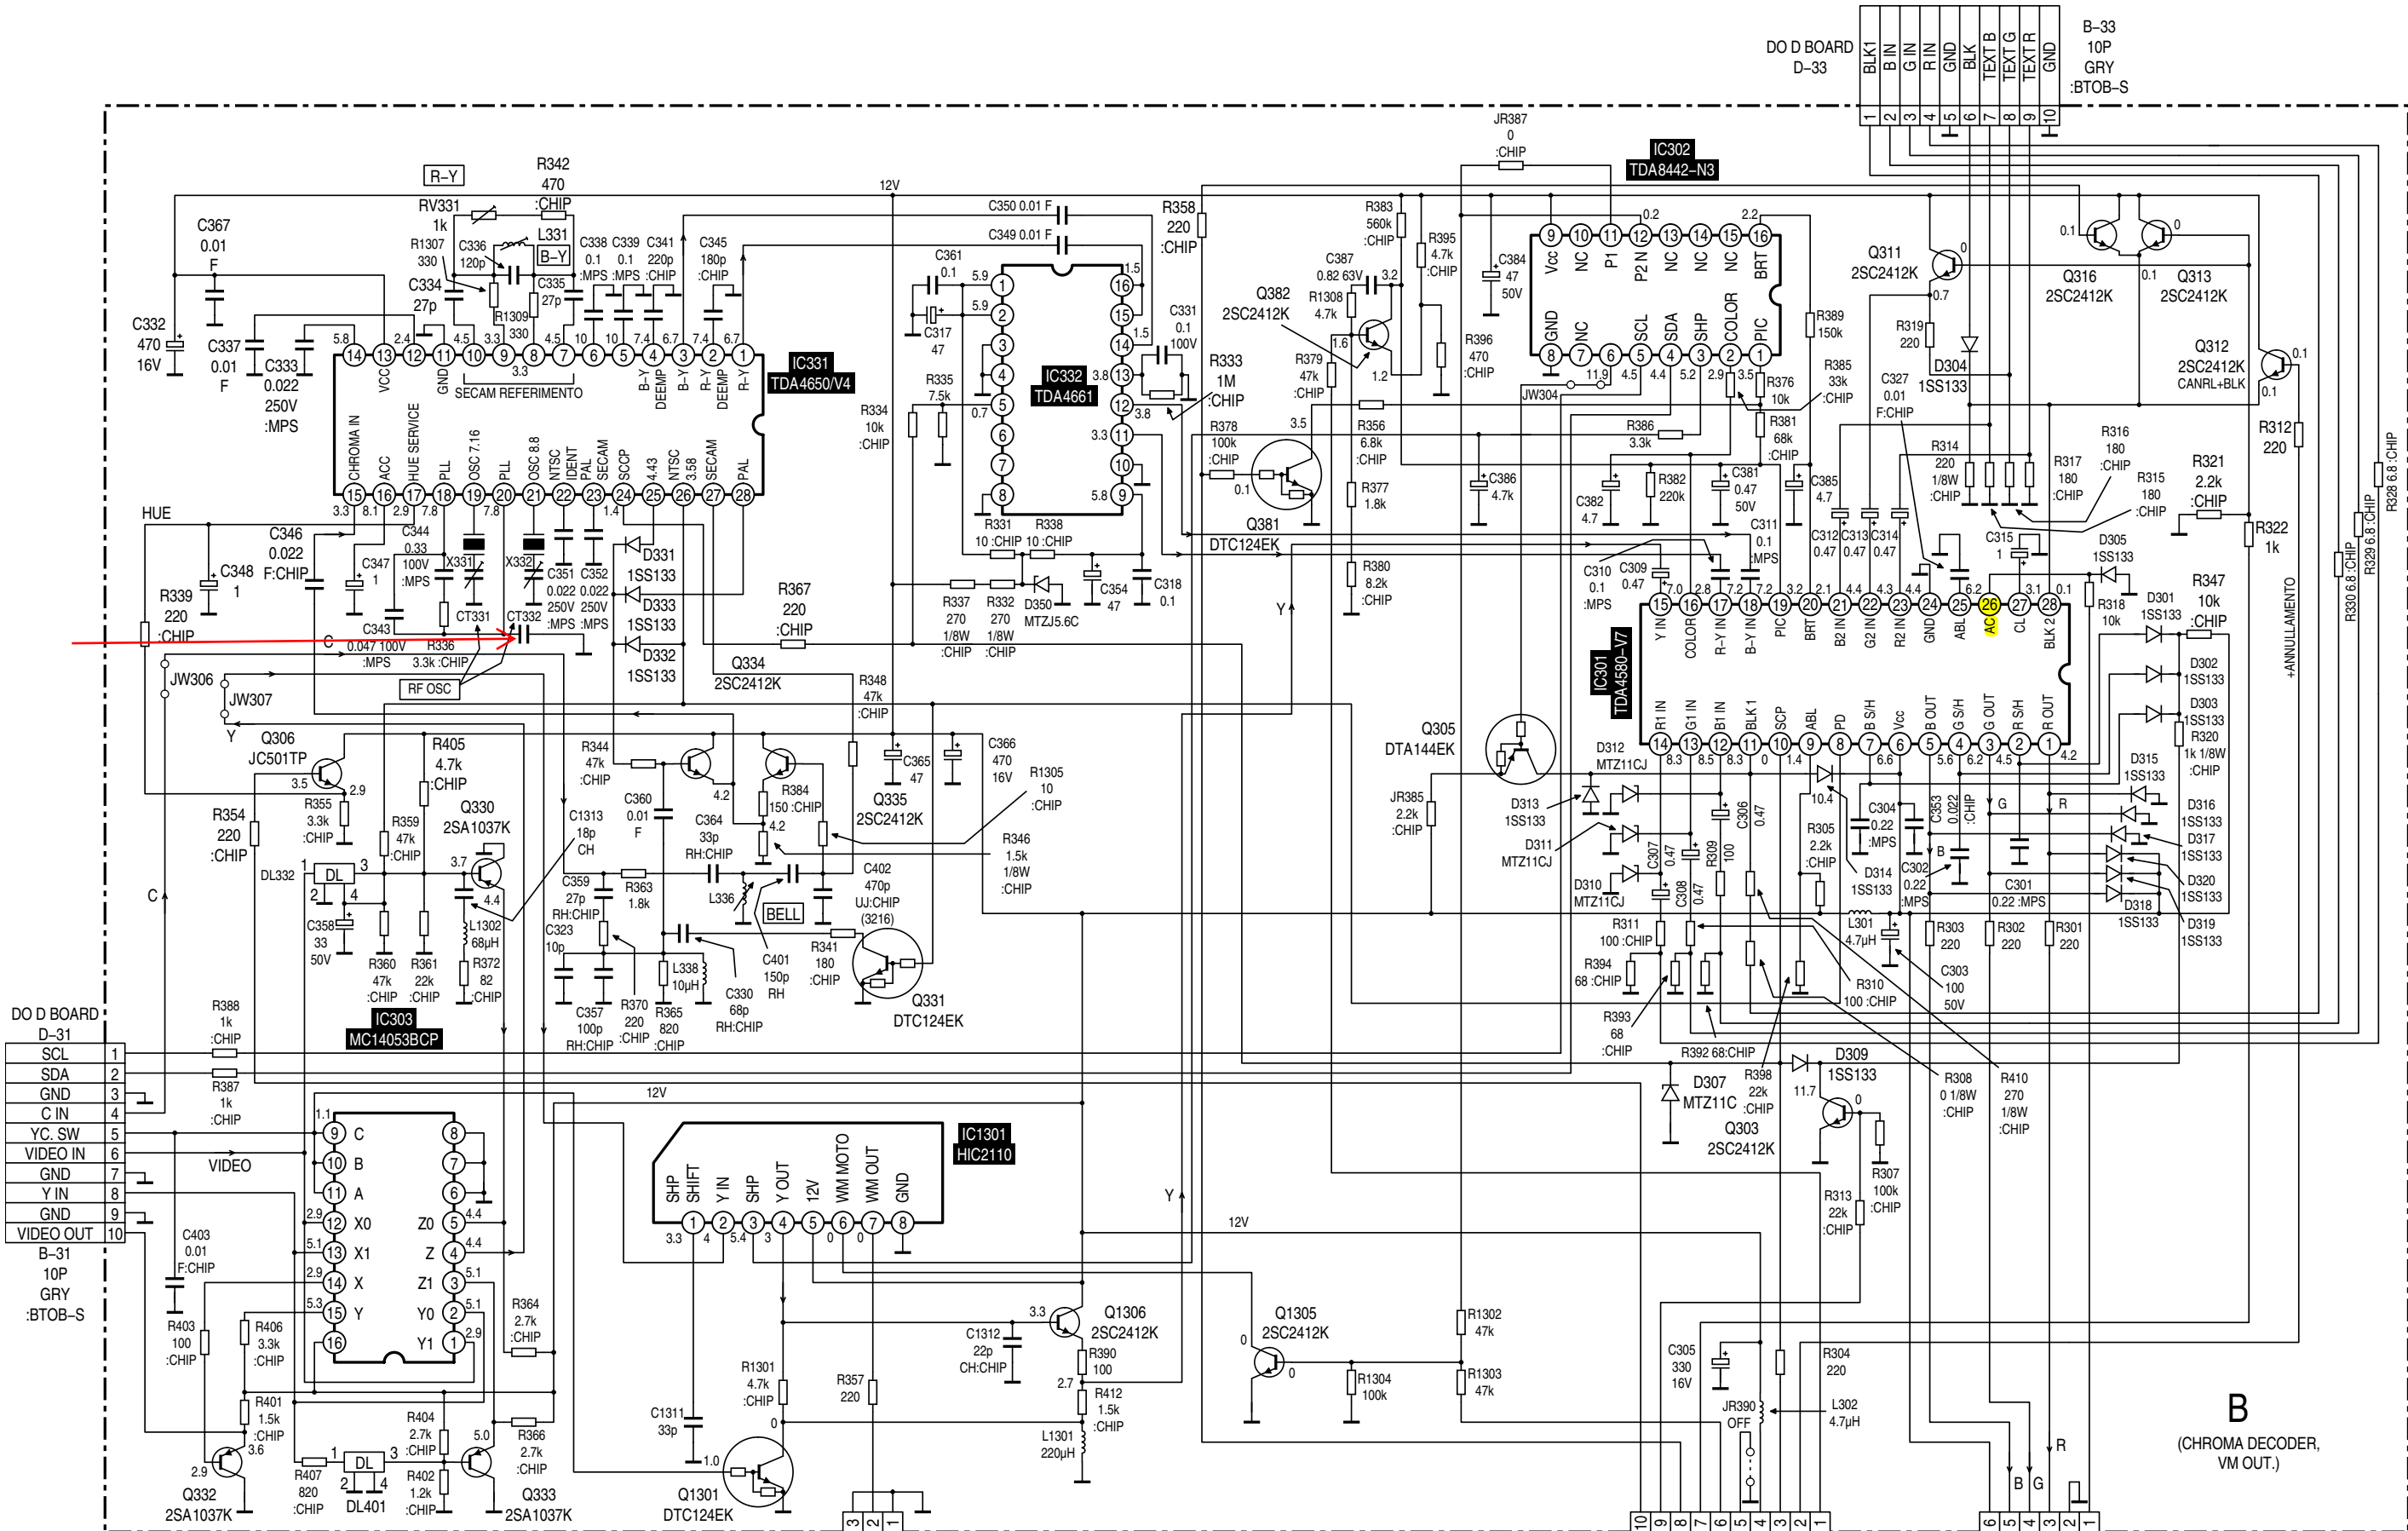

	PAL	SECAM	NTSC5.8	NTSC4.3
IC301 (A)	0.1	0.1	5.8	0.1
IC301 (B)	6.7	6.8	5.1	6.5
IC301 (C)	3.1	3.6	3.1	2.8
IC301 (D)	3.0	3.5	2.9	2.7
IC301 (E)	5.6	5.6	7.1	7.2
IC301 (F)	7.5	7.0	5.6	5.6
IC301 (G)	0.1	0.1	0.1	5.8
IC301 (H)	0.1	0.1	5.8	0.1
IC301 (I)	0.1	5.8	0.1	0.1
IC301 (J)	5.9	0.1	0.1	0.1
Q331 (B)	0.1	0.1	5.8	0.1
Q331 (C)	0.3	0.4	0	0.8
Q333 (B)	4.4	4.4	4.4	4.4
Q334 (B)	4.9	0.1	4.8	4.8
Q335 (B)	0.1	4.8	0.1	0.1

