


USE C7 AND C4 IF THE MOTOR RUNS NOISY.

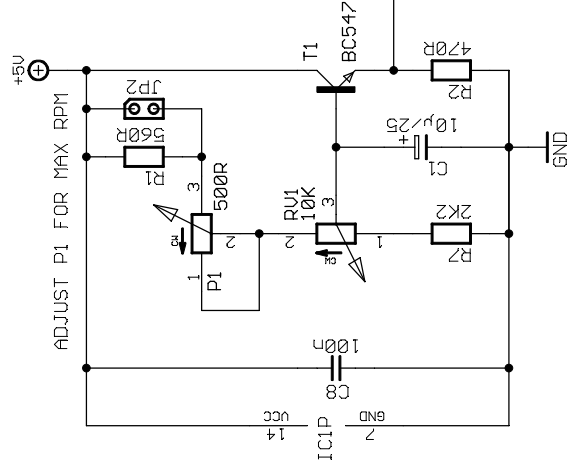

CLOSE JP2 IF MOTOR WON'T ATTAIN 100% RPM