



VA1-240 CONNECTIONS TO NEW OR  
EXISTING PIR

**WARNING SWITCH OFF MAINS SUPPLY  
BEFORE CONNECTION**  
If in doubt consult a qualified electrician

PIR CONNECTION HOUSING

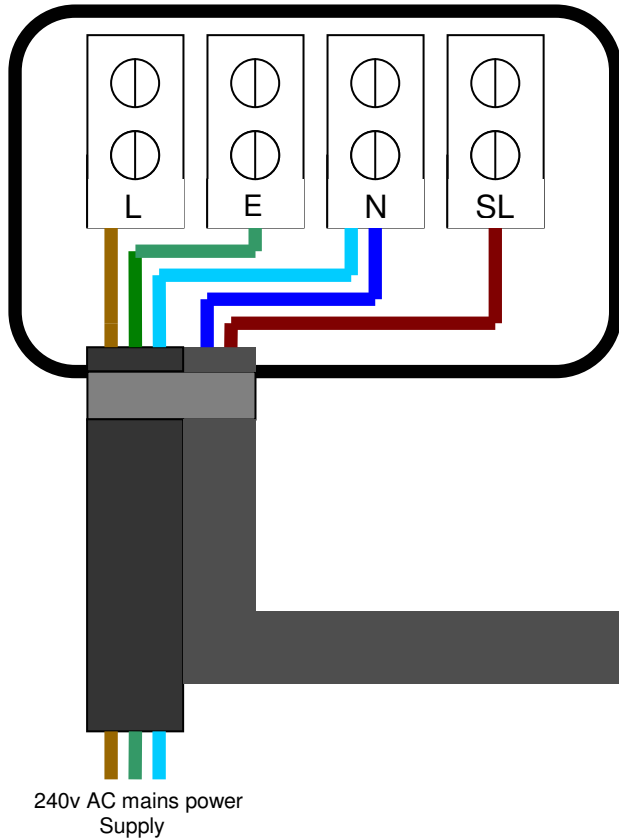

Inside the PIR connection housing carefully feed the cable through the sealing grommet and connect the **BLUE** wire to **NEUTRAL** and the **BROWN** wire to **SWITCHED LIVE** normally marked **SL**

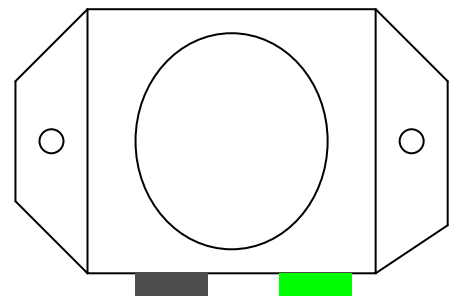

4 pole connector  
for connection to  
VA1 controller

**THIS UNIT HAS A CONNECTOR (UNDER THE GREEN CAP) FOR CONNECTION TO AN OPTIONAL  
INTERNAL CONTROLLER WHICH WILL ENABLE THE USER TO**

**SWITCH THE SOUND OFF SO THE USER CAN ENTER THE DETECTION AREA WITHOUT  
THE MESSAGE BEING BROADCAST.**

**SET THE PLAYBACK VOLUME TO HIGH OR LOW**

**BE ALERTED AUDIBLY AND VISIBLY WHEN THE DETECTION AREA IS ENTERED VIA  
BUZZER AND LED.**

**IMPORTANT**

**The green cap is sealed to the connector only remove if you intend to use this feature**

FOR MORE INFORMATION ON THE CONTROLLER PLEASE EMAIL

info@talking-alarms.co.uk  
Telephone 01388 778051