
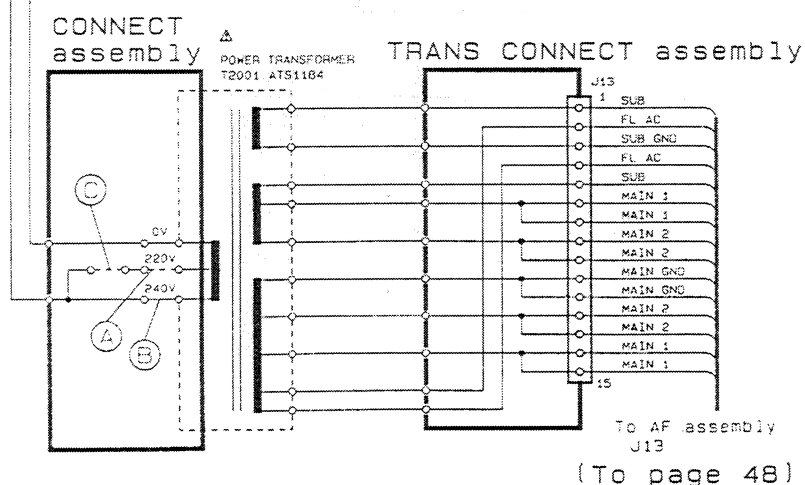


4.5 POWER SUPPLY (AWZ2241), CONNECT and TRANS CONNECT assembly

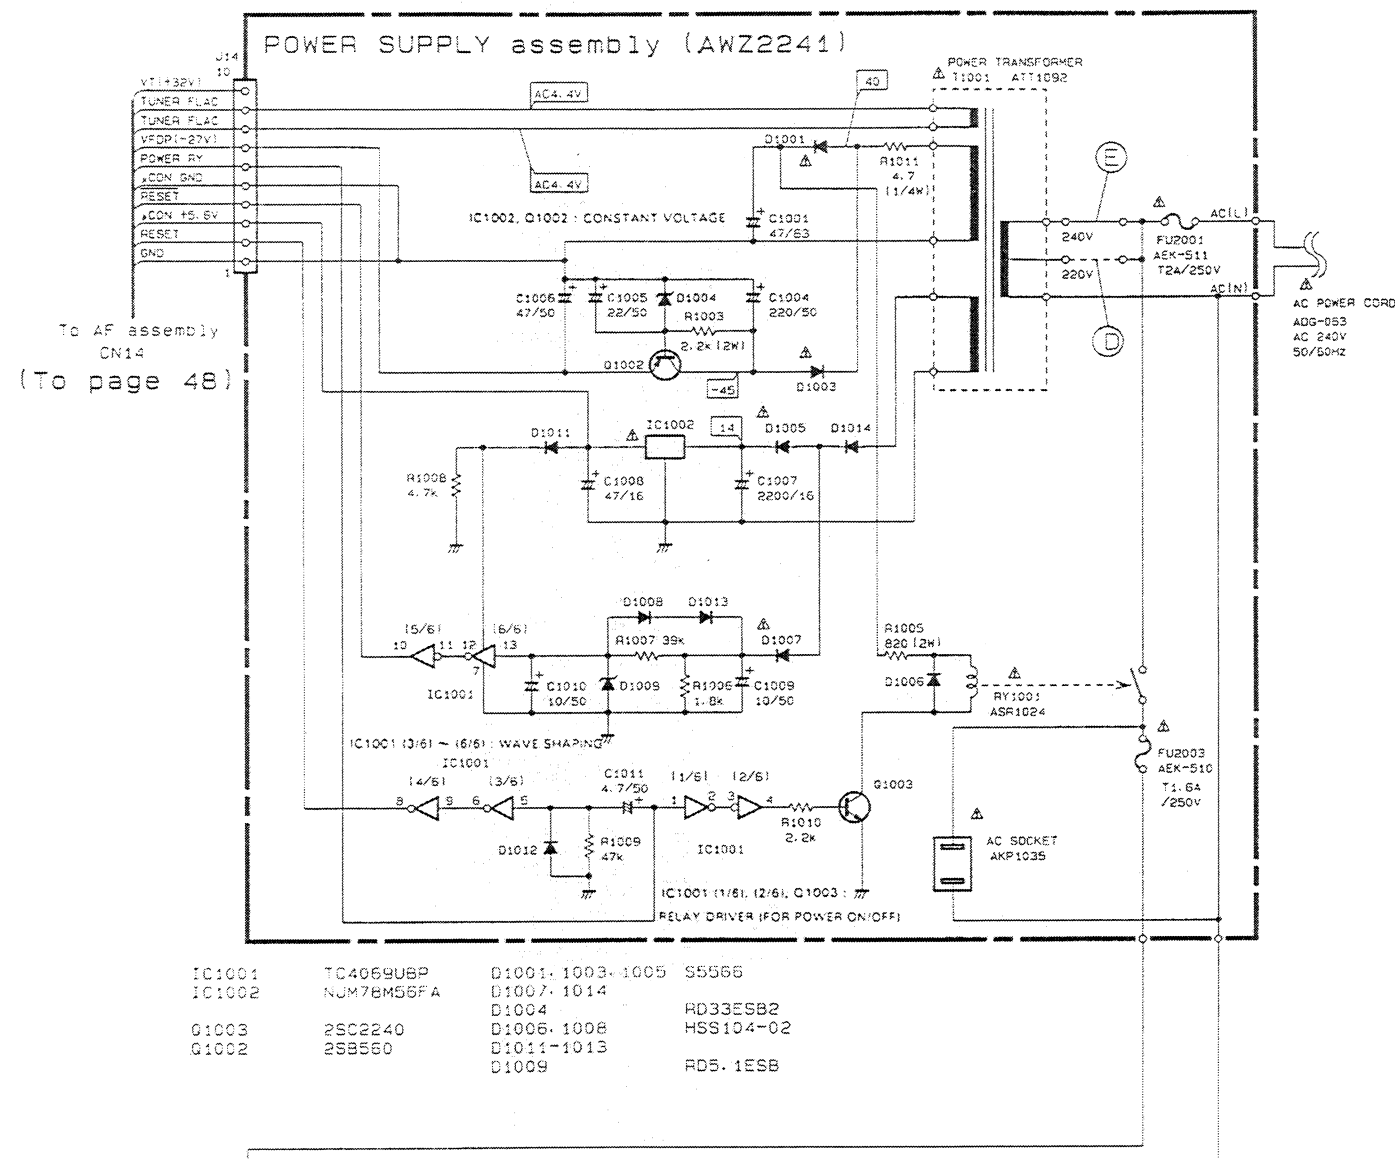

Line Voltage Selection (FOR HB AND HE TYPES)

Line voltage can be changed with the following steps.

1. Disconnect the AC power cord.
2. Remove the top cover.
3. Change the position of the jumper wires (A-E) as follows.

Jumper wire	220V	240V
(A)	○	×
(B)	×	○
(C)	○	×
(D)	○	×
(E)	×	○


○ : Be needed
× : Be needless

4. Stick the line voltage label on the rear panel.


Part No.	Description
AAX-193	220V label
AAX-192	240V label

To AF assembly
J13
(To page 43)

POWER SUPPLY assembly (AWZ2241)

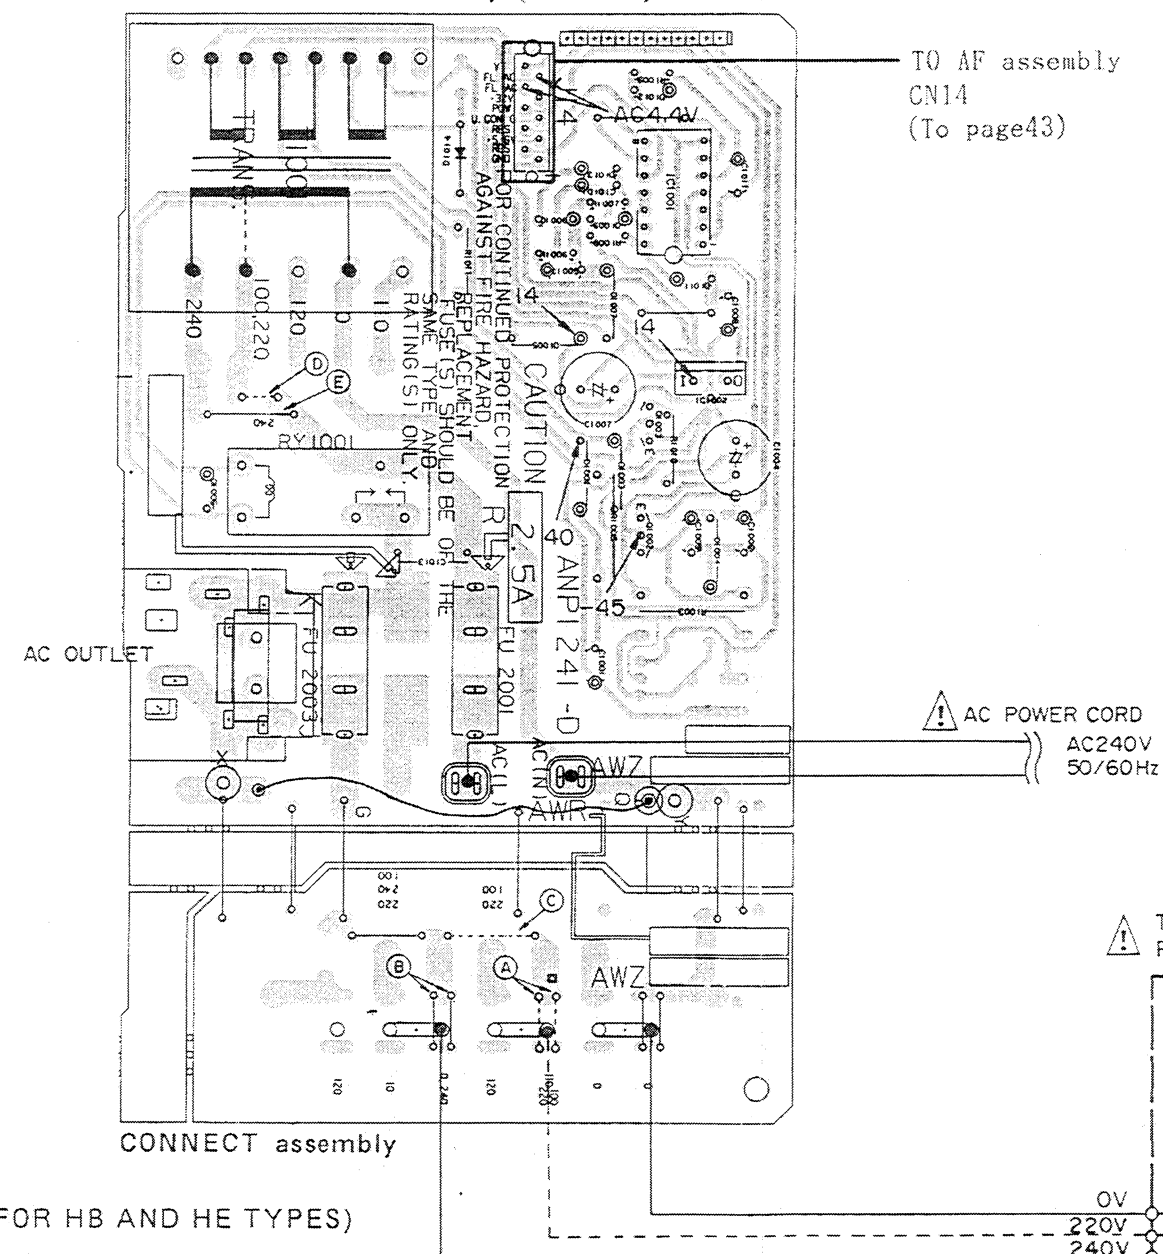


T2001 POWER TRANSFORMER

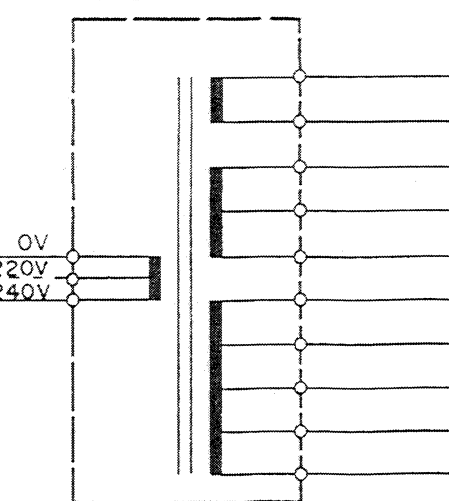

NOTE


1. This P.C.B. connection
2. The parts which have with the corresponding

P.C.B. pattern diagram inc

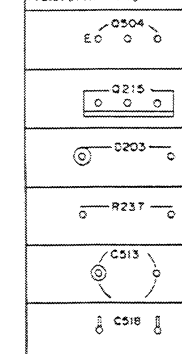

Others

P.C.B. pattern diagram inc

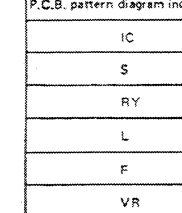

3. The capacitor terminal
4. The diode terminal
5. The transistor terminal