

INTEGRATED NETWORK AV RECEIVER  
**AVR-X4500H**



- For purposes of improvement, specifications and design are subject to change without notice.
- Please use this service manual when referring to the operating instructions without fail.
- Some illustrations used in this service manual are slightly different from the actual product.

*Click here!*

### On-line service parts list

<http://dmedia.dmglobal.com/Document/DocumentDetails/24820>

[ONLINE PARTS LIST](#) (P5)

### WEB owner's manual

NA: <http://manuals.denon.com/AVRX4500H/NA/EN/index.php>

EU: <http://manuals.denon.com/AVRX4500H/EU/EN/index.php>

AP: <http://manuals.denon.com/AVRX4500H/AP/ZH/index.php>

JP: <http://manuals.denon.com/AVRX4500H/JP/JA/index.php>

Upload is planned for the time of a future press release.

## BEFORE SERVICING THIS UNIT

## ELECTRICAL

## MECHANICAL

## REPAIR INFORMATION

## UPDATING

**Please refer to the MODIFICATION NOTICE.**

**Confidential**

# BEFORE SERVICING THIS UNIT

## SAFETY PRECAUTIONS

## NOTE FOR SCHEMATIC DIAGRAM

## HANDLING THE SEMICONDUCTOR AND OPTICS

## ONLINE PARTS LIST

Accessing the Parts List

Searching Part Numbers or Ref. Numbers

NOTE FOR PARTS LIST

## SERIAL NUMBER

Serial Number Organization

SKU Code of this Unit

## POST-SERVICE PRECAUTIONS

Initializing this Unit

JIG FOR SERVICING

# SAFETY PRECAUTIONS

The following items should be checked for continued protection of the customer and the service technician.

## Leakage current check

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

Be sure to test for leakage current with the AC plug in both polarities, in addition, when the set's power is in each state (on, off and standby mode), if applicable.

### CAUTION

**Please heed the following cautions and instructions during servicing and inspection.**

#### ⦿ Heed the cautions!

Cautions which are delicate in particular for servicing are labeled on the cabinets, the parts and the chassis, etc. Be sure to heed these cautions and the cautions described in the handling instructions.

#### ⦿ Cautions concerning electric shock!

- (1) An AC voltage is impressed on this set, so if you touch internal metal parts when the set is energized, you may get an electric shock. Avoid getting an electric shock, by using an isolating transformer and wearing gloves when servicing while the set is energized, or by unplugging the power cord when replacing parts, for example.
- (2) There are high voltage parts inside. Handle with extra care when the set is energized.

#### ⦿ Caution concerning disassembly and assembly!

Through great care is taken when parts were manufactured from sheet metal, there may be burrs on the edges of parts. The burrs could cause injury if fingers are moved across them in some rare cases. Wear gloves to protect your hands.

#### ⦿ Use only designated parts!

The set's parts have specific safety properties (fire resistance, voltage resistance, etc.). Be sure to use parts which have the same properties for replacement. The burrs have the same properties. In particular, for the important safety parts that are indicated by the ⚠ mark on schematic diagrams and parts lists, be sure to use the designated parts.

#### ⦿ Be sure to mount parts and arrange the wires as they were originally placed!

For safety reasons, some parts use tapes, tubes or other insulating materials, and some parts are mounted away from the surface of printed circuit boards. Care should also be taken with the positions of the wires by arranging them and using clamps to keep them away from heating and high voltage parts, so be sure to set everything back as it was originally placed.

#### ⦿ Make a safety check after servicing!

Check that all screws, parts and wires removed or disconnected when servicing have been put back in their original positions, check that no serviced parts have deteriorated the area around. Then make an insulation check on the external metal connectors and between the blades of the power plug. And otherwise check that safety is ensured.

(Insulation check procedure)

Unplug the power cord from the power outlet, disconnect the antenna, plugs, etc., and on the power.

Using a 500V insulation resistance tester, check that the insulation resistance value between the inplug and the externally exposed metal parts (antenna terminal, headphones terminal, input terminal, etc.) is 1M Ω or greater. If it is less, the set must be inspected and repaired.

### CAUTION

**Concerning important safety parts**

Many of the electric and the structural parts used in the set have special safety properties. In most cases these properties are difficult to distinguish by sight, and the use of replacement parts with higher ratings (rated power and withstand voltage) does not necessarily guarantee that safety performance will be preserved. Parts with safety properties are indicated as shown below on the wiring diagrams and the parts list in this service manual. Be sure to replace them with the parts which have the designated part number.

- (1) Schematic diagrams      Indicated by the ⚠ mark.
- (2) Parts lists              Indicated by the ⚠ mark.

The use of parts other than the designated parts could cause electric shocks, fires or other dangerous situations.

## NOTE FOR SCHEMATIC DIAGRAM

### WARNING:

Parts indicated by the  $\triangle$  mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

### CAUTION:

Before returning the set to the customer, be sure to carry out either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the set is defective.

### WARNING:

DO NOT return the set to the customer unless the problem is identified and remedied.

### NOTICE:

- (1) ALL RESISTANCE VALUES IN OHM. k=1,000 OHM / M=1,000,000 OHM
- (2) ALL CAPACITANCE VALUES ARE EXPRESSED IN MICRO FARAD, UNLESS OTHERWISE INDICATED. P INDICATES MICRO-MICRO FARAD. N INDICATES NANO FARAD.
- (3) EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
- (4) CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

## HANDLING THE SEMICONDUCTOR AND OPTICS


Electrostatic breakdown of the semi-conductors or optical pickup may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

### 1. Ground for Human Body

Be sure to wear a grounding band (1 M ohm) that is properly grounded to remove any static electricity that may be charged on the body.

### 2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1 M ohm) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing

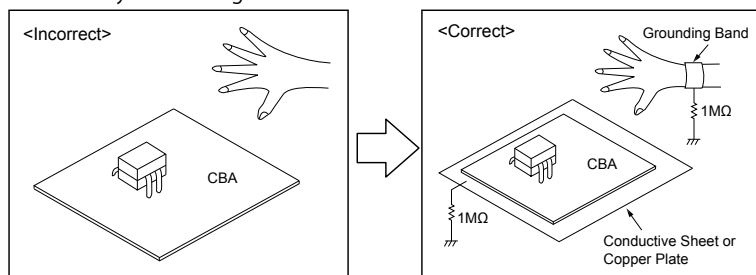




# ONLINE PARTS LIST

## Accessing the Parts List


- (1) Access from the Service Manual
    - Click the URL link on the cover of the service manual.
- Examples of display



**NOTE:** If the web browser does not open automatically, copy the URL and paste it into the address bar of the web browser and then press Enter.

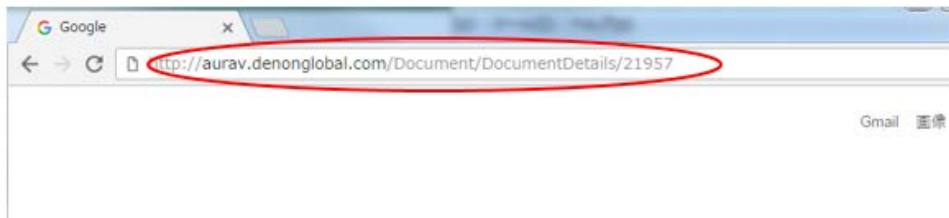

- (2) Accessing the Part List from the Model Asset Screen.
  - Display Model Asset from New SDI.
  - Click the section displayed as ▼ Link to Part Lists under the model name.

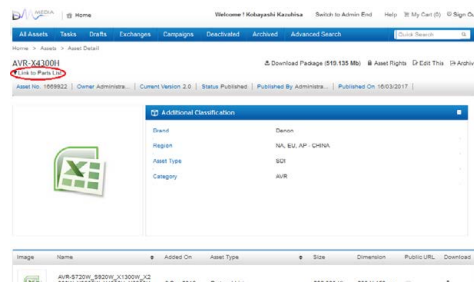


**NOTE:** If the ▼ Link to Parts List section is not displayed, download the parts table from the Asset list.

## Searching Part Numbers or Ref. Numbers


You can search a Parts List for part numbers or Ref. numbers.

- (1) Enter the part number or Ref. number in the search window of the Parts List, and press the search button.
- (2) The search results are displayed.

The name of the sheet in which the search part is used and the part's line are displayed.

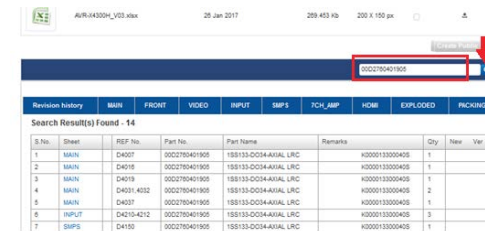

- (3) Next, click the "Sheet" section of the search results.

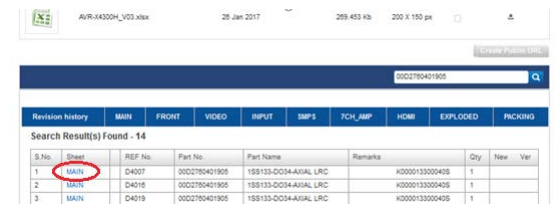


## NOTE FOR PARTS LIST

1. Parts indicated by "nsp" on this table cannot be supplied.
  2. When ordering a part, make a clear distinction between "1" and "I" (i) to avoid mis-supplying.
  3. A part ordered without specifying its part number can not be supplied.
  4. Part indicated by "@" mark is not illustrated in the exploded and packaging view.
- WARNING:** Parts indicated by the ⚠ mark have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

# SERIAL NUMBER

## Serial Number Organization

The 14-digit serial number that contains the code of the manufacturing plant and the manufacturing date.

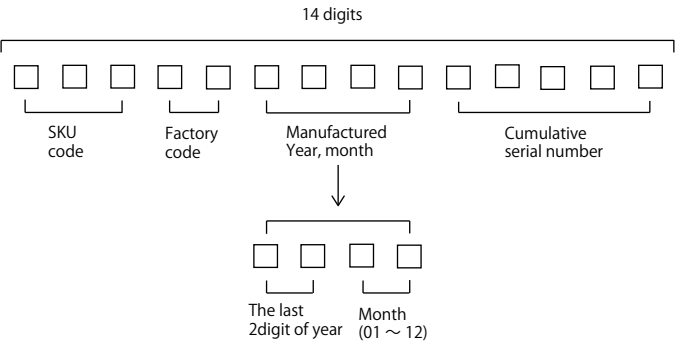

## SKU Code of this Unit

Product SKU	SKU Code
AVRX4500HBKE3	BCD
AVRX4500HBKE2	BCE
AVRX4500HSPE2	BCF
AVRX4500HBKE1C	AQG
AVRX4500HK	BCG

# POST-SERVICE PRECAUTIONS


## Initializing this Unit

Make sure to initialize this unit after replacing the microcomputer or any peripheral equipment, or the digital PCB.

1. Press the power button to turn off the power.
2. While holding down buttons "**INFO**" and "**SETUP**" simultaneously, press the power button to turn on the power.
3. Release the buttons after confirming that the display flashes at 1-second intervals.
  - \* The unit is initialized.Use network initialization mode to initialize the network related settings.

**NOTE :**

- If the unit fails to enter the service mode in step 3, repeat the procedure from step 1.
- Initializing the device restores the customized settings to the factory settings. Write down your settings in advance and reconfigure the settings after initialization.

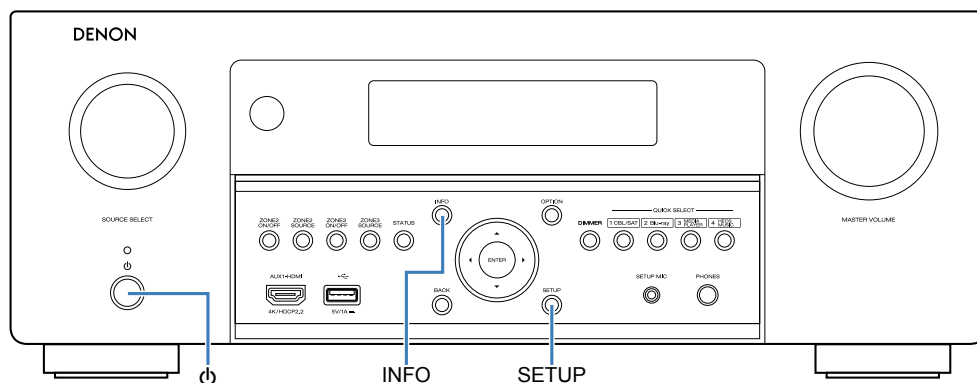

## JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.  
Order with your dealer for the jigs your dealer if necessary.

- |               |                           |   |       |
|---------------|---------------------------|---|-------|
| 8U-110084S    | : EXTENSION UNIT KIT      | : | 1 Set |
| 8U-110136S    | : EXTENSION UNIT KIT      | : | 1 Set |
| 900639103810S | : JIG 29P EXTENSION CABLE | : | 1 Set |
- (See [JIG FOR SERVICING](#))

## SCHEMATIC DIAGRAMS

[SCH01 DIGITAL CONNECT](#)  
[SCH02 DIGITAL POWER](#)  
[SCH03 MAIN CPU](#)  
[SCH04 EXPANDER](#)  
[SCH05 PROTECTION](#)  
[SCH06 DIR](#)  
[SCH07 AUDIO PLD](#)  
[SCH08 DSP1](#)  
[SCH09 DSP2](#)  
[SCH10 DSP3](#)  
[SCH11 DSP4](#)  
[SCH12 ADC](#)  
[SCH13 ZONE, LEGO DAC](#)  
[SCH14 LEGO](#)  
[SCH15 VIDEO DECODER](#)  
[SCH16 HDMI SW2](#)  
[SCH17 HDMI SW1](#)  
[SCH18 VSP & IP & OSD](#)  
[SCH19 VIDEO PLD](#)  
[SCH20 HDMI TX & ARC](#)  
[SCH21 INPUT](#)  
[SCH22 PREOUT](#)  
[SCH23 F-HDMI](#)  
[SCH24 A-VIDEO](#)  
[SCH25 RC-5](#)  
[SCH26 RS232C TRIGGER](#)  
[SCH27 SIDE CNT](#)  
[SCH28 FRT CNT](#)  
[SCH29 MAIN DAC1](#)  
[SCH30 MAIN DAC2](#)

[SCH31 SPK](#)  
[SCH32 REGULATOR](#)  
[SCH33 5CH AMP](#)  
[SCH34 4CH AMP](#)  
[SCH35 FRONT](#)  
[SCH36 SMPS](#)

## PRINTED CIRCUIT BOARDS

[DIGITAL](#)  
[INPUT, USB, F-HDMI](#)  
[VIDEO, GUIDE, SIDE CNT, FRONT CONT FFC](#)  
[SPK, SPK H2L, GUIDE TRANS, FRONT CONT FFC,](#)  
[GUIDE SIDE](#)  
[5CH AMP, 4CH AMP](#)  
[FRONT, P.LED, H/P MIC](#)  
[FRONT CNT, TUNER, BKT, SMPS](#)

## LEVEL DIAGRAM

[FRONT ch](#)  
[CENTER / SURROUND ch](#)  
[SUBWOOFER ch](#)  
[ASSIGN1 / 2 \(SURR.BACK / HEIGHT1 / HEIGHT2\) ch](#)  
[ZONE2 / ZONE3 ch](#)

## BLOCK DIAGRAM

[ANALOG AUDIO DIAGRAM](#)  
[DIGITAL AUDIO DIAGRAM](#)  
[VIDEO DIAGRAM](#)  
[HDMI DIAGRAM](#)

## POWER DIAGRAM


## WIRING DIAGRAM

## SEMICONDUCTORS


- [1. IC's](#)
- [2. FL DISPLAY](#)
- [3. Remote Code Table](#)

## SCH01\_DIGITAL CONNECT




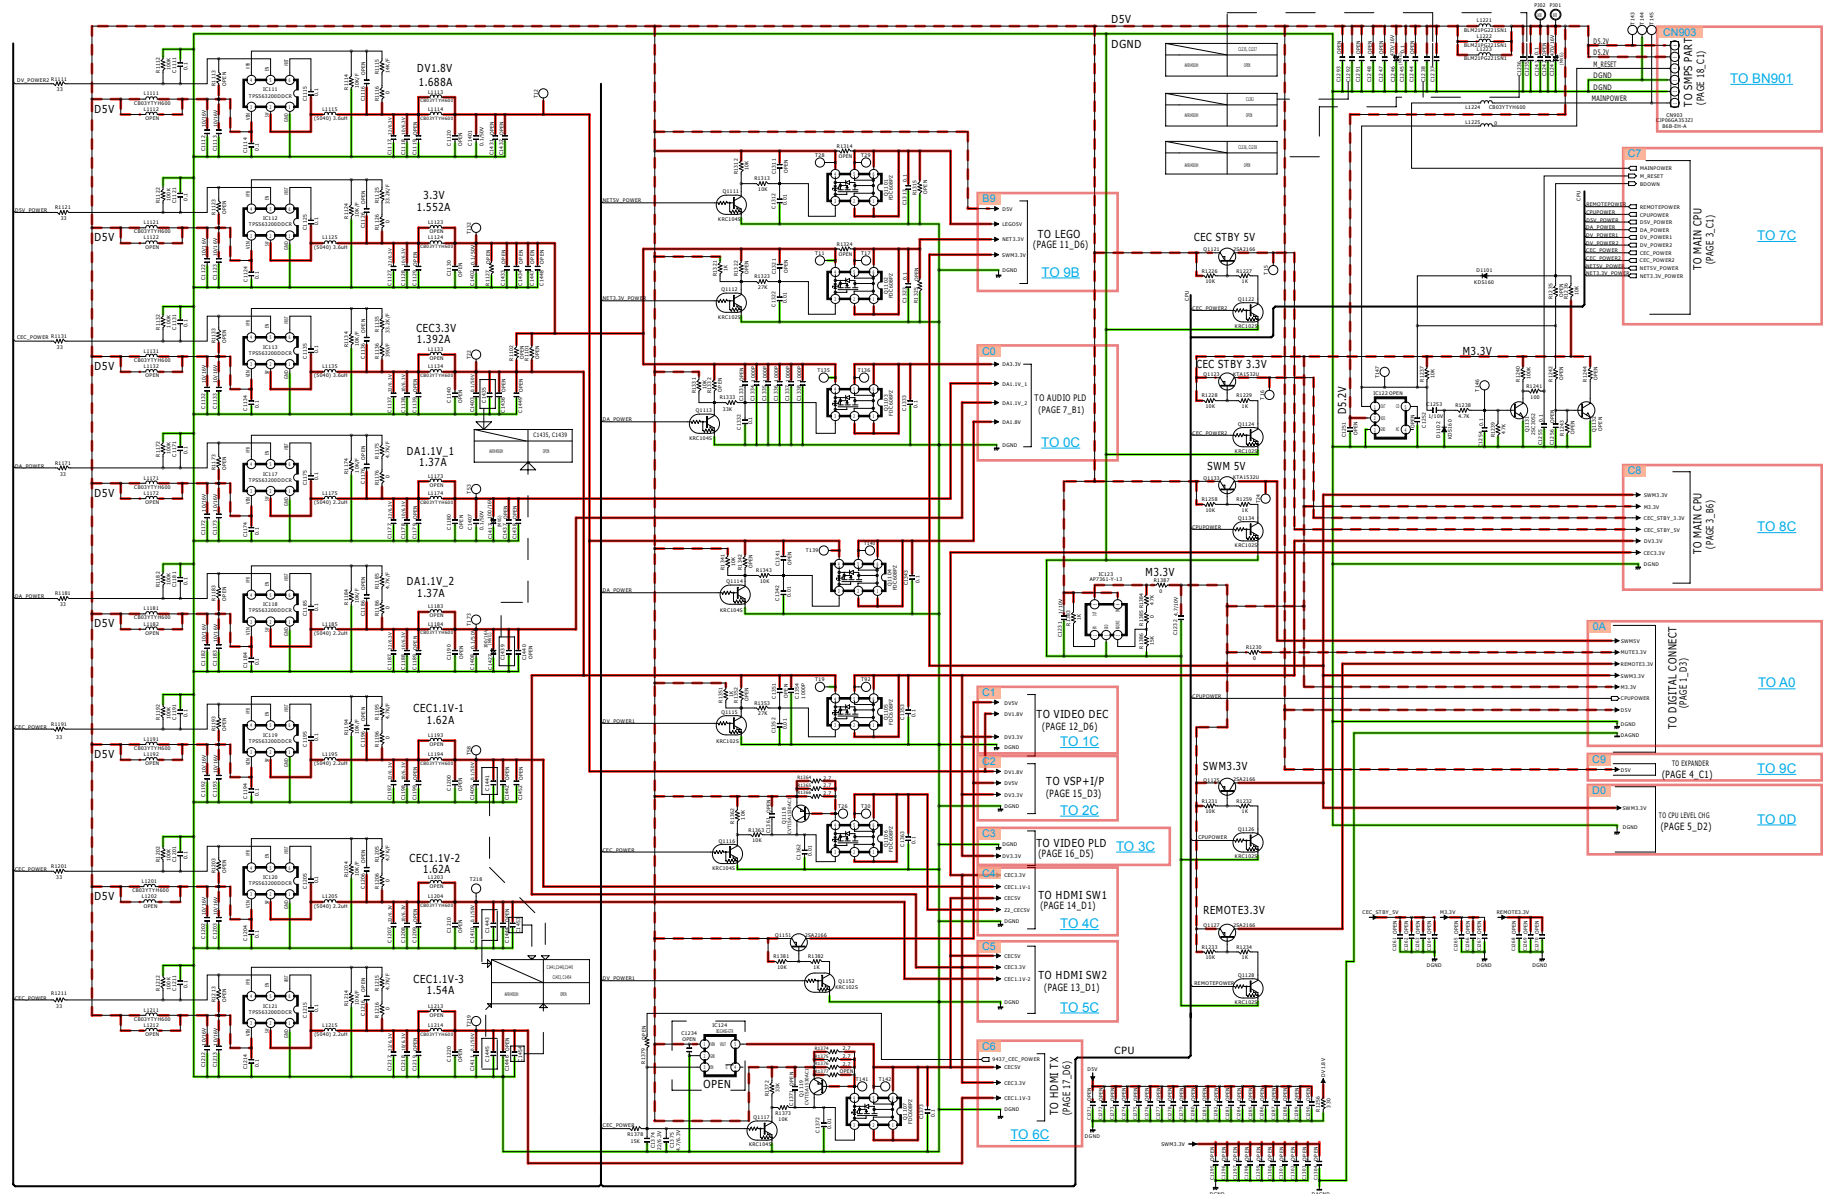

GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

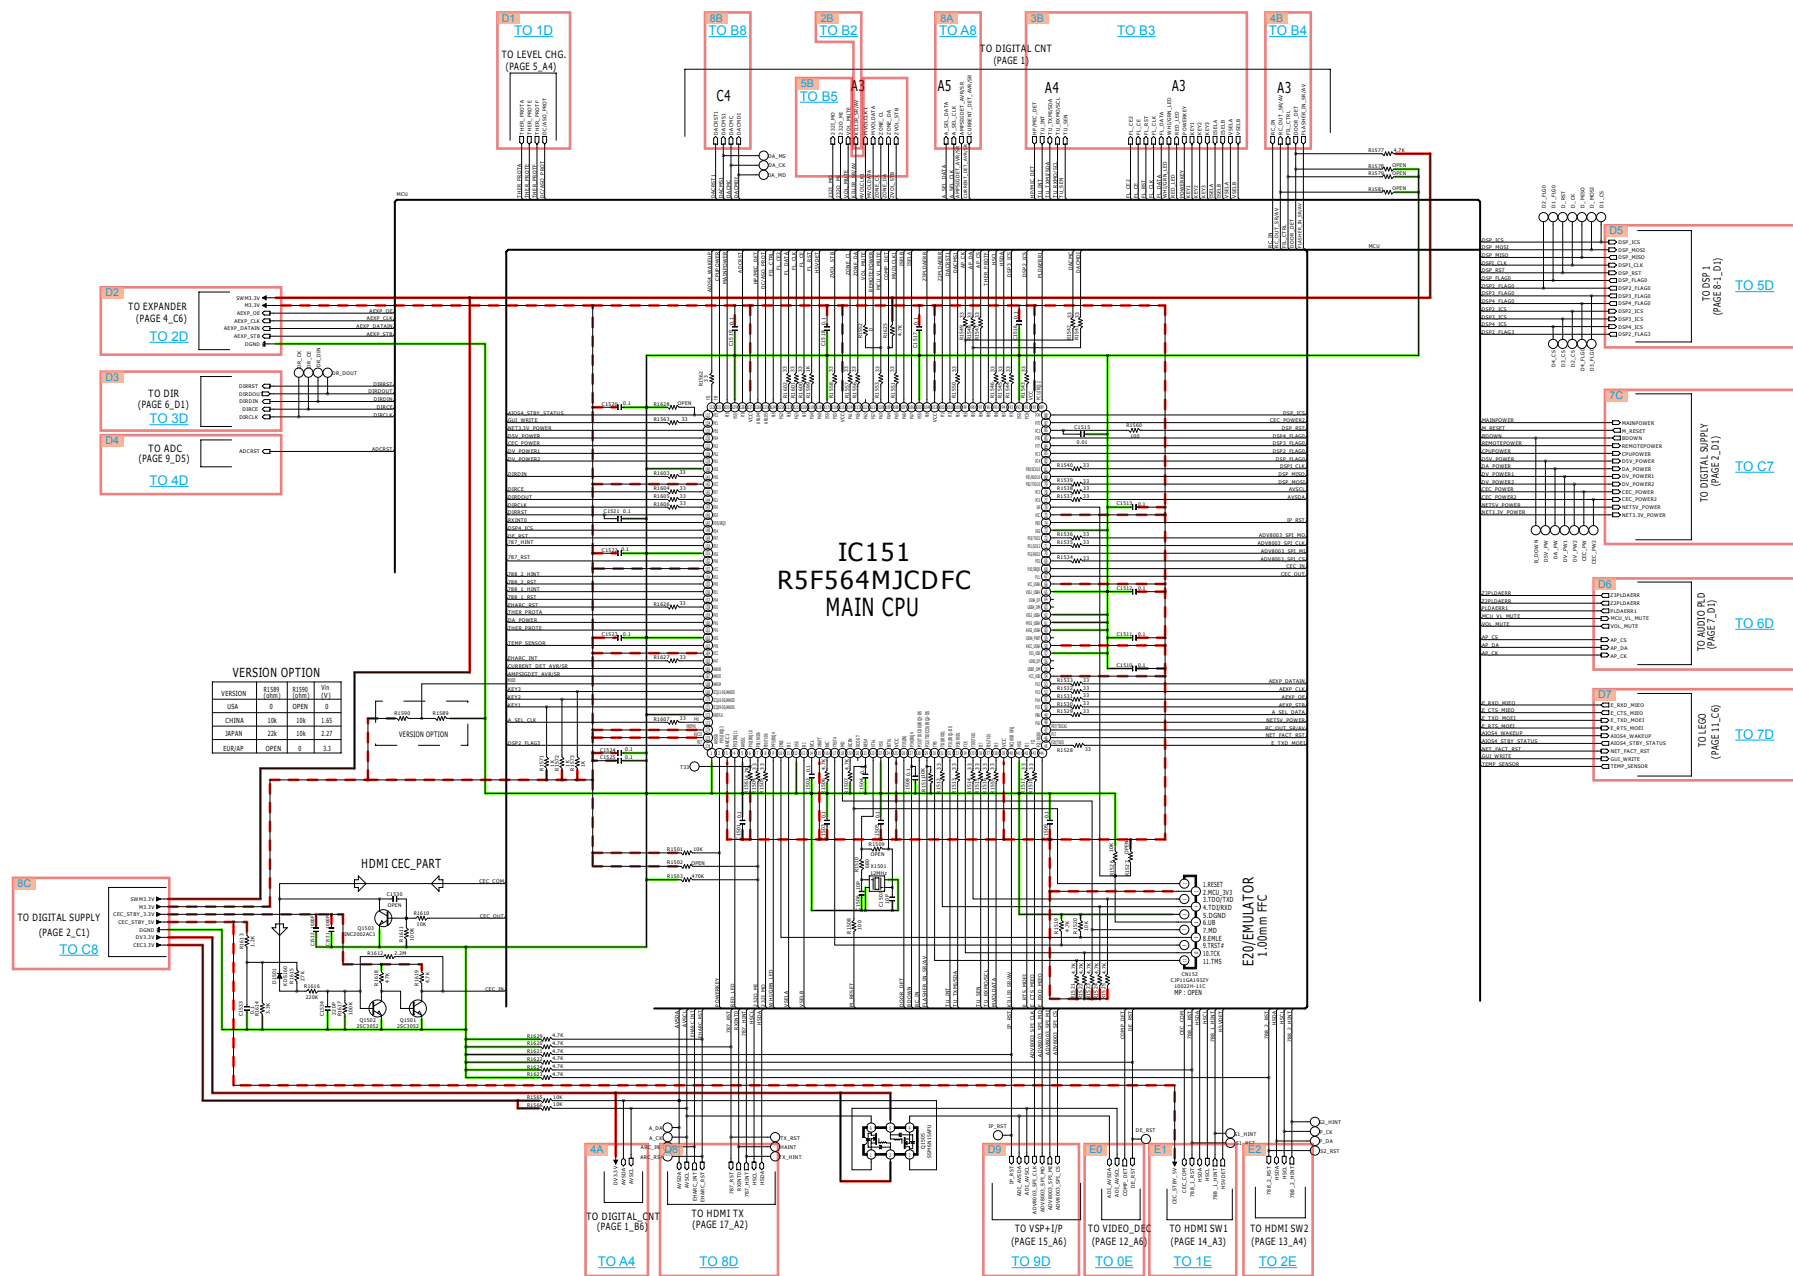


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

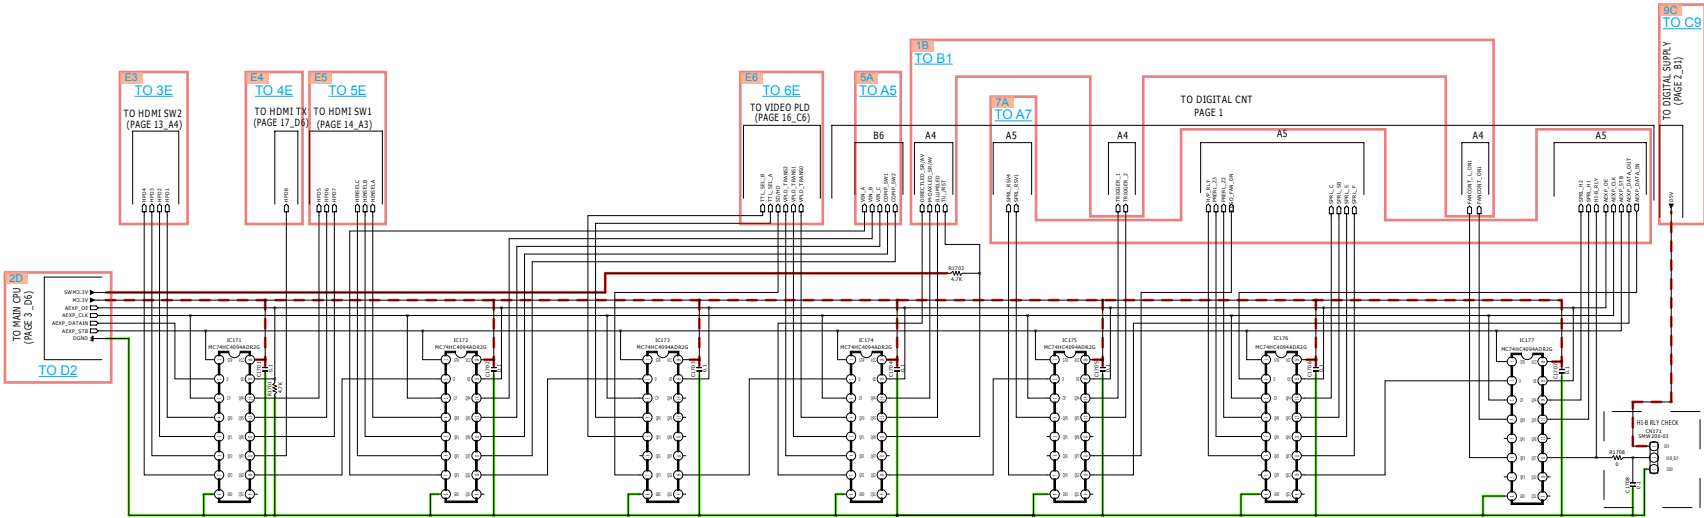



GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER




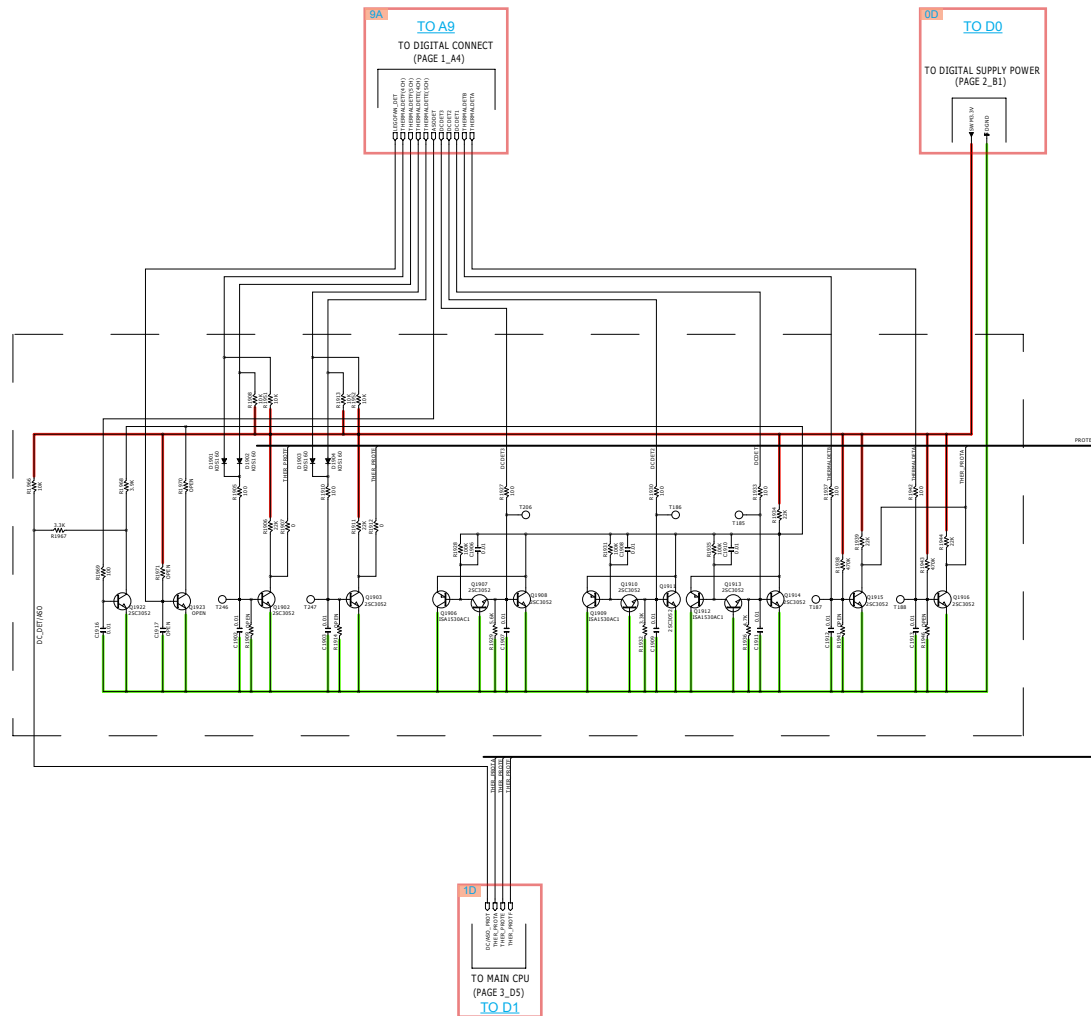


GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

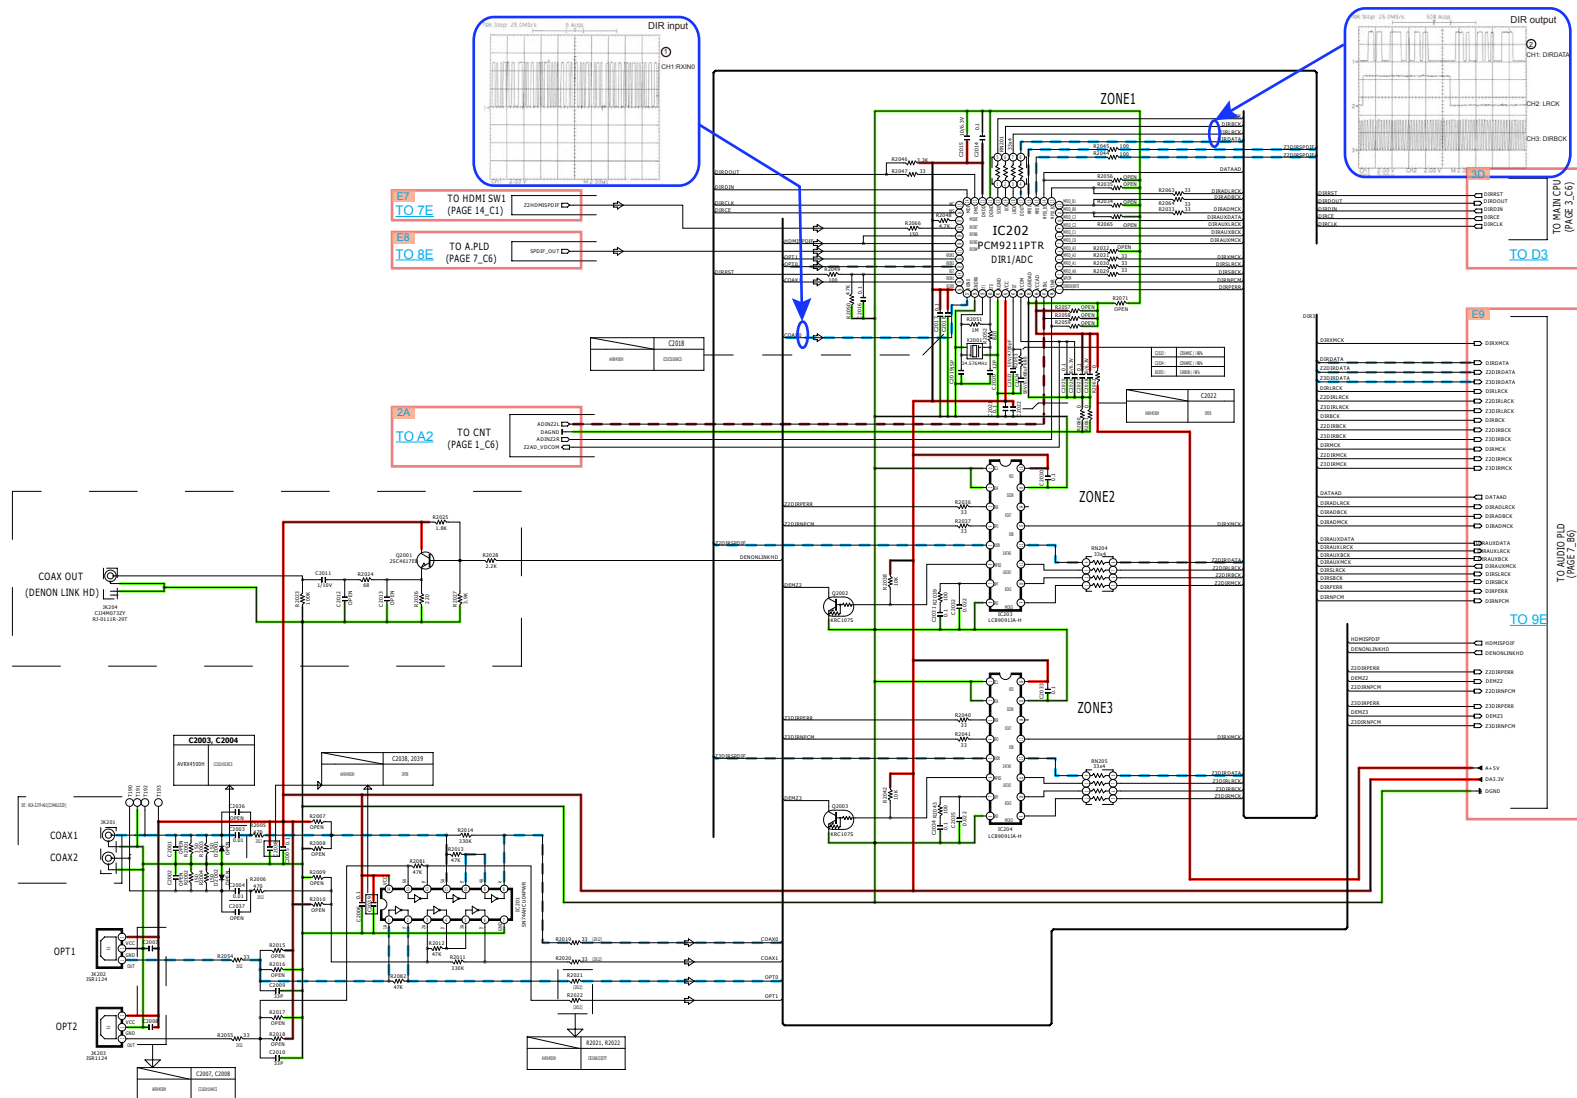

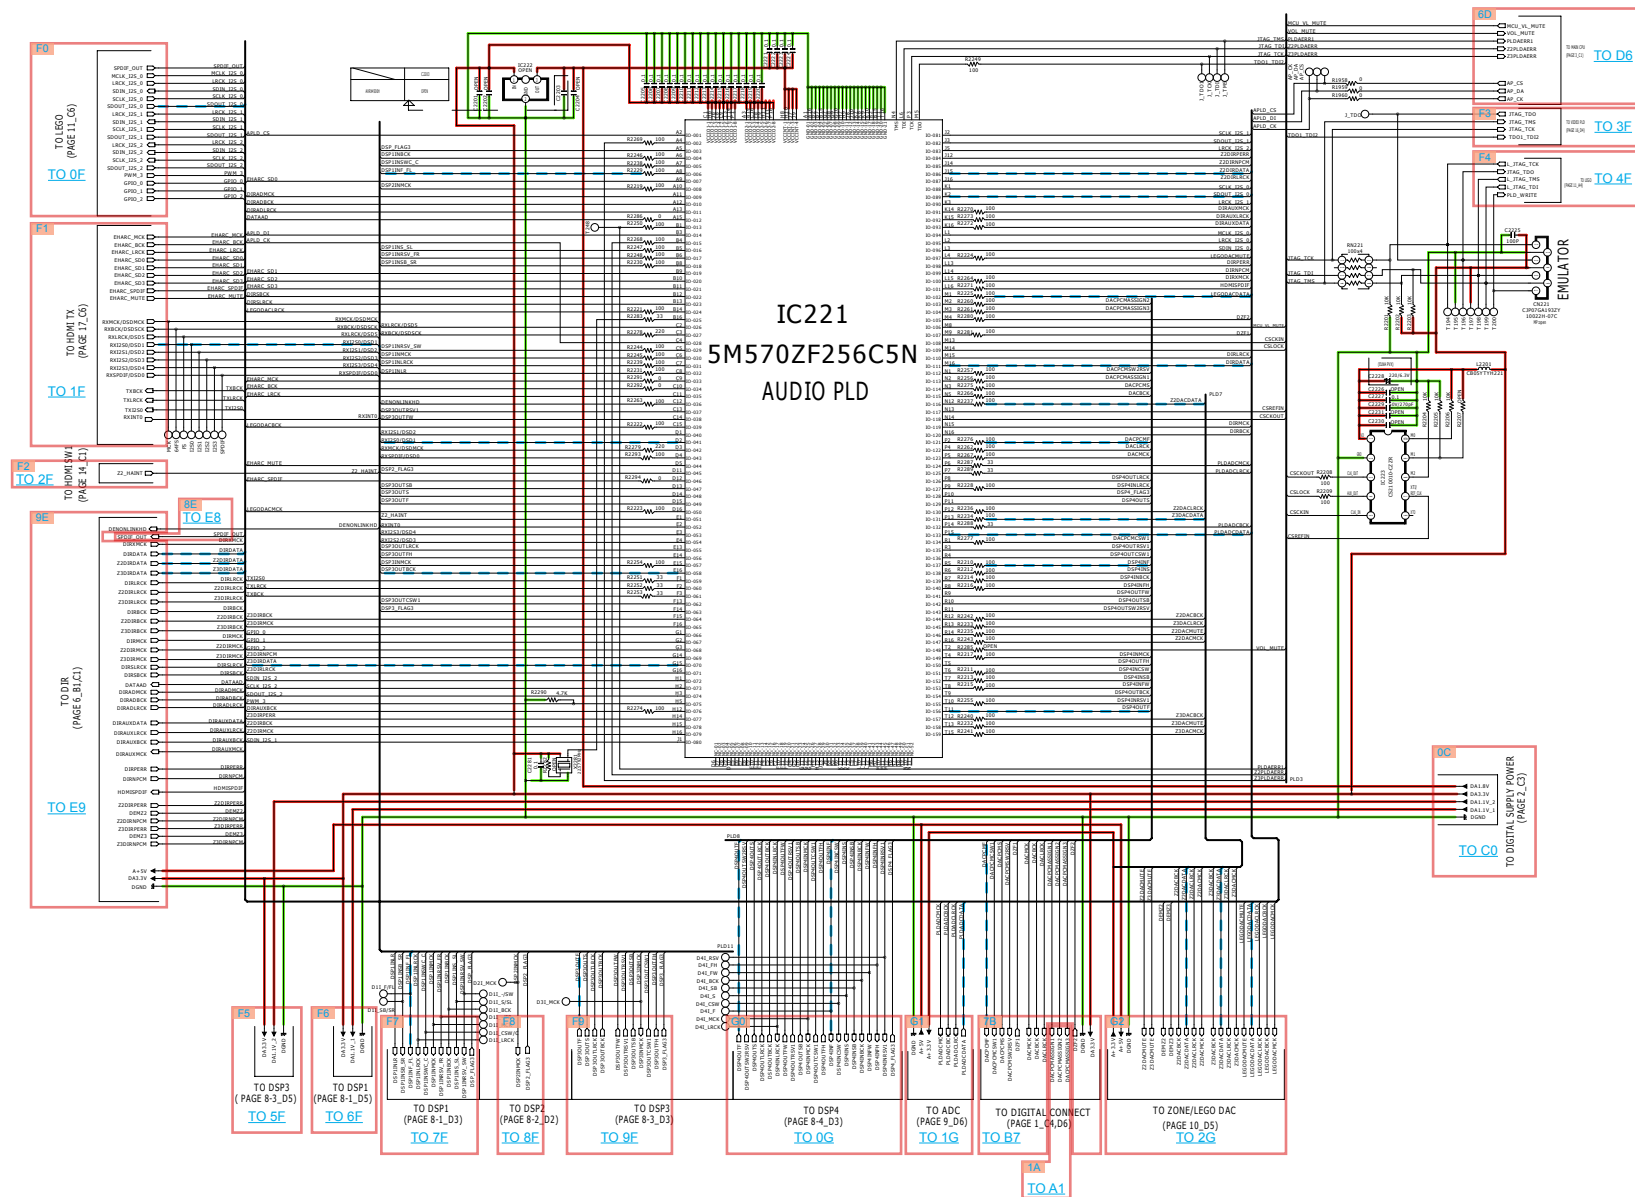


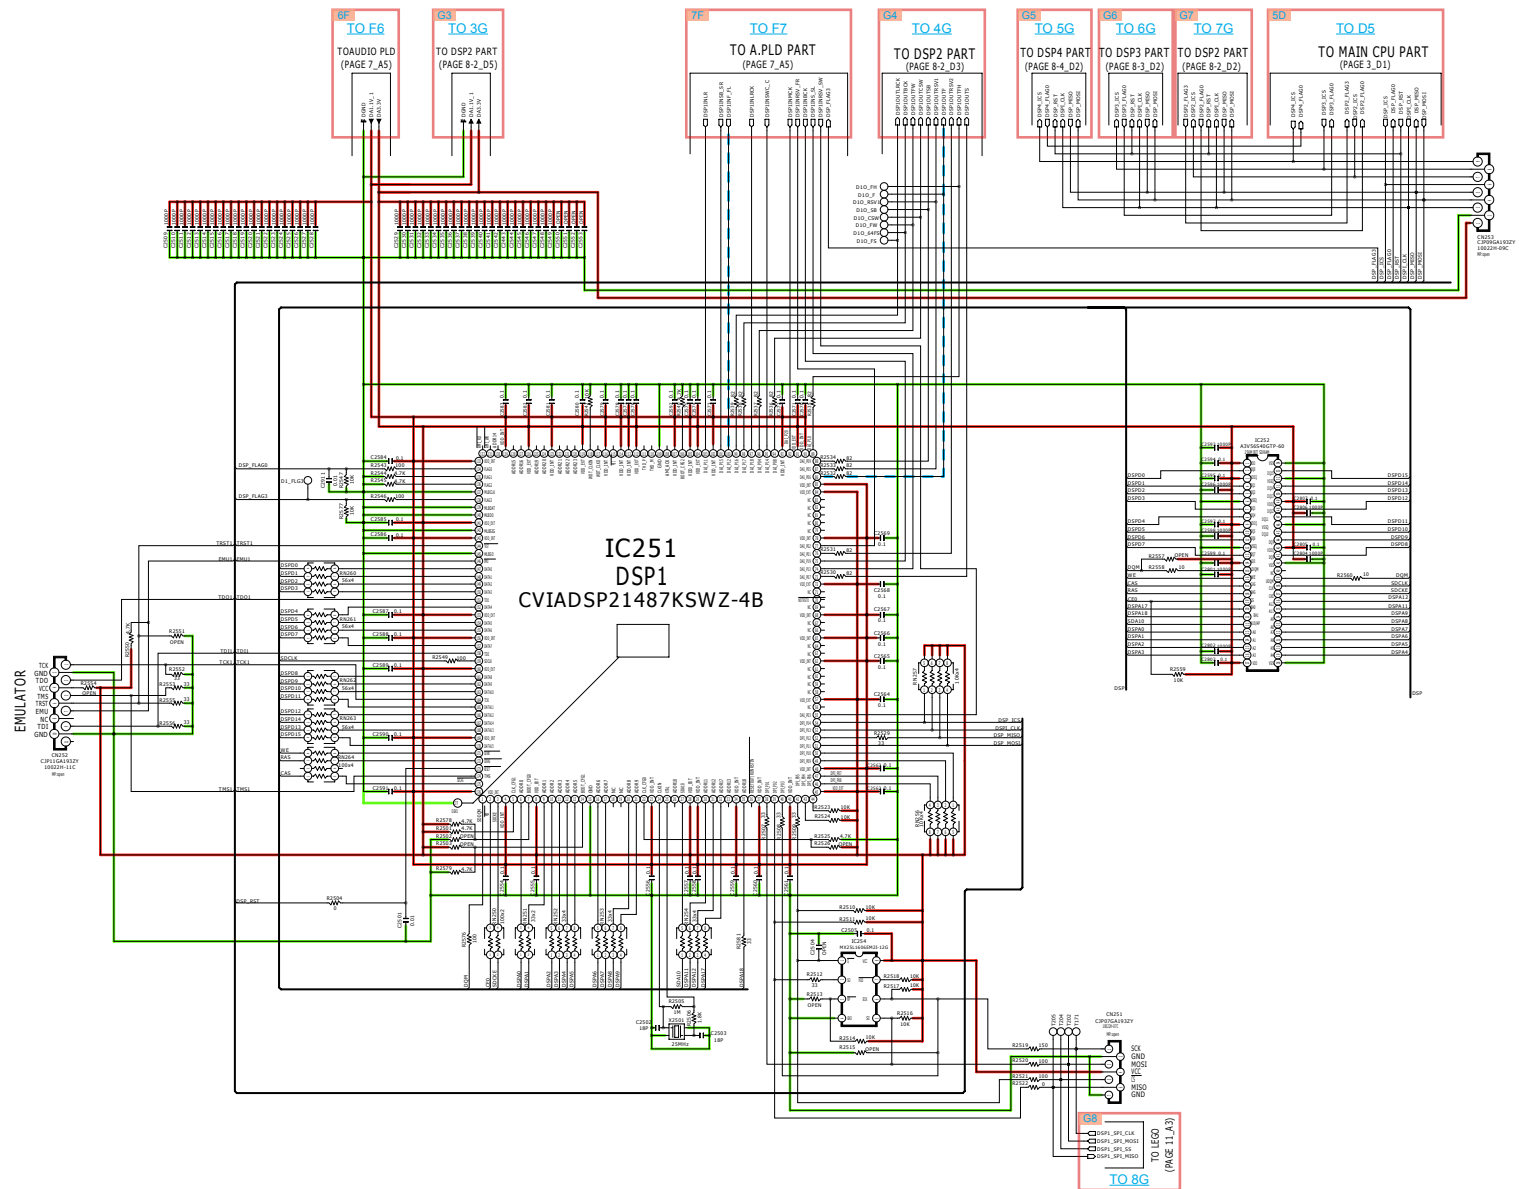


GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

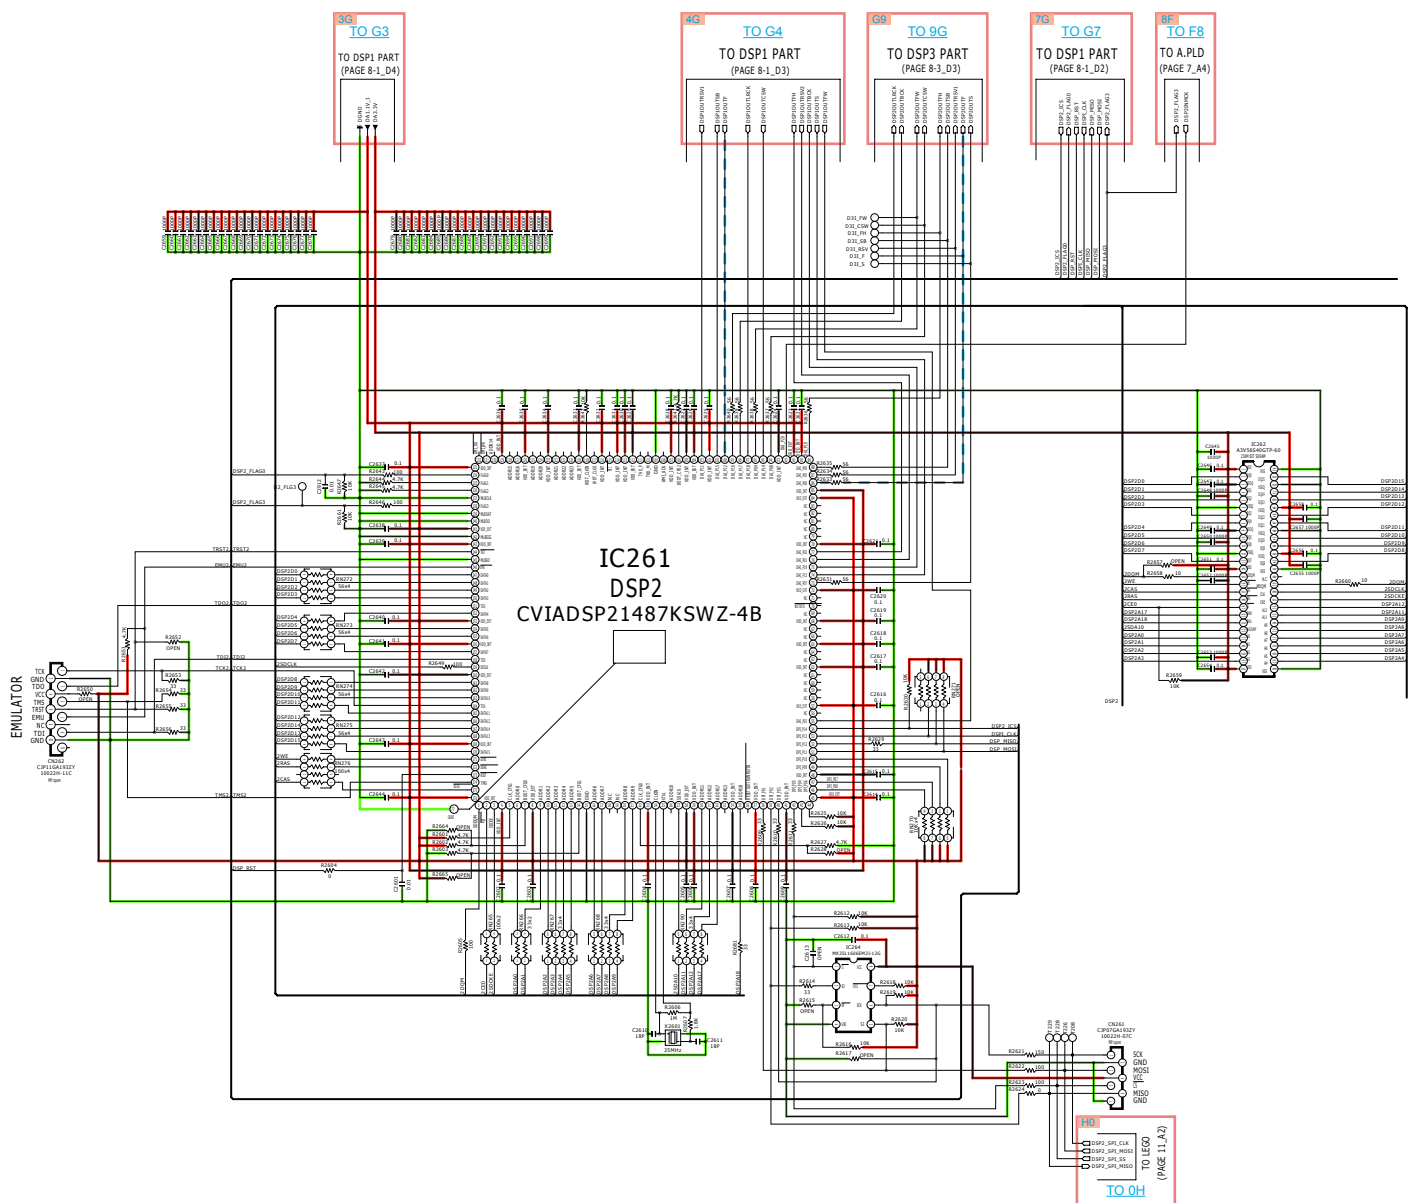


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

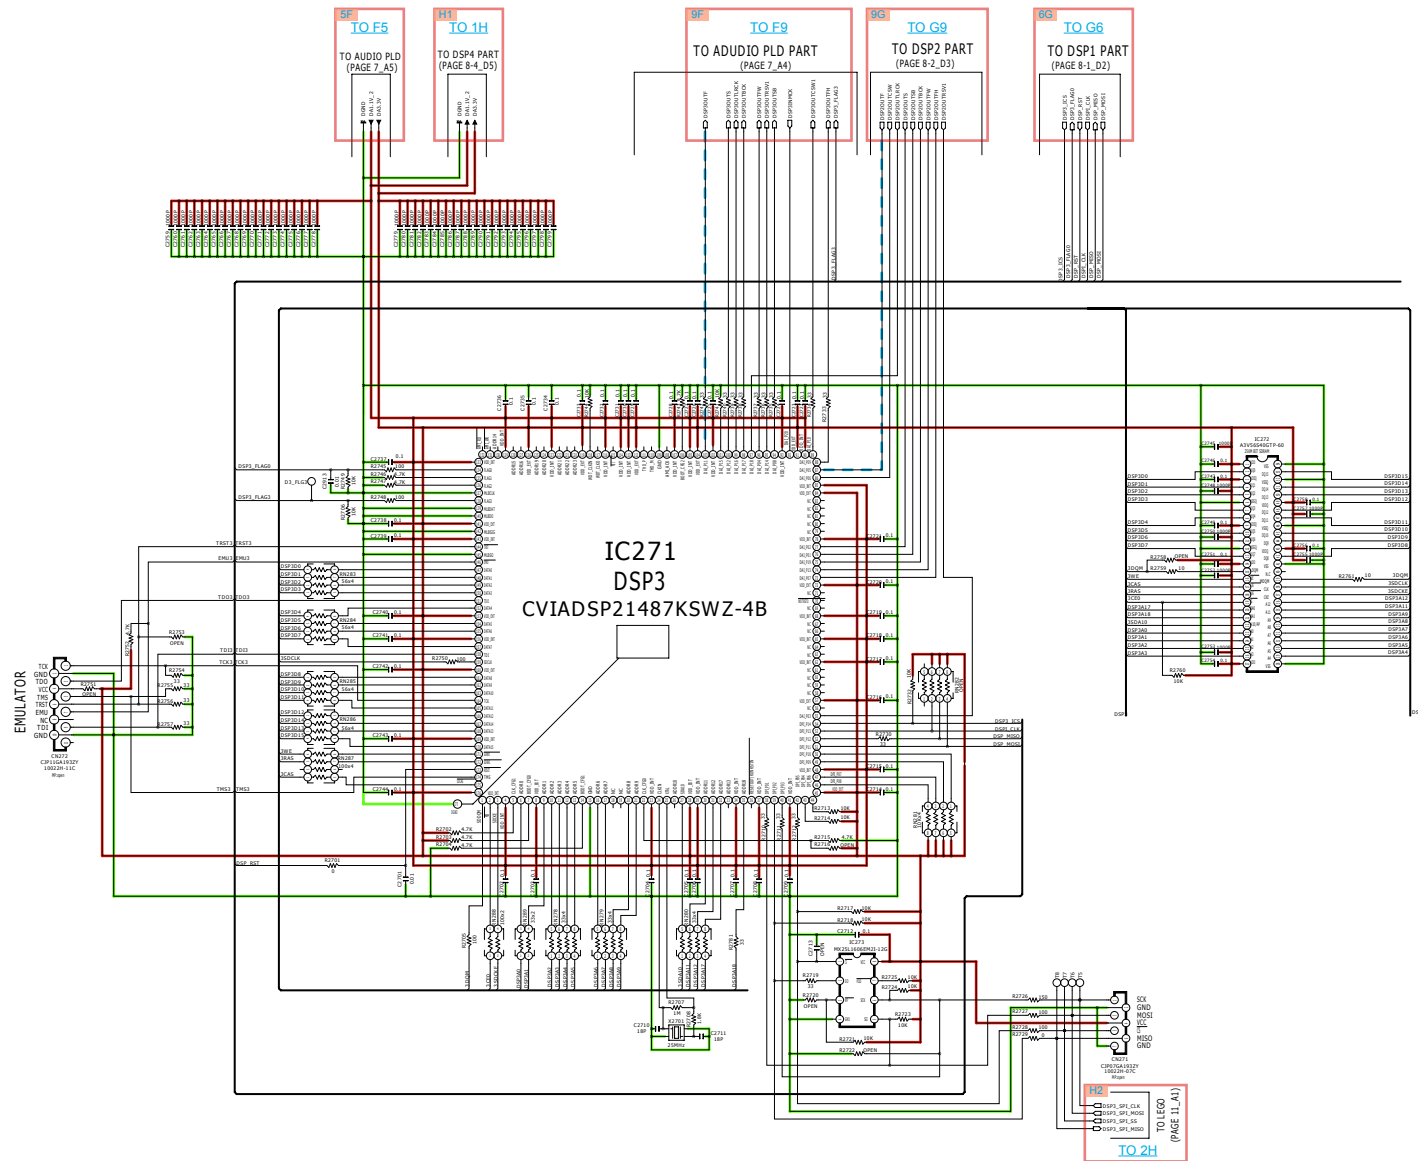


— GND LINE   
 — POWER+ LINE   
 — POWER- LINE   
 — ANALOG AUDIO   
 — DIGITAL AUDIO   
 — TMDS SIGNAL   
 — ANALOG VIDEO   
 — DIGITAL VIDEO   
 — STBY POWER

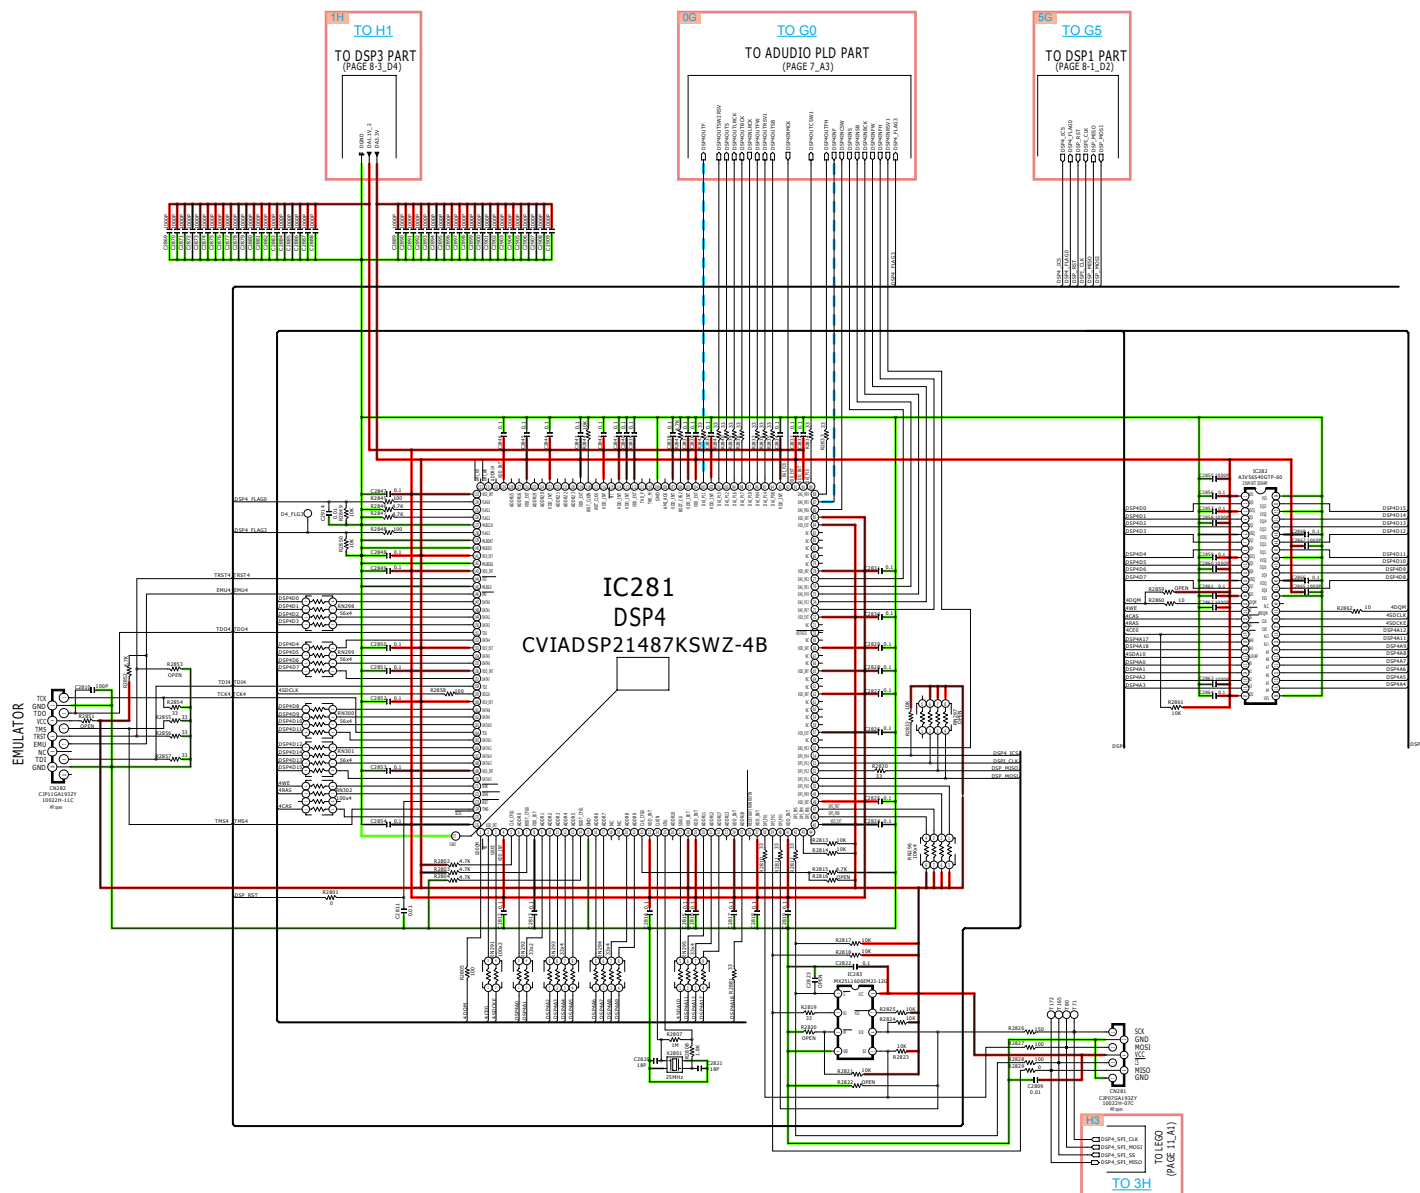

GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMD5 SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

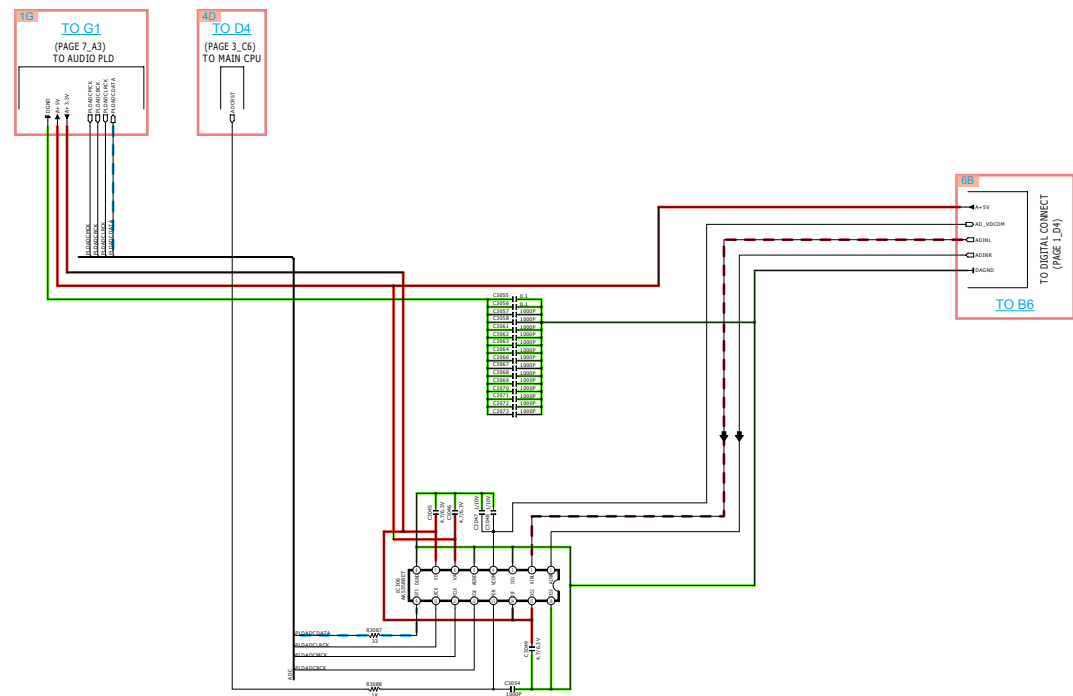





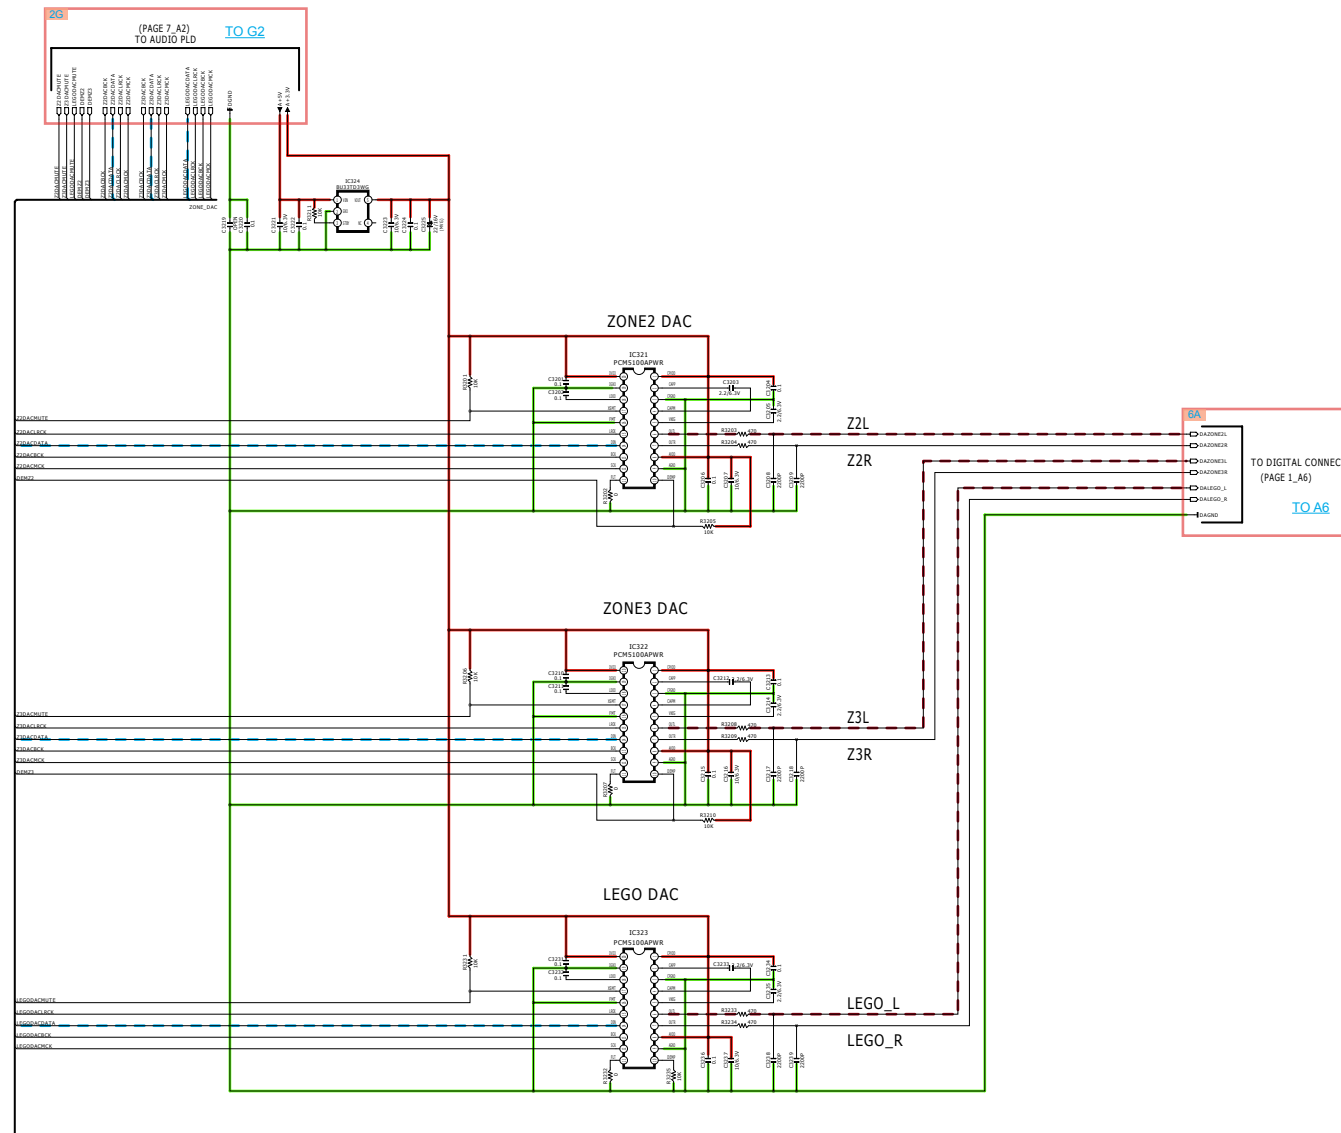



— GND LINE   
 — POWER+ LINE   
 — POWER- LINE   
 — ANALOG AUDIO   
 — DIGITAL AUDIO   
 — TMDS SIGNAL   
 — ANALOG VIDEO   
 — DIGITAL VIDEO   
 — STBY POWER

## FROM LEGO MODULE

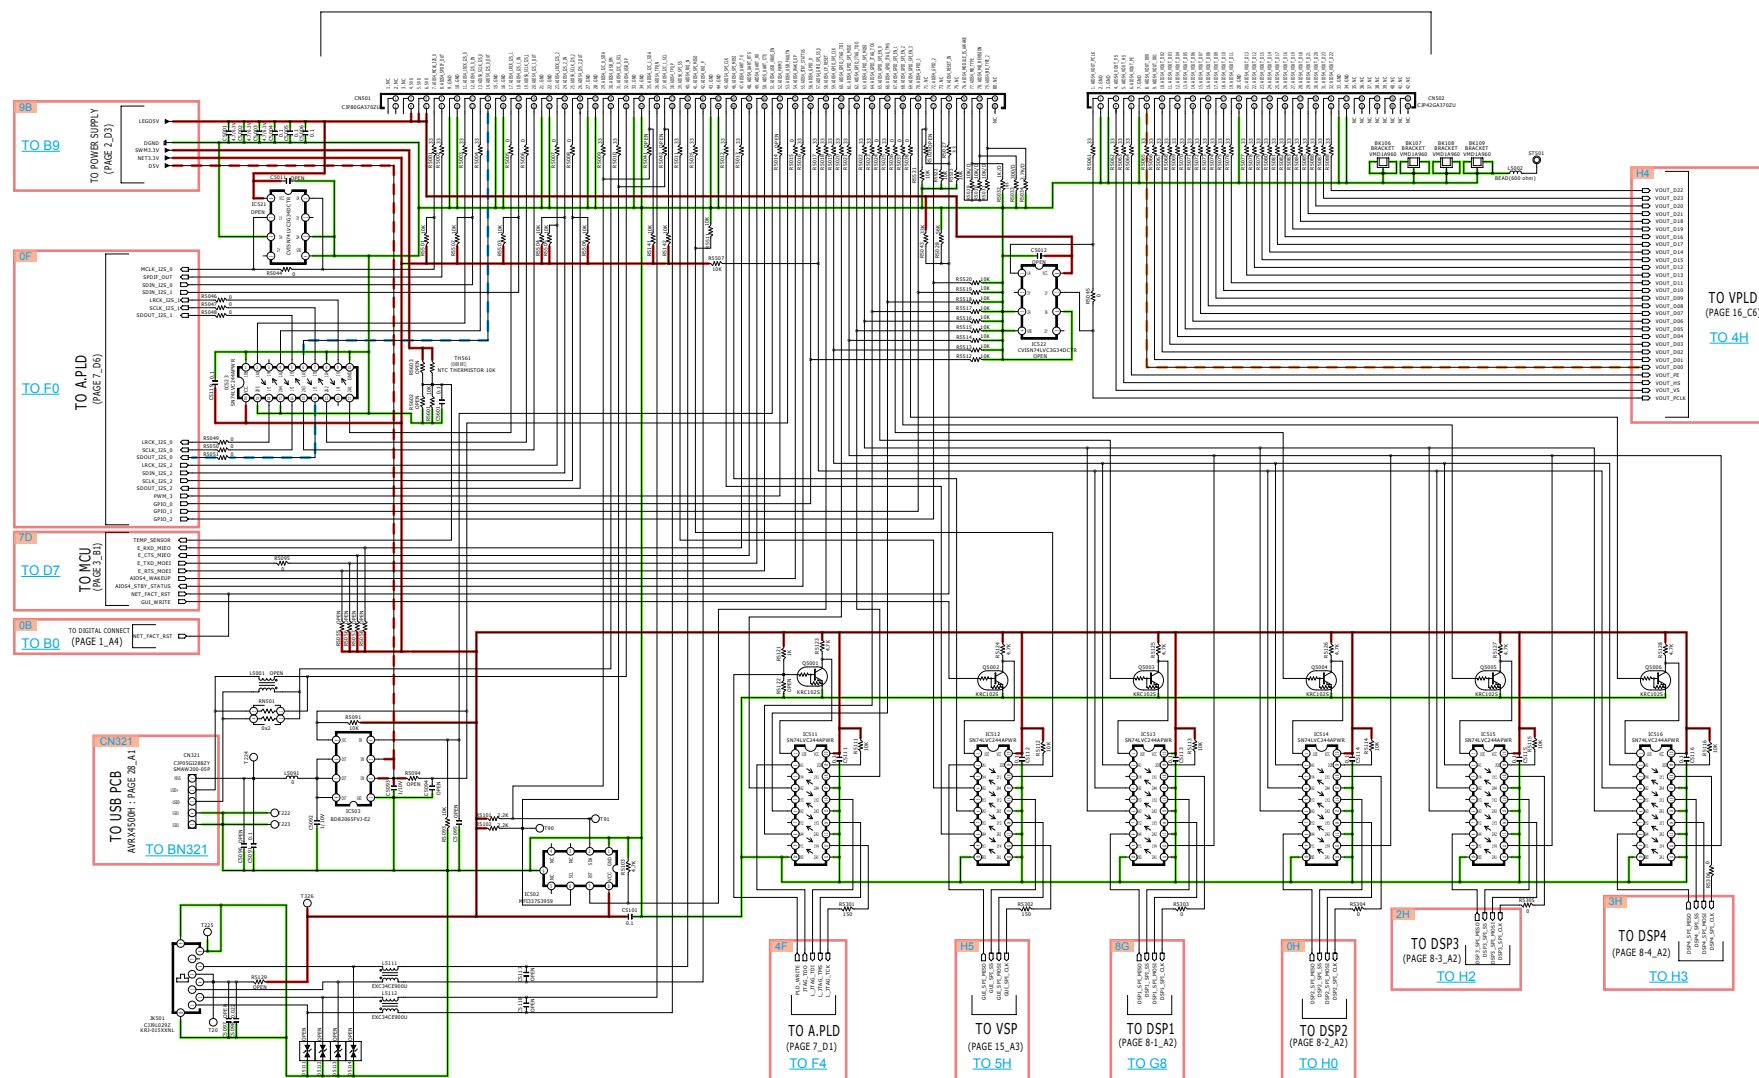


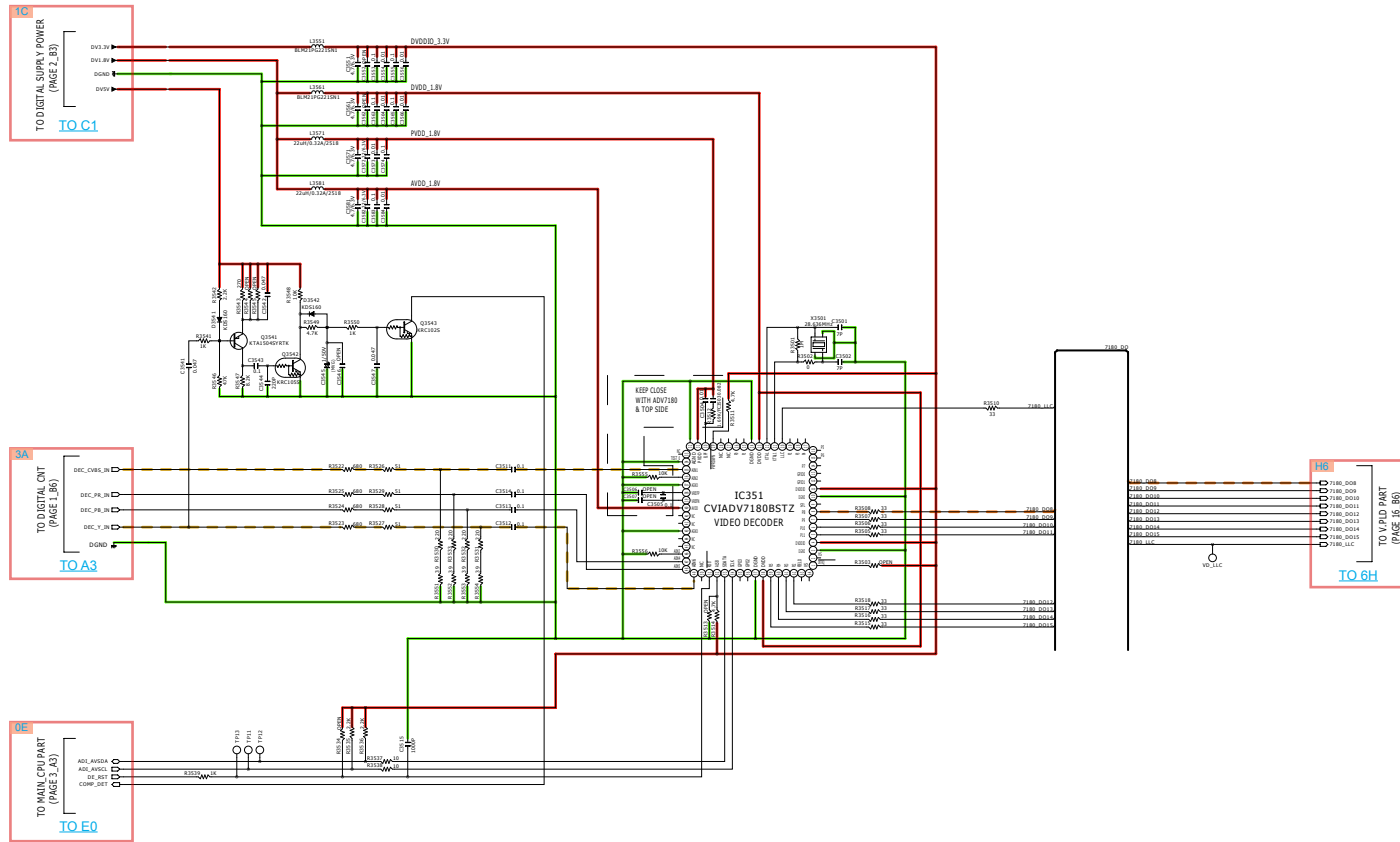


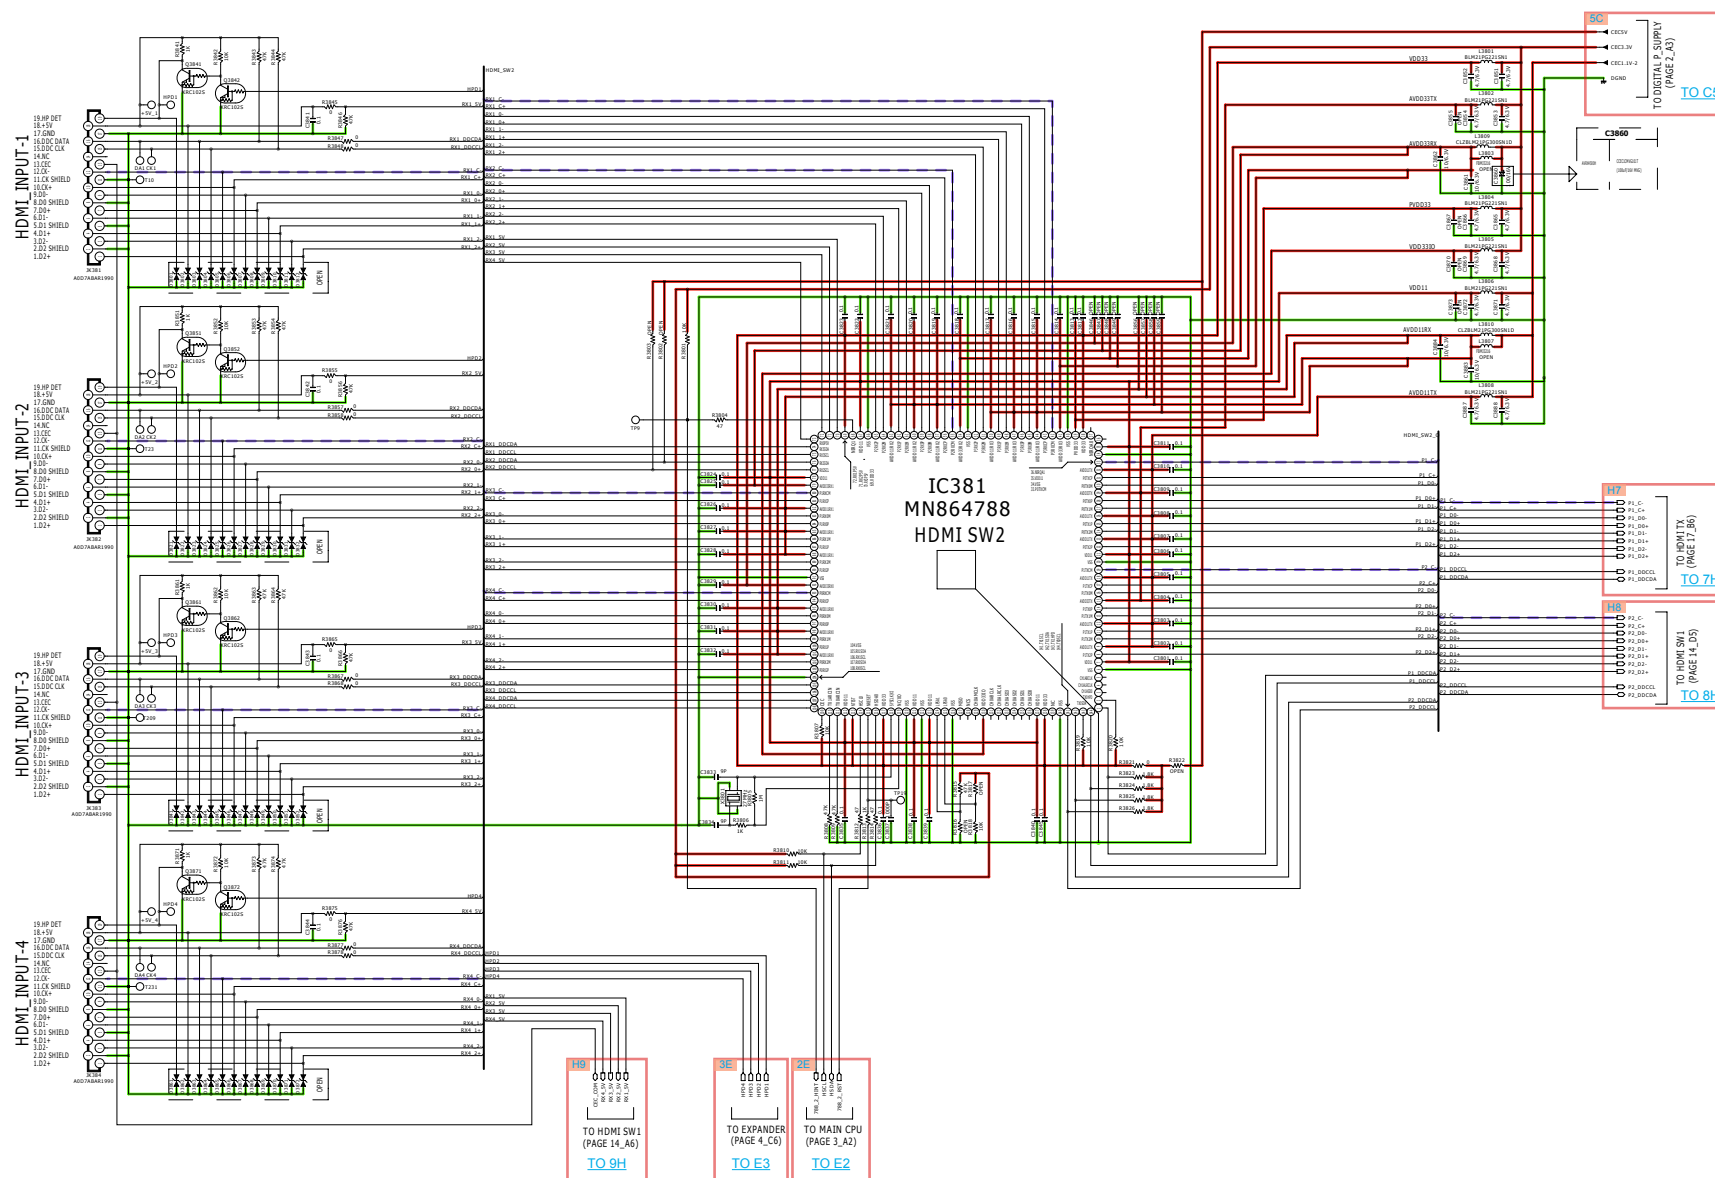

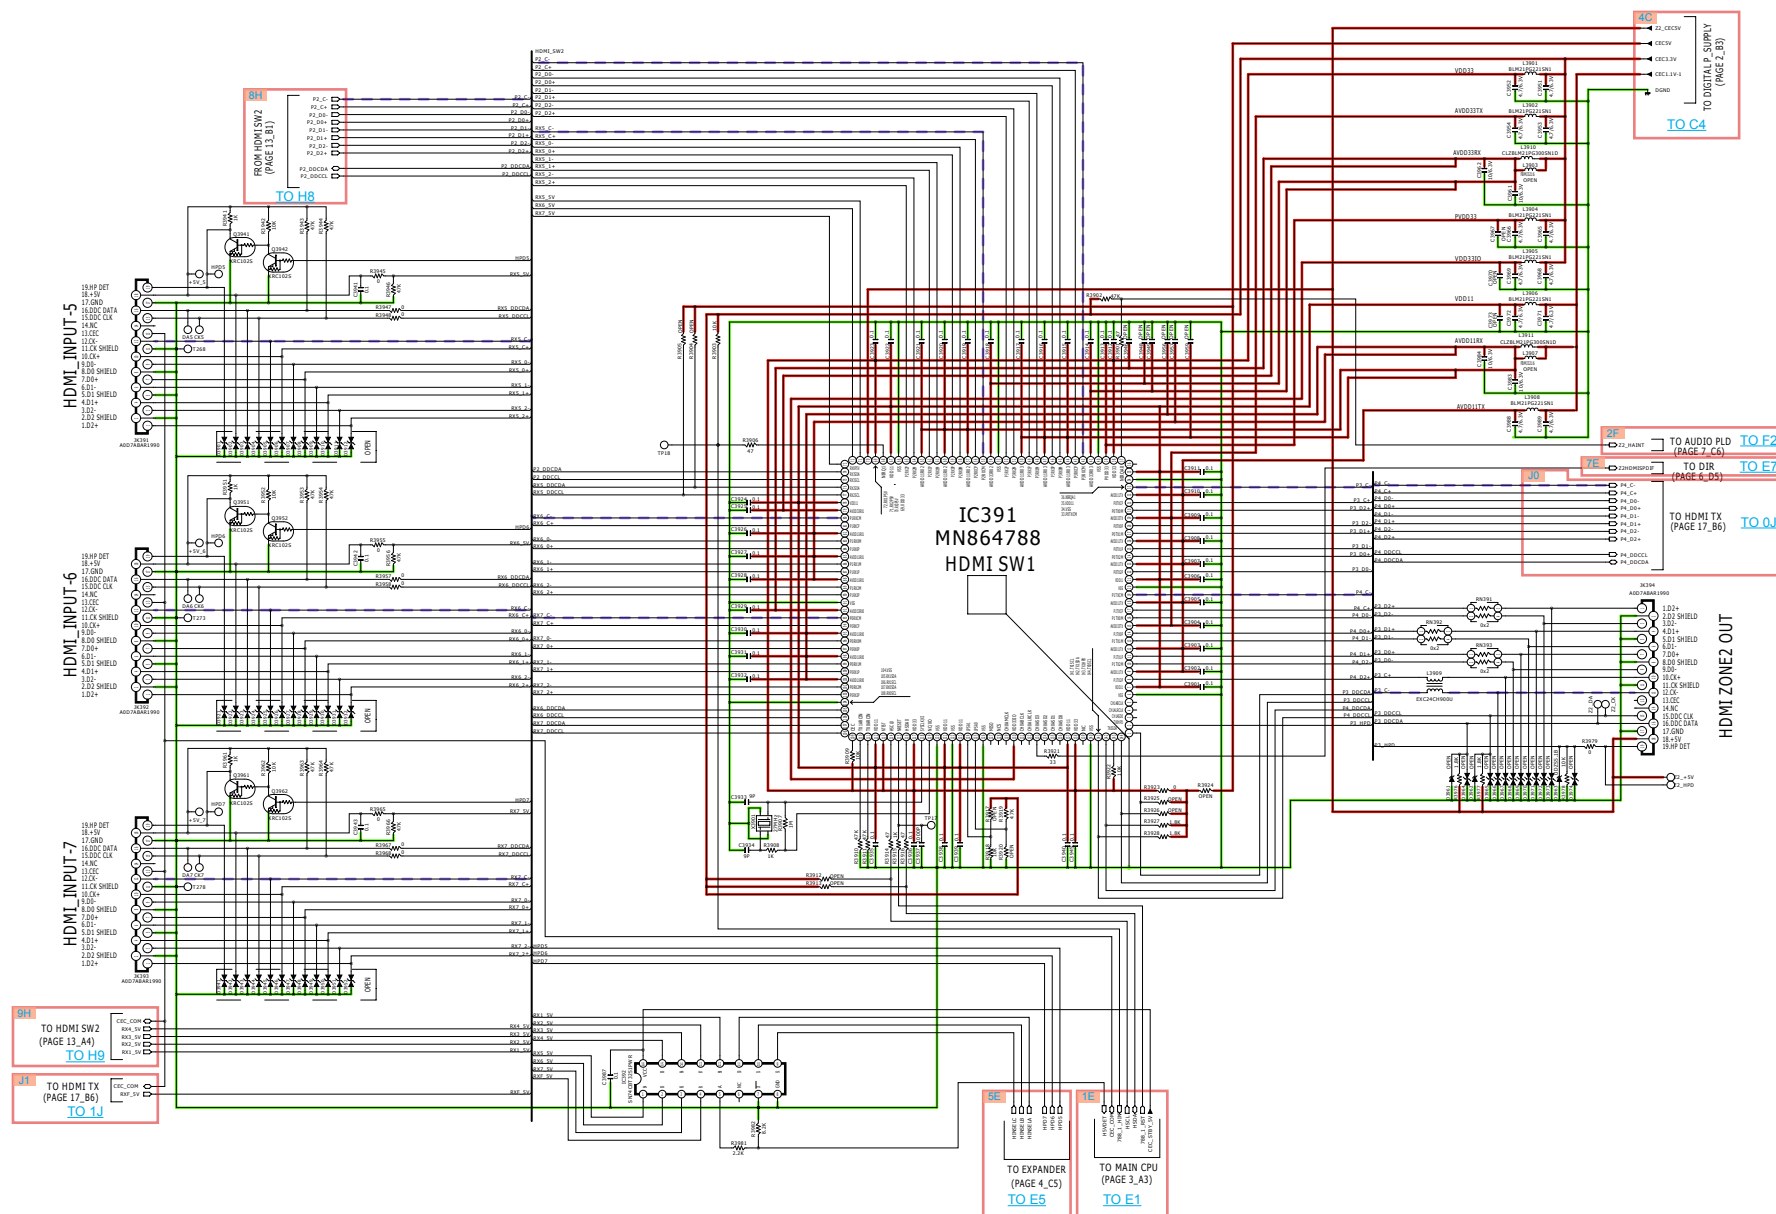


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMDS SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

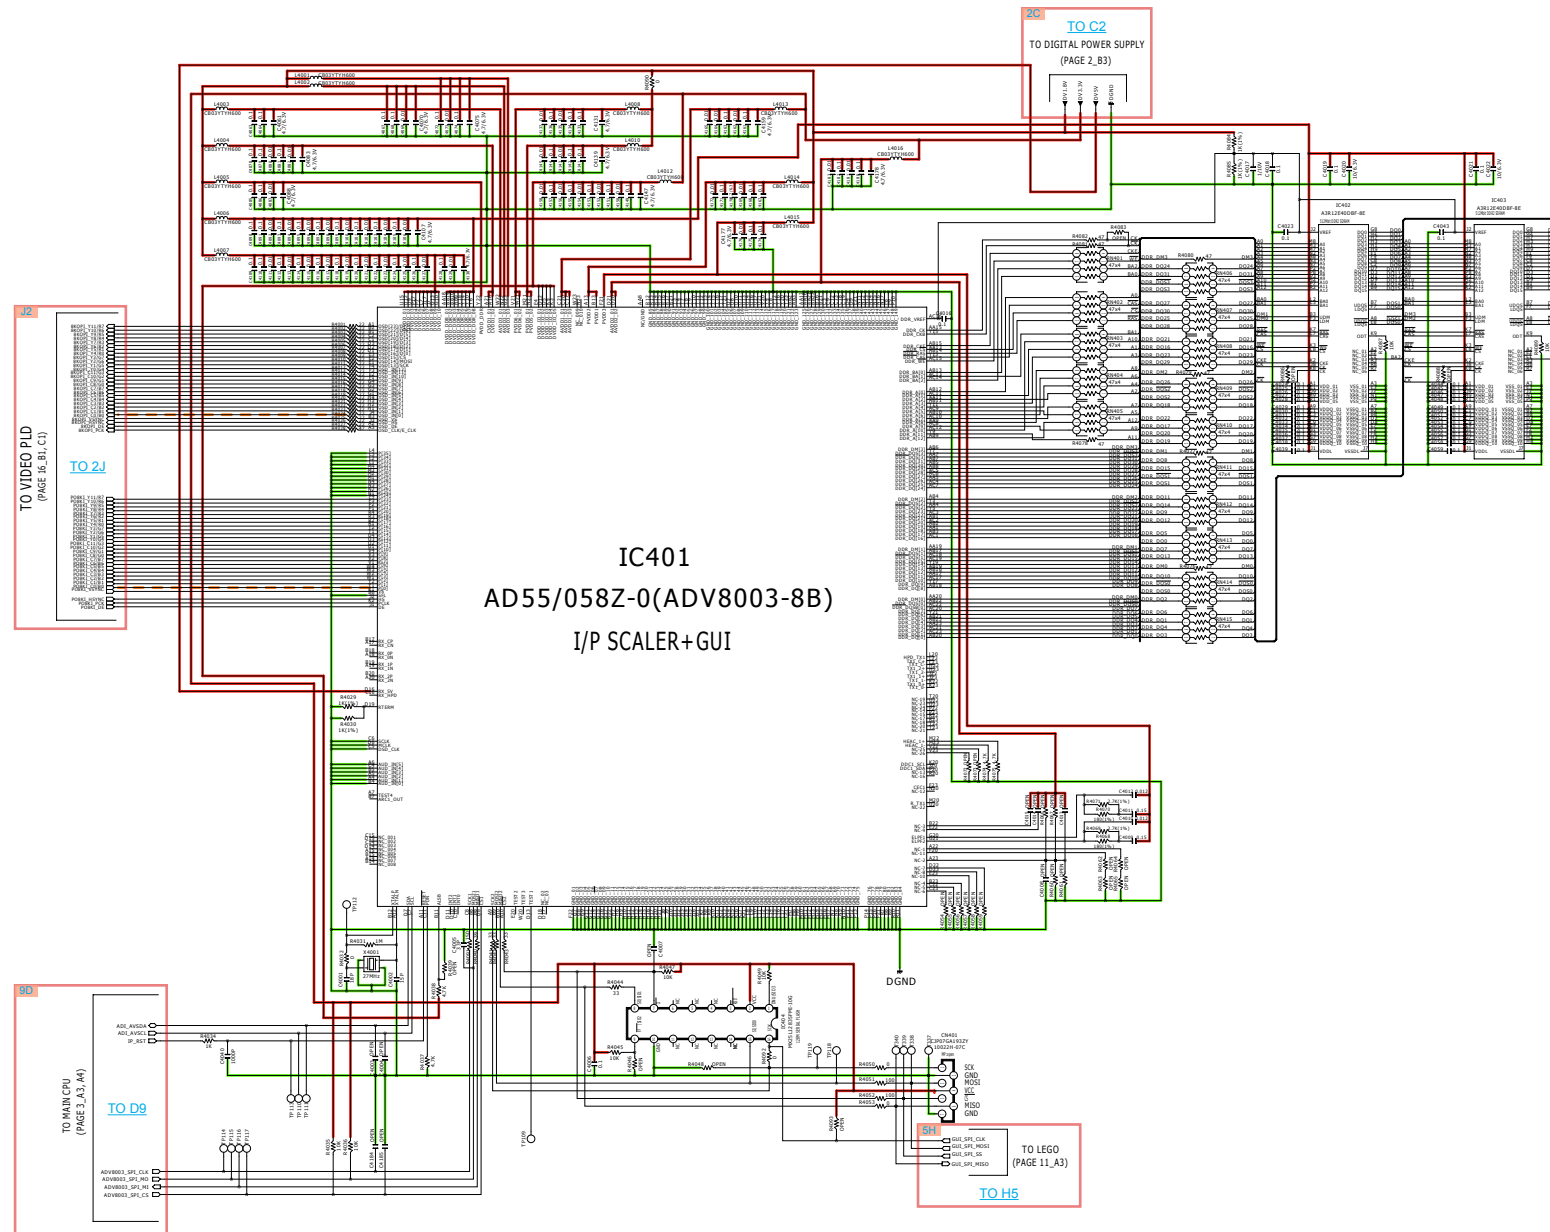


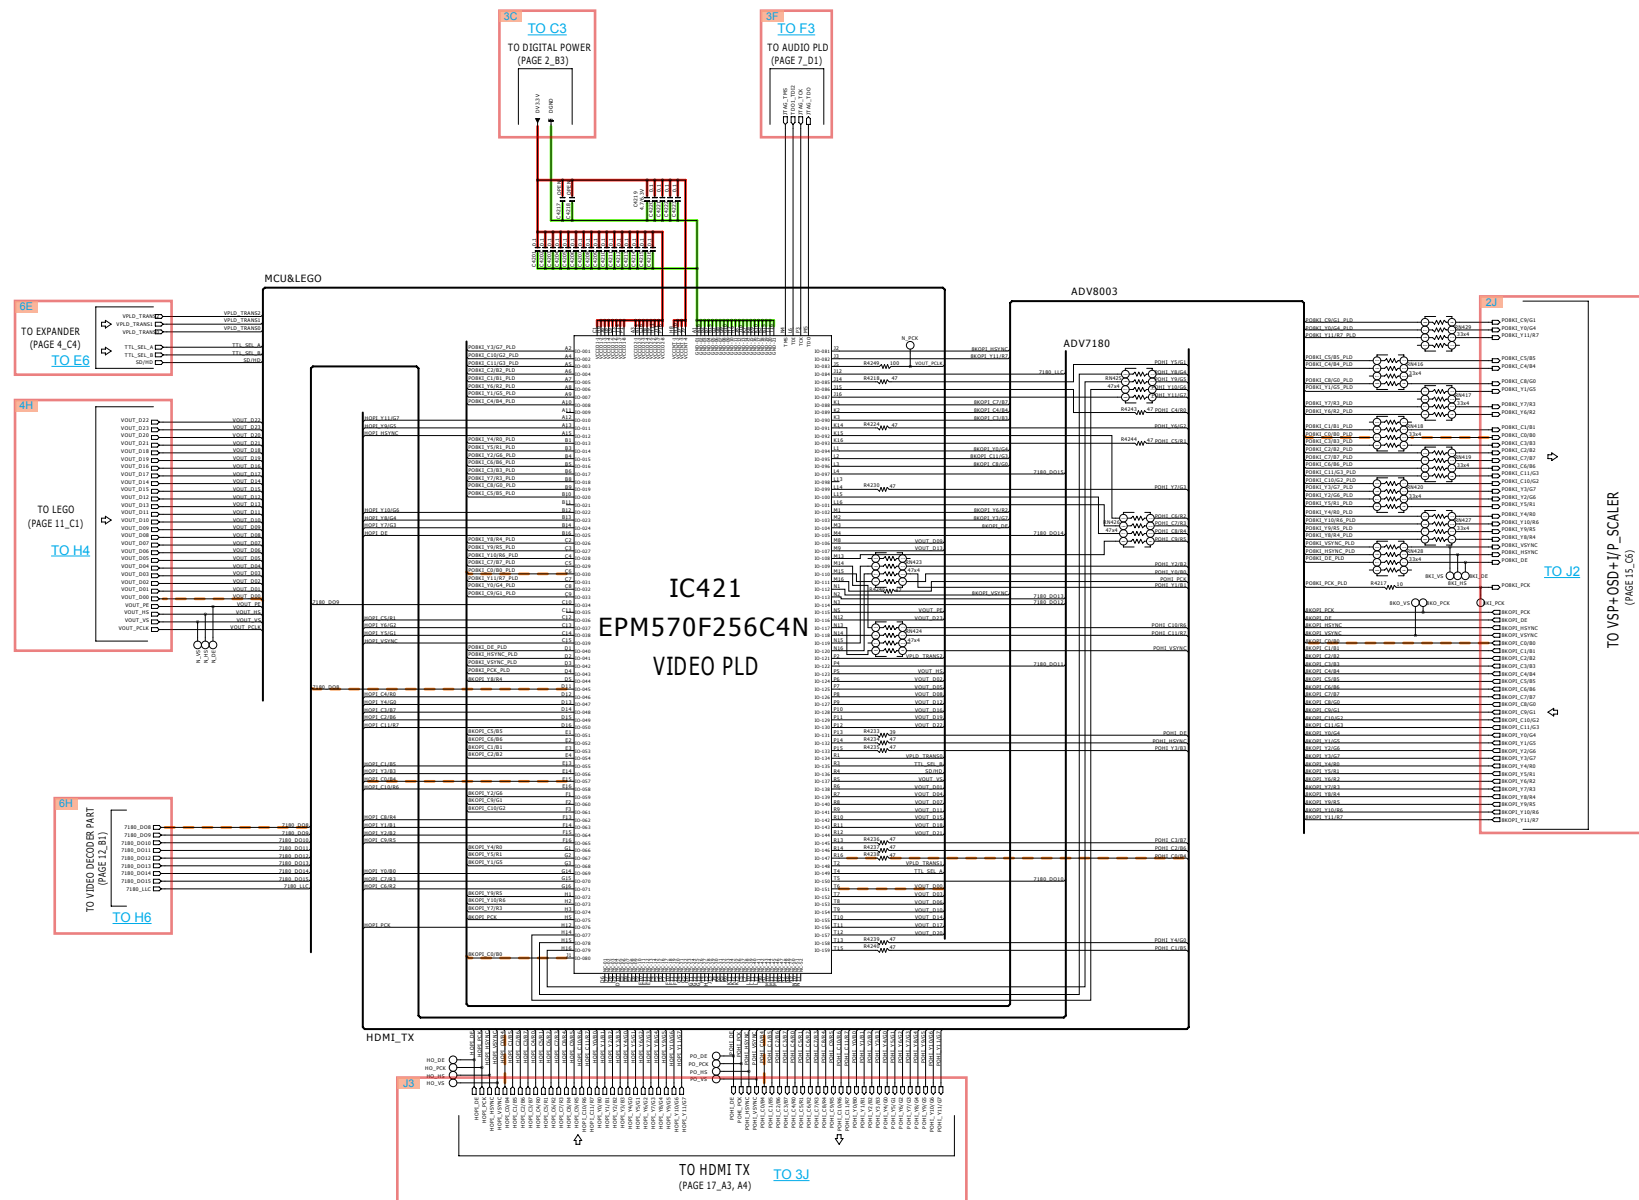






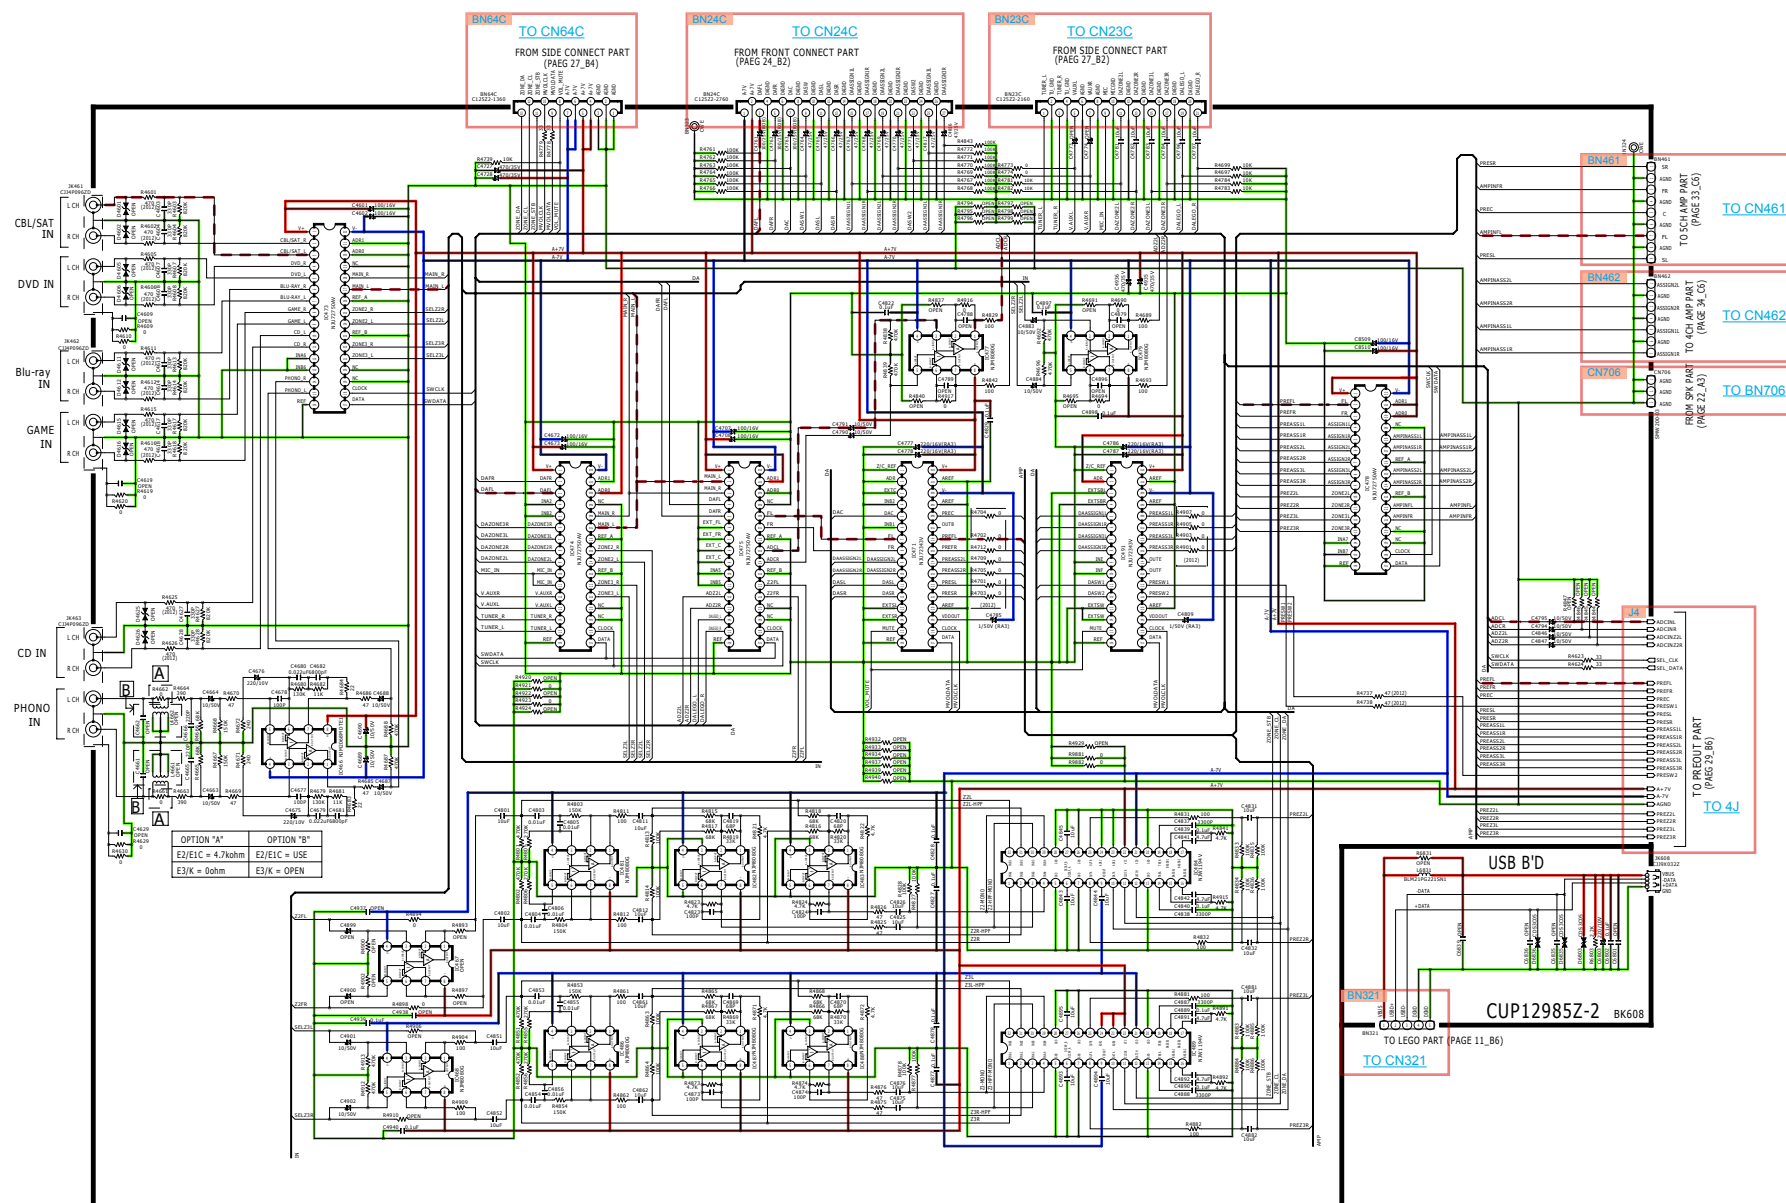

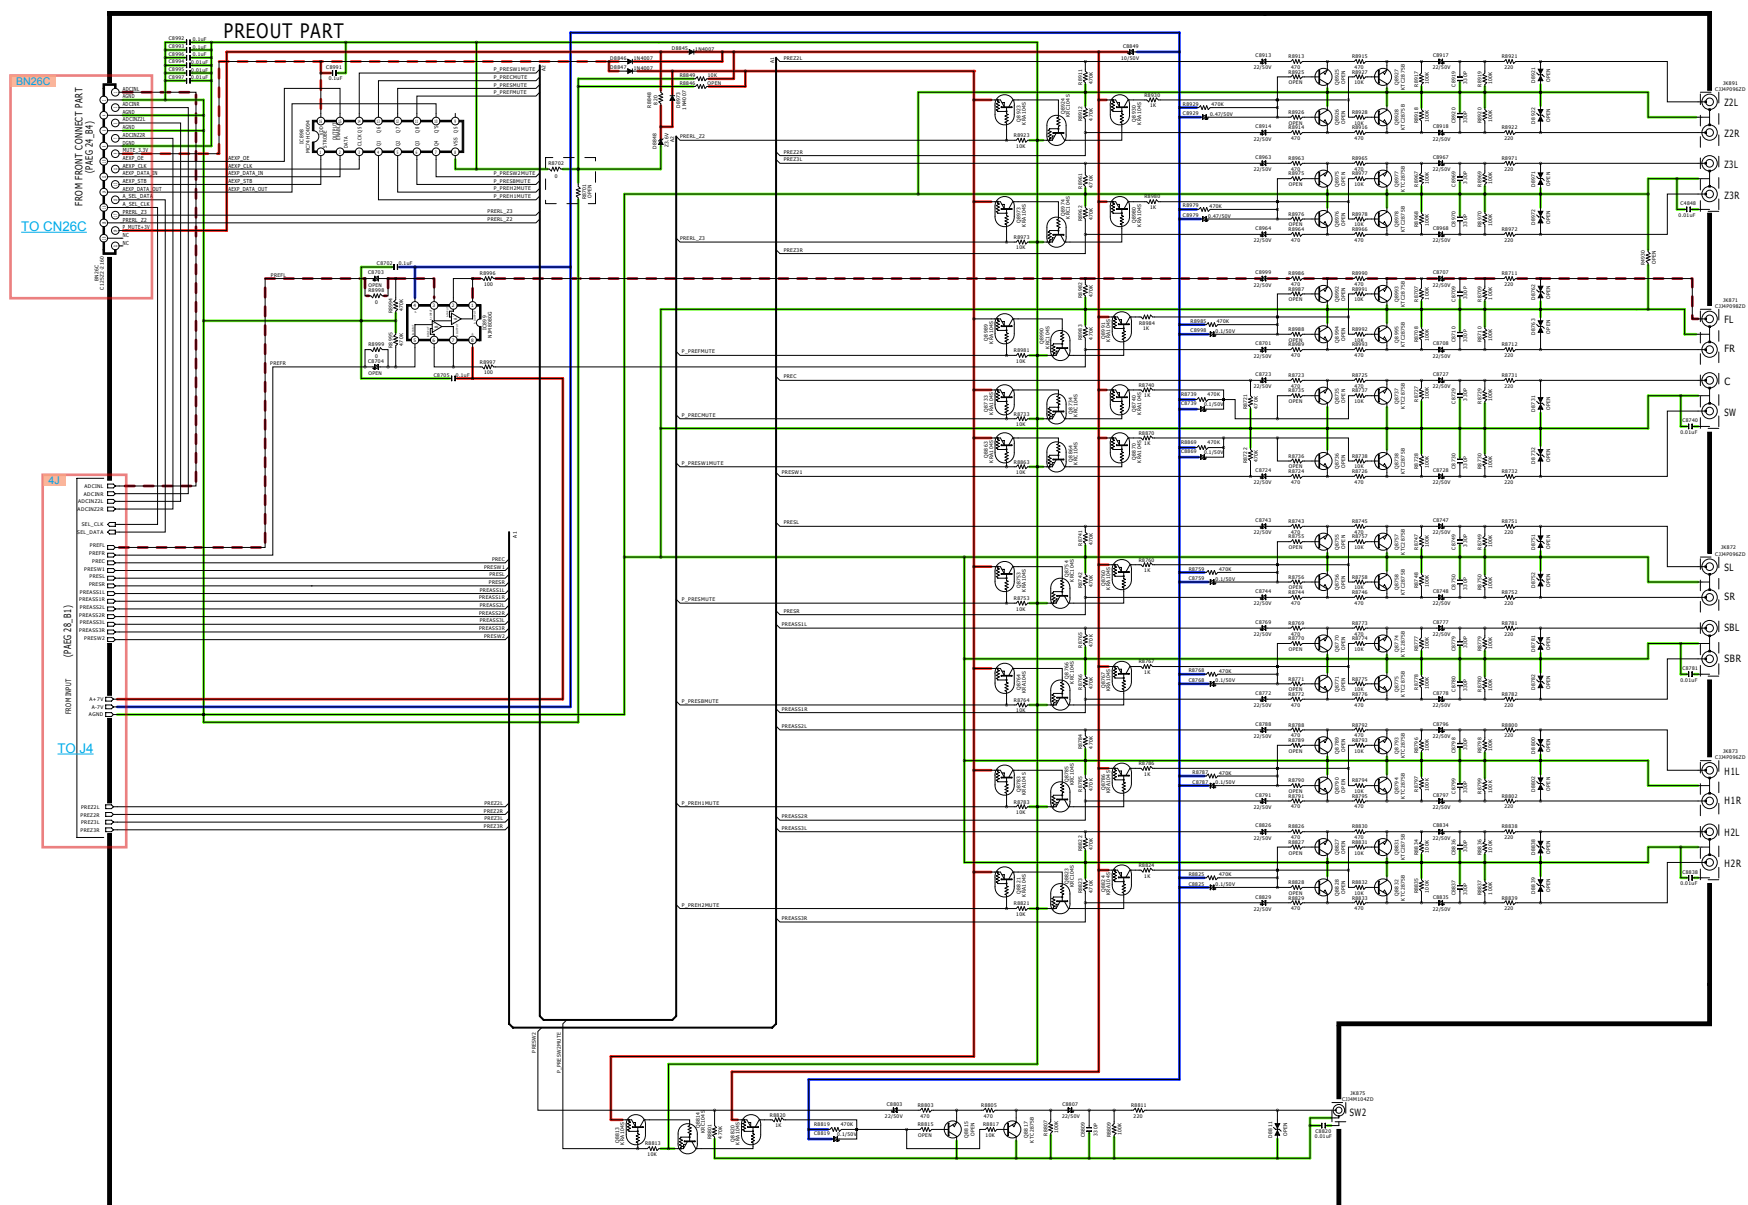


GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

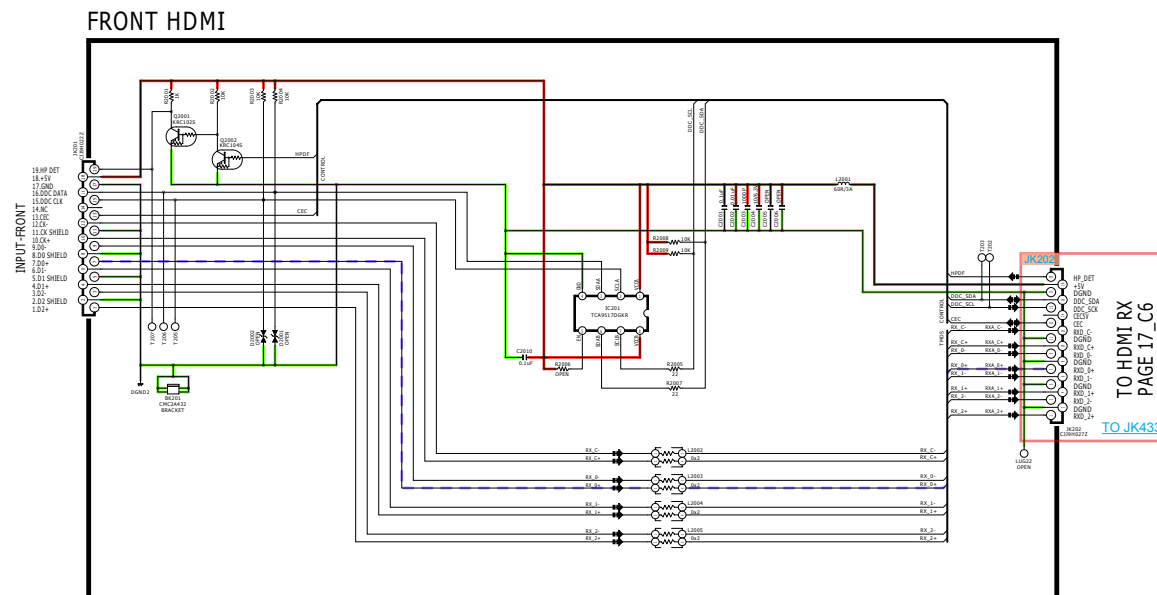
TO HDMI RX  
PAGE 17\_C6


TO JK433



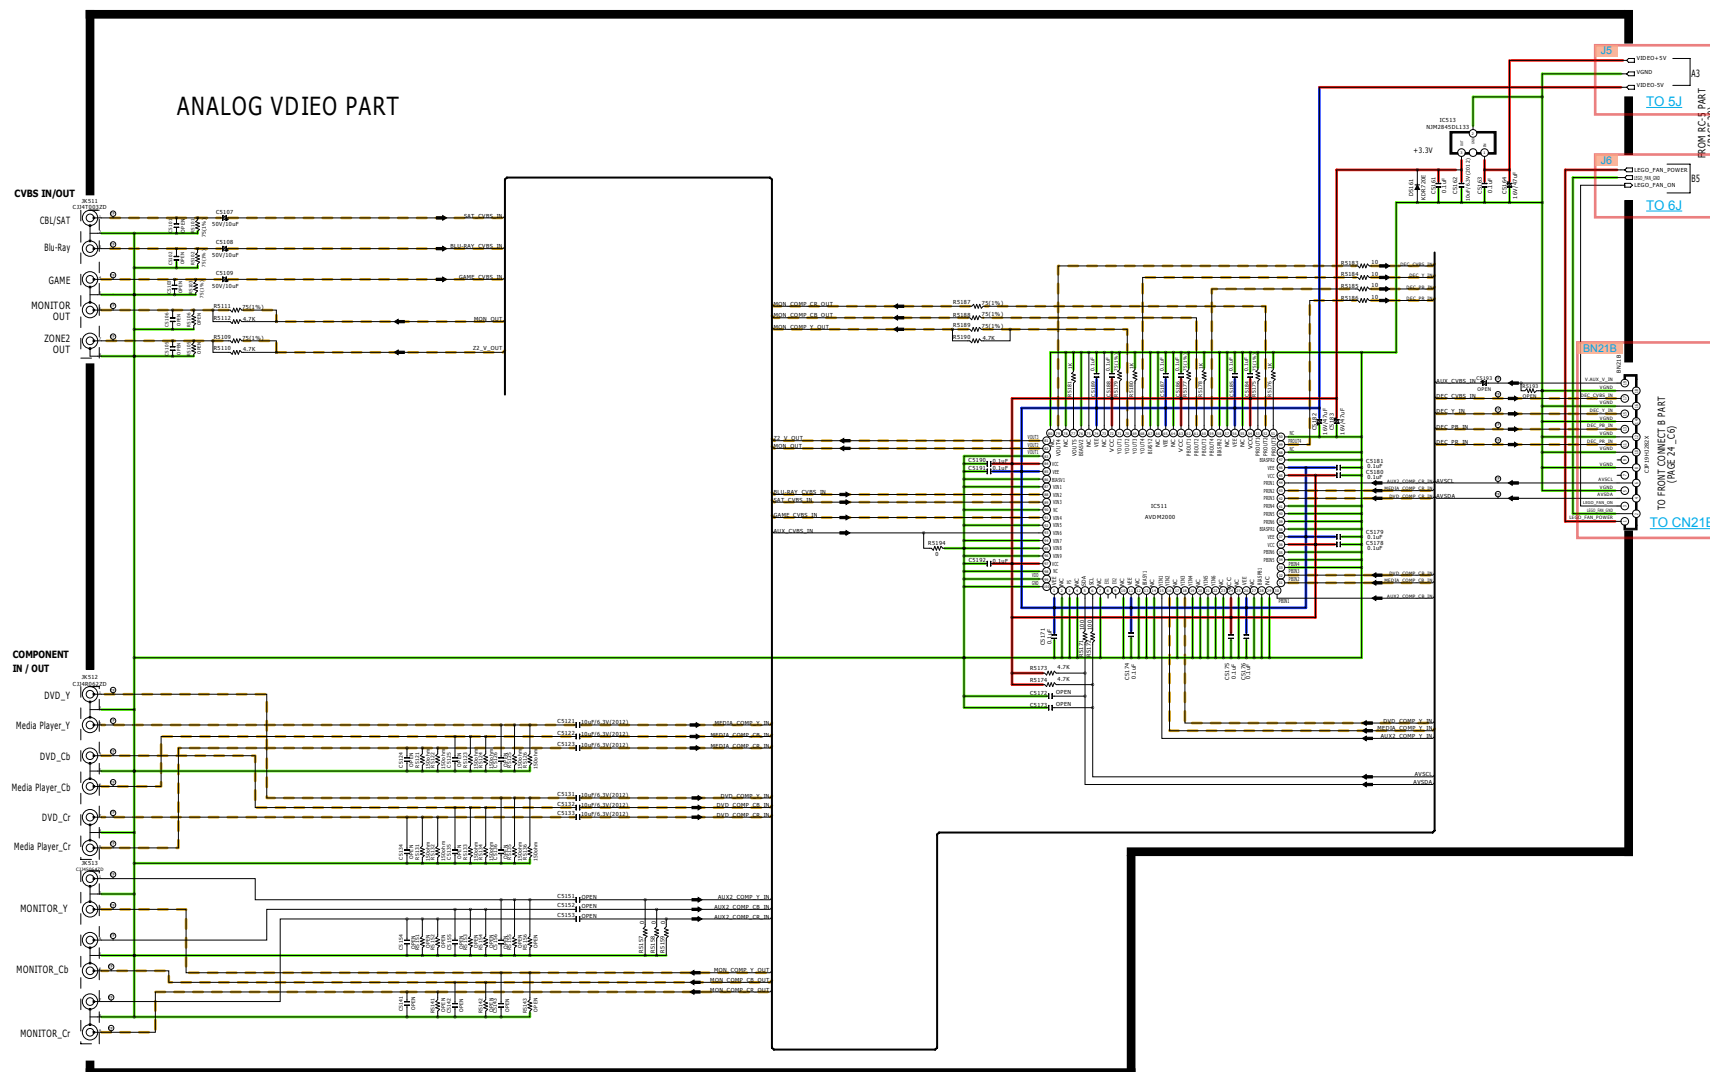


## RC-5

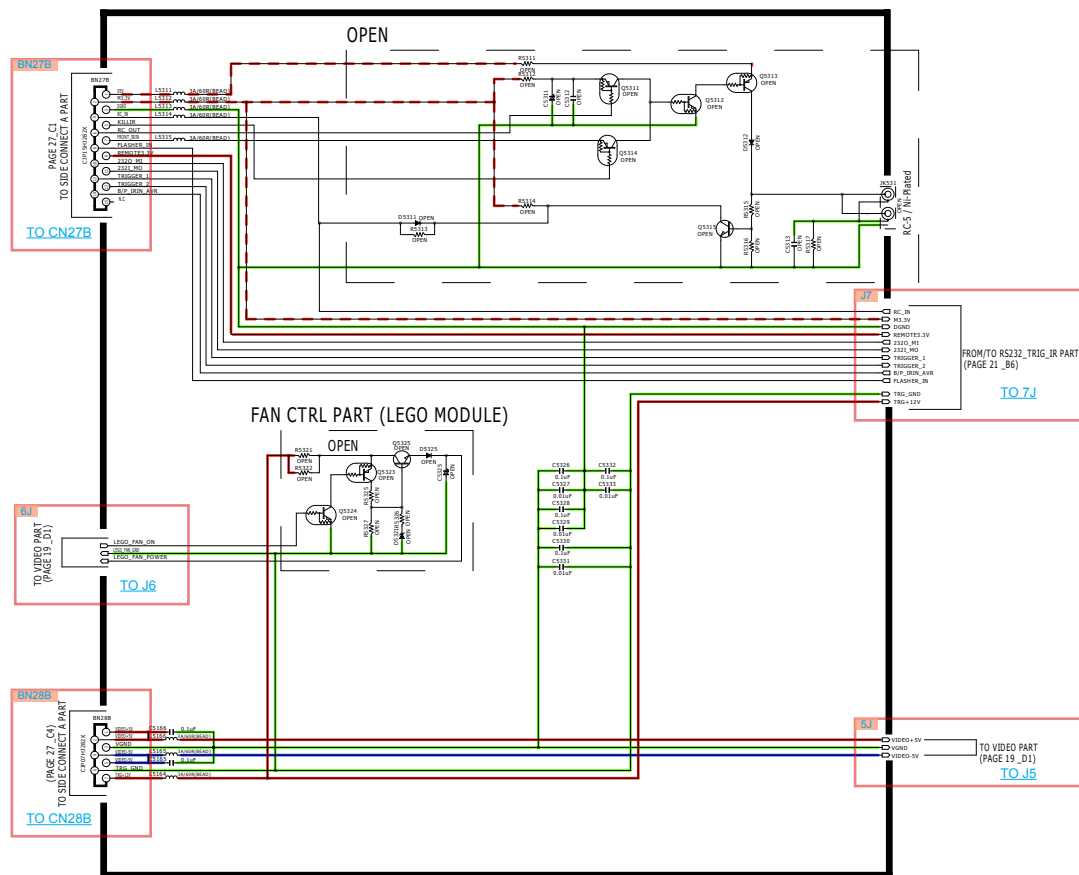

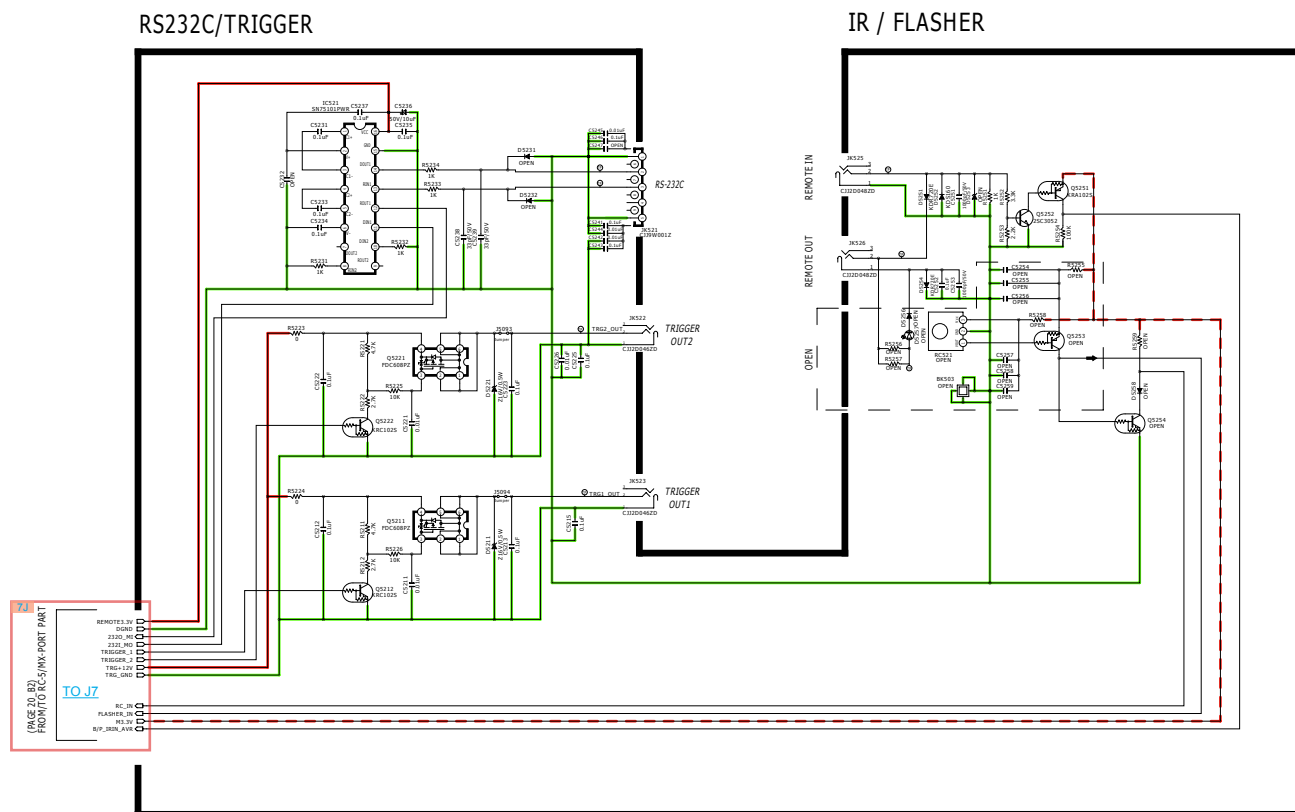


GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

## SIDE CNT\_CUP12921Z(CONNECT A)

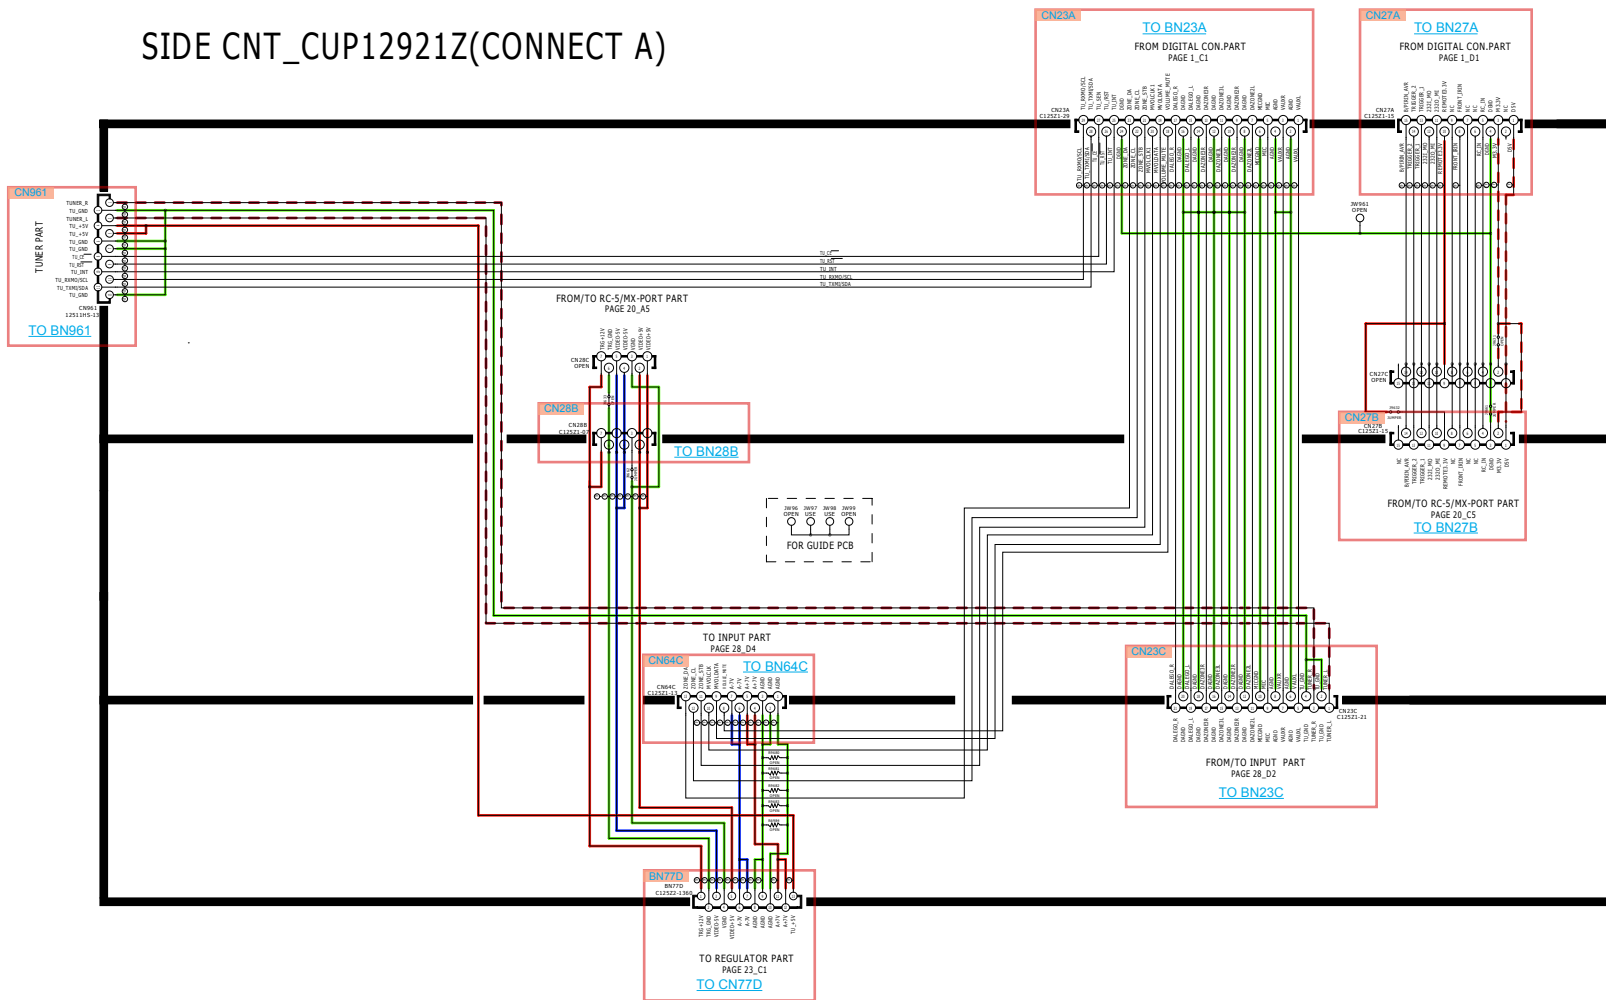



GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

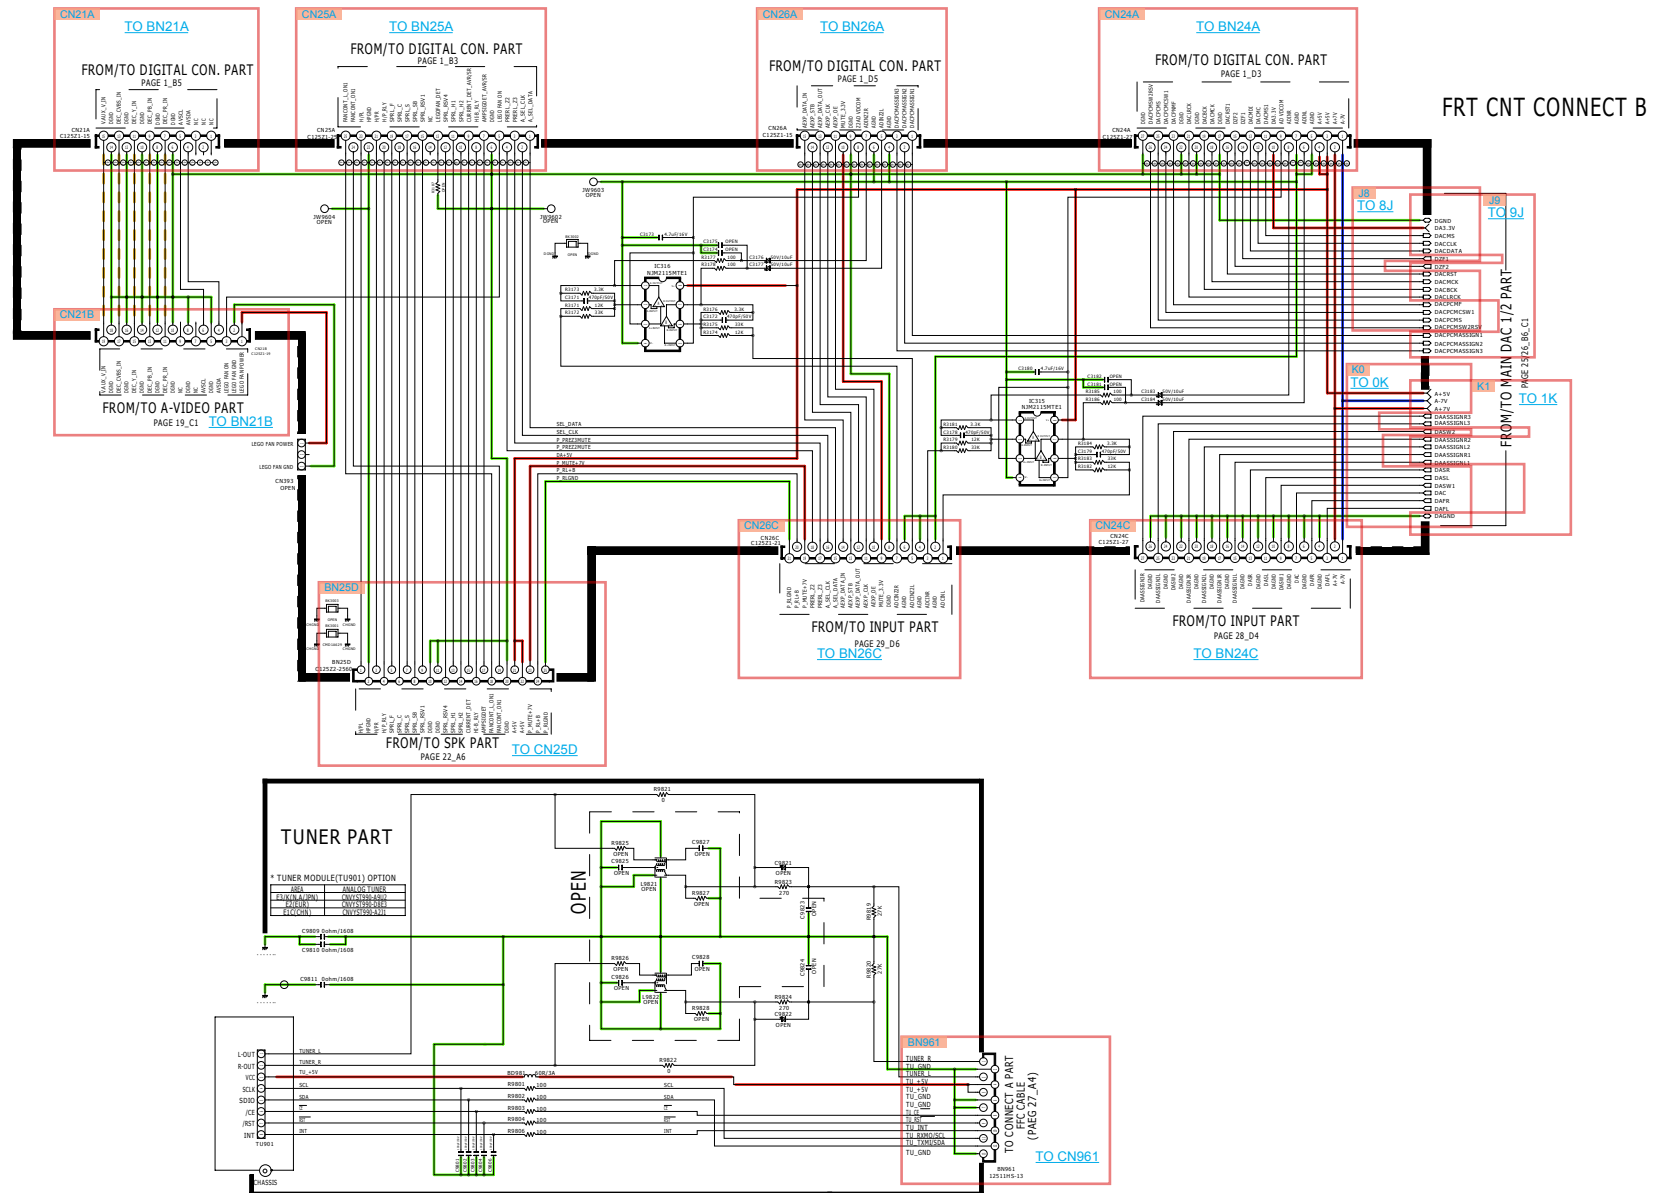


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER



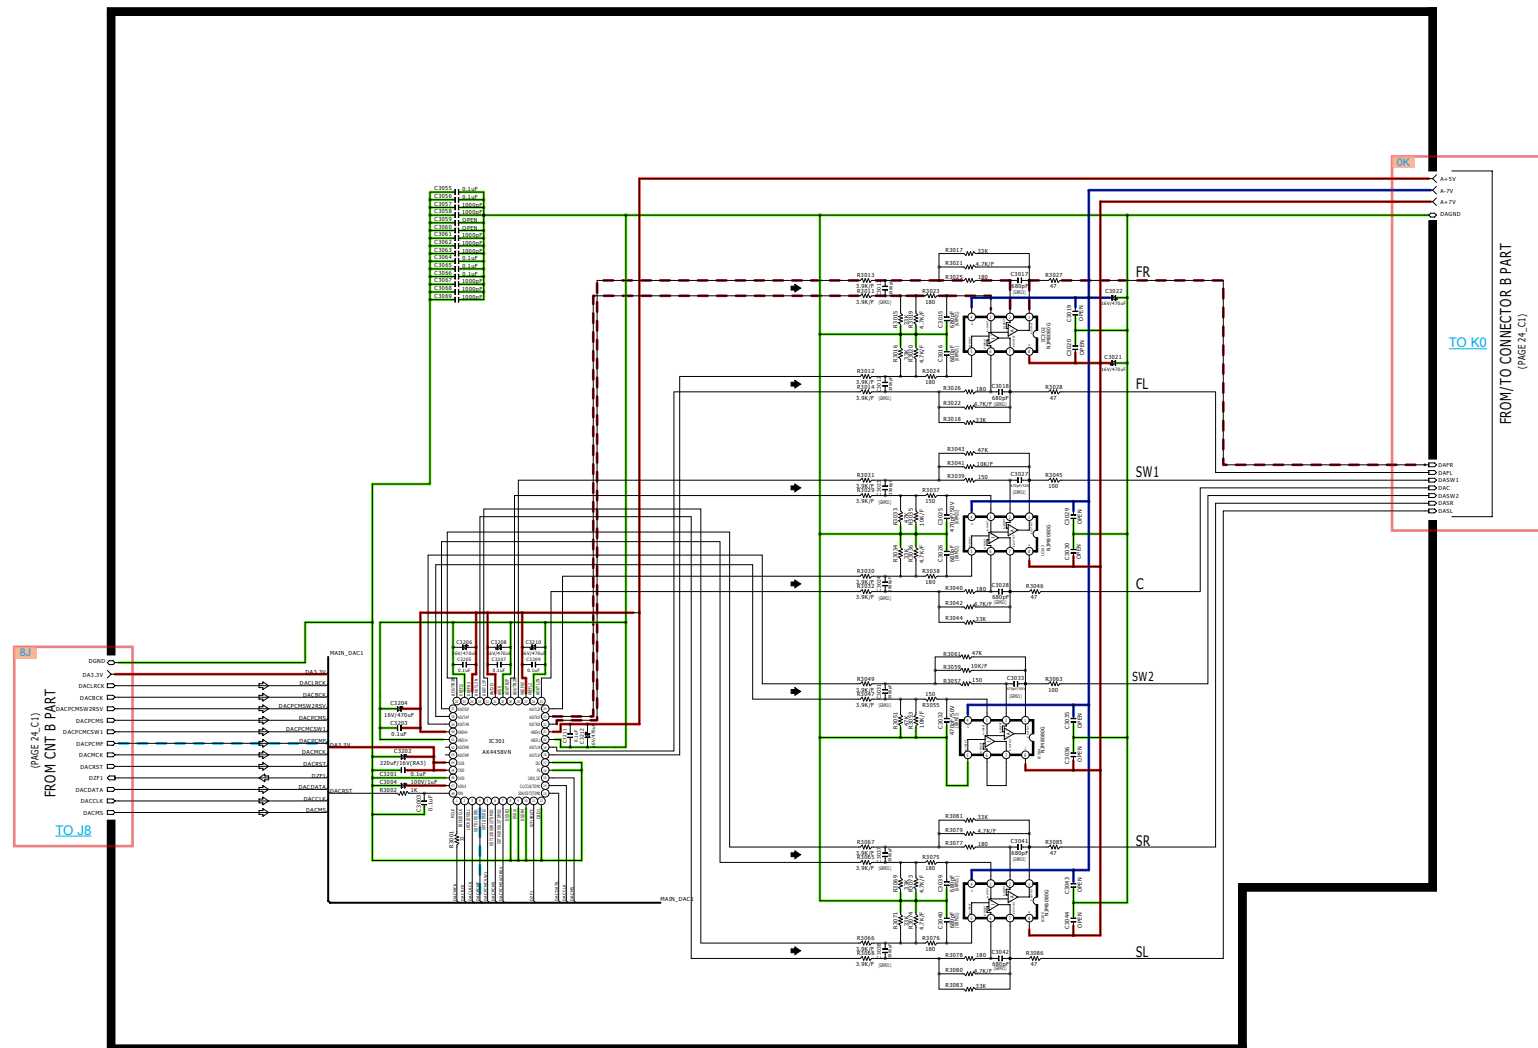


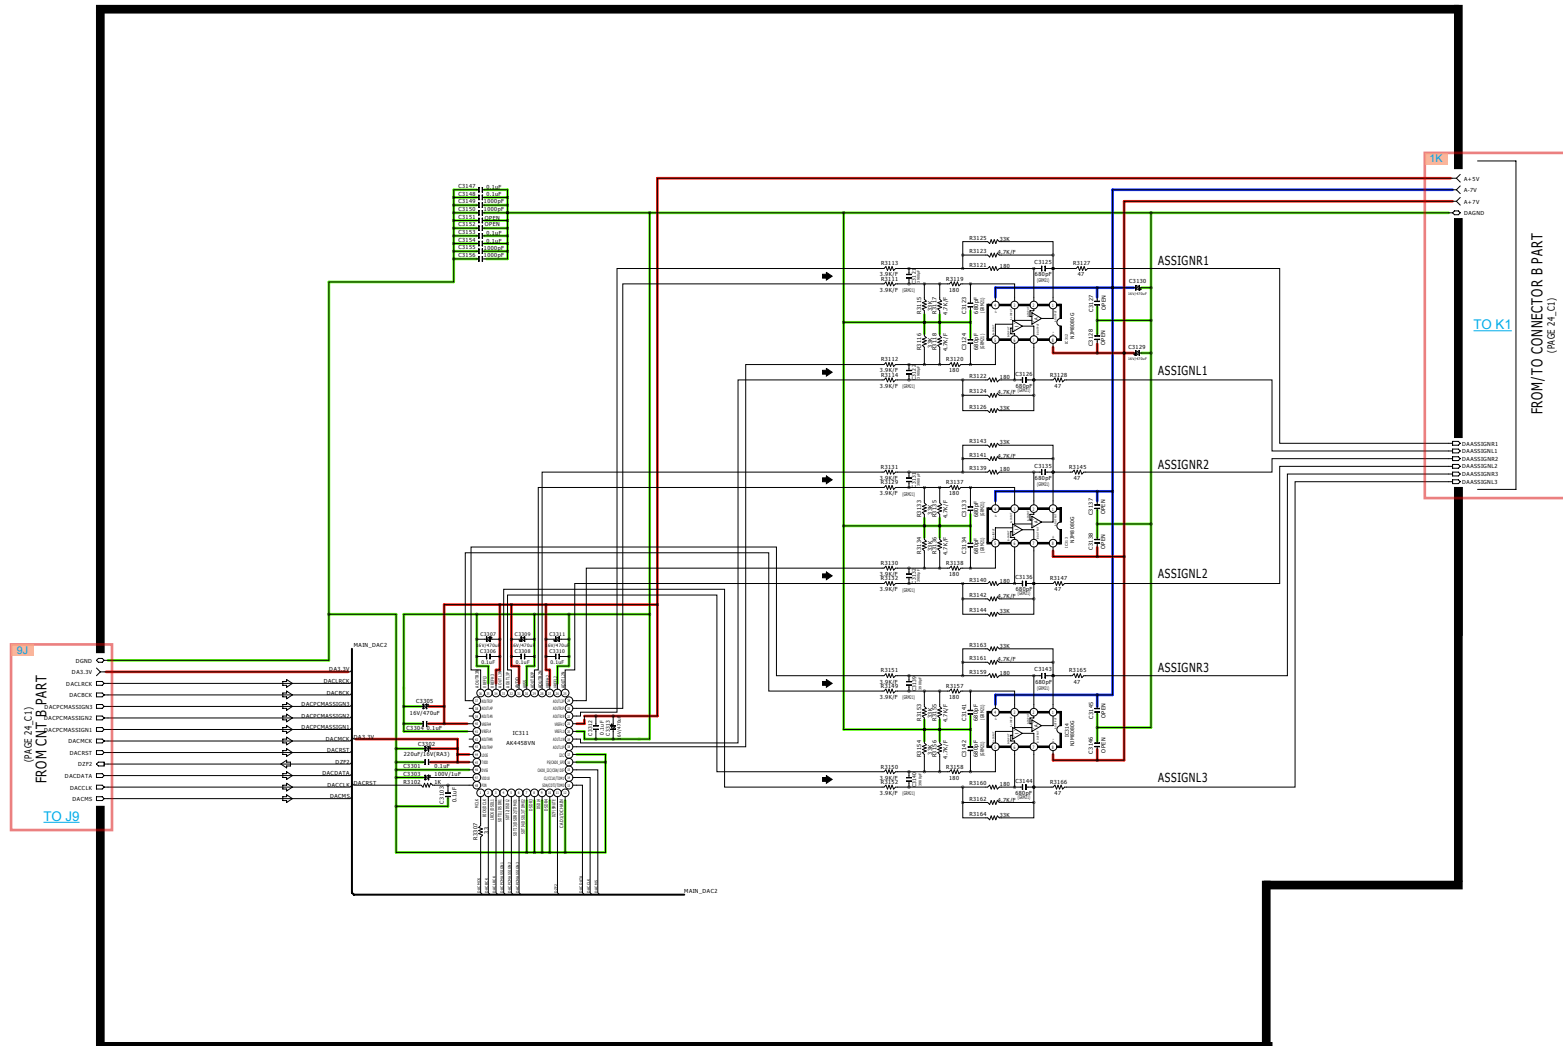



GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

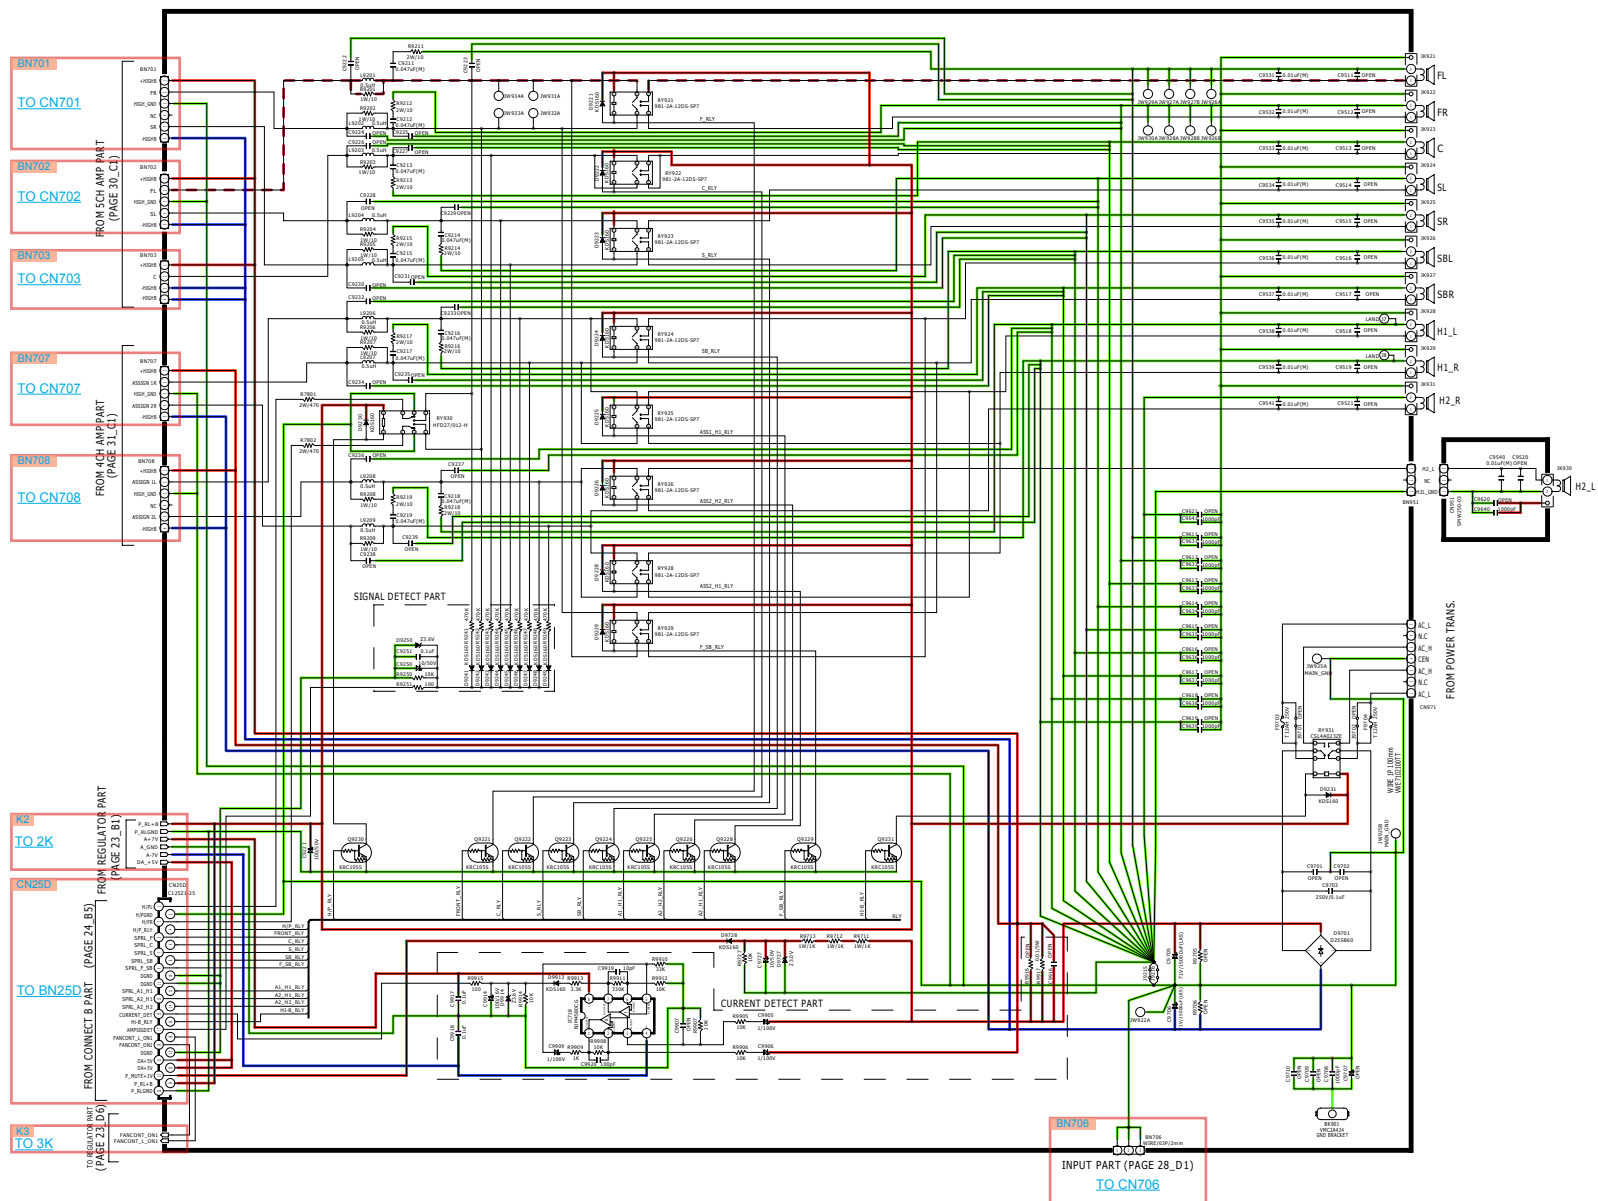


GND LINE POWER+ LINE POWER- LINE ANALOG AUDIO DIGITAL AUDIO TMD5 SIGNAL ANALOG VIDEO DIGITAL VIDEO STBY POWER

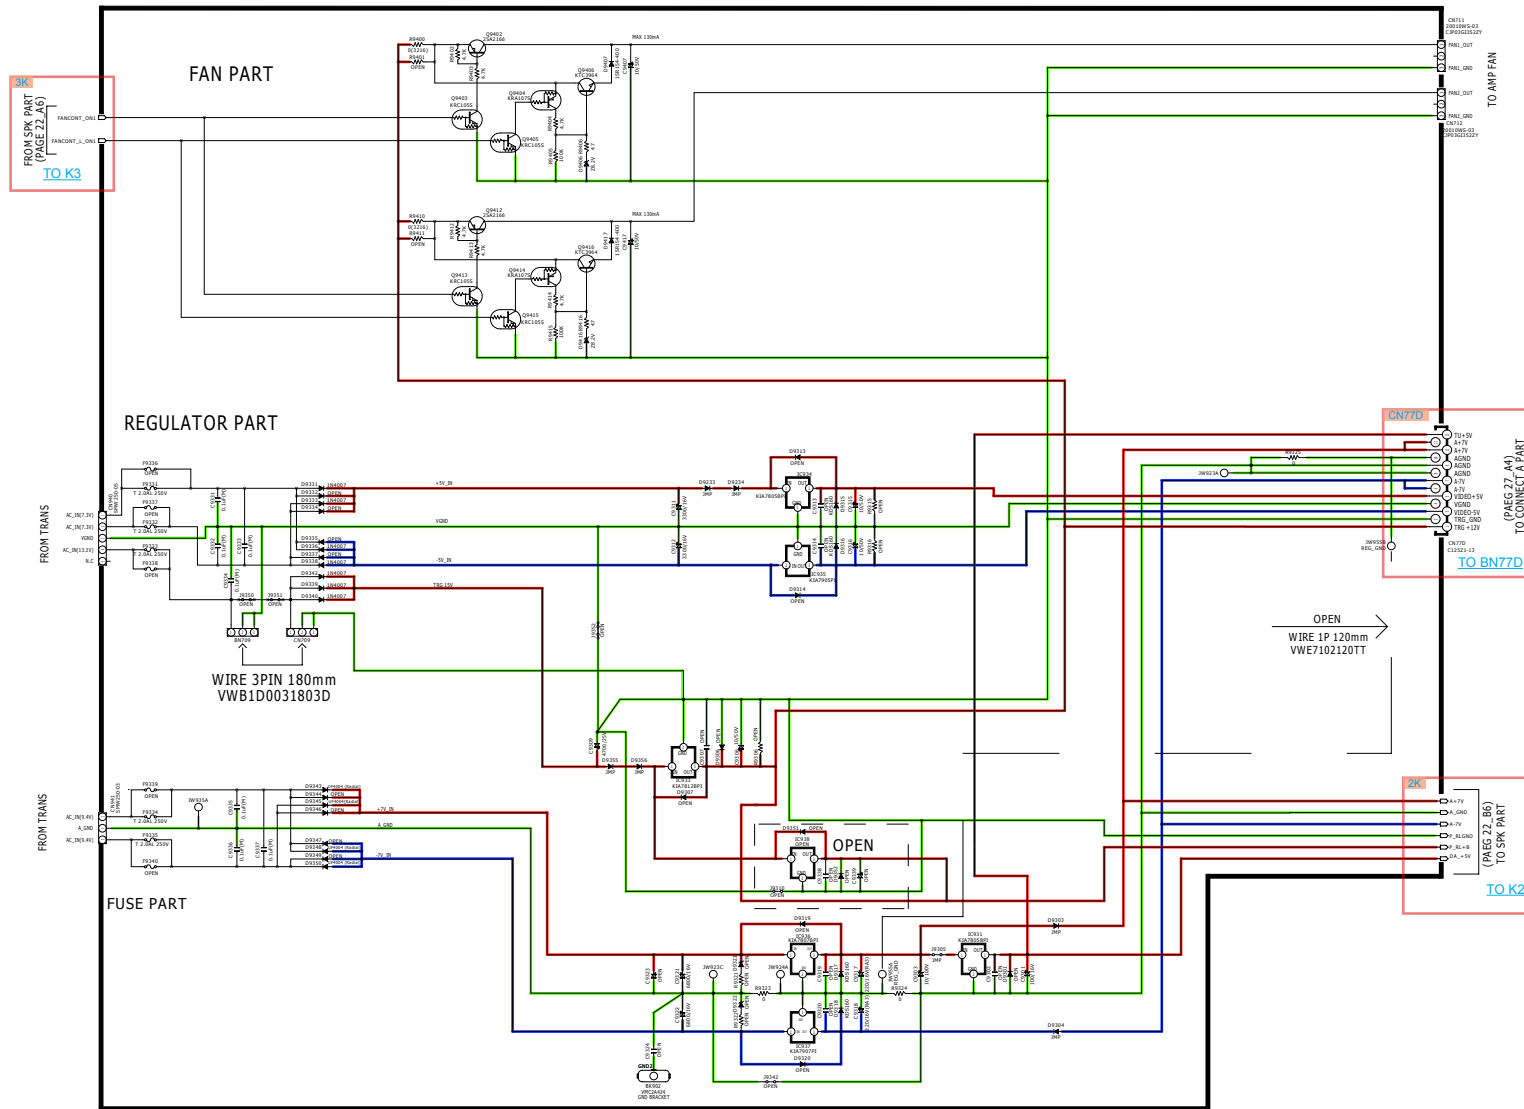


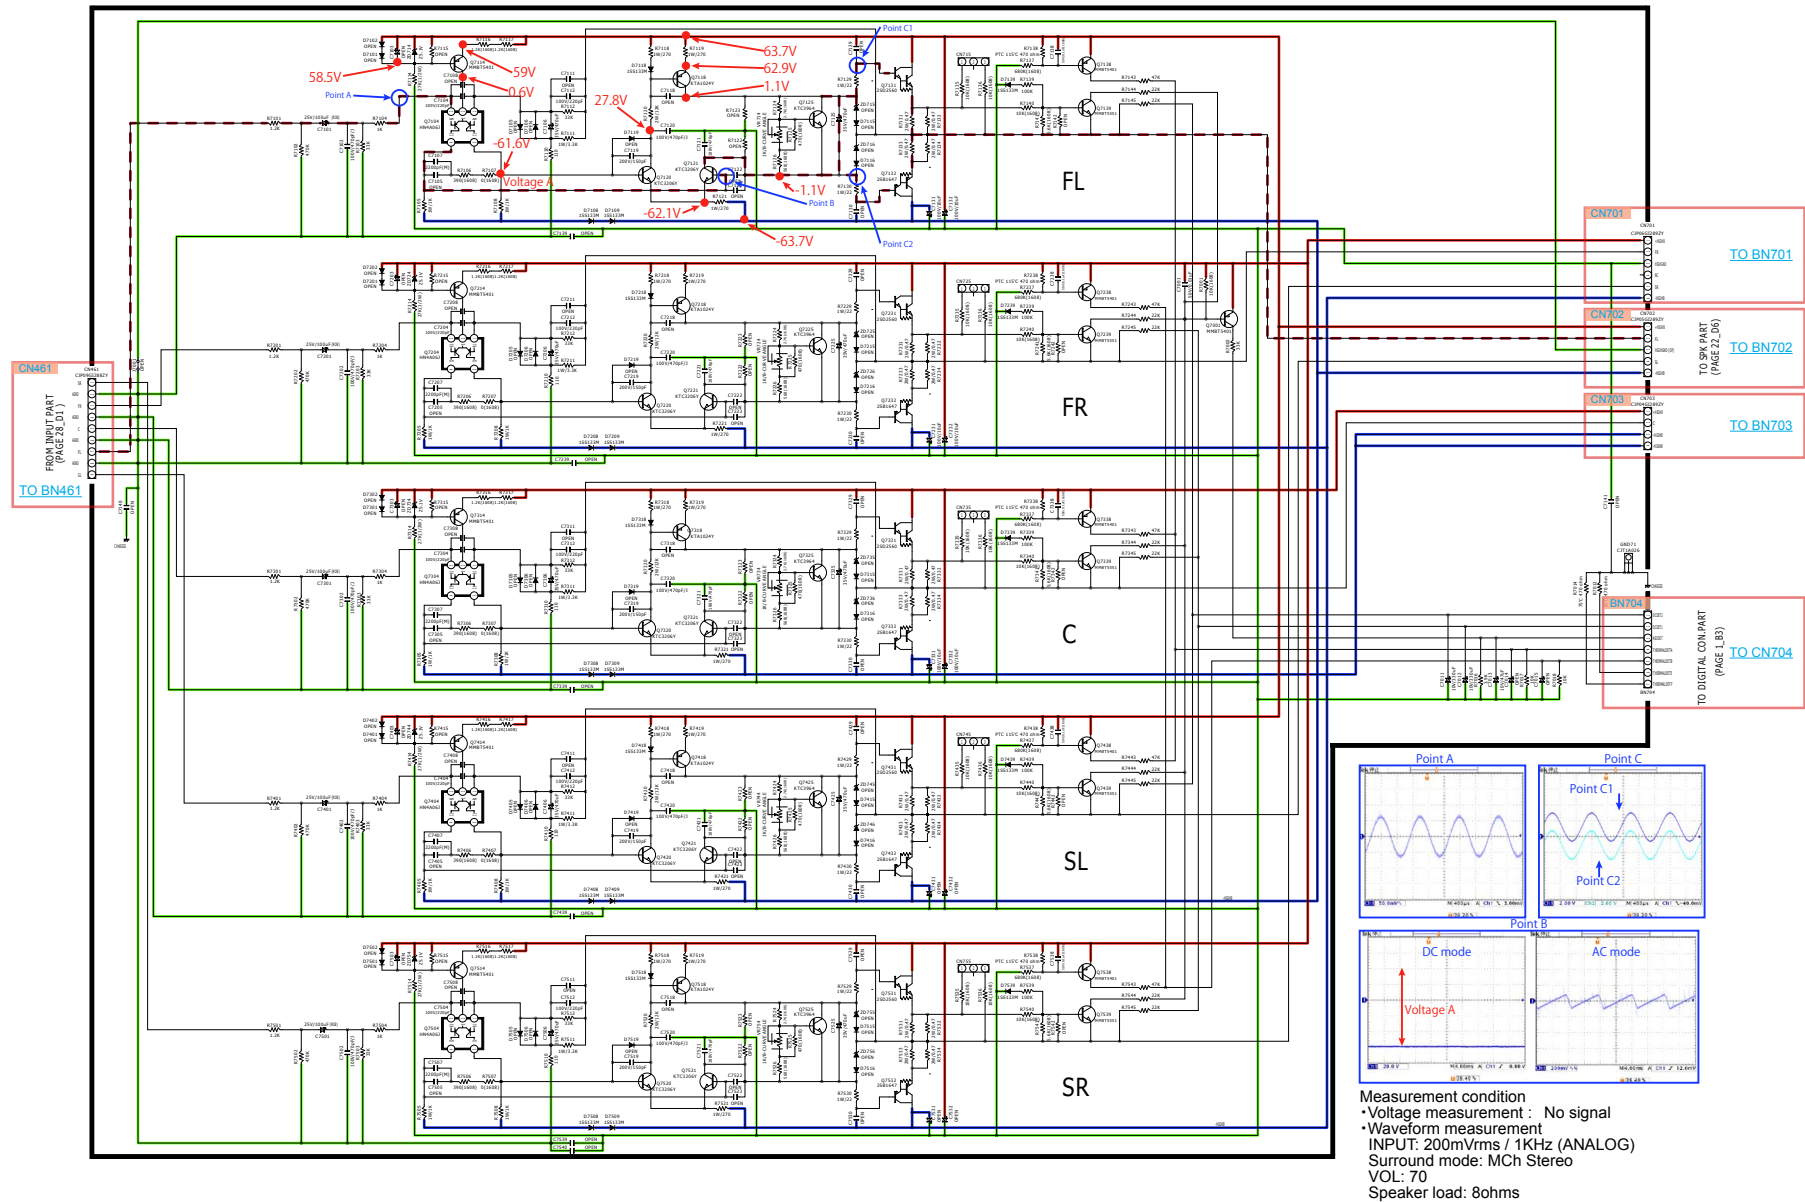

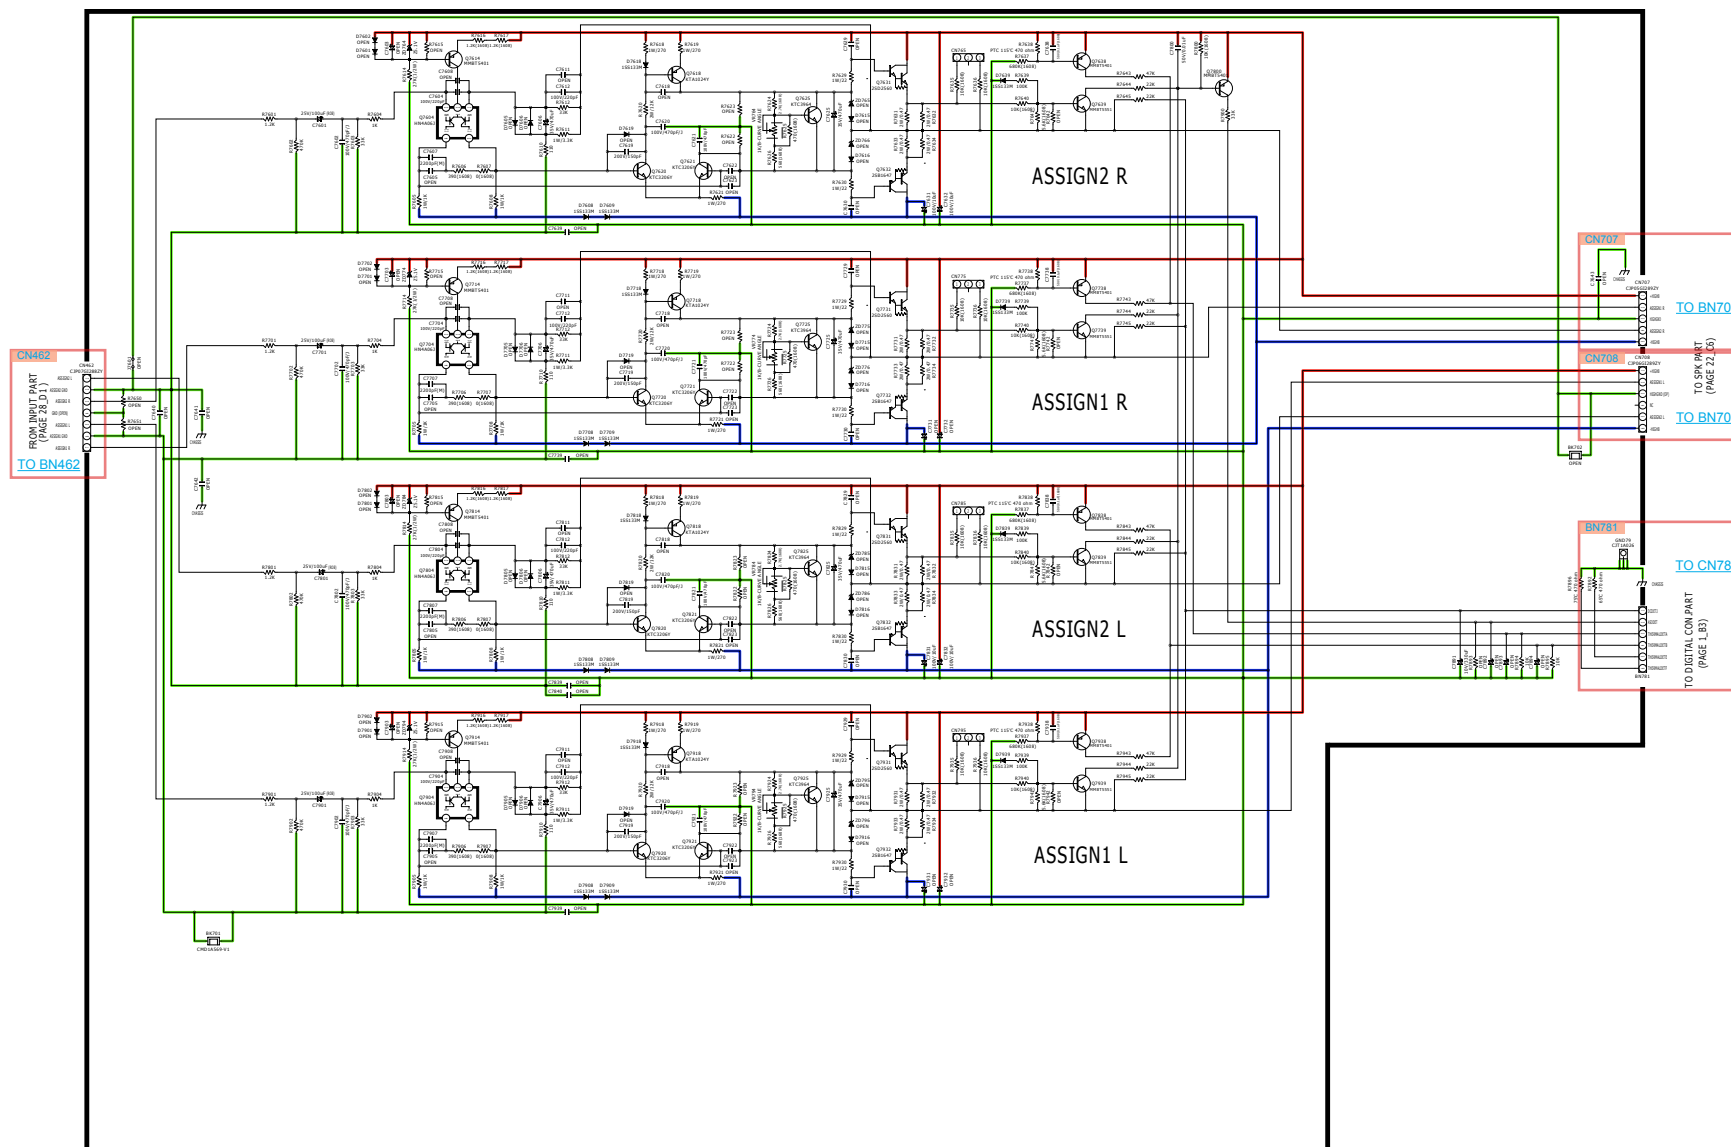

GND LINE    POWER+ LINE    POWER- LINE    ANALOG AUDIO    DIGITAL AUDIO    TMDS SIGNAL    ANALOG VIDEO    DIGITAL VIDEO    STBY POWER

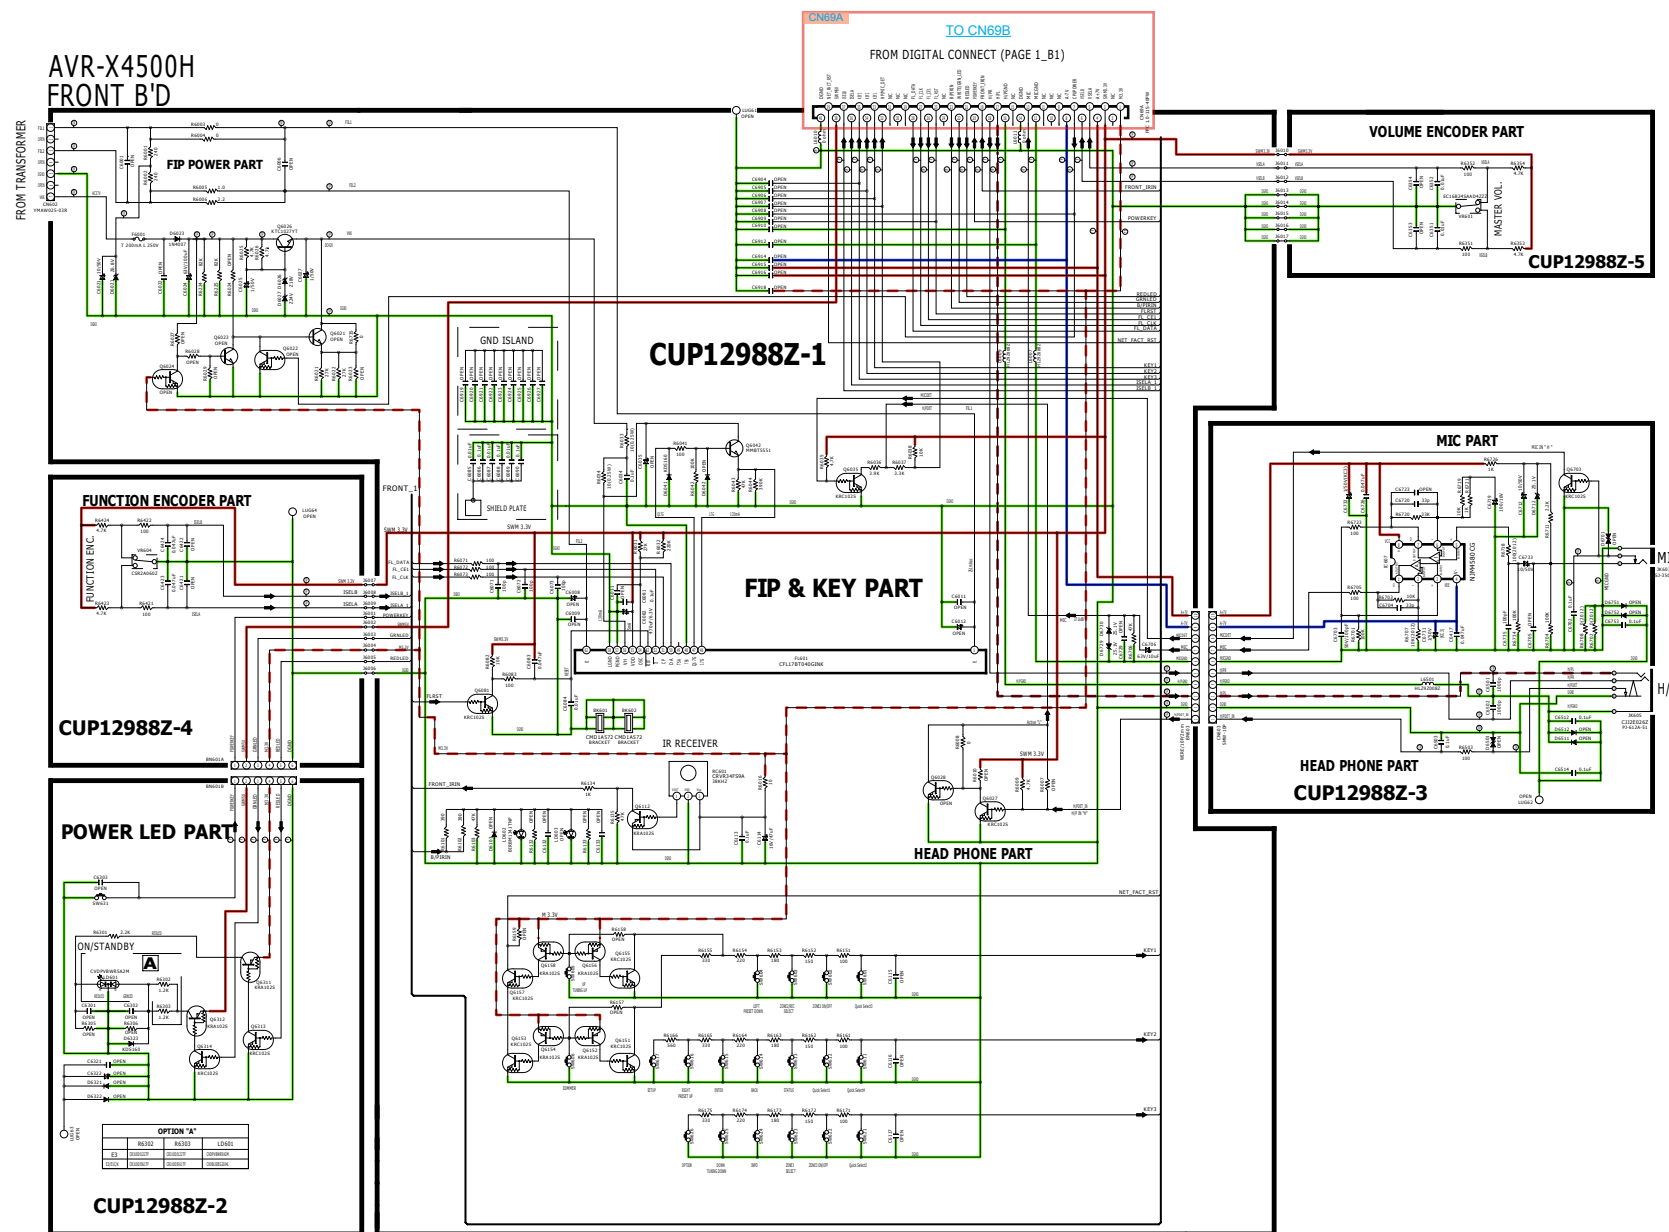

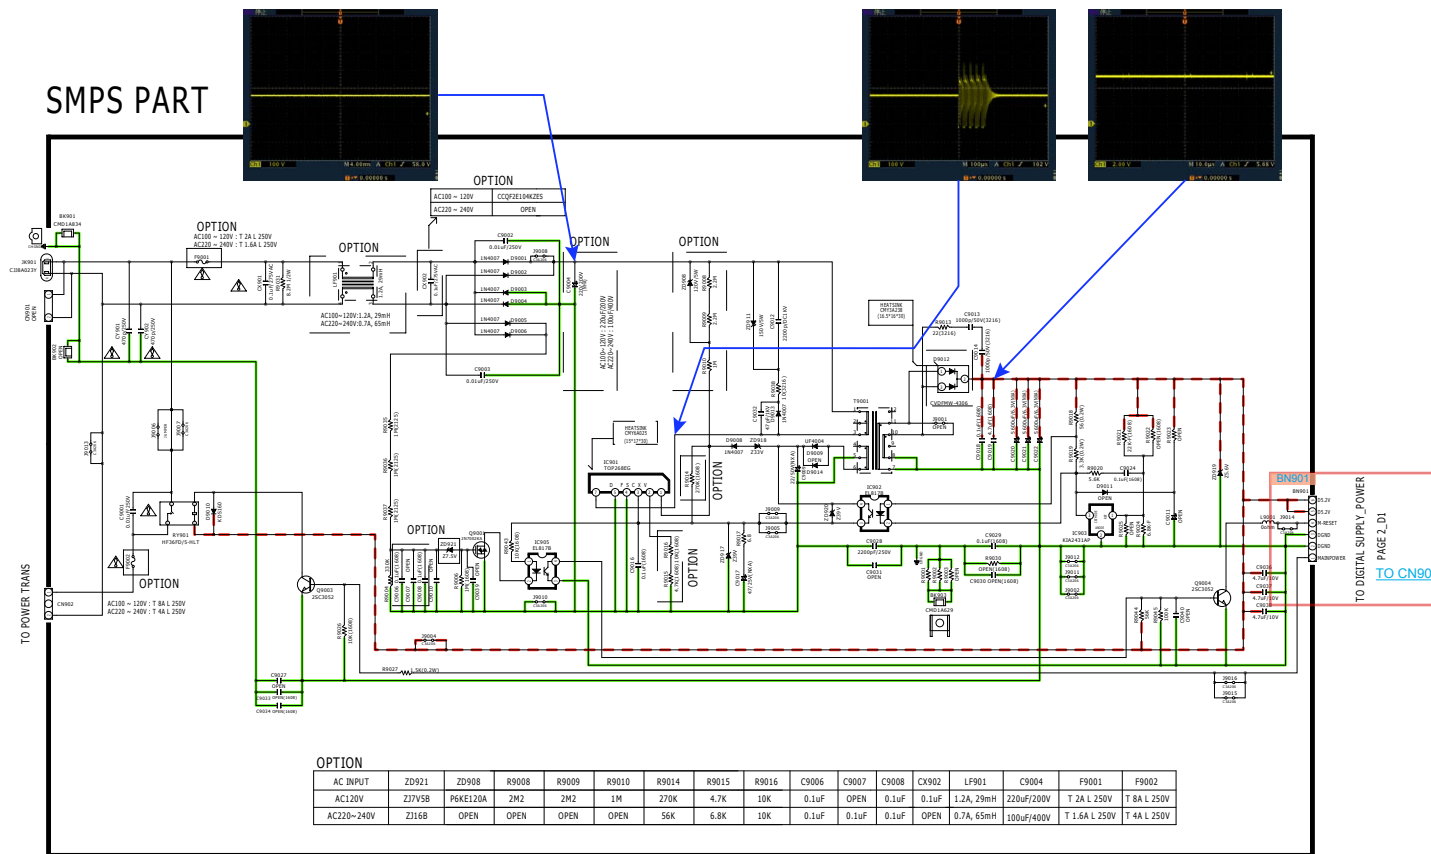


— GND LINE   
 — POWER+ LINE   
 — POWER- LINE   
 — ANALOG AUDIO   
 — DIGITAL AUDIO   
 — TMDS SIGNAL   
 — ANALOG VIDEO   
 — DIGITAL VIDEO   
 — STBY POWER




### Lead-free Solder



When soldering, use the Lead-free Solder (Sn-Ag-Cu).

DIGITAL (A SIDE)

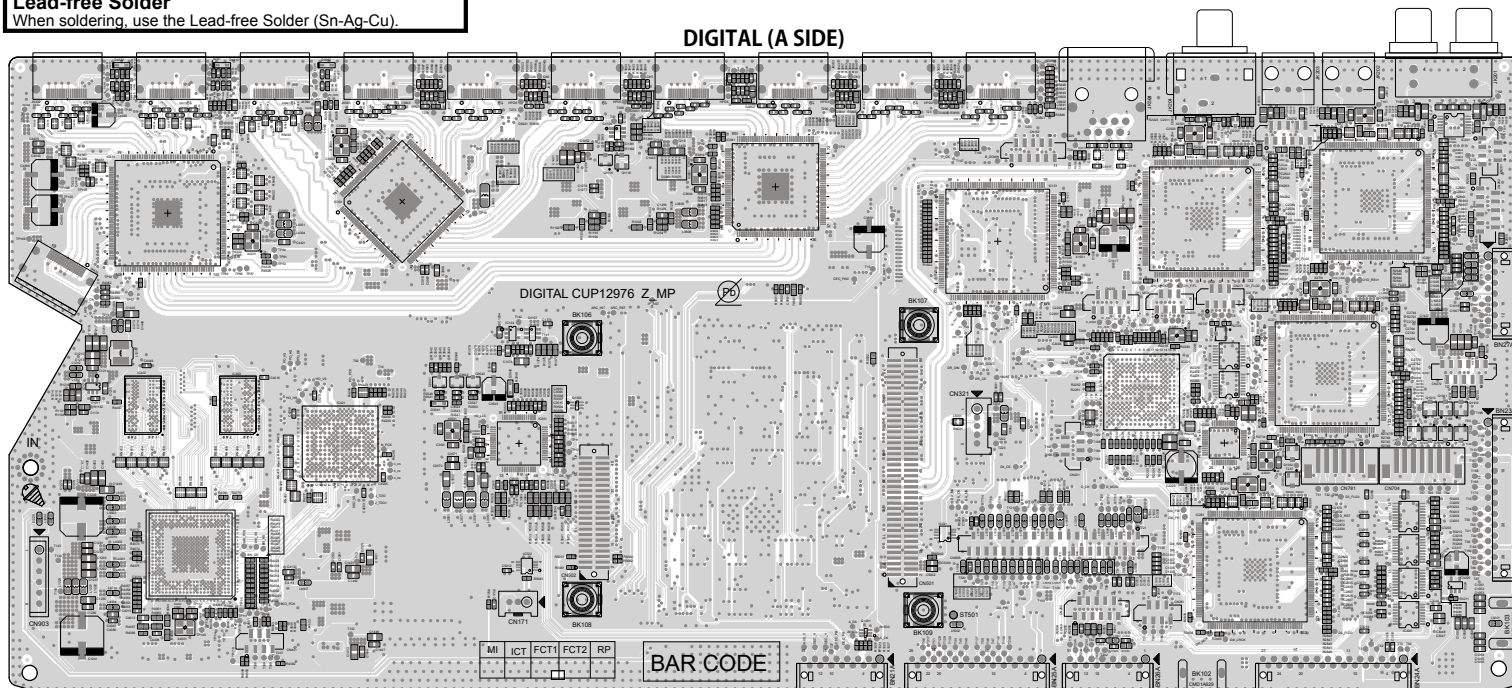


DIGITAL (B SIDE)

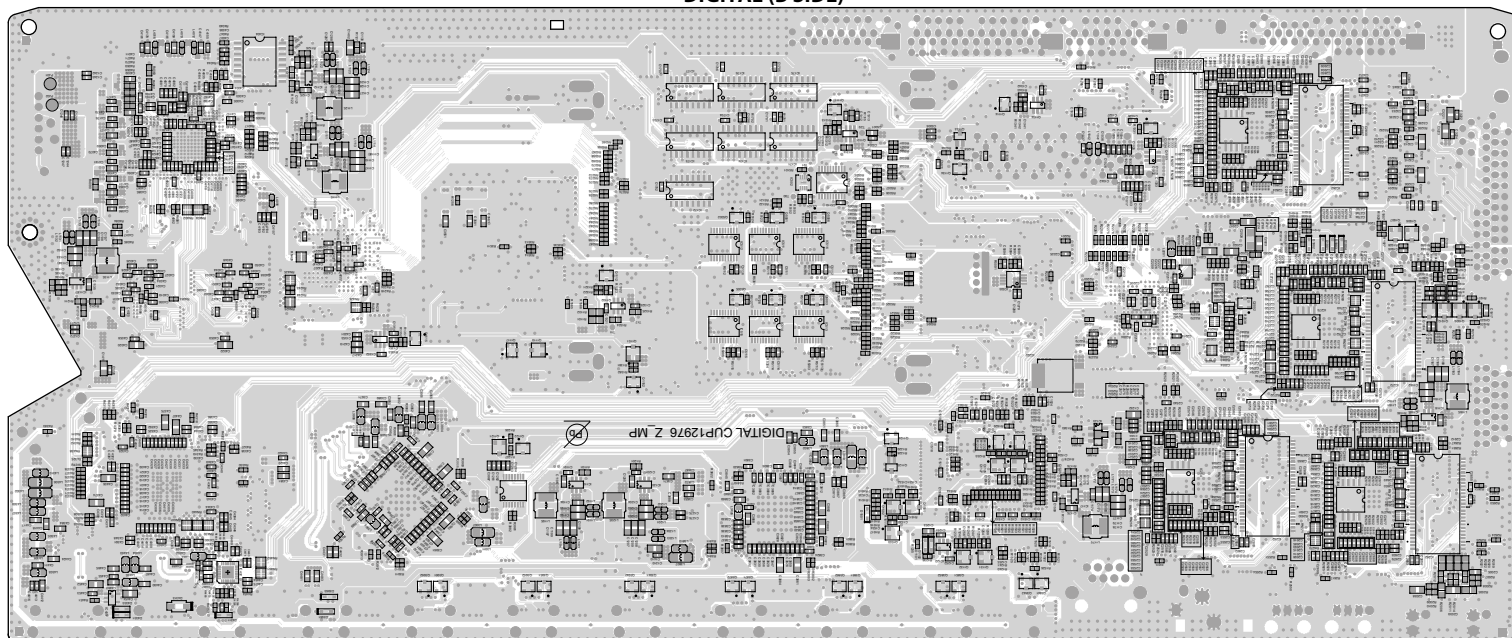


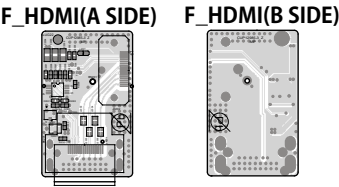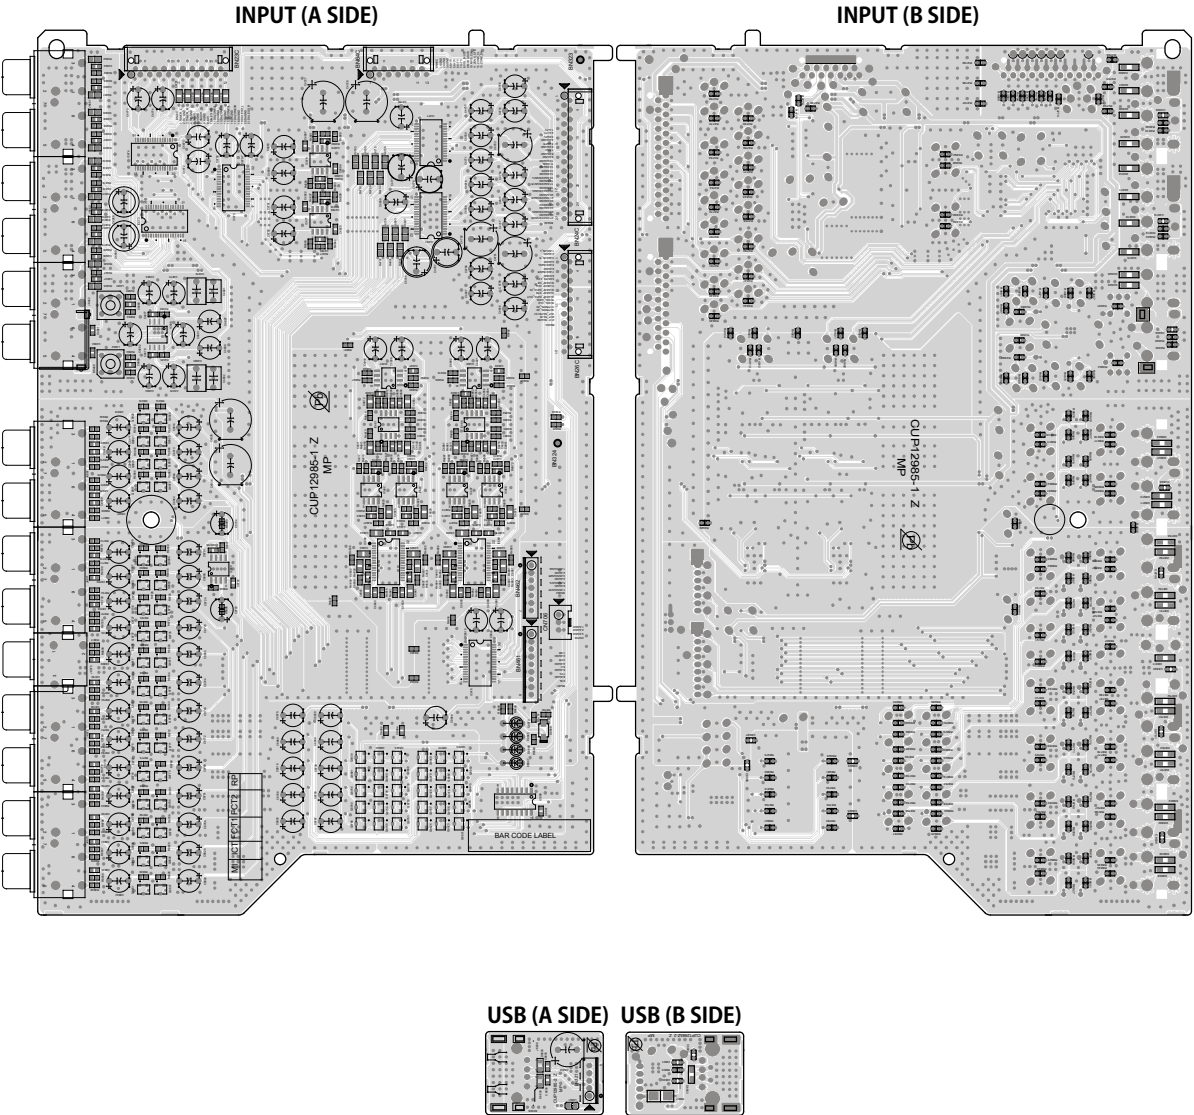


VIDEO (A SIDE)

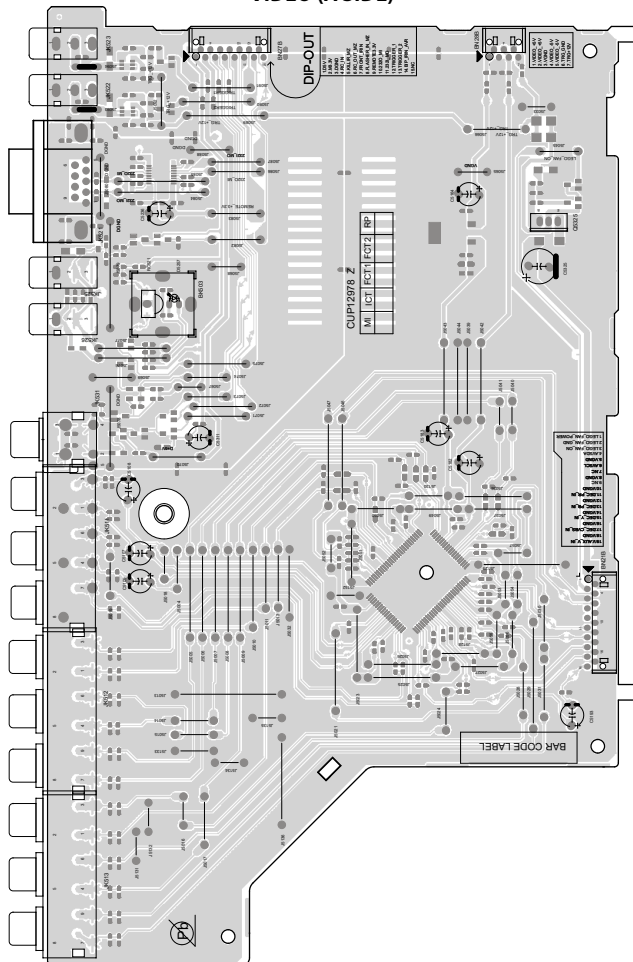


VIDEO (B SIDE)

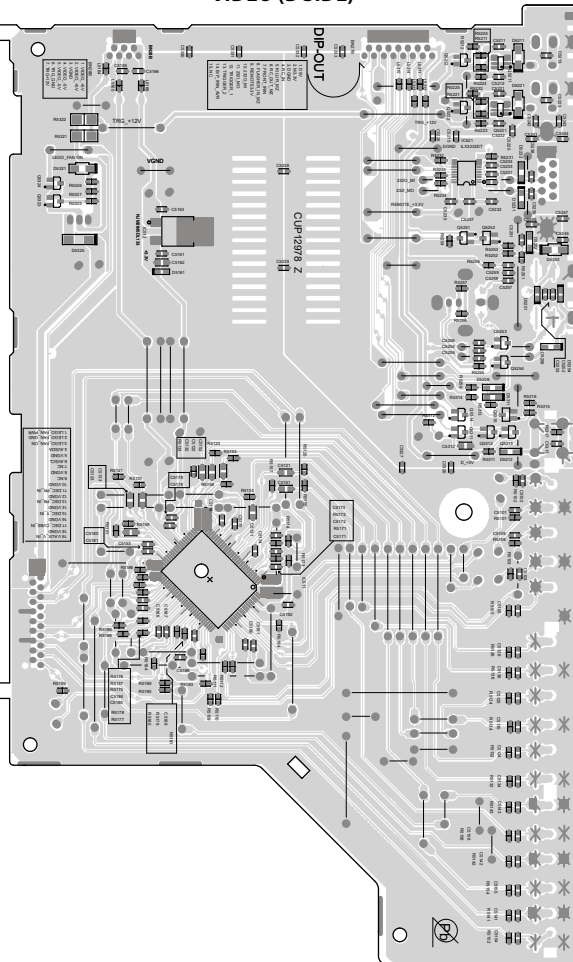


SIDE CNT (A SIDE)

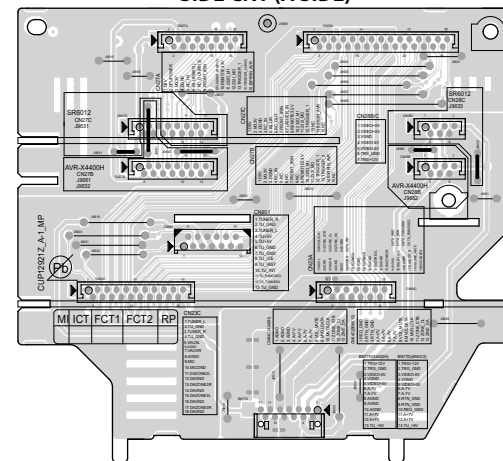


SIDE CNT (B SIDE)

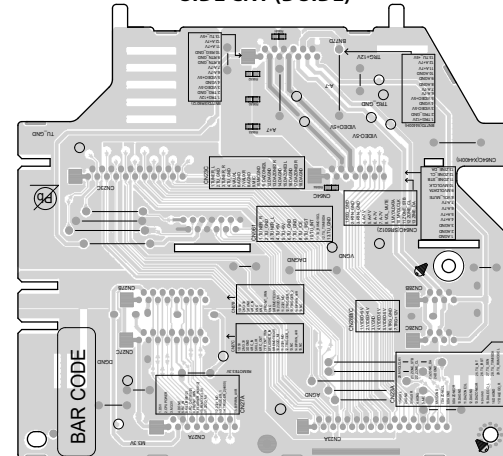

GUIDE (A SIDE)





FRONT CONT FFC (A SIDE)

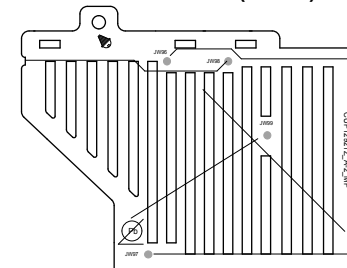





# SPK, SPK H2L, GUIDE TRANS, FRONT CONT FFC, GUIDE SIDE

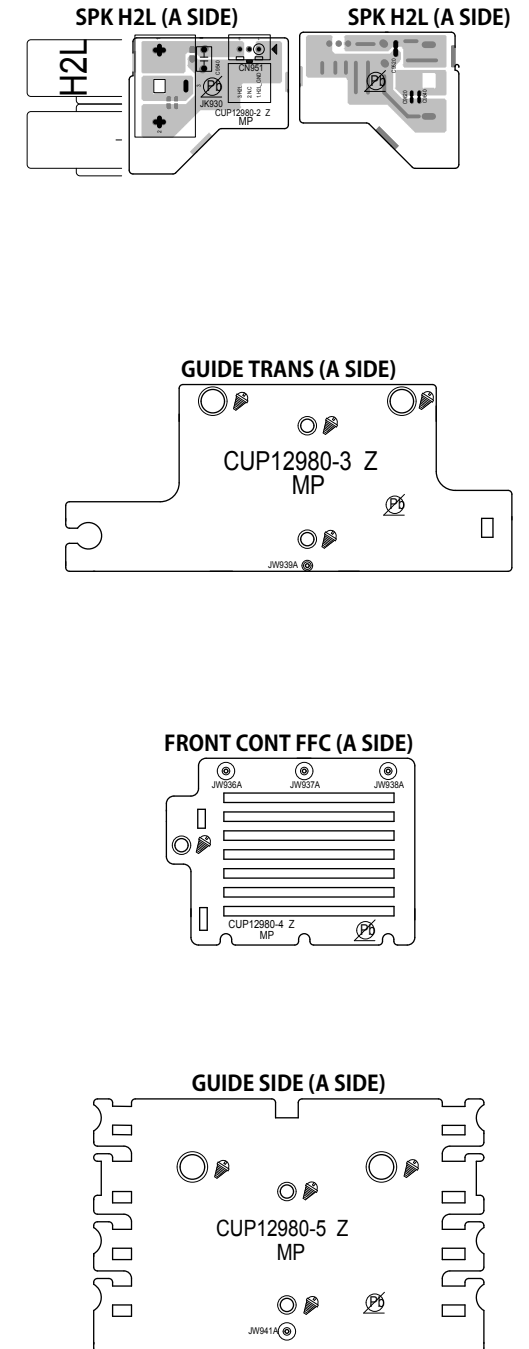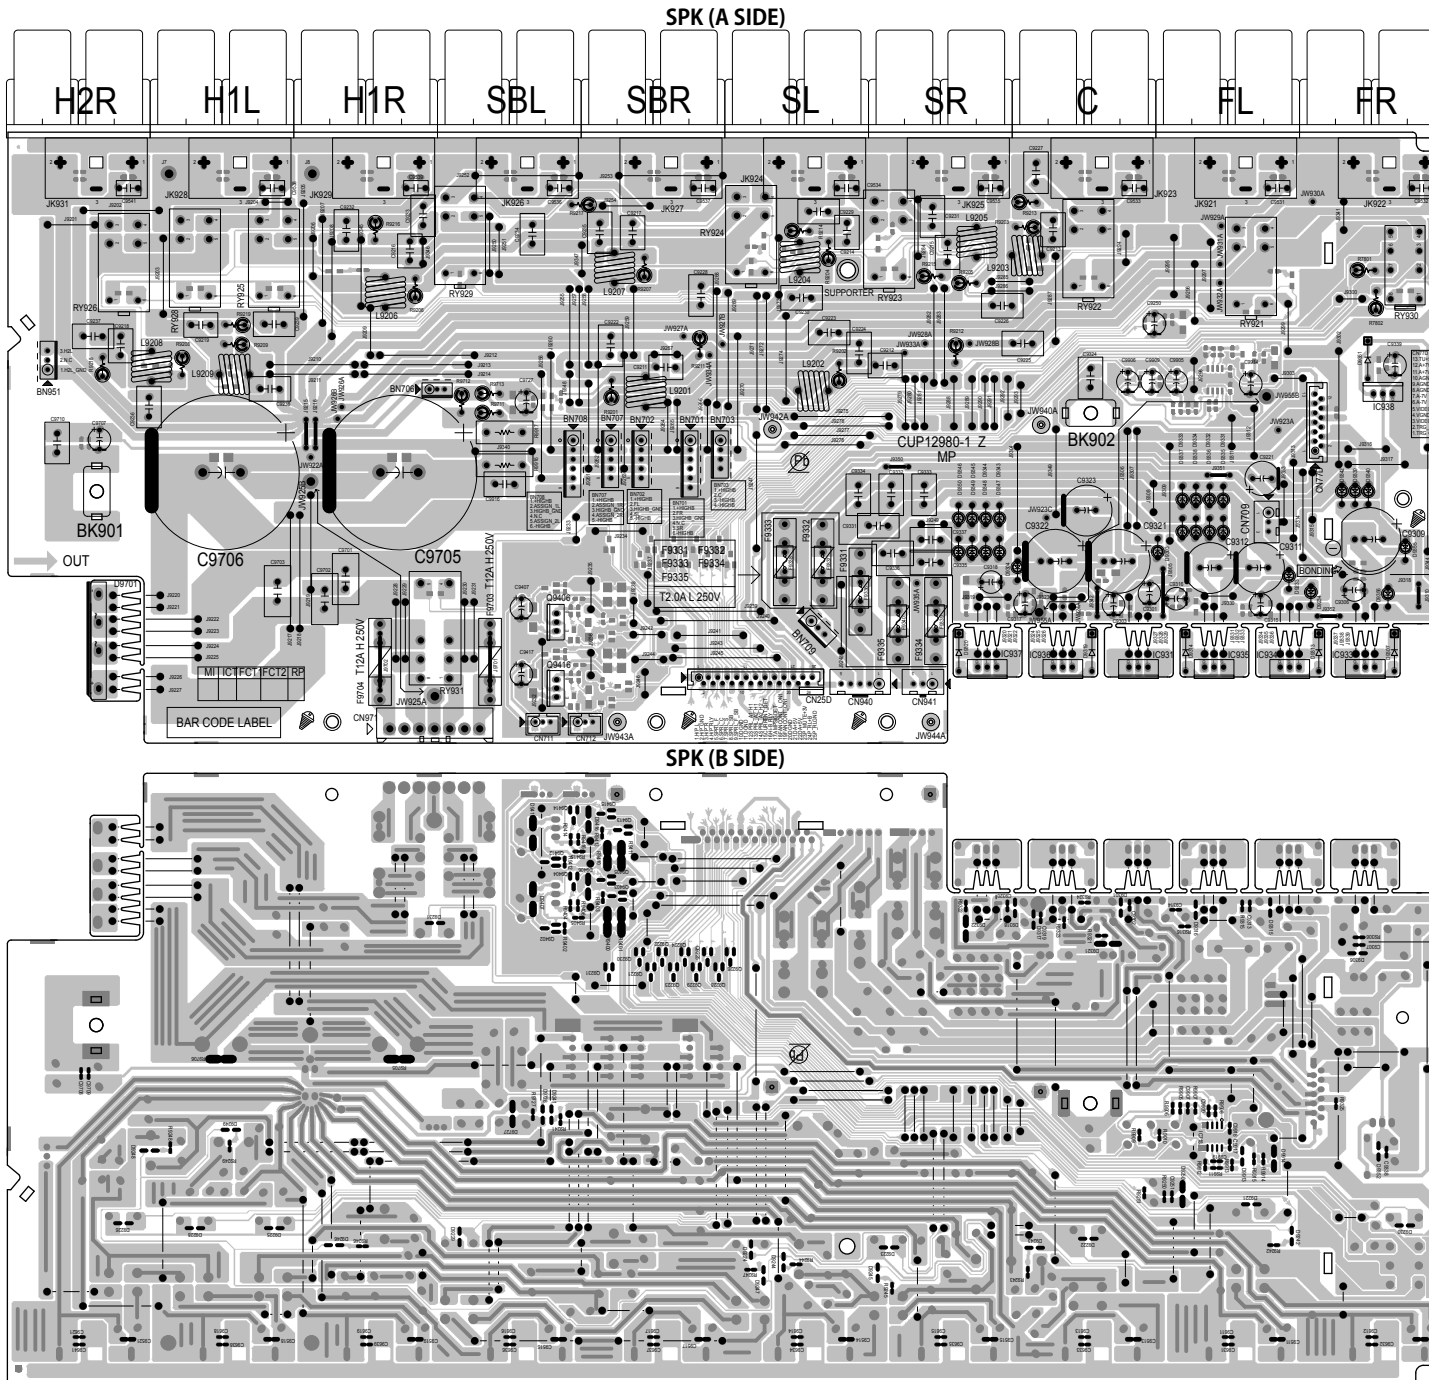


5CH AMP (A SIDE)

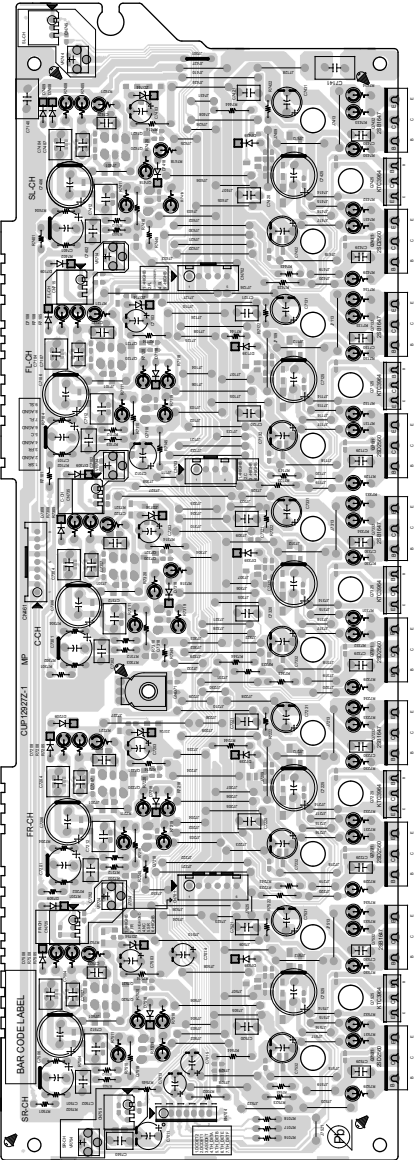


5CH AMP (B SIDE)






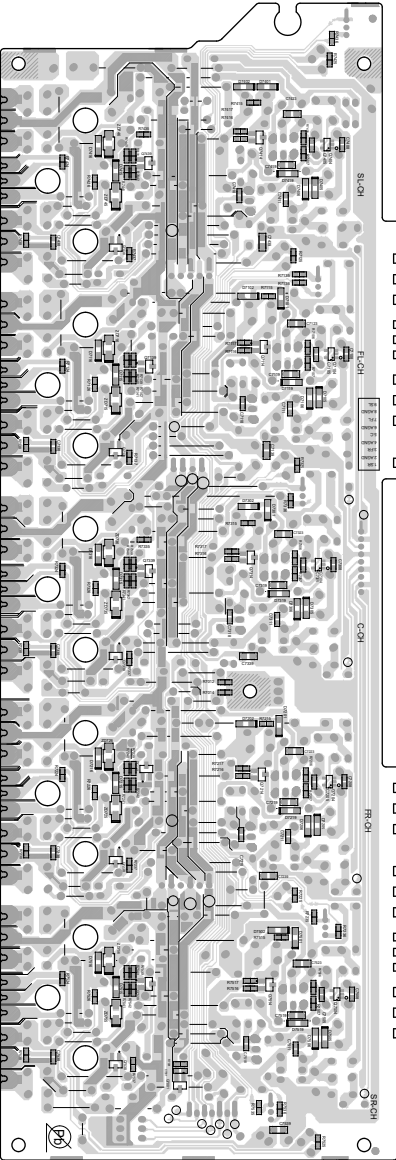


4CH AMP (A SIDE)

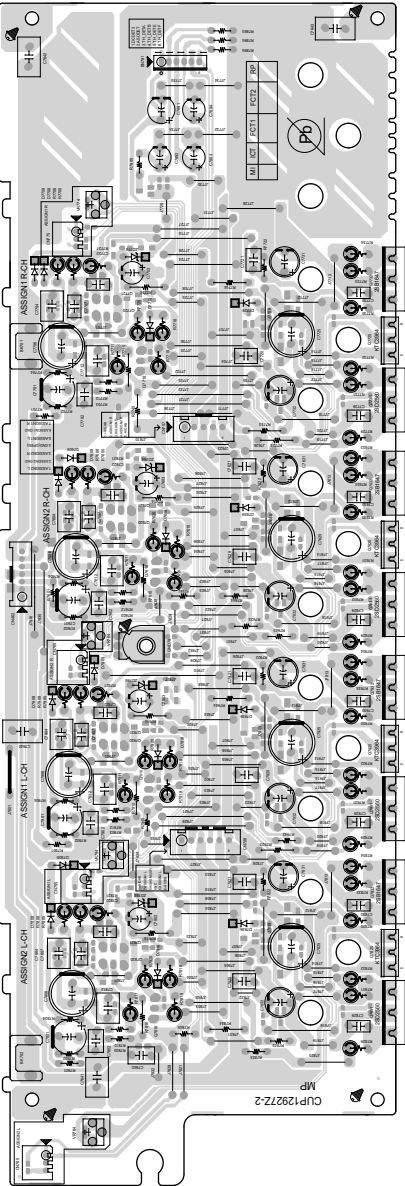








4CH AMP (B SIDE)

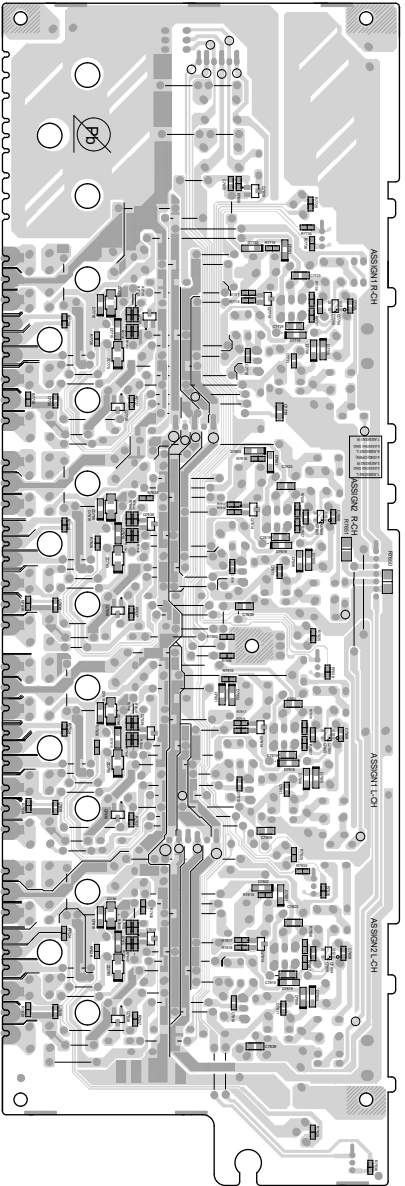

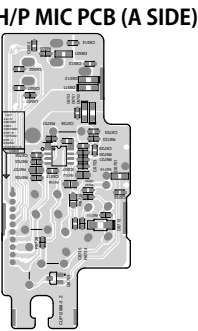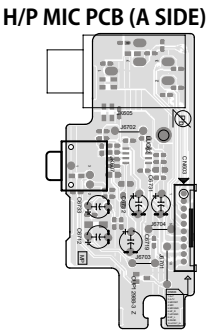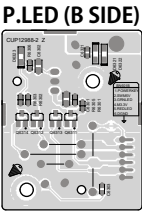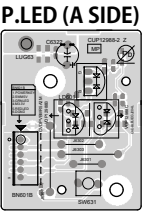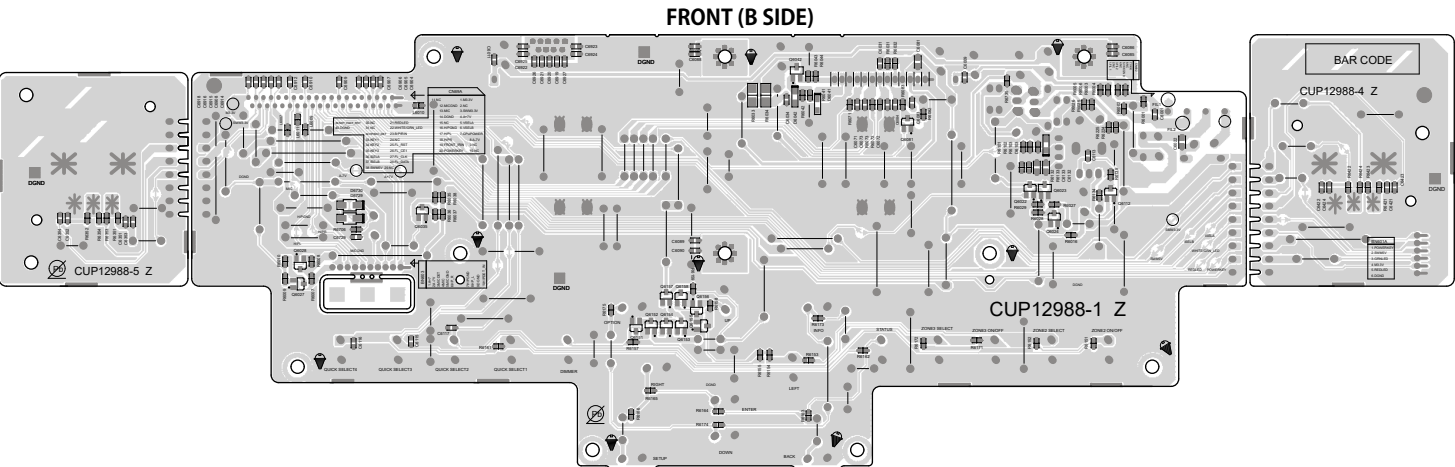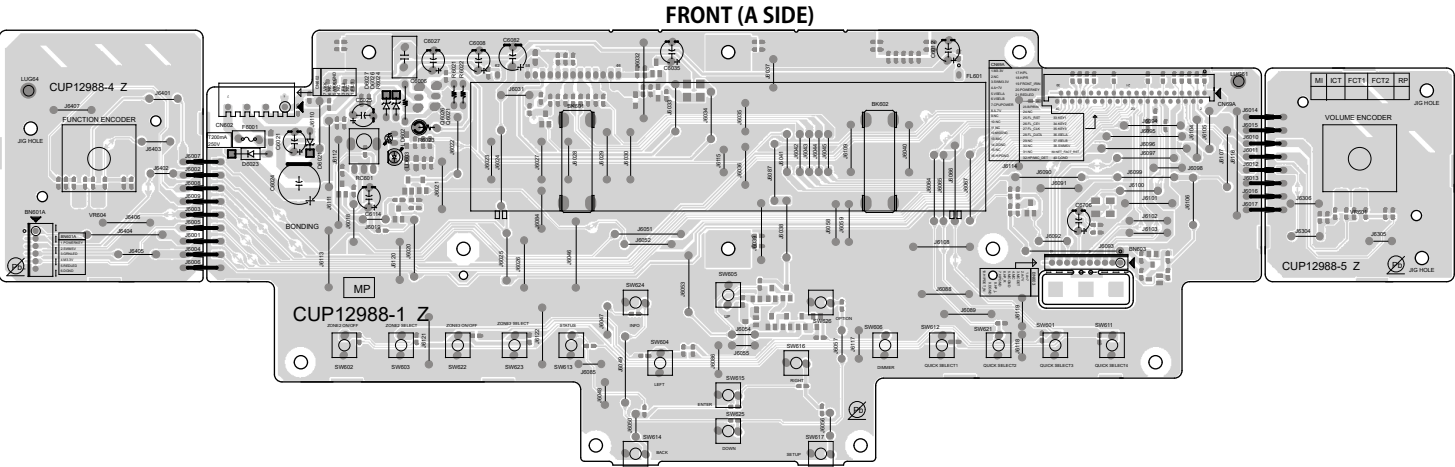





# FRONT CNT, TUNER, BKT, SMPS

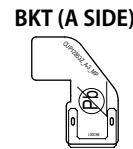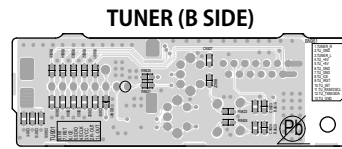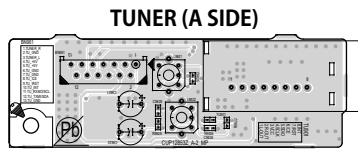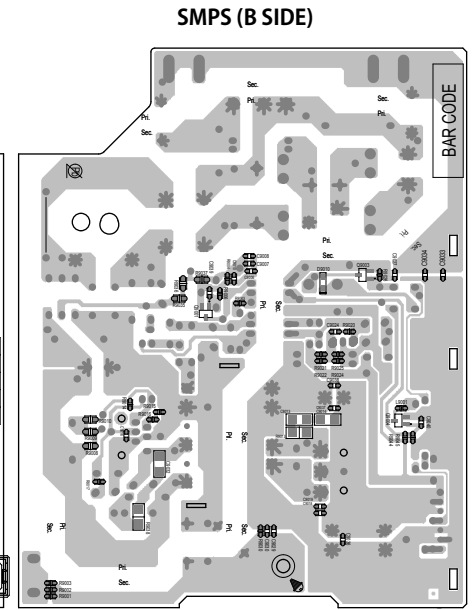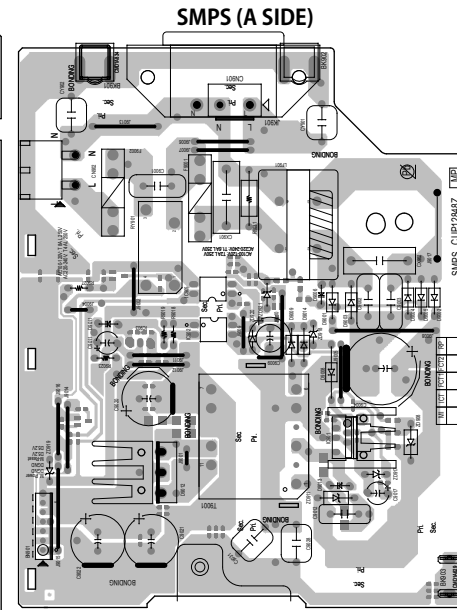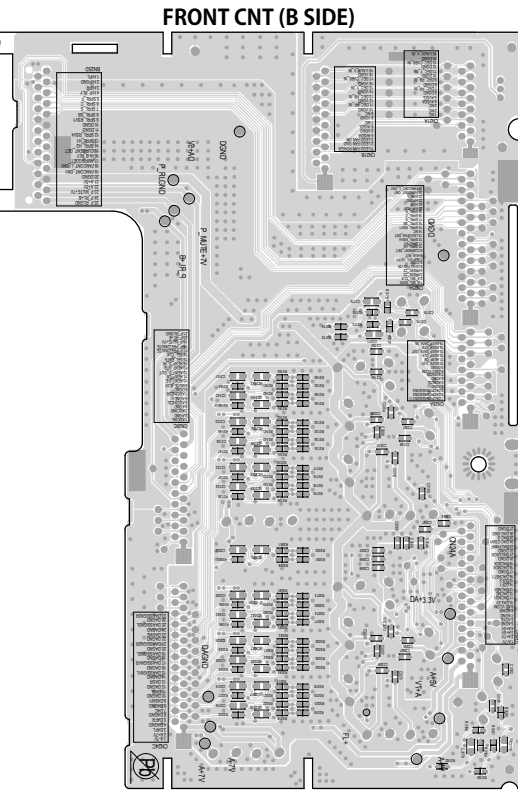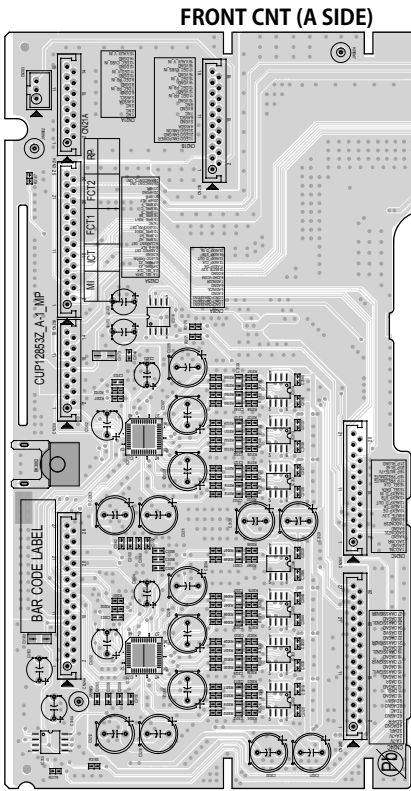

# LEVEL DIAGRAM



## FRONT ch

### AVR-X4500H LEVEL DIAGRAM FRONT ch

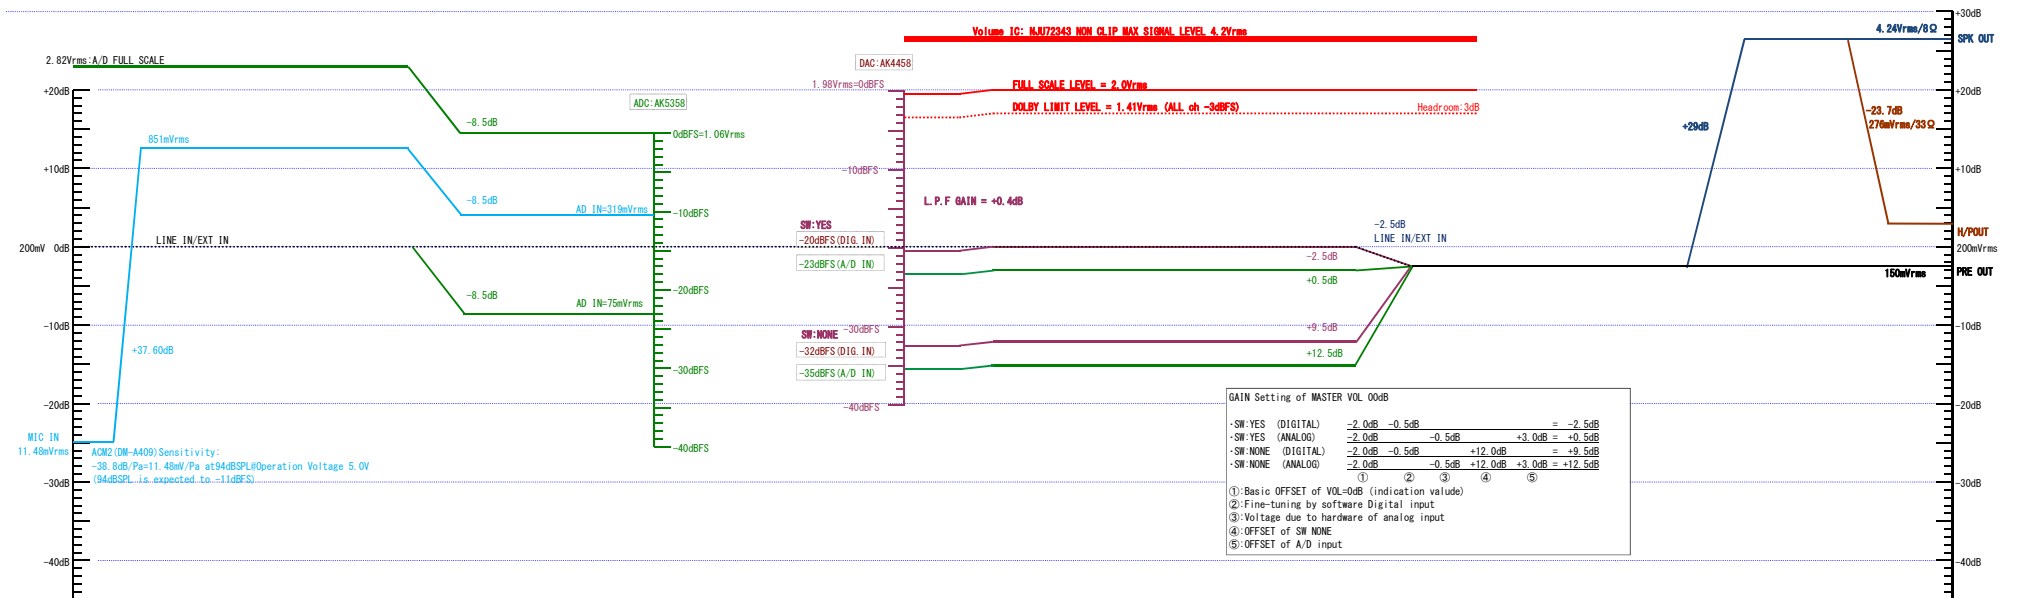
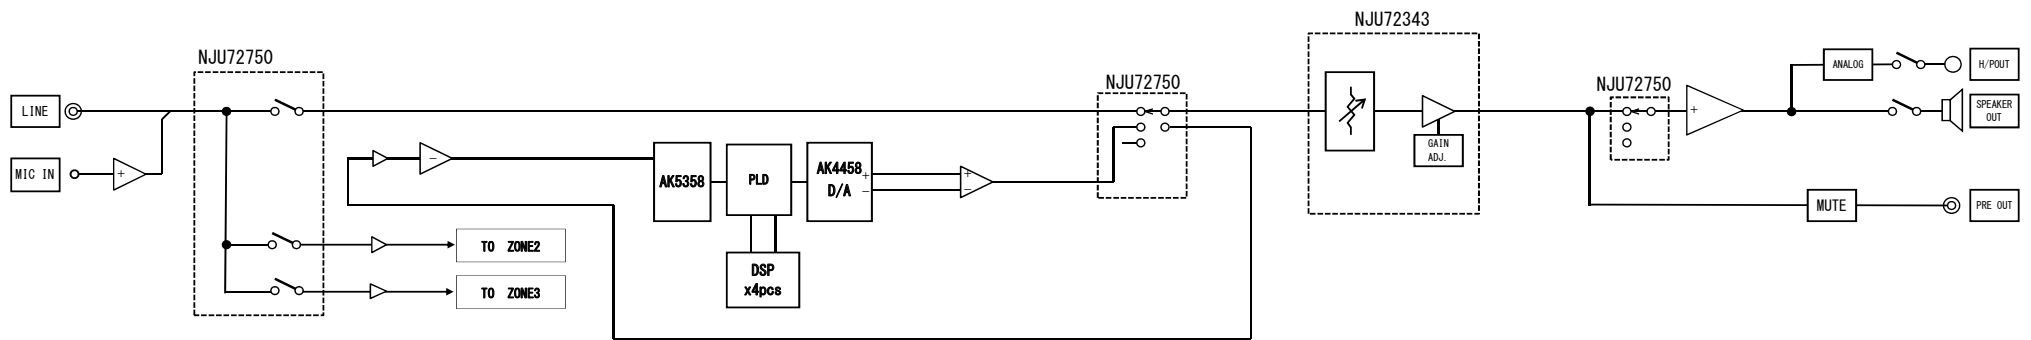






AVR-X4500H  
LEVEL DIAGRAM  
CENTER/SURROUND ch

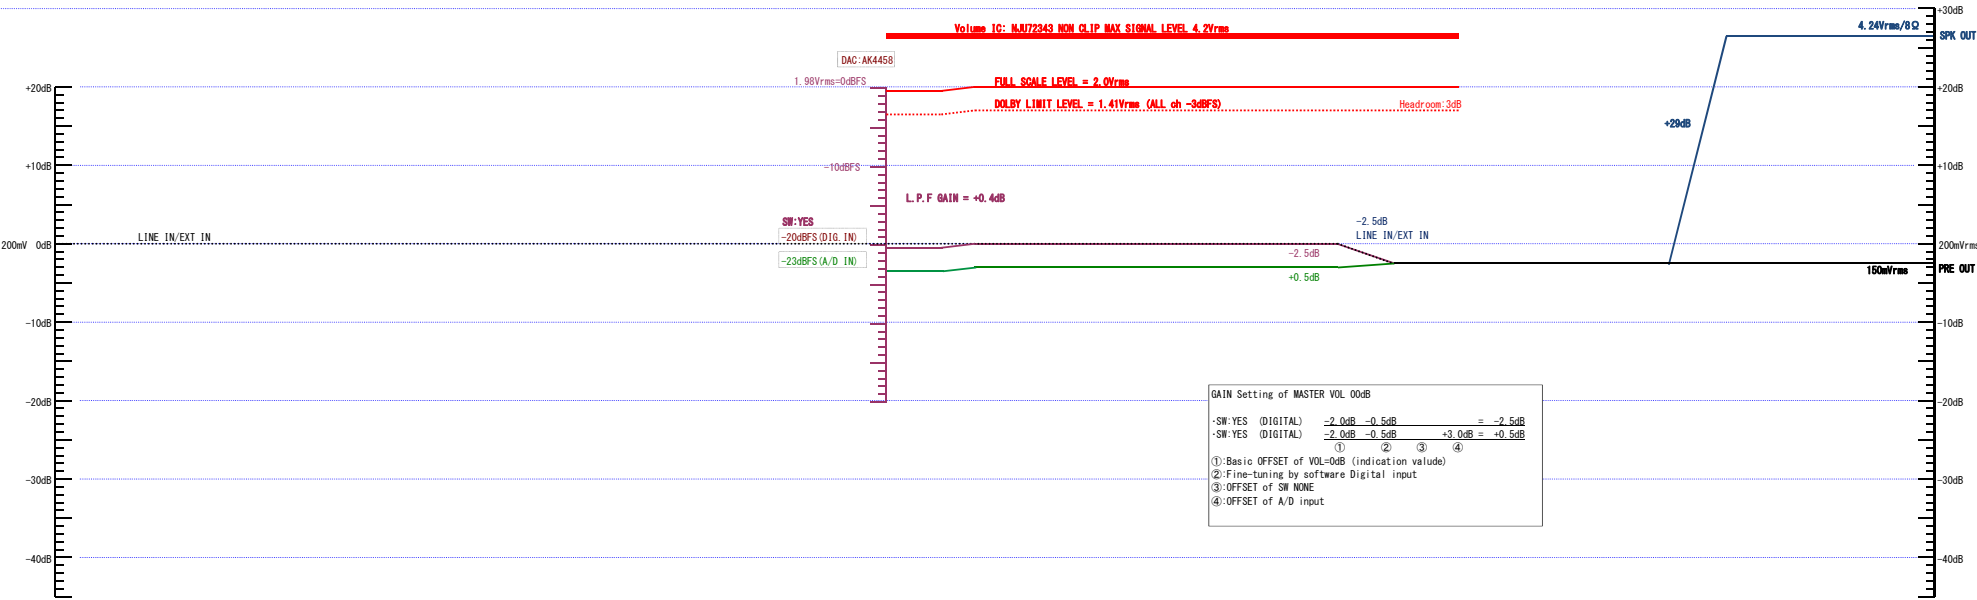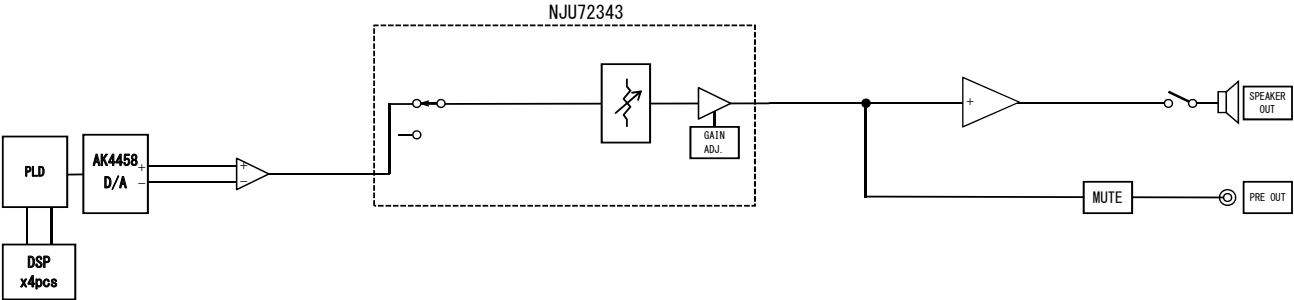


AVR-X4500H  
LEVEL DIAGRAM  
SUB WOOFER ch

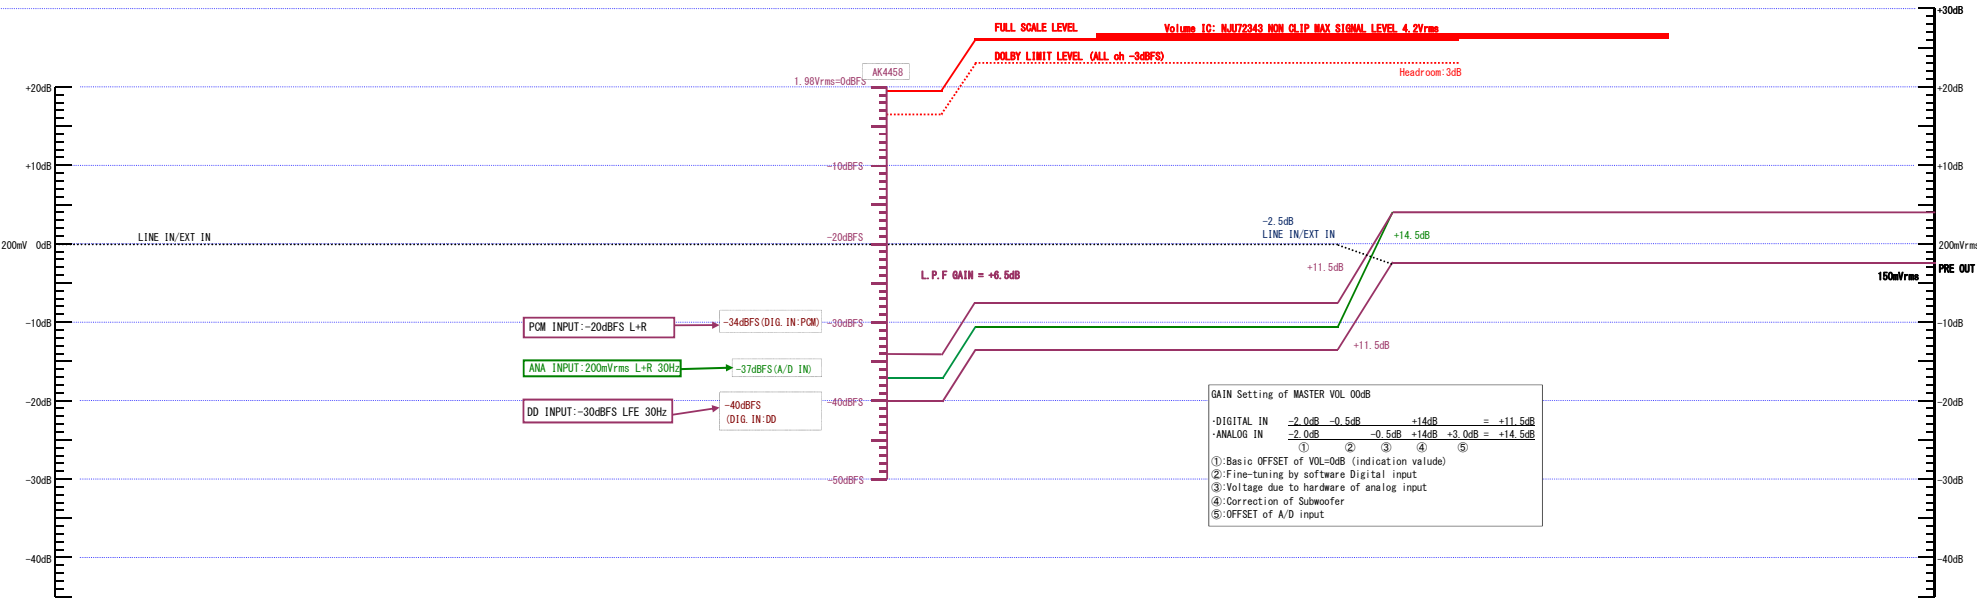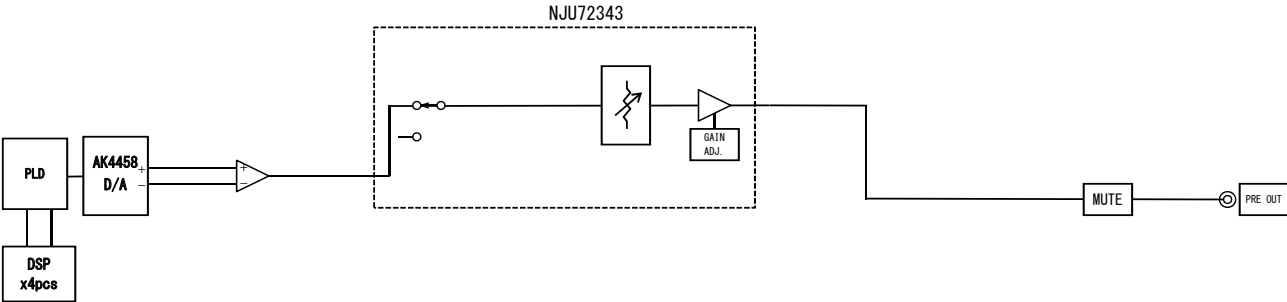


AVR-X4500H  
LEVEL DIAGRAM  
ASSIGN1/2 (SURROUND BACK/HEIGHT1/HEIGHT2) ch

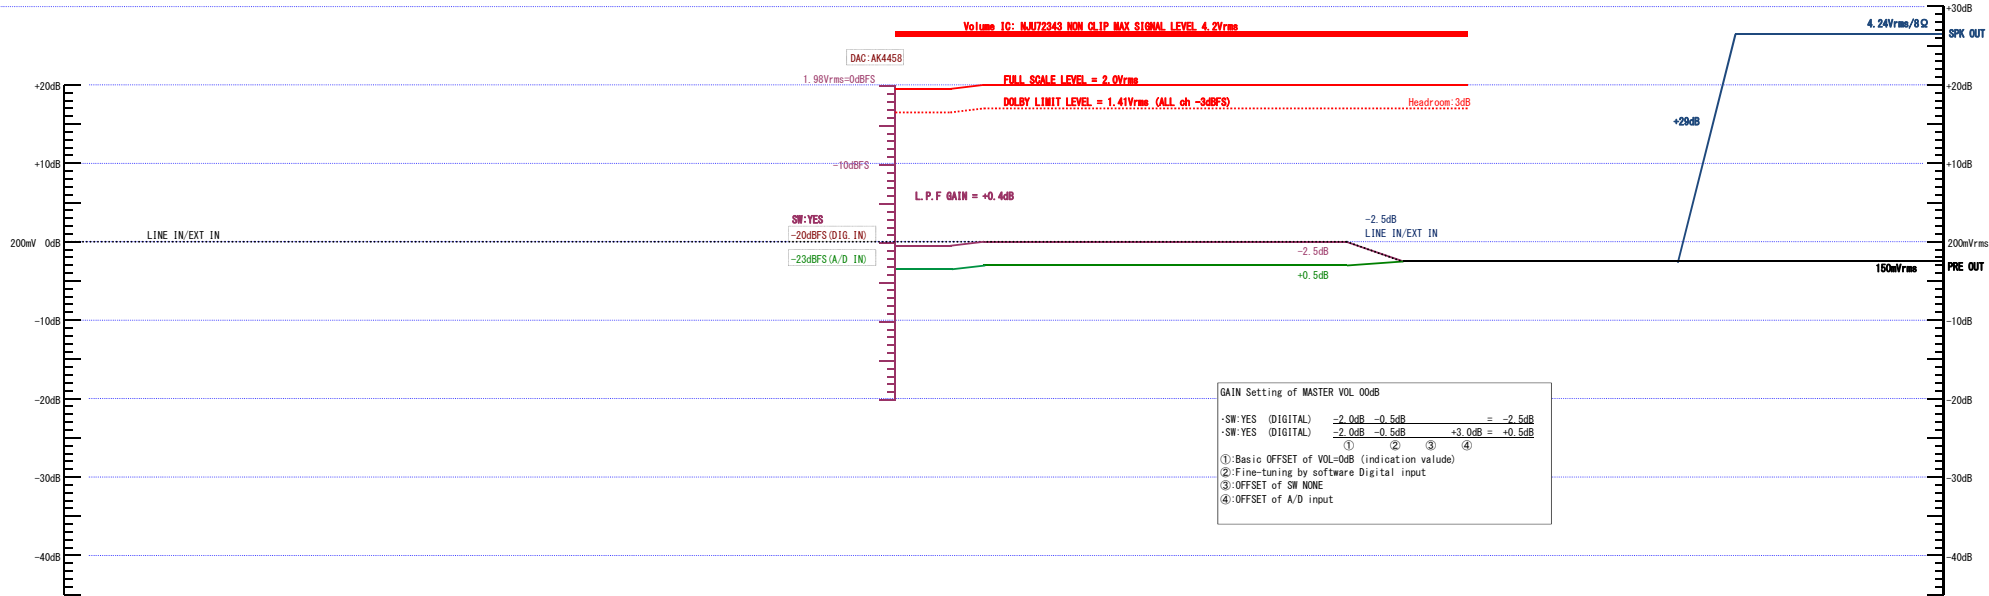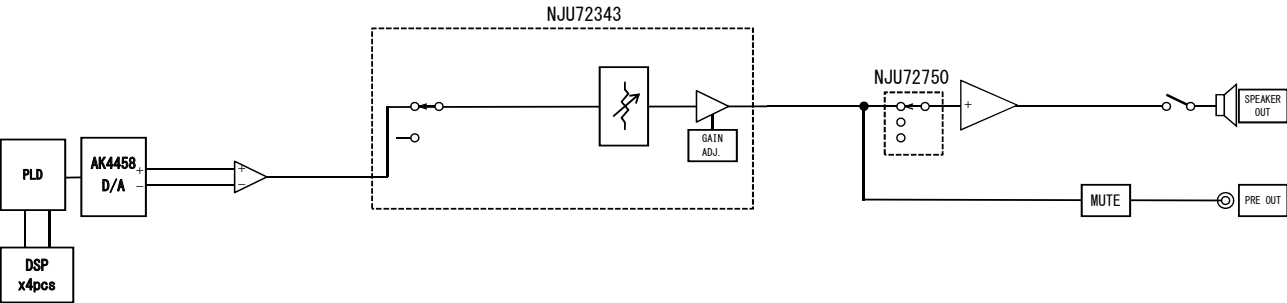

AVR-X4500H  
LEVEL DIAGRAM  
ZONE2/ZONE3

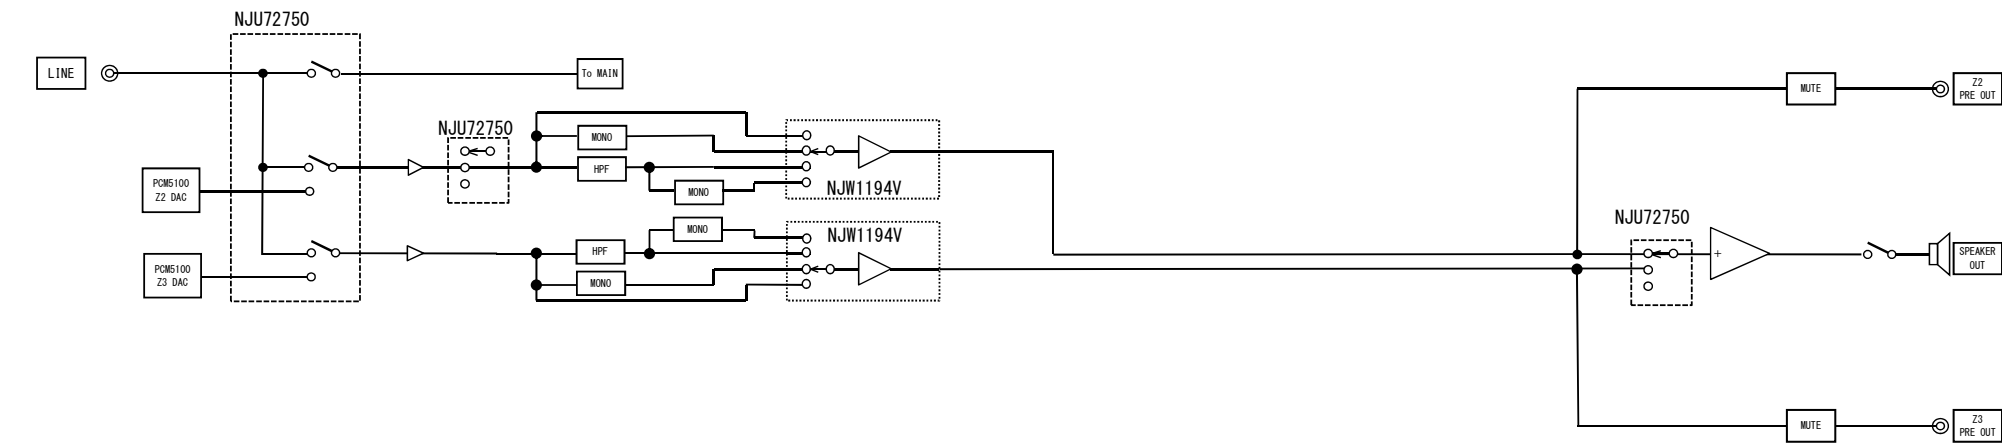


## ANALOG AUDIO DIAGRAM

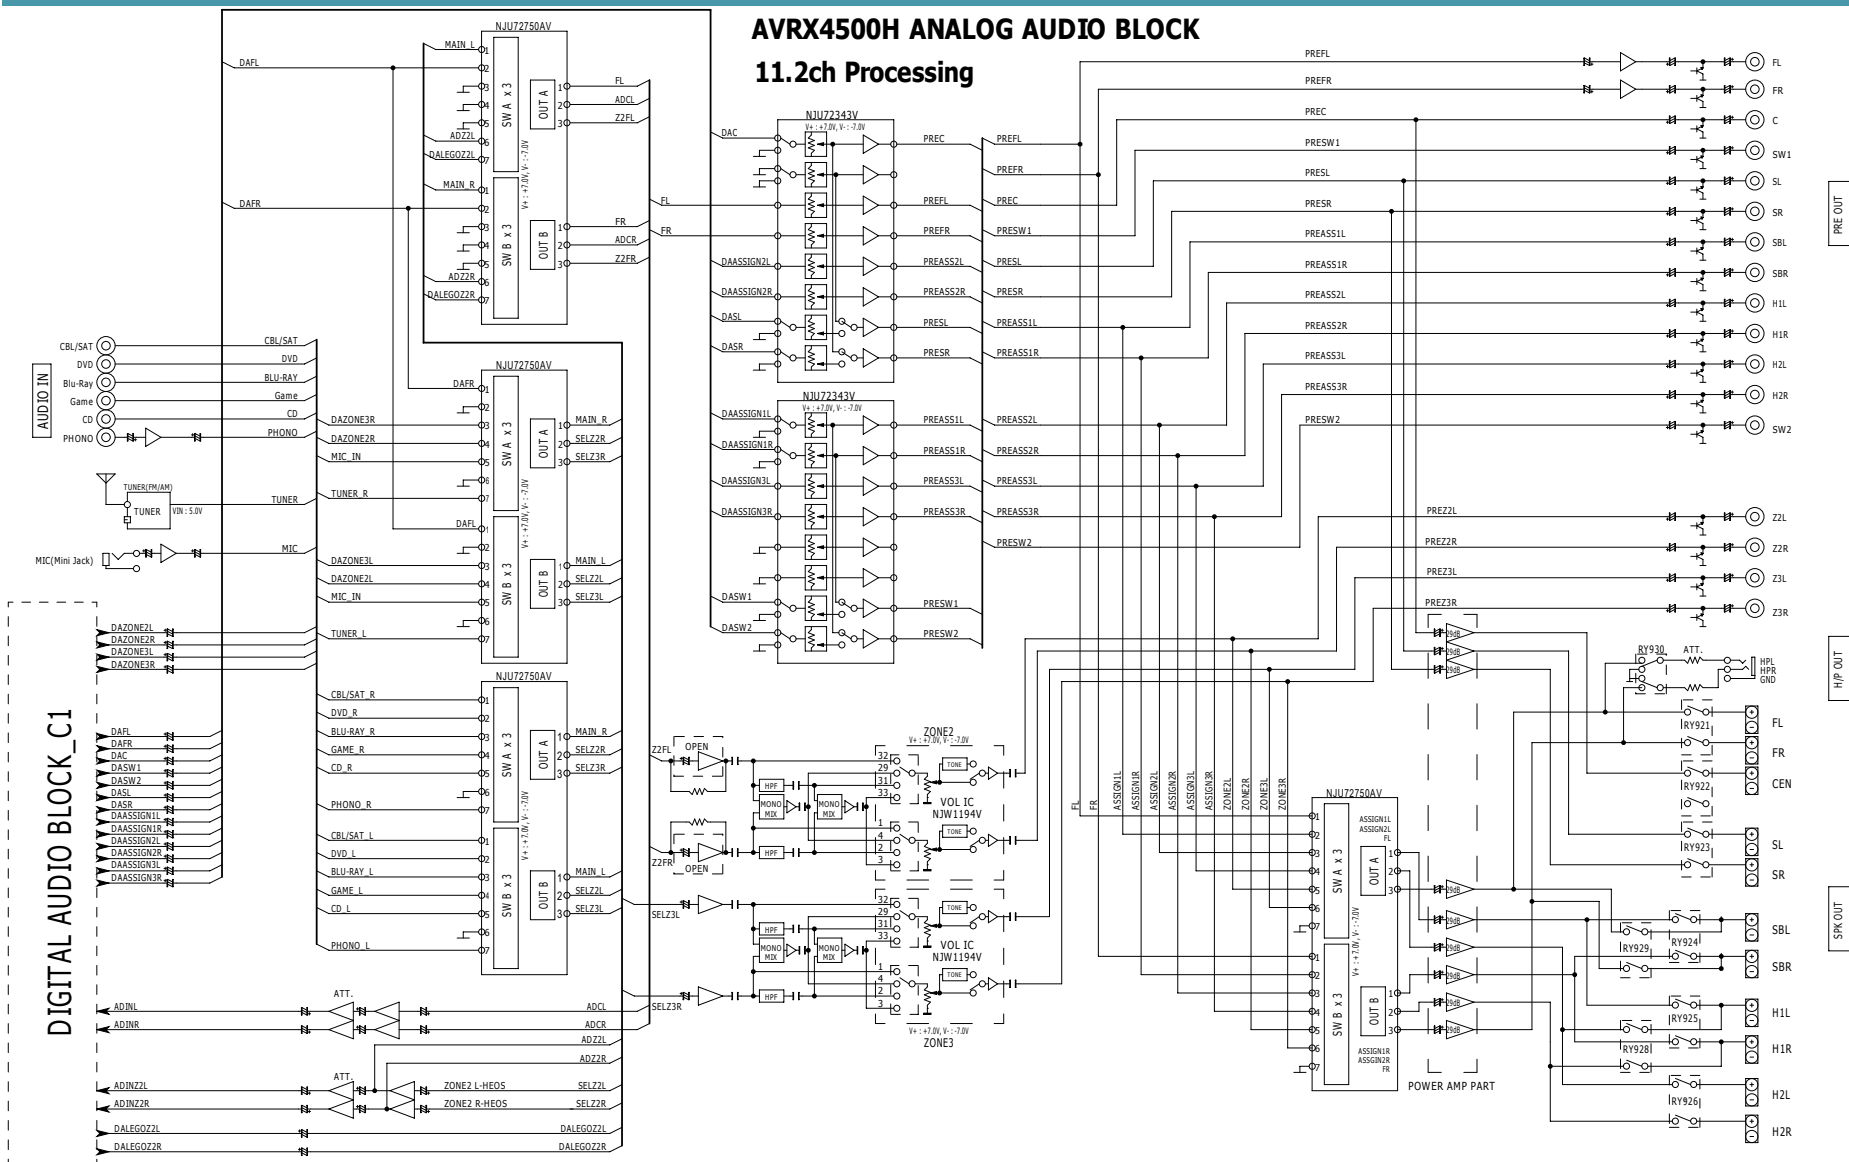


# DIGITAL AUDIO DIAGRAM

## AVRX4500H DIGITAL AUDIO BLOCK(ADI)

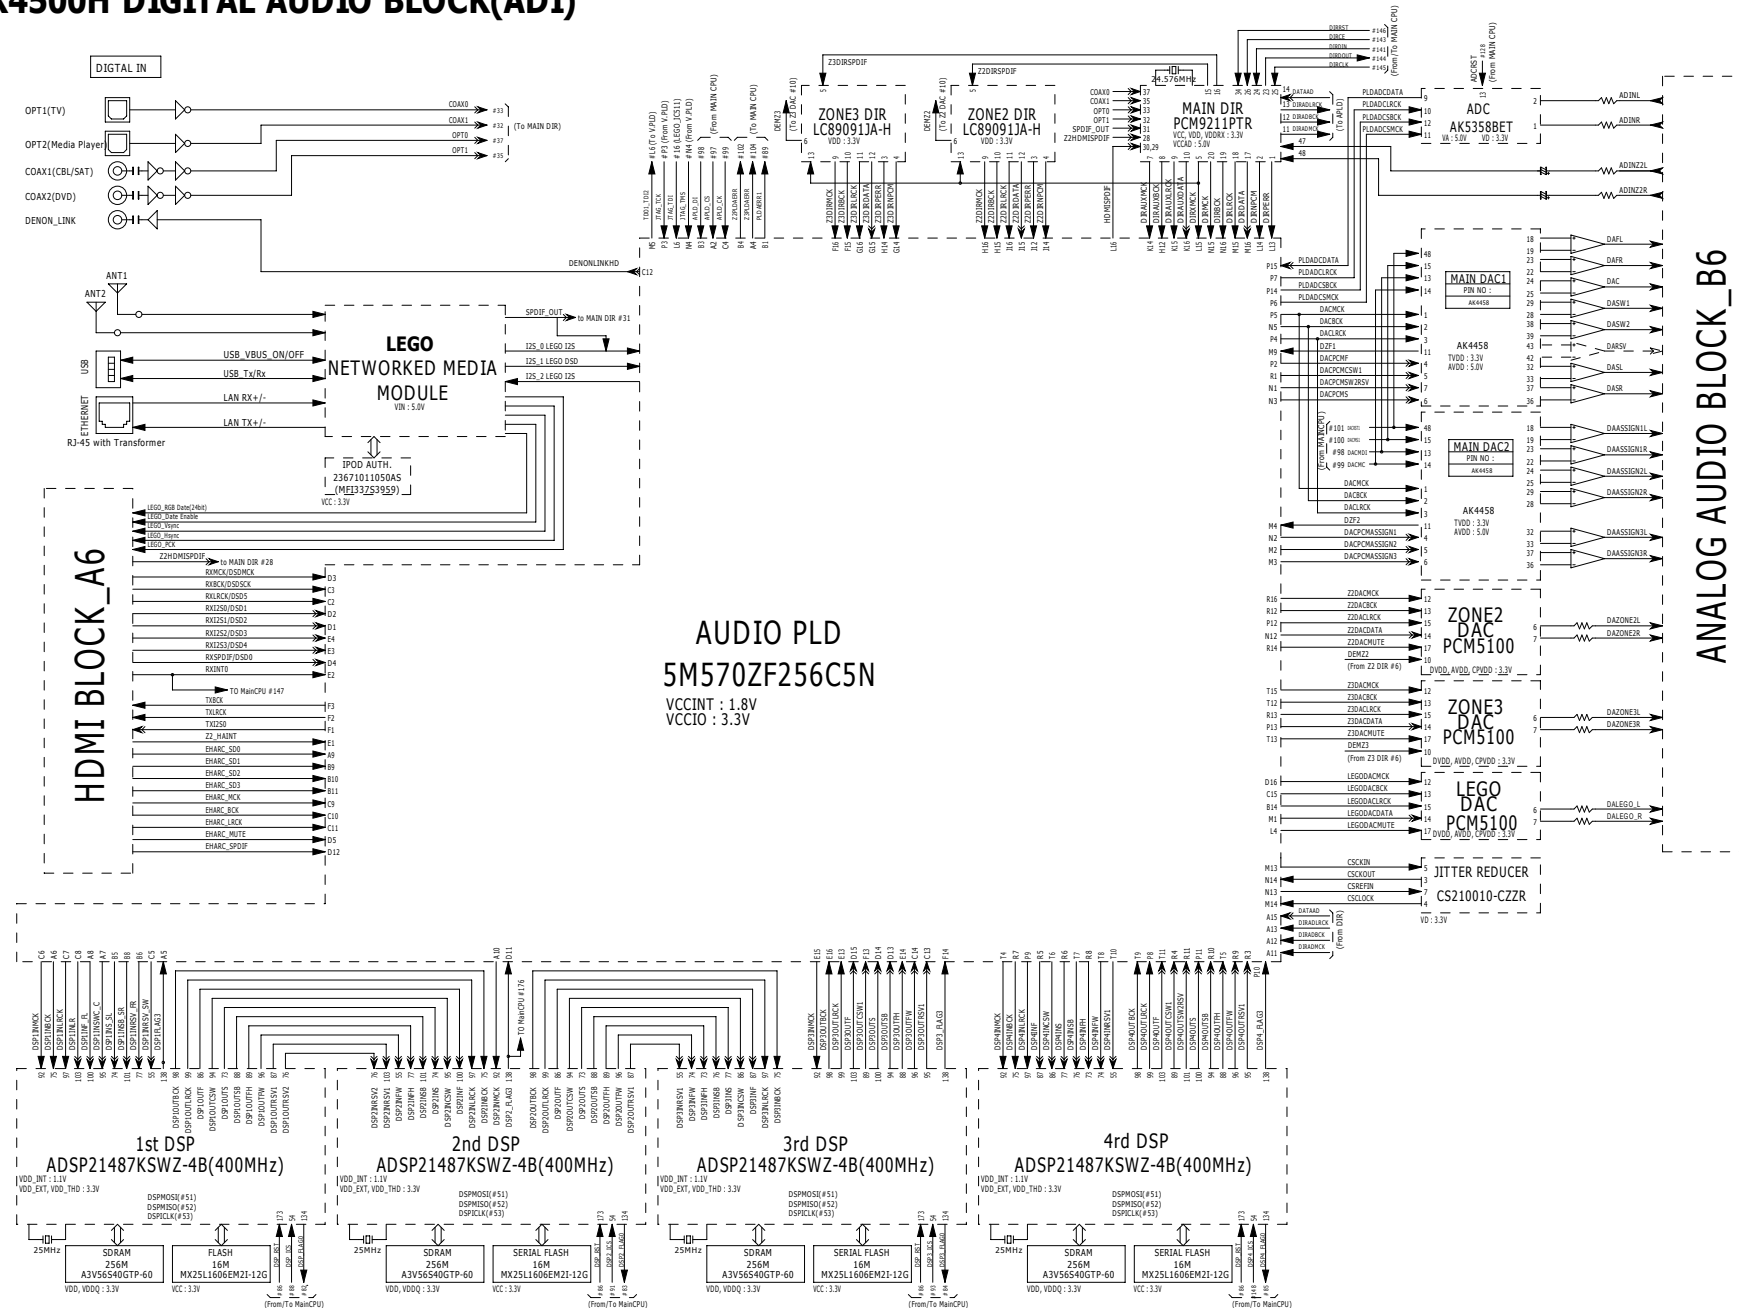

## VIDEO DIAGRAM

### AVRX4500H ANALOG VIDEO BLOCK

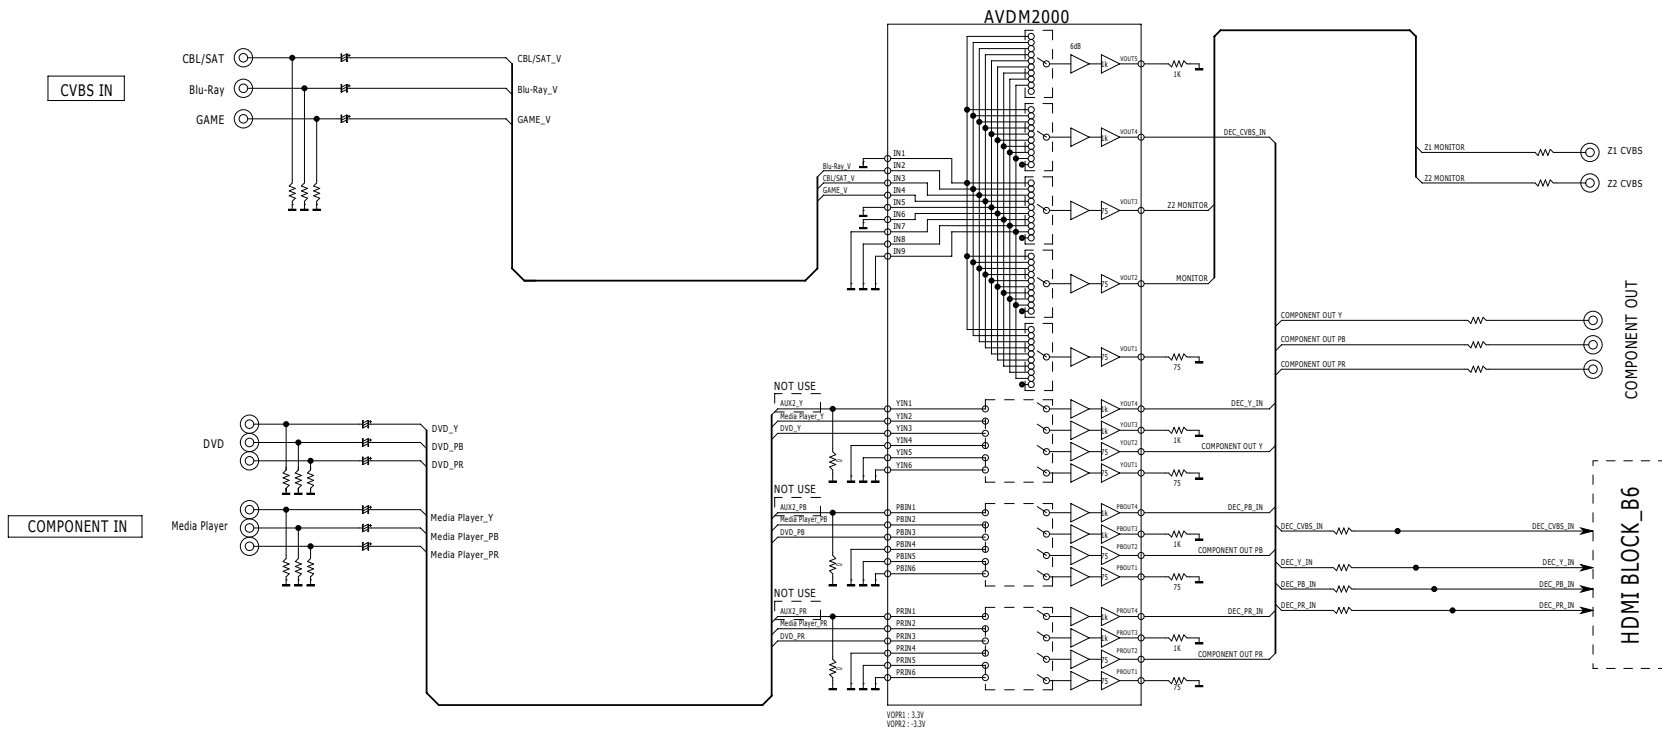

## AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK




## Mechanical


## Repair Information

# Updating



## AVRX4500H POWER BLOCK DIAGRAM

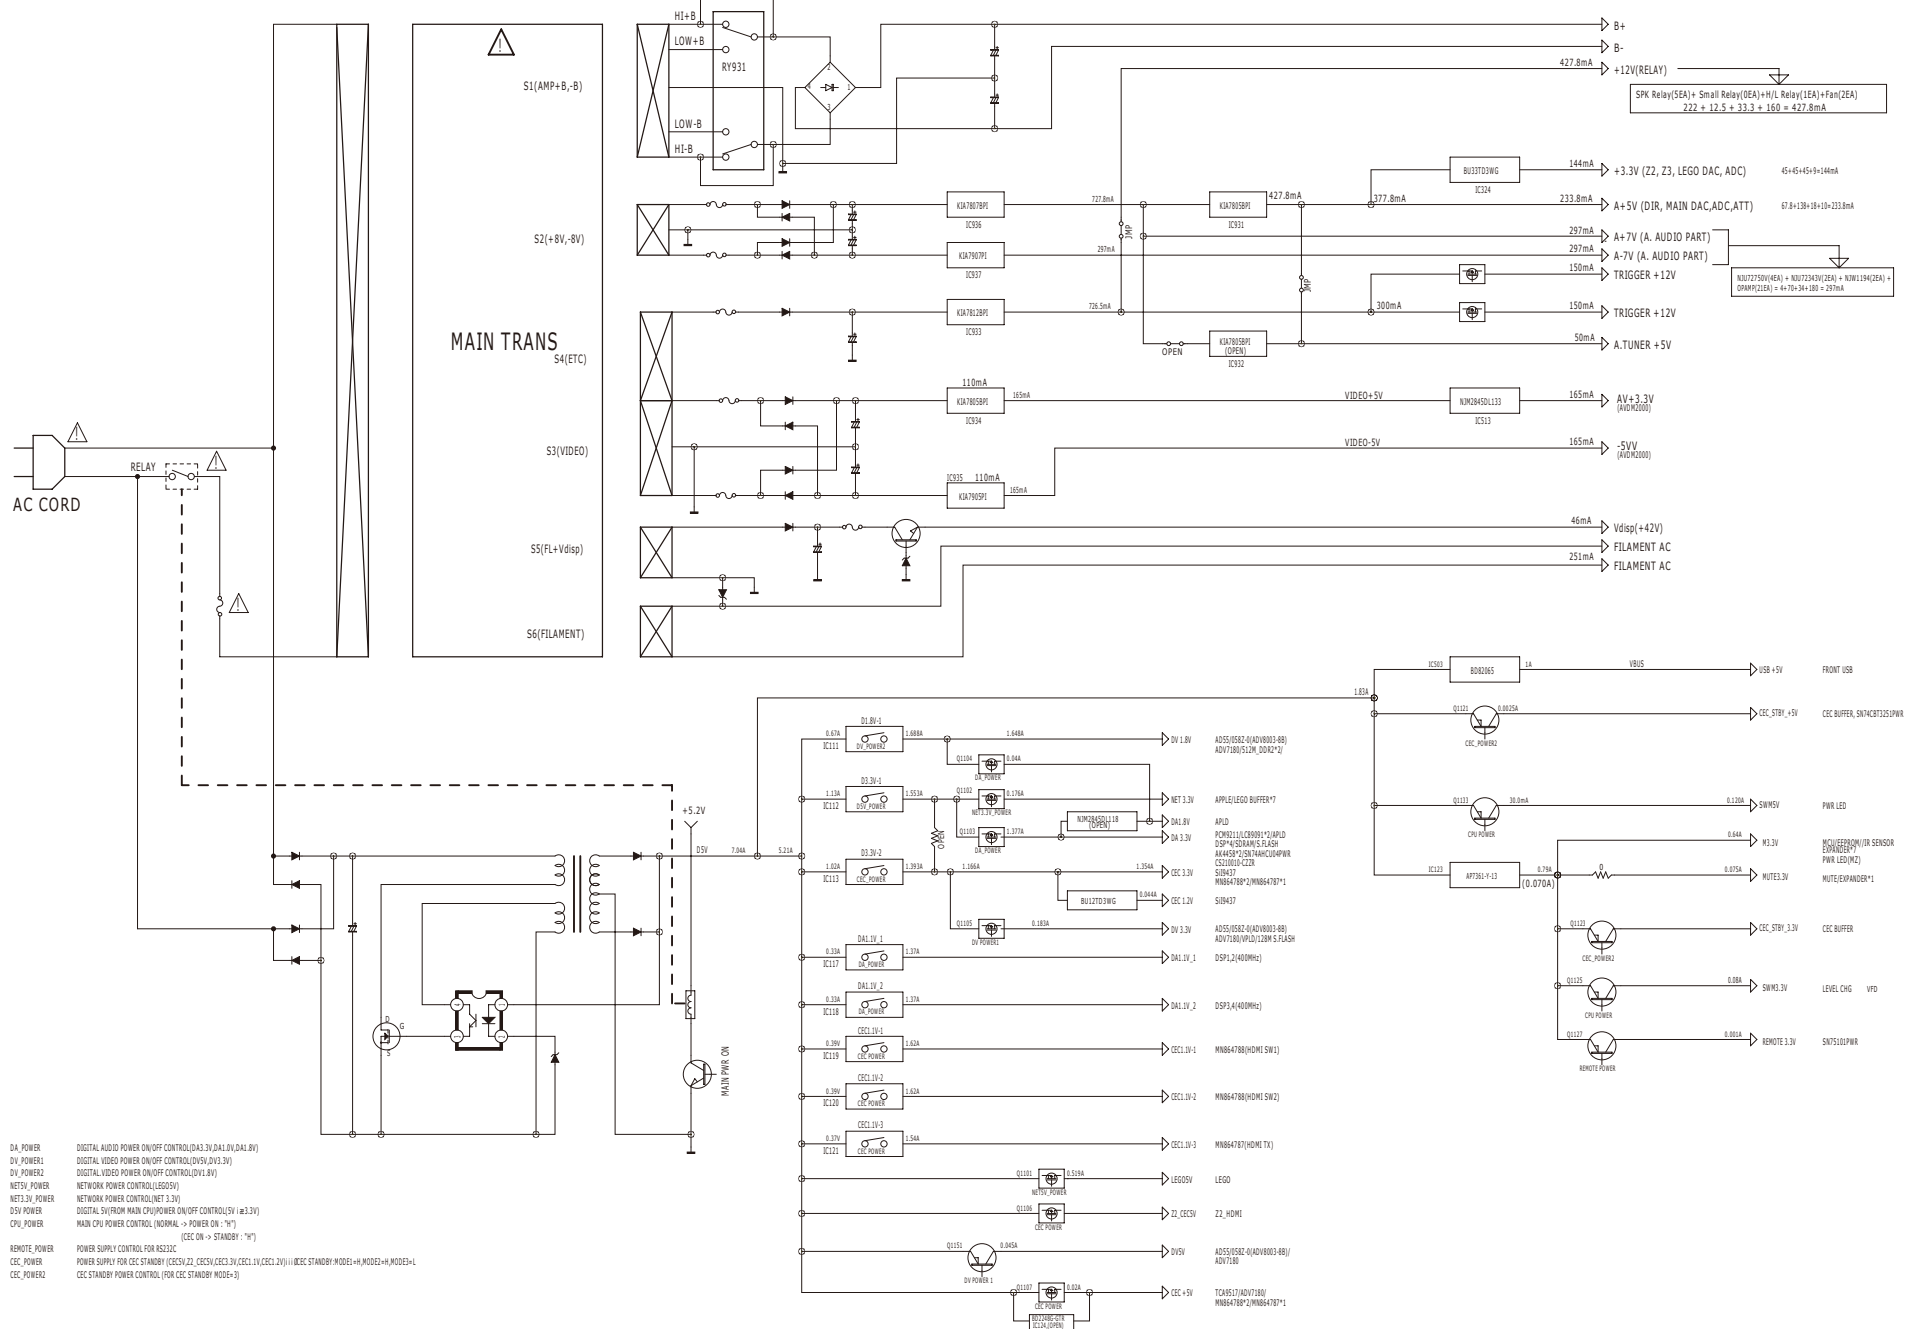

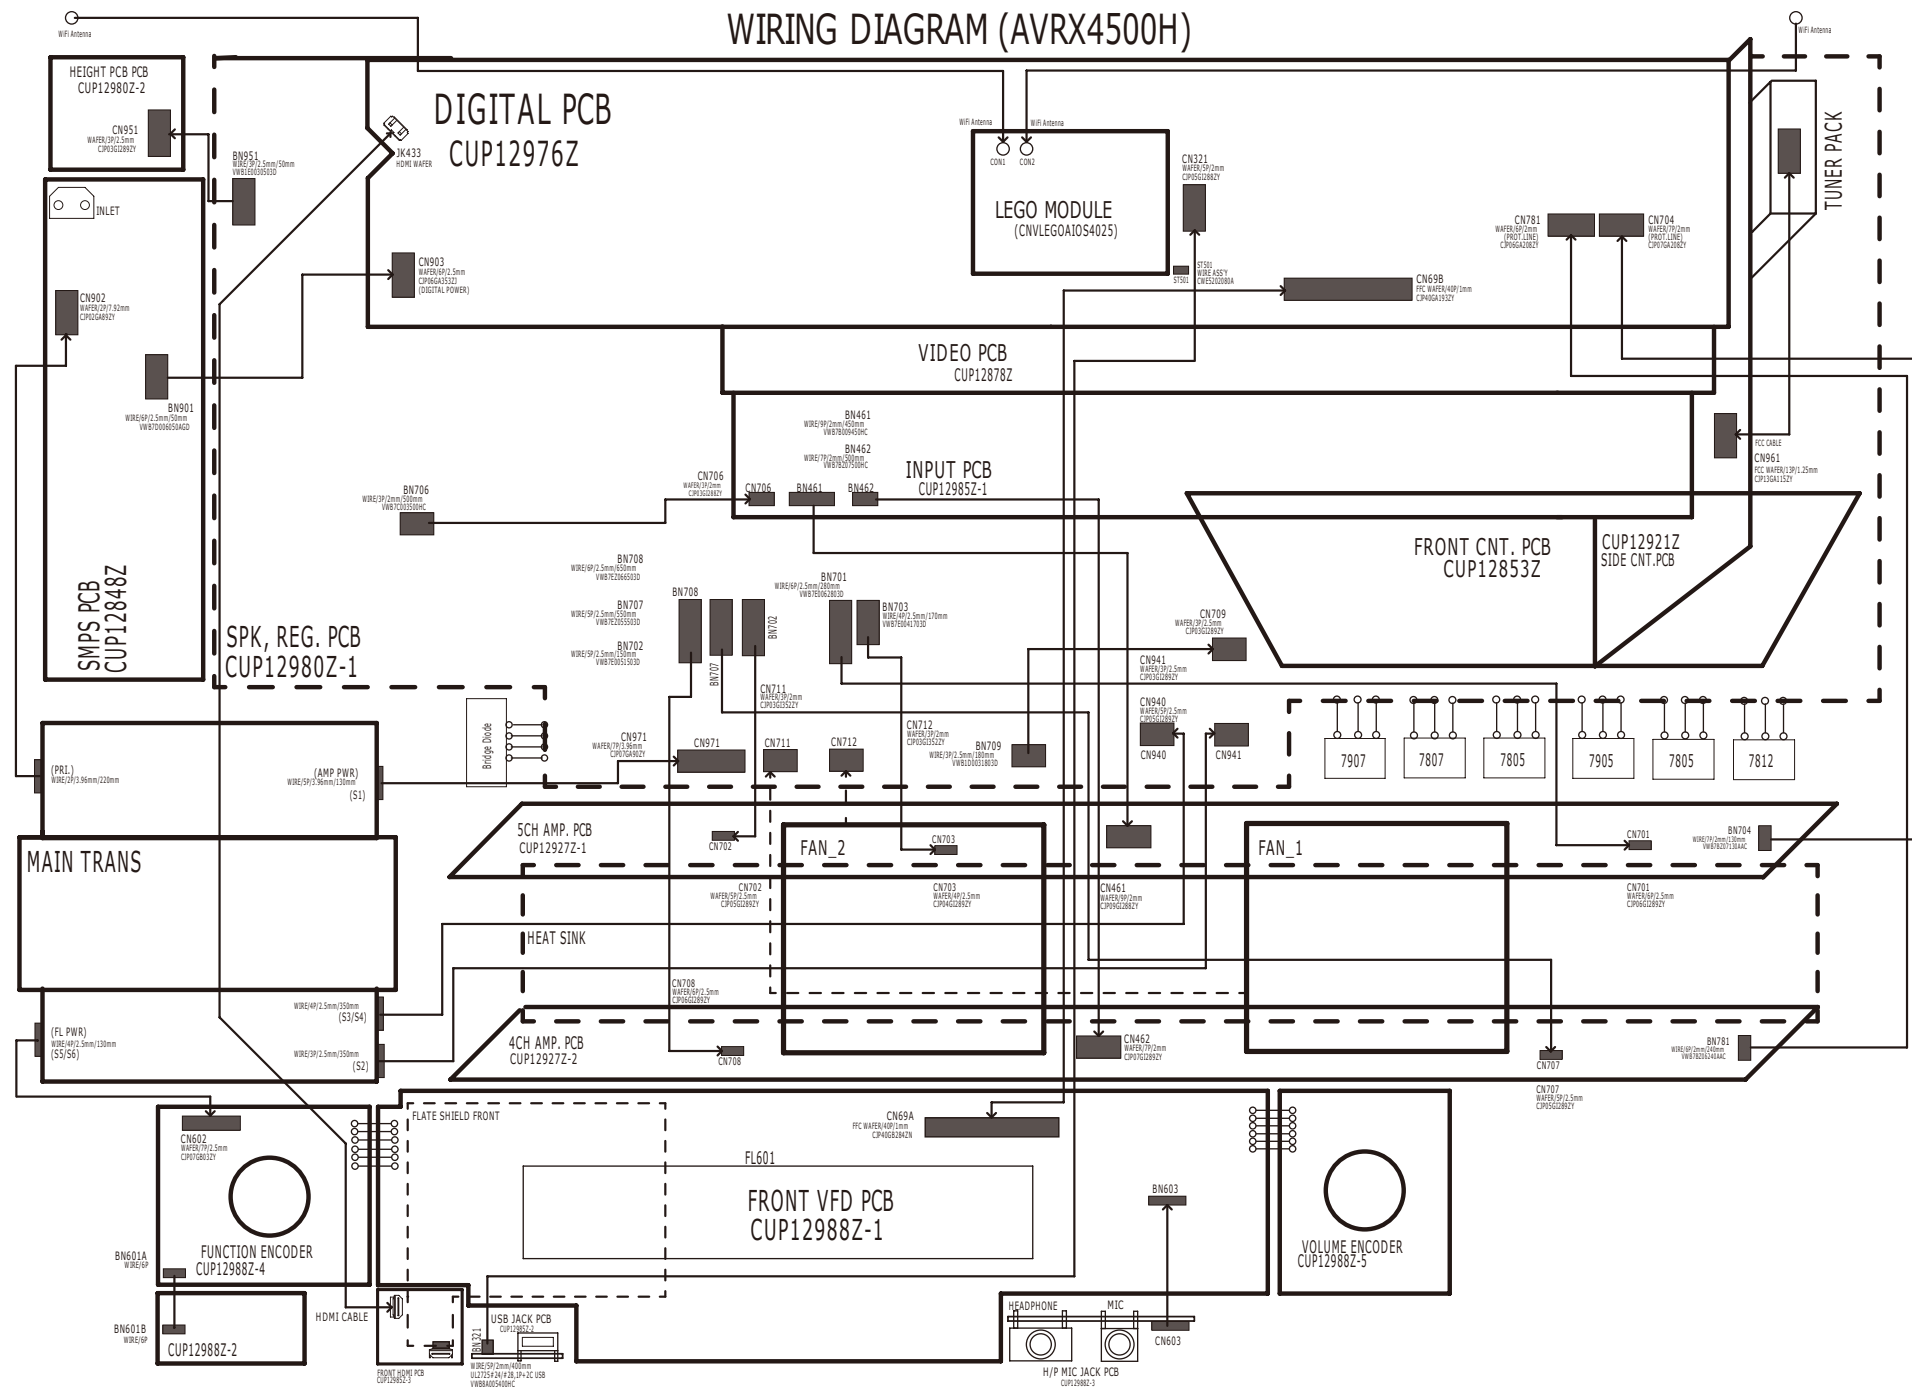


# SEMICONDUCTORS

Only major semiconductors are shown, general semiconductors etc. are omitted to list.  
The semiconductor which described a detailed drawing in a schematic diagram are omitted to list.

## 1. IC's

### R5F564MJCDFC (DIGITAL : IC151)

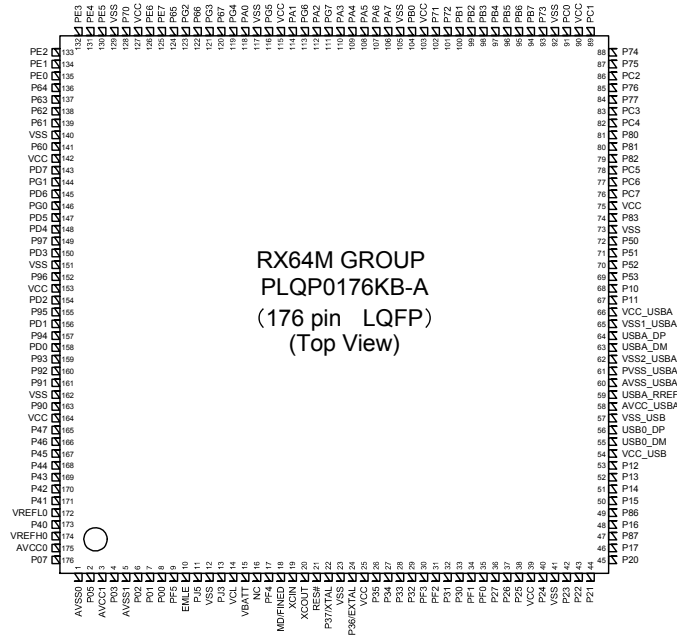

RX64M GROUP  
PLQP0176KB-A  
(176 pin LQFP)  
(Top View)

### R5F56108VNFP Terminal Functions

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
1	AVSS0	AVSS0	-	-	-	-	-	Ground pin
2	P05/IRQ13	POWER_KEY	I	M3VPu	I	I	I	Detect Power switch (Release from Wait Mode,Set to interrupt)
3	AVCC1	AVCC1	-	-	-	-	-	Power supply pin
4	P03/IRQ11	RED_LED	O	L/H	L	H	H	POWER/STANDBY LED control pin
5	AVSS1	AVSS1	-	-	-	-	-	Ground pin
6	P02/SCK6/IRQ10/AN120	NC	I	M3VPu	I	I	I	NC
7	P01/RXD6/IRQ9/AN119	RXD_MI2320	I	Pd	I	I	I	External data input port (for AMX/FW update via 232C) :Connector is FFC
8	P00/TXD6/IRQ8/AN118	TXD_MO232I	O		L	L	L	External data output port (for AMX/FW update via 232C) :Connector is FFC
9	PF5/IRQ4	WHITE_LED (X4500H(NA))/ GREEN_LED (X4500H(EU)/ CH/JP)/SR7013/ AV7705)	O		L	L	L	POWER LED control pin
10	EMLE	EMLE	I	Pd	-	-	-	E20 Emulator control pin (On chip Emulator is used,this pin should be High. Not used,it should be Low)
11	PJ5	VSEL_A	I		I	I	I	Master Volume (Rotary encoder) signal input pin
12	VSS	VSS	-	-	-	-	-	Ground pin

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
13	PJ3	VSEL_B	I		I	I	I	Master volume (Rotary encoder) signal input pin
14	VCL	VCL	I		-	-	-	Smothing capacitor connection pin
15	VBATT	VBATT	-		-	-	-	Power supply pin
16	NC	NC	I	Pd	-	-	-	NC(Pull down)
17	TRST#/PF4	TRST#/ NC(NORMAL)	I/I	Pd	I/I	I/I	I/I	E20 Emulator control pin/When normal operating mode,set to input.
18	MD/FINED	MD	I	M3VPu	I	I	I	Pins for setting the operating mode(select the Boot Mode or User Boot Mode,Single Chip Mode)
19	XCIN	XCIN	I	Pd	-	-	-	NC(Pull down)
20	XCOUT	XCOUT	I		-	-	-	NC(open)
21	RES#	RESET	I		-	-	-	Reset signal input pin
22	XTAL/P37	XTAL	I		-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
23	VSS	VSS	-	-	-	-	-	Ground pin
24	EXTAL/P36	EXTAL	-		-	-	-	Pins for a crystal resonator (Xin=12MHz × 10)
25	VCC	VCC	-	-	-	-	-	Power supply pin
26	UPSEL/P35(IN)/NMI	NC(X4500H)/ DOOR_ DET(SR7013/ AV7705)	I	SW3VPu/ SW3VPu	I	I	I	Front trap door open/close detect input pin (High:Door open)
27	P34/SCK6/SCK0/IRQ4	BDOWN	I		I	I	I	Detect power down
28	P33/TIOCD0/RXD6/RXD0/IRQ3-DS	RC_IN	I		I	I	I	Remote input
29	P32/TIOCC0/TXD6/TXD0/IRQ2-DS	NC(X4500H)/ FLASHER_IN(SR7013/ AV7705)	O/I	Pd	L/I	L/I	L/I	IR Flasher control signal input (When standby mode,set to interrupt)
30	TMS/PF3	TMS/ NC(NORMAL)	I/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/When normal operating mode,set to input.
31	TDI/PF2/RXD1	TDI/RXD_MIT- SUBISHI	I/I/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/Mitsubishi writer control pin/When normal operating mode,set to input.
32	P31/IRQ1-DS	TU_GPO2_INT	I		L	L	L	TUNER control
33	P30/RXD1	TU_SDIO	I_O		L	L	L	TUNER control
34	TCK/FINEC/PF1/SCK1	TCK/ NC(NORMAL)	I/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/When normal operating mode,set to input.
35	TD0/TXD1/PF0	TD0/TXD_MIT- SUBISHI	O/O/I	M3VPu	-/I	-/I	I	E20 Emulator control pin/Mitsubishi writer control pin/When normal operating mode,set to input.
36	P27/SCK1	TU_SEN	O		L	L	L	TUNER control
37	P26/TXD1	TU_SCLK	O		L	L	L	TUNER control
38	P25/RXD3	VOL_DATA	O		L	L	L	Volume control pin (NJU72343)
39	VCC	VCC	-	-	-	-	-	Power supply pin
40	P24/SCK3	NC(X4500H)/ KILL_IR(SR7013/ AV7705)	O		L	L	L	Front IR disable control pin
41	VSS	VSS	-	-	-	-	-	Ground pin
42	P23/TXD3	E_RTS_MOEI	O	Pd (onboard + BCM58305 Internal Pd)	L	L	L	Ethernet(Network Module) control pin
43	P22/SCK0	E_CTS_MIEO	I	Pd (onboard + BCM58305 Internal Pd)	I	I	I	Ethernet(Network Module) control pin
44	P21/RXD0/IRQ9	E_RXD_MIEO	I	Pd (onboard + BCM58305 Internal Pd)	I	L	I	Ethernet(Network Module) control pin
45	P20/TXD0/IRQ8	E_TXD_MOEI	O	Pd (onboard + BCM58305 Internal Pd)	L	L	L	Ethernet(Network Module) control pin
46	P17/SCK1/TXD3/IRQ7	NET_FACT_RST	O(ODR)	Pu (BCM58305 Internal Pu)	Z	Z	Z	Ethernet(Network Module) control pin



Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
47	P87/TXD10/TIOCA2	NC(X4500H)/RC_OUT(SR7013/AV7705)	O		L/H	L/L	L/H	Remote code (RC-5) output pin
48	P16/TXD1/RXD3/IRQ6	NET5V_POWER	O		L	L	L	Ethernet power supply (Net5V) control pin
49	P86/RXD10	SEL_DATA	O		L	L	L	Audio selector control pin (NJU72750/72751)
50	P15/RXD1/SCK3/IRQ5	AEXP_STB	O		L	L	L	Expander (MC14094) control pin
51	P14/IRQ4	AEXP_OE	O		L	L	L	Expander (MC14094) control pin
52	P13/TXD2/IRQ3	AEXP_CLK	O		L	L	L	Expander (MC14094) control pin
53	P12/RXD2/IRQ2	AEXP_DATA	O		L	L	L	Expander (MC14094) control pin
54	VCC_USB	VCC_USB	-	-	-	-	-	Power supply pin
55	USB0_DM	USB0_DM	-	-	-	-	-	NC(open)
56	USB0_DP	USB0_DP	-	-	-	-	-	NC(open)
57	VSS_USB	VSS_USB	-	-	-	-	-	Ground pin
58	AVCC_USBA	AVCC_USBA	-	-	-	-	-	Power supply pin
59	USBA_PREF	USBA_PREF	-	-	-	-	-	NC(open)
60	AVSS_USBA	AVSS_USBA	-	-	-	-	-	Ground pin
61	PVSS_USBA	PVSS_USBA	-	-	-	-	-	Ground pin
62	VSS2_USBA	VSS2_USBA	-	-	-	-	-	Ground pin
63	USBA_DM	USBA_DM	-	-	-	-	-	NC(open)
64	USBA_DP	USBA_DP	-	-	-	-	-	NC(open)
65	VSS1_USBA	VSS1_USBA	-	-	-	-	-	Ground pin
66	VCC_USBA	VCC_USBA	-	-	-	-	-	Power supply pin
67	P11/SCK2/IRQ1	CEC_OUT	O		L	L	-	CEC-D control pin
68	P10/IRQ0	CEC_IN	I	CEC_ST-BY3VPu	I	I	I	CEC-D control pin
69	P53	ADV8003_SPI_CS	O	DV3VPu	L	L	L	GUI control pin(ADV8003)
70	P52/RXD2	ADV8003_SPI_MI	I		L	L	L	GUI control pin(ADV8003)
71	P51/SCK2	ADV8003_SPI_CLK	O		L	L	L	GUI control pin(ADV8003)
72	P50/TXD2	ADV8003_SPI_MO	O	DV3VPu	L	L	L	GUI control pin(ADV8003)
73	VSS	VSS	-	-	-	-	-	Ground pin
74	P83/SCK10	IP_RST	O	Pd	I	I	L	Scaler w/ GUI (ADV8003) Reset control pin
75	VCC	VCC	-	-	-	-	-	Power supply pin
76	UB/PC7/TXD8/IRQ14	UB	I	Pd	-	-	-	Pins for setting the boot mode(select the Boot Mode or User Boot Mode)
77	PC6/RXD8/IRQ13	AVSDA	I/O	CEC3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC/ ADVM2000
78	PC5/SCK8	AVSCL	I/O	CEC3VPu	O/L	O/L	L	VIDEO I2C control pin for ADV8003/ ADV7180/ ARC IC/ ADVM2000
79	P82/TXD10	DSP_MOSI	O	DA3VPu	L	L	L	DSP(ADI) control pin
80	P81/RXD10	DSP_MISO	I	DA3VPu	L	L	L	DSP(ADI) control pin
81	P80/SCK10	DSP_CLK	O	DA3VPu	L	L	L	DSP(ADI) control pin
82	PC4/SCK5	DSP1FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
83	PC3/TXD5	DSP2FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
84	P77/TXD11	DSP3FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
85	P76/RXD11	DSP4FLAG0	I	Pd	L	L	L	DSP(ADI) interrupt signal input pin
86	PC2/RXD5	DSP_RST	O		L	L	L	DSP(ADI) reset control pin
87	P75/SCK11	CEC_POWER2	O		L	L	H	CEC standby power control (for CEC Standby Mode 3)
88	P74	DSP1CS	O	DA3VPu	L	L	L	DSP(ADI) control pin
89	PC1/SCK5/IRQ12	DAC.PLD_ERR	I		L	L	L	Detect PLD error (from Audio PLD)
90	VCC	VCC	-	-	-	-	-	Power supply pin
91	PC0/IRQ14	DSP2CS	O	DA3VPu	L	L	L	DSP(ADI) control pin
92	VSS	VSS	-	-	-	-	-	Ground pin
93	P73	DSP3CS	O	DA3VPu	L	L	L	DSP(ADI) control pin

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
94	PB7/TXD9	HSDA	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
95	PB6/RXD9	HSCL	I/O	CEC3VPu	L	L	L	HDMI I2C control pin for MN864787/MN864788
96	PB5/SCK9	THERMAL_F(X4500H/SR7013)/NC(AV7705)	I/I	SW3VPu	I/I	L	I/I	Protection detect signal input pin (for Heat sink)
97	PB4	APLD_CS	O		L	L	L	Audio PLD (5M570ZF256C5N) control pin
98	PB3/SCK4/SCK6	APLD_DATA/DAC_DATA	O		L	L	L	Audio PLD (5M570ZF256C5N) control pin/DAC (AK4458VN) control pin
99	PB2	APLD_CLK/DAC_CLK	O		L	L	L	Audio PLD (5M570ZF256C5N) control pin/DAC (AK4458VN) control pin
100	PB1/TXD4/TXD6/IRQ4-D5	DAC_MS	O		L	L	L	DAC (AK4458VN) control pin
101	P72	DAC_RST	O		L	L	L	DAC (AK4458VN) control pin
102	P71	Z2PLD_ERR	I	-	L	L	L	Detect PLD error (from Audio PLD)
103	VCC	VCC	-	-	-	-	-	Power supply pin
104	PB0/RXD4/RXD6/IRQ12	Z3PLD_ERR	I	-	L	L	L	Detect PLD error (from Audio PLD)
105	VSS	VSS	-	-	-	-	-	Ground pin
106	PA7	ISEL_A	I		I	I	I	Input selector (Rotary encoder) signal input pin
107	PA6	ISEL_B	I		I	I	I	Input selector (Rotary encoder) signal input pin
108	PA5	VOL_CLK	O		L	L	L	Volume control pin (NJU72343)
109	PA4/TXD5/SSDA5/IRQ5-D5	COMP_DET	I	SW3VPu	I	I	I	Component video signal detect pin
110	PA3/RXD5/SSCL5	MVOL_MUTE	O		L	L	L	Volume control pin (NJU72343)
111	TRDATA3/PG7	REMOTE_POWER(232C)	O		L	L	L	232C power supply (REMOTE 3.3V) control pin
112	PA2/RXD5	NC	O		L	L	L	NC
113	TRDATA2/PG6	ZVOL_DATA	O		L	L	L	ZONE2 volume control pin (NJW1194)
114	PA1/SCK5/IRQ11	ZVOL_CLK	O		L	L	L	ZONE2 volume control pin (NJW1194)
115	VCC	VCC	-	-	-	-	-	Power supply pin
116	TRCLK/PG5	ZVOL_STB	O		L	L	L	ZONE2 volume control pin (NJW1194)
117	VSS	VSS	-	-	-	-	-	Ground pin
118	PA0	H5V_DET	I	-	I	I	I	HDMI IN 5V detect signal pin
119	TRSYNC/PG4	FL_RST	O		L	L	L	FL display control pin
120	P67/IRQ15	FL_CE	O		L	L	L	FL display control pin
121	TRDATA1/PG3	FL_CLK	O		L	L	L	FL display control pin
122	P66	FL_DATA	O		L	L	L	FL display control pin
123	TRDATA0/PG2	NC(X4500H)/FL_CE2(SR7013/AV7705)	O		L	L	L	FL display control pin
124	P65	NC(X4500H)/FIL_CTRL(SR7013/AV7705)	O		L	L	L	Filament Power control pin (for Portal FLD)
125	PE7/IRQ7/AN105	ASO/DC_DET(X4500H/SR7013)/NC(AV7705)	I		I	I	I	Protection detect signal input pin (for ASO and DC) (A/D converter)
126	PE6/IRQ6/AN104	MIC_DET/_H/P_DET	I		I	I	I	Headphone insert detect pin/Microphone insert detect pin (A/D converter)
127	VCC	VCC	-	-	-	-	-	Power supply pin
128	P70	ADC_RST	O		I	L	I	A/D convertor(AK5358) reset control pin
129	VSS	VSS	-	-	-	-	-	Ground pin
130	PE5/IRQ5/AN103	MAIN_POWER	O		L	L	L	Power supply control pin
131	PE4/AN102	CPU_POWER	O		L	L	L	CPU power supply control pin
132	PE3/AN101	AIOS4_WAKE-UP	O		L	L	L	same as NET5V_POWER,NET3.3V_POWER (This port use to control for Network Module standby mode in the future(Low : Deep Standby, High : normal))

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
133	PE2/RXD12/IRQ7-DS/AN100	AIOS4_STBY_STATUS	I	-	I	I	I	Not used (This port use to detect for Network Module standby status in the future (Low : normal, High : Deep Standby))
134	PE1/TXD12	GUI_WRITE	O		L	L	L	GUI flash rom writing control
135	PE0/SCK12	NET3.3V_POWER	O		L	L	L	Ethernet power supply control(Net3.3V)
136	P64	D5V_POWER	O		L	L	H	Digital 5V power supply control pin(3.3V and 1.8V generate from 5V)(When CEC standby mode3,set to Low)
137	P63	CEC_POWER	O		L	L	H	CEC standby power supply control(CEC5V,CEC3.3V,CEC1.8V)(When CEC standby mode3,set to Low)
138	P62	DV_POWER1	O		L	L	L	Digital video power supply (DV5V,DV3.3V) control pin
139	P61	DV_POWER2	O		L	L	L	Digital video power supply (DV1.8V) control pin
140	VSS	VSS	-		-	-	-	Ground pin
141	P60	DIR_DIN	O		L	L	L	DIR (PCM9211) control pin
142	VCC	VCC	-		-	-	-	Power supply pin
143	PD7/IRQ7/AN107	DIR_CE	O		L	L	L	DIR (PCM9211) control pin
144	PG1	DIR_DOUT	I	DA3.3Pu	I	I	I	DIR (PCM9211) control pin
145	PD6/IRQ6/AN106	DIR_CLK	O		L	L	L	DIR (PCM9211) control pin
146	PG0	DIR_RST	O		L	L	L	DIR (PCM9211) control pin
147	PD5/IRQ5/AN113	787_HAINT	I	CEC3VPu	Z		-	HDMI Rx (MN864787) audio interrupt signal det
148	PD4/IRQ4/AN112	DSP4CS	O	DA3VPu	Pd	Z	L	DSP(ADI) control pin
149	P97	DE_RST	O	Pd	Z		L	Video decoder (ADV7180) reset control pin
150	PD3/IRQ3/AN111	787_HINT	I	CEC3VPu	Z		-	HDMI Tx (MN864787) interrupt signal input pin
151	VSS	VSS	-		-	-	-	Ground pin
152	P96	787_RST	O	Pd	Z		H	HDMI Tx (MN864787) reset control pin (When CEC standby mode3,set to reset)
153	VCC	VCC	-		-	-	-	Power supply pin
154	PD2/IRQ2/AN110	788_2_HINT	I	CEC3VPu	Z		-	HDMI Rx (MN864788) interrupt signal input pin
155	P95	788_2_RST	O	Pd	Z		H	HDMI Rx (MN864788) reset control pin (When CEC standby mode3,set to reset)
156	PD1/IRQ1/AN109	788_1_HINT	I	CEC3VPu	Z		-	HDMI Rx (MN864788) interrupt signal input pin
157	P94	788_1_RST	O	Pd	Z		H	HDMI Rx (MN864788) reset control pin (When CEC standby mode3,set to reset)
158	PD0/IRQ0/AN108	ARC_RST	O	Pd	L	L	L	Reset control pin for ARC IC
159	P93/AN117	THERMAL_A(X4500H/SR7013)/NC(AV7705)	I	SW3VPu	I	L	I	Protection detect signal input pin (for power TR)
160	P92/RXD7/AN116	DA_POWER1	O		L	L	L	Digital audio power supply (DA3.3V,DA1.2V) control pin
161	P91/AN115	THERMAL_E(X4500H/SR7013)/NC(AV7705)	I/I	SW3VPu	I/I	L	I/I	Protection detect signal input pin (for Heat sink)
162	VSS	VSS	-		-	-	-	Ground pin
163	P90/TXD7/AN114	TEMP_SENSOR	I		I	L	I	Temperature sensor input pin (for SRM)
164	VCC	VCC	-		-	-	-	Power supply pin
165	P47/IRQ15-DS/AN007	ARC_INT	I	IOVC3VPu	L	L	L	ARC IC interrupt signal input pin
166	P46/IRQ14-DS/AN006	CURRENT_DET(X4500H/SR7013)/NC(AV7705)	I/O		I/L	L/L	I/L	Current level monitor pin (A/D converter)
167	P45/IRQ13-DS/AN005	AMPSIGDET(X4500H/SR7013)/NC(AV7705)	I		I	L	I	Signal level monitor pin (AD converter)
168	P44/IRQ12-DS/AN004	MODE	I		I	I	I	Region setting pin
169	P43/IRQ11-DS/AN003	KEY3	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to inturrupt)
170	P42/IRQ10-DS/AN002	KEY2	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to inturrupt)

Pin	Pin Name	Symbol	I/O	Pu/Pd	STBY	STOP	CEC STBY	Function
171	P41/IRQ9-DS/AN001	KEY1	I	M3VPu	I	I	I	Key control signalinput pin (When standby mode,set to inturrupt)
172	VREFL0	VREFL0	-		-	-	-	Ground pin
173	P40	SEL_CLK	O		L	L	L	Audio selector control pin (NJU72750/72751)
174	VREFH0	VREFH0	-		-	-	-	Power supply pin
175	AVCC0	AVCC0	-		-	-	-	Power supply pin
176	P07/IRQ15	DSP2FLAG3	I	Pd	L	L	L	DSP(ADI) control pin

## PIN Functions

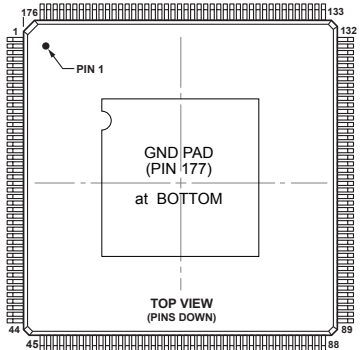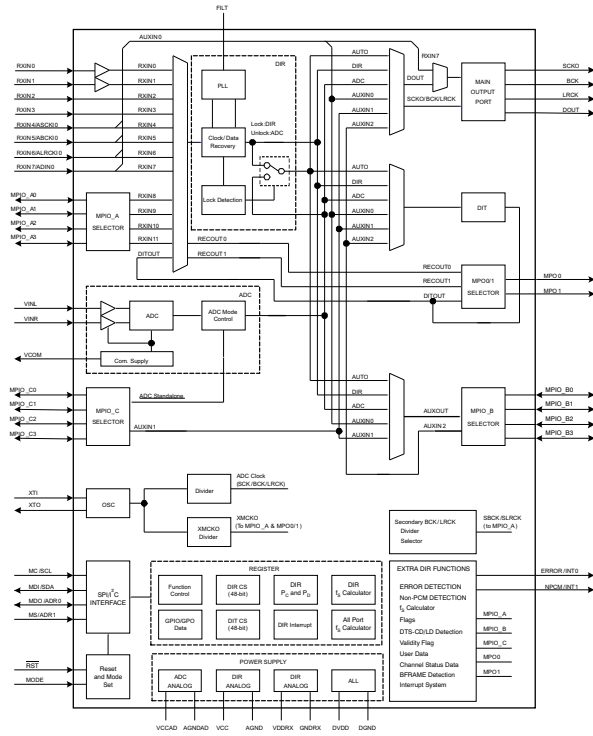


Terminal Function


Pin Name	Pin No.	Pin Name	Pin No.	Pin Name	Pin No.	Pin Name	Pin No.
SDDQM	1	V <sub>DD_EXT</sub>	45	DAI_P10	89	V <sub>DD_INT</sub>	133
MS0	2	DPL_P08	46	V <sub>DD_INT</sub>	90	FLAG0	134
SDCKE	3	DPL_P07	47	V <sub>DD_EXT</sub>	91	FLAG1	135
V <sub>DD_INT</sub>	4	V <sub>DD_INT</sub>	48	DAI_P20	92	FLAG2	136
CLK_CFG1	5	DPL_P09	49	V <sub>DD_INT</sub>	93	NC	137
ADDR0	6	DPL_P10	50	DAL_P08	94	FLAG3	138
BOOT_CFG0	7	DPL_P11	51	DAI_P14	95	NC	139
V <sub>DD_EXT</sub>	8	DPL_P12	52	DAL_P04	96	NC	140
ADDR1	9	DPL_P13	53	DAL_P18	97	V <sub>DD_EXT</sub>	141
ADDR2	10	DPL_P14	54	DAI_P17	98	NC	142
ADDR3	11	DAI_P03	55	DAI_P16	99	V <sub>DD_INT</sub>	143
ADDR4	12	NC	56	DAI_P12	100	TRST	144
ADDR5	13	V <sub>DD_EXT</sub>	57	DAI_P15	101	NC	145
BOOT_CFG1	14	NC	58	V <sub>DD_INT</sub>	102	EMU	146
GND	15	NC	59	DAI_P11	103	DATA0	147
ADDR6	16	NC	60	V <sub>DD_EXT</sub>	104	DATA1	148
ADDR7	17	NC	61	V <sub>DD_INT</sub>	105	DATA2	149
NC	18	V <sub>DD_INT</sub>	62	BOOT_CFG2	106	DATA3	150
NC	19	NC	63	V <sub>DD_INT</sub>	107	TDO	151
ADDR8	20	NC	64	AMI_ACK	108	DATA4	152
ADDR9	21	V <sub>DD_INT</sub>	65	GND	109	V <sub>DD_EXT</sub>	153
CLK_CFG0	22	NC	66	THD_M	110	DATA5	154
V <sub>DD_INT</sub>	23	NC	67	THD_P	111	DATA6	155
CLKIN	24	V <sub>DD_INT</sub>	68	V <sub>DD_THD</sub>	112	V <sub>DD_INT</sub>	156
XTAL	25	NC	69	V <sub>DD_INT</sub>	113	DATA7	157
ADDR10	26	WDTRSTO	70	V <sub>DD_INT</sub>	114	TDI	158
SDA10	27	NC	71	MST	115	SDCLK	159
V <sub>DD_EXT</sub>	28	V <sub>DD_EXT</sub>	72	V <sub>DD_INT</sub>	116	V <sub>DD_EXT</sub>	160
V <sub>DD_INT</sub>	29	DAI_P07	73	WDT_CLKO	117	DATA8	161
ADDR11	30	DAI_P13	74	WDT_CLKIN	118	DATA9	162
ADDR12	31	DAI_P19	75	V <sub>DD_EXT</sub>	119	DATA10	163
ADDR17	32	DAI_P01	76	ADDR23	120	TCK	164
ADDR13	33	DAI_P02	77	ADDR22	121	DATA11	165
V <sub>DD_INT</sub>	34	V <sub>DD_INT</sub>	78	ADDR21	122	DATA12	166
ADDR18	35	NC	79	V <sub>DD_INT</sub>	123	DATA14	167
RESETOUT/RUNRSTIN	36	NC	80	ADDR20	124	DATA13	168
V <sub>DD_INT</sub>	37	NC	81	ADDR19	125	V <sub>DD_INT</sub>	169
DPL_P01	38	NC	82	V <sub>DD_EXT</sub>	126	DATA15	170
DPL_P02	39	NC	83	ADDR16	127	SDWE	171
DPL_P03	40	V <sub>DD_EXT</sub>	84	ADDR15	128	SDRA5	172
V <sub>DD_INT</sub>	41	V <sub>DD_INT</sub>	85	V <sub>DD_INT</sub>	129	RESET	173
DPL_P05	42	DAL_P06	86	ADDR14	130	TMS	174
DPL_P04	43	DAI_P05	87	AMI_WR	131	SDCA5	175
DPL_P06	44	DAI_P09	88	AMI_RD	132	V <sub>DD_INT</sub>	176
						GND	177*



### Block Diagram

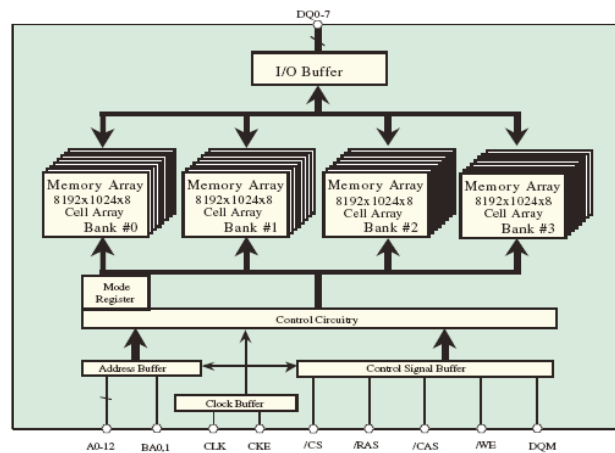

### Pin Function

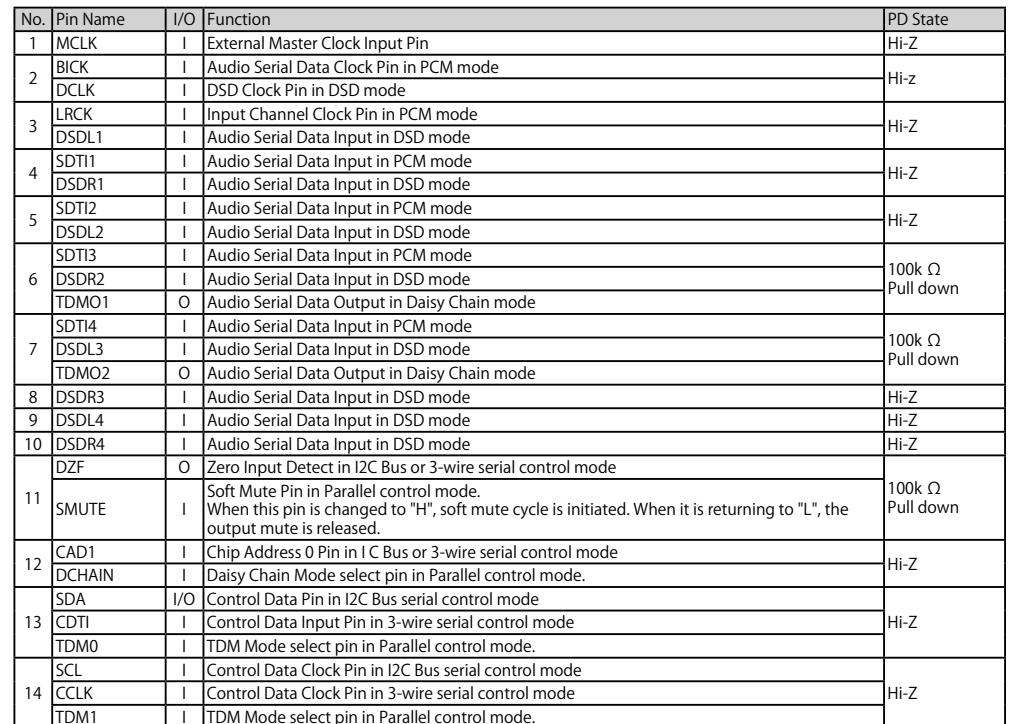




No.	Pin Name	I/O	Function	PD State
15	CAD0_I2C	I	Chip Address 0 Pin in I2C Bus serial control mode	Hi-Z
	CSN	I	Chip Select Pin in 3-wire serial control mode	
	DIF	I	Audio Data Format Select in Parallel control mode. "L": 32-bit MSB, "H": 32-bit I2S	
16	PS	I	(I2C pin = "H") Control Mode Select Pin "L": I2C Bus serial control mode, "H": Parallel control mode.	Hi-Z
	CAD0_SPI	I	(I2C pin = "L") Chip Address 0 Pin in 3-wire serial control mode	
17	I2C	I	Control Mode Select Pin "L": 3-wire serial control mode "H": I2C Bus serial control mode or Parallel control mode.	Hi-Z
18	AOUTL1P	O	Lch Positive Analog Output 1 Pin	Hi-Z
19	AOUTL1N	O	Lch Negative Analog Output 1 Pin	Hi-Z
20	VREFL1	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
21	VREFH1	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
22	AOUTR1N	O	Rch Negative Analog Output 1 Pin	Hi-Z
23	AOUTR1P	O	Rch Positive Analog Output 1 Pin	Hi-Z
24	AOUTL2P	O	Lch Positive Analog Output 2 Pin	Hi-Z
25	AOUTL2N	O	Lch Negative Analog Output 2 Pin	Hi-Z
26	VREFL2	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
27	VREFH2	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
28	AOUTR2N	O	Rch Negative Analog Output 2 Pin	Hi-Z
29	AOUTR2P	O	Rch Positive Analog Output 2 Pin	Hi-Z
30	AVSS	-	Analog Ground Pin	—
31	AVDD	-	Analog Power Supply Pin, 3.0V-5.5V	—
32	AOUTL3P	O	Lch Positive Analog Output 3 Pin	Hi-Z
33	AOUTL3N	O	Lch Negative Analog Output 3 Pin	Hi-Z
34	VREFH3	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
35	VREFL3	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
36	AOUTR3N	O	Rch Negative Analog Output 3 Pin	Hi-Z
37	AOUTR3P	O	Rch Positive Analog Output 3Pin	Hi-Z
38	AOUTL4P	O	Lch Positive Analog Output 4 Pin	Hi-Z
39	AOUTL4N	O	Lch Negative Analog Output 4 Pin	Hi-Z
40	VREFH4	I	Positive Voltage Reference Input Pin, AVDD	Hi-Z
41	VREFL4	I	Negative Voltage Reference Input Pin, AVSS	Hi-Z
42	AOUTR4N	O	Rch Negative Analog Output 4 Pin	Hi-Z
43	AOUTR4P	O	Rch Positive Analog Output 4 Pin	Hi-Z
44	LDOE	I	Internal LDO Enable Pin. "L": Disable, "H": Enable	Hi-Z
45	TVDD	-	Digital Power Supply Pin, 3.0V-3.6V	—
46	DVSS	-	Digital Ground Pin	—
47	VDD18	O	LDO Output Pin (LDOE pin = "H") This pin should be connected to DVSS with 1.0μF.	(Note 4)
		I	1.8V Power Input Pin (LDOE pin = "L")	
48	PDN	I	Power-Down & Reset Pin When this pin is "L", the AK4458 is powered-down and the control registers are reset to default state.	Hi-Z

Note 2. All input pins except internal pull-up/down pins should not be left floating.

Note 3. PCM mode and DSD mode are controlled by registers. Daisy Chain mode is controlled by both registers and pins.

Note 4. This pin outputs DVSS when the LDOE pin = "H" and Hi-z when the LDOE pin = "L".

## FUNCTIONAL BLOCK DIAGRAM

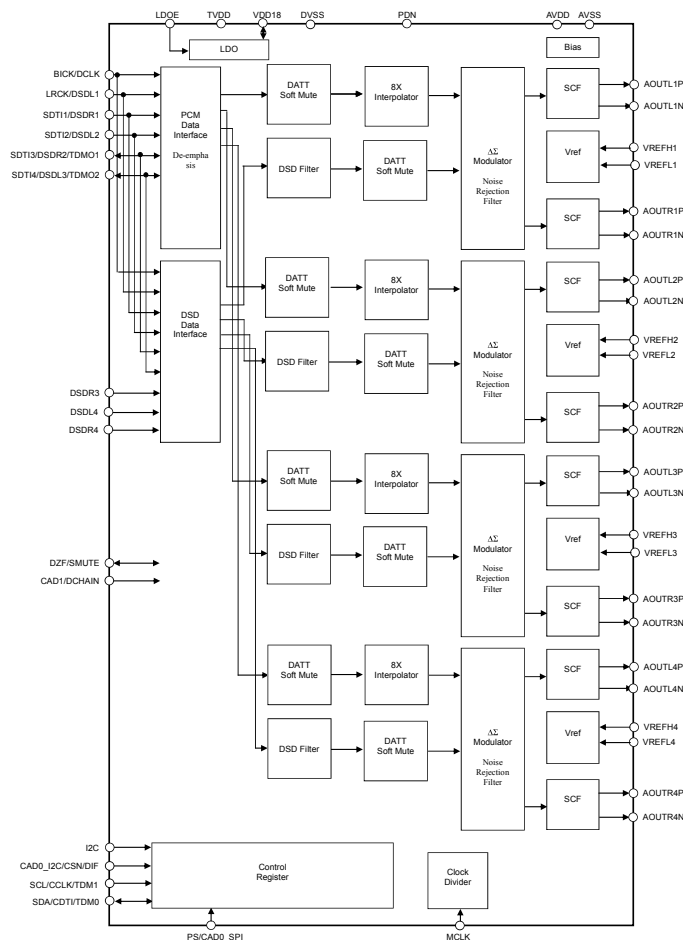

PCM5100 (DIGITAL : IC321, IC322, IC323)

PCM510x (top view)

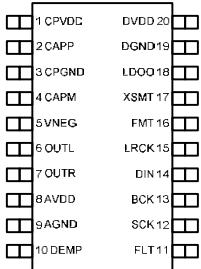


Table 2. TERMINAL FUNCTIONS, PCM510x

TERMINAL NAME	NO.	I/O	DESCRIPTION
CPVDD	1	-	Charge pump power supply, 3.3V
CAPP	2	O	Charge pump flying capacitor terminal for positive rail
CPGND	3	-	Charge pump ground
CAPM	4	O	Charge pump flying capacitor terminal for negative rail
VNEG	5	O	Negative charge pump rail terminal for decoupling, -3.3V
OUTL	6	O	Analog output from DAC left channel
OUTR	7	O	Analog output from DAC right channel
AVDD	8	-	Analog power supply, 3.3V
AGND	9	-	Analog ground
DEMP	10	I	De-emphasis control for 44.1kHz sampling rate <sup>(1)</sup> : Off (Low) / On (High)
FLT	11	I	Filter select : Normal latency (Low) / Low latency (High)
SCK	12	I	System clock input
BCK	13	I	Audio data bit clock input
DIN	14	I	Audio data input
LRCK	15	I	Audio data word clock input
FMT	16	I	Audio format selection : I <sup>2</sup> S (Low) / Left justified (High)
XSMT	17	I	Soft mute control : Soft mute (Low) / soft un-mute (High)
LDOO	18	-	Internal logic supply rail terminal for decoupling
DGND	19	-	Digital ground
DVDD	20	-	Digital power supply, 3.3V

PCM5100 Block Diagram


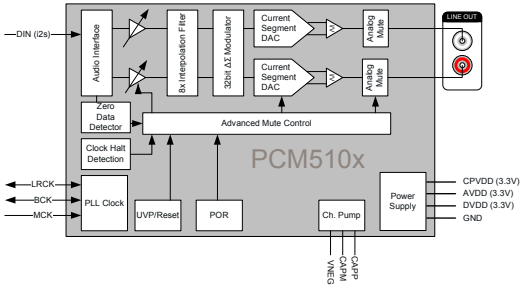



Figure 1. PCM510x Functional Block Diagram

NJU72343 (INPUT : IC471, IC491)

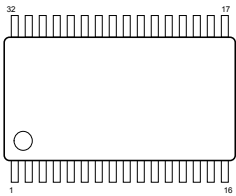


No.	Symbol	Function	No.	Symbol	Function
1	AREF	Analog reference potential	17	DATA	IC control data input
2	ADR	Address selection	18	CLOCK	IC control clock input
3	InA2	Ach input2	19	VDDOUT	Digital power supply output
4	InB2	Bch input2	20	AREF	Analog reference potential
5	InA1	Ach input1	21	OutH	Hch output
6	InB1	Bch input1	22	OutG	Gch output
7	InC	Cch input	23	OutF	Fch output
8	InD	Dch input	24	OutE	Ech output
9	InE	Ech input	25	OutD	Dch output
10	InF	Fch input	26	OutC	Cch output
11	InG1	Gch input1	27	OutB	Bch output
12	InH1	Hch input1	28	OutA	Ach output
13	InG2	Cch input2	29	AREF	Analog reference potential
14	InH2	Dch input2	30	V-	Power supply(-)
15	MUTE	External mute control	31	AREF	Analog reference potential
16	REF	Digital reference potential	32	V+	Power supply(+)

NJU72750 (INPUT : IC473, IC474, IC475, IC478)

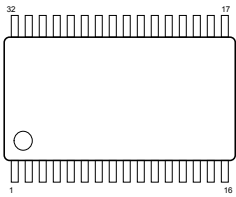

No.	Symbol	Function	No.	Symbol	Function
1	V+	Power supply(+)	17	DATA	IC control data input
2	InA1	Ach input1	18	CLOCK	IC control clock input
3	InB1	Bch input1	19	NC	-
4	InA2	Ach input2	20	NC	-
5	InB2	Bch input2	21	OutB3	Bch output3
6	InA3	Ach input3	22	OutA3	Ach output3
7	InB3	Bch input3	23	REF_B	Bch reference potential
8	InA4	Ach input4	24	OutB2	Bch output2
9	InB4	Bch input4	25	OutA2	Ach output2
10	InA5	Ach input5	26	REF_A	Ach reference potential
11	InB5	Bch input5	27	OutB1	Bch output1
12	InA6	Ach input6	28	OutA1	Ach output1
13	InB6	Bch input6	29	NC	-
14	InA7	Ach input7	30	ADR0	Address selection pin 0
15	InB7	Bch input7	31	ADR1	Address selection pin 1
16	REF	BIAS reference potential	32	V-	Power supply(-)


AVDM2000 (VIDEO : IC511)

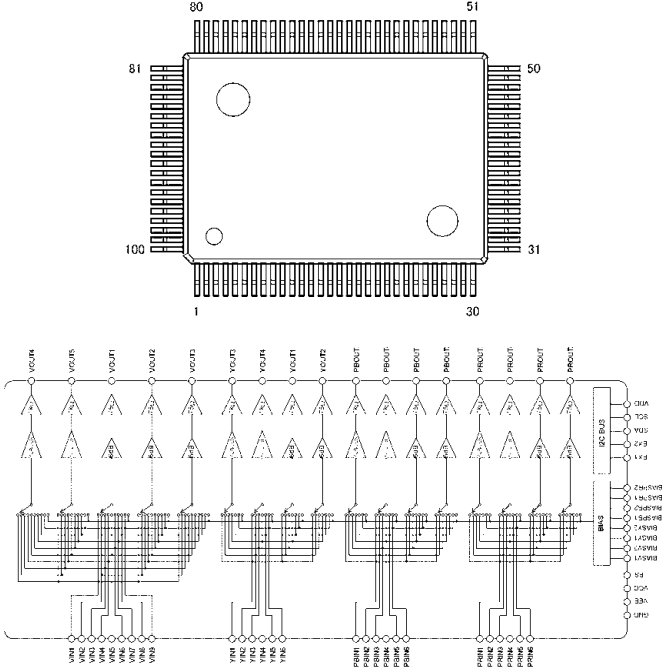

Pin No.	記 号	Pin No.	記 号	Pin No.	記 号	Pin No.	記 号
1	VEE	26	VEE	51	PROUT3	76	BIASV2
2	NC	27	NC	52	PROUT2	77	VOUT5
3	PS	28	BIASPB1	53	PROUT1	78	NC
4	NC	29	NC	54	VCC	79	VOUT4
5	SDA	30	PBIN1	55	NC	80	NC
6	SCL	31	PBIN2	56	VEE	81	VOUT3
7	NC	32	PBIN3	57	NC	82	VOUT2
8	EX1	33	PBIN4	58	BIASPB2	83	VOUT1
9	EX2	34	PBIN5	59	PBOUT4	84	VCC
10	NC	35	PBIN6	60	PBOUT3	85	VEE
11	VEE	36	VCC	61	PBOUT2	86	BIASV1
12	NC	37	VEE	62	PBOUT1	87	VIN1
13	BIASY1	38	BIASPR1	63	VCC	88	VIN2
14	NC	39	PRIN6	64	NC	89	VIN3
15	YIN1	40	PRIN5	65	VEE	90	NC
16	YIN2	41	PRIN4	66	NC	91	VIN4
17	NC	42	PRIN3	67	BIASY2	92	VIN5
18	YIN3	43	PRIN2	68	YOUT4	93	VIN6
19	YIN4	44	PRIN1	69	YOUT3	94	VIN7
20	NC	45	VCC	70	YOUT2	95	VIN8
21	YIN5	46	VEE	71	YOUT1	96	VIN9
22	YIN6	47	BIASPR2	72	VCC	97	VCC
23	NC	48	NC	73	NC	98	NC
24	VCC	49	PROUT4	74	VEE	99	VDD
25	NC	50	NC	75	NC	100	GND

## 2. FL DISPLAY

### FLD (17-BT-40GINK) (FRONT : FL601)

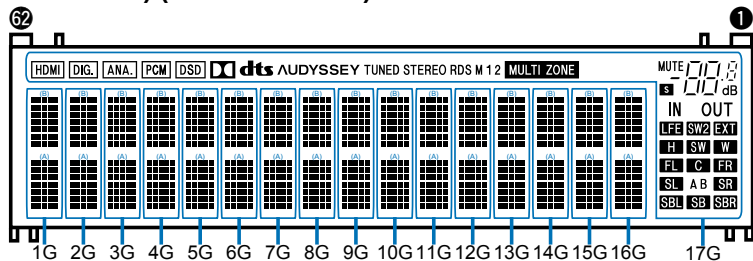

#### PIN CONNECTION

CONNECTION	PIN NO.
F2	62
NX	61
NP	60
NP	59
LGND	58
PGND	57
VH	56
VDD	55
OSC	54
RESET	53
CS	52
CP	51

CONNECTION	PIN NO.
DA	50
TSA	49
Q17G	48
17G	47
NX	46
NX	45
NX	44
NX	43
NX	42
NX	41
NX	40
NX	39
NX	38
NX	37
NX	36
NX	35
NX	34
NX	33
NX	32
NX	31
NX	30
NX	29
NX	28
NX	27
NX	26
NX	25
NX	24
NX	23
NX	22
NX	21
NX	20
NX	19
NX	18
NX	17
NX	16
NX	15
NX	14
NX	13
NX	12
NX	11
NX	10
NX	9
NX	8
NX	7
NX	6
NP	5
NP	4
NP	3
NP	2
F1	1

#### NOTE

- 1) F1, F2 ----Filament
- 2) NP -----No pin
- 3) DL -----Datum Line
- 4) NX -----No extend pin
- 5) 17G ----Grid
- 6) Q17G ----Driver Output Port.
- 7) LGND ----Logic GND pin
- 8) PGND ----Power GND pin
- 9) VH -----High Voltage Supply pin
- 10) VDD -----Logic Voltage Supply pin
- 11) OSC ----Pin for self-oscillation
- 12) RESET --Reset Input
- 13) CS -----Chip Select Input pin
- 14) CP ----Shift Register Clock
- 15) DA ----Serial Data Input
- 16) TSA, B --Test pin
- 17) Solder composition is Sn-3Ag-0.5Cu.
- 18) Field of vision is a minimum of 21.8° from the lower side.

#### PATTERN DETAIL

1G-16G				
1-1	2-1	3-1	4-1	5-1
1-2	2-2	3-2	4-2	5-2
1-3	2-3	3-3	4-3	5-3
1-4	2-4	3-4	4-4	5-4
1-5	2-5	3-5	4-5	5-5
1-6	2-6	3-6	4-6	5-6
1-7	2-7	3-7	4-7	5-7

#### ANODE CONNECTION

	1G-16G	17G
D0A	1-1A	-
D1A	2-1A	-
D2A	3-1A	-
D3A	4-1A	-
D4A	5-1A	-
D5A	1-2A	-
D6A	2-2A	-
D7A	3-2A	-
D8A	4-2A	-
D9A	5-2A	-
D10A	1-3A	dB
D11A	2-3A	Dp
D12A	3-3A	3d
D13A	4-3A	3e
D14A	5-3A	3c
D15A	1-4A	3g
D16A	2-4A	3f
D17A	3-4A	3b
D18A	4-4A	3a
D19A	5-4A	2d
D20A	1-5A	2e
D21A	2-5A	2c
D22A	3-5A	2g
D23A	4-5A	2f
D24A	5-5A	2b
D25A	1-6A	2a
D26A	2-6A	1d
D27A	3-6A	1e
D28A	4-6A	1c
D29A	5-6A	1g
D30A	1-7A	1f
D31A	2-7A	1b
D32A	3-7A	1a
D33A	4-7A	S1
D34A	5-7A	S

	1G-16G	17G
D0B	1-1B	HDMI
D1B	2-1B	DIG
D2B	3-1B	ANA
D3B	4-1B	PCM
D4B	5-1B	DSD
D5B	1-2B	DT
D6B	2-2B	dts
D7B	3-2B	AUDYSSEY
D8B	4-2B	TUNED
D9B	5-2B	STEREO
D10B	1-3B	RDS
D11B	2-3B	M
D12B	3-3B	1
D13B	4-3B	2
D14B	5-3B	MULTI ZONE
D15B	1-4B	INDEXING
D16B	2-4B	MUTE
D17B	3-4B	IN
D18B	4-4B	OUT
D19B	5-4B	LFE
D20B	1-5B	SW2
D21B	2-5B	EXT
D22B	3-5B	H
D23B	4-5B	SW
D24B	5-5B	W
D25B	1-6B	FL
D26B	2-6B	C
D27B	3-6B	FR
D28B	4-6B	SL
D29B	5-6B	A
D30B	1-7B	B
D31B	2-7B	SR
D32B	3-7B	SBL
D33B	4-7B	SB
D34B	5-7B	SBR

Before Servicing  
This Unit

Electrical

Mechanical

Repair Information

Updating

### 3. Remote Code Table

FORMAT SHARP

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1

SYSTEM ADDRESS(C1~C5): 01000, EXTENSION BIT(C12,C13): 11

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230000	000000		RCSHP0230016	000010	FR LEVEL DOWN
RCSHP0230001	100000	POWER	RCSHP0230017	100010	
RCSHP0230002	010000	FL LEVEL UP	RCSHP0230018	010010	
RCSHP0230003	110000	PHONO	RCSHP0230019	110010	
RCSHP0230004	001000	CD	RCSHP0230020	001010	
RCSHP0230005	101000	TUNER	RCSHP0230021	101010	
RCSHP0230006	011000		RCSHP0230022	011010	SR LEVEL UP
RCSHP0230007	111000	FL LEVEL DOWN	RCSHP0230023	111010	SR LEVEL DOWN
RCSHP0230008	000100	CBU/SAT	RCSHP0230024	000110	VIDEO SELECT
RCSHP0230009	100100	TV AUDIO	RCSHP0230025	100110	
RCSHP0230010	010100	Blu-ray	RCSHP0230026	010110	
RCSHP0230011	110100	FR LEVEL UP	RCSHP0230027	110110	
RCSHP0230012	001100	AUX1	RCSHP0230028	001110	INPUT MODE ANALOG
RCSHP0230013	101100	GAME	RCSHP0230029	101110	CURSOR RIGHT
RCSHP0230014	011100	MEDIA PLAYER	RCSHP0230030	011110	STATUS
RCSHP0230015	111100		RCSHP0230031	111110	INFO

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230032	000001	ENTER	RCSHP0230048	000011	MUTING
RCSHP0230033	100001	POWER ON	RCSHP0230049	100011	MASTER VOLUME UP
RCSHP0230034	010001	POWER OFF	RCSHP0230050	010011	MASTER VOLUME DOWN
RCSHP0230035	110001	DVD	RCSHP0230051	110011	SL LEVEL UP
RCSHP0230036	001001	STANDARD(DOLBY/DTS SURR.)	RCSHP0230052	001011	SL LEVEL DOWN
RCSHP0230037	101001	SW LEVEL DOWN	RCSHP0230053	101011	CENTER LEVEL UP
RCSHP0230038	011001	DSP SIMULATION	RCSHP0230054	011011	CENTER LEVEL DOWN

RCSHP0230039	111001	SB/SBL LEVEL UP	RCSHP0230055	111011	SBR LEVEL UP
RCSHP0230040	000101		RCSHP0230056	000111	SBR LEVEL DOWN
RCSHP0230041	100101		RCSHP0230057	100111	TONE CONTROL OFF
RCSHP0230042	010101		RCSHP0230058	010111	TONE CONTROL ON
RCSHP0230043	110101	SB/SBL LEVEL DOWN	RCSHP0230059	110111	
RCSHP0230044	001101	SW LEVEL UP	RCSHP0230060	001111	
RCSHP0230045	101101	FRONT SPEAKER	RCSHP0230061	101111	
RCSHP0230046	011101	SP-A, FRONT	RCSHP0230062	011111	
RCSHP0230047	111101	SP-B, FRONT	RCSHP0230063	111111	

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1

SYSTEM ADDRESS(C1~C5): 00110, EXTENSION BIT (C12,C13): 01

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C20000	000000	ALL BASS DOWN	RCSHP0C20016	000010	ZONE2 CD
RCSHP0C20001	100000		RCSHP0C20017	100010	ZONE2 TUNER
RCSHP0C20002	010000	SURROUND BACK	RCSHP0C20018	010010	ZONE2 Blu-ray
RCSHP0C20003	110000	MASTER VOL. PRESET1(0dB)	RCSHP0C20019	110010	ZONE2 AUX1
RCSHP0C20004	001000		RCSHP0C20020	001010	ZONE2 GAME
RCSHP0C20005	101000	MASTER VOL. PRESET2(20dB)	RCSHP0C20021	101010	
RCSHP0C20006	011000	MASTER VOL. PRESET3(40dB)	RCSHP0C20022	011010	ZONE2 PRESET UP
RCSHP0C20007	111000	ZONE2 VOL. PRESET1(0dB)	RCSHP0C20023	111010	ZONE2 PRESET DOWN
RCSHP0C20008	000100	ZONE2 VOL. PRESET2(20dB)	RCSHP0C20024	000110	
RCSHP0C20009	100100	ZONE2 VOL. PRESET3(40dB)	RCSHP0C20025	100110	ZONE2 MEDIA PLAYER
RCSHP0C20010	010100	ZONE2 CBU/SAT	RCSHP0C20026	010110	
RCSHP0C20011	110100		RCSHP0C20027	110110	ZONE2 TV AUDIO
RCSHP0C20012	001100	ZONE3 VOL. PRESET1(0dB)	RCSHP0C20028	001110	
RCSHP0C20013	101100	ZONE2 VOLUME UP	RCSHP0C20029	101110	STEREO
RCSHP0C20014	011100	ZONE2 VOLUME DOWN	RCSHP0C20030	011110	DIRECT
RCSHP0C20015	111100	ZONE2 PHONO	RCSHP0C20031	111110	ZONE3 VOL. PRESET2(0dB)

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C20032	000001	SETUP MENU	RCSHP0C20048	000011	
RCSHP0C20033	100001		RCSHP0C20049	100011	
RCSHP0C20034	010001	ZONE3 VOL. PRESET2(0dB)	RCSHP0C20050	010011	
RCSHP0C20035	110001	CURSOR UP	RCSHP0C20051	110011	
RCSHP0C20036	001001	CURSOR DOWN	RCSHP0C20052	001011	
RCSHP0C20037	101001		RCSHP0C20053	101011	
RCSHP0C20038	011001		RCSHP0C20054	011011	INPUT MODE

RCSHP0C20039	111001		RCSHP0C20055	111011	ALL TREBLE UP
RCSHP0C20040	000101	MULTI CH STEREO	RCSHP0C20056	000111	ALL TREBLE DOWN
RCSHP0C20041	100101		RCSHP0C20057	100111	
RCSHP0C20042	010101		RCSHP0C20058	010111	
RCSHP0C20043	110101		RCSHP0C20059	110111	
RCSHP0C20044	001101		RCSHP0C20060	001111	
RCSHP0C20045	101101		RCSHP0C20061	101111	
RCSHP0C20046	011101		RCSHP0C20062	011111	ZONE2 DVD
RCSHP0C20047	111101	CH LEVEL	RCSHP0C20063	111111	ALL BASS UP

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, I=INVERTED /REMOTE ID: 1  
SYSTEM ADDRESS(C1~C5): 00110, EXTENSION BIT (C12,C13): 10

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C10032	000001		RCSHP0C10048	000011	
RCSHP0C10033	100001		RCSHP0C10049	100011	
RCSHP0C10034	010001		RCSHP0C10050	010011	
RCSHP0C10035	110001		RCSHP0C10051	110011	
RCSHP0C10036	001001		RCSHP0C10052	001011	
RCSHP0C10037	101001		RCSHP0C10053	101011	
RCSHP0C10038	011001		RCSHP0C10054	011011	
RCSHP0C10039	111001		RCSHP0C10055	111011	
RCSHP0C10040	000101		RCSHP0C10056	000111	
RCSHP0C10041	100101		RCSHP0C10057	100111	
RCSHP0C10042	010101		RCSHP0C10058	010111	
RCSHP0C10043	110101		RCSHP0C10059	110111	
RCSHP0C10044	001101		RCSHP0C10060	001111	
RCSHP0C10045	101101		RCSHP0C10061	101111	
RCSHP0C10046	011101		RCSHP0C10062	011111	
RCSHP0C10047	111101		RCSHP0C10063	111111	CURSOR LEFT

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, I=INVERTED /REMOTE ID: 1  
SYSTEM ADDRESS(C1~C5): 00110, EXTENSION BIT (C12,C13): 11

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0C30000	000000		RCSHP0C30016	000010	
RCSHP0C30001	100000	1	RCSHP0C30017	100010	
RCSHP0C30002	010000	2	RCSHP0C30018	010010	DIRECT SEARCH (RDS SEARCH ※EU only)
RCSHP0C30003	110000	3	RCSHP0C30019	110010	
RCSHP0C30004	001000	4	RCSHP0C30020	001010	PTY ※EU only
RCSHP0C30005	101000	5	RCSHP0C30021	101010	TUNER PRESET DOWN
RCSHP0C30006	011000	6	RCSHP0C30022	011010	TUNER PRESET UP
RCSHP0C30007	111000	7	RCSHP0C30023	111010	TUNER BAND
RCSHP0C30008	000100	8	RCSHP0C30024	000110	TUNER TUNING MODE
RCSHP0C30009	100100	9	RCSHP0C30025	100110	TUNER TUNING UP
RCSHP0C30010	010100	0	RCSHP0C30026	010110	TUNER TUNING DOWN
RCSHP0C30011	110100		RCSHP0C30027	110110	
RCSHP0C30012	001100	TUNER MEMORY	RCSHP0C30028	001110	
RCSHP0C30013	101100		RCSHP0C30029	101110	
RCSHP0C30014	011100	RT ※EU only	RCSHP0C30030	011110	
RCSHP0C30015	111100		RCSHP0C30031	111110	DIMMER

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, I=INVERTED /REMOTE ID: 1  
SYSTEM ADDRESS (C1~C5): 01000, EXTENSION BIT (C12,C13): 10

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0210000	000000		RCSHP0210016	000010	
RCSHP0210001	100000		RCSHP0210017	100010	
RCSHP0210002	010000		RCSHP0210018	010010	ZONE3 TV AUDIO
RCSHP0210003	110000		RCSHP0210019	110010	ZONE3 CBL/SAT
RCSHP0210004	001000		RCSHP0210020	001010	ZONE3 GAME
RCSHP0210005	101000		RCSHP0210021	101010	ZONE3 MEDIAPLAYER
RCSHP0210006	011000		RCSHP0210022	011010	
RCSHP0210007	111000		RCSHP0210023	111010	ZONE3 AUX1
RCSHP0210008	000100	ZONE3 TUNER	RCSHP0210024	000110	
RCSHP0210009	100100	ZONE3 PHONO	RCSHP0210025	100110	
RCSHP0210010	010100	ZONE3 CD	RCSHP0210026	010110	
RCSHP0210011	110100		RCSHP0210027	110110	
RCSHP0210012	001100		RCSHP0210028	001110	
RCSHP0210013	101100		RCSHP0210029	101110	ZONE2 ON/OFF
RCSHP0210014	011100	ZONE3 DVD	RCSHP0210030	011110	
RCSHP0210015	111100	ZONE3 Blu-ray	RCSHP0210031	111110	

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0210032	000001		RCSHP0210048	000011	
RCSHP0210033	100001		RCSHP0210049	100011	
RCSHP0210034	010001		RCSHP0210050	010011	
RCSHP0210035	110001		RCSHP0210051	110011	
RCSHP0210036	001001		RCSHP0210052	001011	
RCSHP0210037	101001	ZONE3 VOLUME DOWN	RCSHP0210053	101011	
RCSHP0210038	011001	ZONE3 VOLUME UP	RCSHP0210054	011011	
RCSHP0210039	111001		RCSHP0210055	111011	

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0210040	000101		RCSHP0210056	000111	
RCSHP0210041	100101		RCSHP0210057	100111	MAIN ZONE ON
RCSHP0210042	010101	PURE DIRECT	RCSHP0210058	010111	MAIN ZONE OFF
RCSHP0210043	110101		RCSHP0210059	110111	ZONE2 ON
RCSHP0210044	001101		RCSHP0210060	001111	ZONE2 OFF
RCSHP0210045	101101		RCSHP0210061	101111	ZONE3 ON
RCSHP0210046	011101		RCSHP0210062	011111	ZONE3 OFF
RCSHP0210047	111101		RCSHP0210063	111111	

FORMAT: SHARP / DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED, 1=INVERTED /REMOTE ID: 1  
SYSTEM ADDRESS (C1~C5): 0 0 1 0 0 , EXTENSION BIT (C12,C13): 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0420000	0 0 0 0 0 0		RCSHP0420016	0 0 0 0 1 0	
RCSHP0420001	1 0 0 0 0 0		RCSHP0420017	1 0 0 0 1 0	
RCSHP0420002	0 1 0 0 0 0		RCSHP0420018	0 1 0 0 1 0	
RCSHP0420003	1 1 0 0 0 0	ROCK ARENA	RCSHP0420019	1 1 0 0 1 0	
RCSHP0420004	0 0 1 0 0 0	JAZZ CLUB	RCSHP0420020	0 0 1 0 1 0	
RCSHP0420005	1 0 1 0 0 0		RCSHP0420021	1 0 1 0 1 0	
RCSHP0420006	0 1 1 0 0 0	MONO MOVIE	RCSHP0420022	0 1 1 0 1 0	
RCSHP0420007	1 1 1 0 0 0	MATRIX	RCSHP0420023	1 1 1 0 1 0	
RCSHP0420008	0 0 0 1 0 0	VIDEO GAME	RCSHP0420024	0 0 0 1 1 0	
RCSHP0420009	1 0 0 1 0 0	VIRTUAL	RCSHP0420025	1 0 0 1 1 0	
RCSHP0420010	0 1 0 1 0 0		RCSHP0420026	0 1 0 1 1 0	
RCSHP0420011	1 1 0 1 0 0		RCSHP0420027	1 1 0 1 1 0	
RCSHP0420012	0 0 1 1 0 0		RCSHP0420028	0 0 1 1 1 0	
RCSHP0420013	1 0 1 1 0 0		RCSHP0420029	1 0 1 1 1 0	MultEQ XT32
RCSHP0420014	0 1 1 1 0 0		RCSHP0420030	0 1 1 1 1 0	
RCSHP0420015	1 1 1 1 0 0		RCSHP0420031	1 1 1 1 1 0	

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0420032	0 0 0 0 1 1		RCSHP0420048	0 0 0 0 1 1	
RCSHP0420033	1 0 0 0 1 1		RCSHP0420049	1 0 0 0 1 1	
RCSHP0420034	0 1 0 0 1 1		RCSHP0420050	0 1 0 0 1 1	
RCSHP0420035	1 1 0 0 1 1		RCSHP0420051	1 1 0 0 1 1	INPUT MDOE AUTO
RCSHP0420036	0 0 1 0 1 1		RCSHP0420052	0 0 1 0 1 1	
RCSHP0420037	1 0 1 0 1 1		RCSHP0420053	1 0 1 0 1 1	
RCSHP0420038	0 1 1 0 1 1		RCSHP0420054	0 1 1 0 1 1	
RCSHP0420039	1 1 1 0 1 1		RCSHP0420055	1 1 1 0 1 1	

RCSHP0420040	0 0 0 1 0 1		RCSHP0420056	0 0 0 1 1 1	
RCSHP0420041	1 0 0 1 0 1		RCSHP0420057	1 0 0 1 1 1	
RCSHP0420042	0 1 0 1 0 1		RCSHP0420058	0 1 0 1 1 1	
RCSHP0420043	1 1 0 1 0 1		RCSHP0420059	1 1 0 1 1 1	
RCSHP0420044	0 0 1 1 0 1		RCSHP0420060	0 0 1 1 1 1	
RCSHP0420045	1 0 1 1 0 1		RCSHP0420061	1 0 1 1 1 1	
RCSHP0420046	0 1 1 1 0 1		RCSHP0420062	0 1 1 1 1 1	
RCSHP0420047	1 1 1 1 0 1		RCSHP0420063	1 1 1 1 1 1	

FORMAT KASEIKYO  
DATA CONSTRUCTION 48bits

DENON CODE																Parity				GENRE1(*1)			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	*	*	*	*
GENRE2(*2)								Data				ID(*3)				Parity(*5)							
25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*

(\*5) Parity :  
Delimit of each to 8 bits, and add the 3rd byte and the 4th byte and the 5th byte with modulo 2(exclusive-OR).  
3rd byte ( 17 - 24 bit)  
4th byte ( 25 - 32 bit)  
5th byte ( 33 - 40 bit)

REMOTE ID SETTING: (default ID 1)

ID No.	ZONE/DEVICE	GENRE1(*1)				GENRE2(*2)				ID(*3)		
		21	22	23	24	25	26	27	28	39	40	
1	MAIN ZONE	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	ZONE2	0	0	1	0	1	1	0	0	0	0	SHARP&K4-3
	ZONE3	0	0	1	0	1	0	1	0	0	0	SHARP&K4-5
	TUNER	0	0	1	0	1	0	0	0	0	0	SHARP&K4-1
	HEOS MUSIC	0	0	1	0	1	1	1	0	0	0	K4-7
2	MAIN ZONE	0	0	1	0	0	1	0	0	1	0	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	0	K4-4
	ZONE3	0	0	1	0	0	1	1	0	1	0	K4-6
	TUNER	0	0	1	0	0	1	0	0	1	0	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	0	K4-8
3	MAIN ZONE	0	0	1	0	0	1	0	0	0	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	0	1	K4-4
	ZONE3	0	0	1	0	0	1	1	0	0	1	K4-6
	TUNER	0	0	1	0	0	1	0	0	0	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	0	1	K4-8
4	MAIN ZONE	0	0	1	0	0	1	0	0	1	1	K4-2
	ZONE2	0	0	1	0	0	0	1	0	1	1	K4-4
	ZONE3	0	0	1	0	0	1	1	0	0	1	K4-6
	TUNER	0	0	1	0	0	1	0	0	1	1	K4-2
	HEOS MUSIC	0	0	1	0	0	0	0	1	1	1	K4-8

MAIN ZONE

REMOTE ID SET: 1

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				1			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	1	0	1	0

REMOTE ID SET: 2-4

DENON CODE																Parity				GENRE1				GENRE2			
4				5				2				3				0				4				2			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	1	0	0

No.	Data																ID		parity								Key Name
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48							
RCKSK0410001	1	0	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ALL POWER ON/OFF
RCKSK0410002	0	1	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ALL POWER ON
RCKSK0410003	1	1	0	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	ALL POWER OFF
RCKSK0410006	0	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	MAIN ZONE ON
RCKSK0410007	1	1	1	0	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	MAIN ZONE OFF
RCKSK0410012	0	0	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TRIGGER-1 ON
RCKSK0410013	1	0	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TRIGGER-1 OFF
RCKSK0410014	0	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TRIGGER-2 ON
RCKSK0410015	1	1	1	1	0	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	TRIGGER-2 OFF
RCKSK0410016	0	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY1
RCKSK0410017	1	0	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY2
RCKSK0410018	0	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY3
RCKSK0410019	1	1	0	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY4
RCKSK0410020	0	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY5
RCKSK0410021	1	0	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY6
RCKSK0410022	0	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY7
RCKSK0410023	1	1	1	0	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY8
RCKSK0410024	0	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY9
RCKSK0410025	1	0	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	KEY0
RCKSK0410027	1	1	0	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR UP
RCKSK0410028	0	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR DOWN
RCKSK0410029	1	0	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	CURSOR LEFT

RCKSK0410030	0	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	CURSOR RIGHT
RCKSK0410031	1	1	1	1	1	0	0	0	0	0	*	*	*	*	*	*	*	*	ENTER
RCKSK0410034	0	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	RETURN/BACK
RCKSK0410035	1	1	0	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	SETUP MENU
RCKSK0410036	0	0	1	0	0	1	0	0	0	0	*	*	*	*	*	*	*	*	MEMORY
RCKSK0410042	0	1	0	1	0	1	0	0	0	0	*	*	*	*	*	*	*	*	UPGRADE ID ON
RCKSK0410045	1	0	1	1	0	1	0	0	0	0	*	*	*	*	*	*	*	*	Bilingual Mode(toggle) (JP only)
RCKSK0410112	0	0	0	0	1	1	1	0	0	0	*	*	*	*	*	*	*	*	VIDEO SELECT
RCKSK0410292	0	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	QUICK SELECT 1
RCKSK0410293	1	0	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	QUICK SELECT 2
RCKSK0410294	0	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	QUICK SELECT 3
RCKSK0410295	1	1	1	0	0	1	0	0	1	0	*	*	*	*	*	*	*	*	QUICK SELECT 4
RCKSK0410296	0	0	0	1	0	1	0	0	1	0	*	*	*	*	*	*	*	*	QUICK SELECT 5
RCKSK0410304	0	0	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	STEREO
RCKSK0410305	1	0	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	DIRECT/STEREO
RCKSK0410306	0	1	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	DIRECT
RCKSK0410307	1	1	0	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	PURE DIRECT
RCKSK0410308	0	0	1	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	STANDARD
RCKSK0410309	1	0	1	0	1	1	0	0	1	0	*	*	*	*	*	*	*	*	DIRECT
RCKSK0410320	0	0	0	0	0	0	1	0	1	0	*	*	*	*	*	*	*	*	DTS SURROUND
RCKSK0410324	0	0	1	0	0	0	1	0	1	0	*	*	*	*	*	*	*	*	AUTO SOUND
RCKSK0410329	1	0	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	MOVIE SURROUND
RCKSK0410330	0	1	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	MUSIC SURROUND
RCKSK0410331	1	1	0	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	GAME SURROUND
RCKSK0410332	0	0	1	1	0	0	1	0	1	0	*	*	*	*	*	*	*	*	SURROUND MODE toggle(Reverse)
RCKSK0410336	0	0	0	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	DSP SIMULATION
RCKSK0410337	1	0	0	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	MULTI CH STEREO
RCKSK0410340	0	0	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	ROCK ARENA
RCKSK0410341	1	0	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	JAZZ CLUB
RCKSK0410343	1	1	1	0	1	0	1	0	1	0	*	*	*	*	*	*	*	*	MONO MOVIE
RCKSK0410344	0	0	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	MATRIX
RCKSK0410345	1	0	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	VIDEO GAME
RCKSK0410346	0	1	0	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	VIRTUAL
RCKSK0410348	0	0	1	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	Dolby Atmos ON/OFF
RCKSK0410349	1	0	1	1	1	0	1	0	1	0	*	*	*	*	*	*	*	*	SURROUND MODE toggle(Normal)
RCKSK0410352	0	0	0	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	INPUT MODE SELECT
RCKSK0410353	1	0	0	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	INPUT MODE: ANALOG
RCKSK0410357	1	0	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	INPUT MODE: HDMI
RCKSK0410358	0	1	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	INPUT MODE: AUTO
RCKSK0410359	1	1	1	0	0	1	1	0	1	0	*	*	*	*	*	*	*	*	INPUT MODE: DIGITAL
RCKSK0410366	0	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	Volume Up
RCKSK0410369	1	0	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	Volume Down

RCKSK0410370	0	1	0	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	Mute
RCKSK0410372	0	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	M.V.R PRESET1(0dB)
RCKSK0410373	1	0	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	M.V.R PRESET2(-20dB)
RCKSK0410374	0	1	1	0	1	1	1	0	1	0	*	*	*	*	*	*	*	*	M.V.R PRESET3(-40dB)
RCKSK0410378	0	1	0	1	1	1	1	0	1	0	*	*	*	*	*	*	*	*	CHANNEL LEVEL
RCKSK0410384	0	0	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	FL LEVEL UP
RCKSK0410385	1	0	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	FL LEVEL DOWN
RCKSK0410386	0	1	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	FR LEVEL UP
RCKSK0410387	1	1	0	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	FR LEVEL DOWN
RCKSK0410388	0	0	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	C LEVEL UP
RCKSK0410389	1	0	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	C LEVEL DOWN
RCKSK0410390	0	1	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SW1 LEVEL UP
RCKSK0410391	1	1	1	0	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SW1 LEVEL DOWN
RCKSK0410392	0	0	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SL LEVEL UP
RCKSK0410393	1	0	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SL LEVEL DOWN
RCKSK0410394	0	1	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SR LEVEL UP
RCKSK0410395	1	1	0	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SR LEVEL DOWN
RCKSK0410396	0	0	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SBL LEVEL UP
RCKSK0410397	1	0	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SBL LEVEL DOWN
RCKSK0410398	0	1	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SBR LEVEL UP
RCKSK0410399	1	1	1	1	0	0	0	1	1	0	*	*	*	*	*	*	*	*	SBR LEVEL DOWN
RCKSK0410400	0	0	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	ALL TREBLE UP
RCKSK0410401	1	0	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	ALL TREBLE DOWN
RCKSK0410403	1	1	0	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	ALL BASS UP
RCKSK0410404	0	0	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	ALL BASS DOWN
RCKSK0410406	0	1	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	TONE CONTROL ON/OFF
RCKSK0410407	1	1	1	0	1	0	0	1	1	0	*	*	*	*	*	*	*	*	TONE CONTROL OFF
RCKSK0410408	0	0	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	TONE CONTROL ON
RCKSK0410410	0	1	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	SW2 LEVEL UP
RCKSK0410411	1	1	0	1	1	0	0	1	1	0	*	*	*	*	*	*	*	*	SW2 LEVEL DOWN
RCKSK0410417	1	0	0	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	TRF LEVEL UP
RCKSK0410418	0	1	0	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TRF LEVEL DOWN
RCKSK0410419	1	1	0	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TFR LEVEL UP
RCKSK0410420	0	0	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TFR LEVEL DOWN
RCKSK0410421	1	0	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TML LEVEL UP
RCKSK0410422	0	1	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TML LEVEL DOWN
RCKSK0410423	1	1	1	0	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TMR LEVEL UP
RCKSK0410424	0	0	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TMR LEVEL DOWN
RCKSK0410425	1	0	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TRL LEVEL UP
RCKSK0410426	0	1	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TRL LEVEL DOWN
RCKSK0410427	1	1	0	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TRR LEVEL UP
RCKSK0410428	0	0	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	TRR LEVEL DOWN

RCKSK0410429	1	0	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	RHL LEVEL UP
RCKSK0410430	0	1	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	RHL LEVEL DOWN
RCKSK0410431	1	1	1	1	0	1	0	1	1	0	*	*	*	*	*	*	*	*	RHR LEVEL UP
RCKSK0410432	0	0	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	RHR LEVEL DOWN
RCKSK0410433	1	0	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	FDL LEVEL UP
RCKSK0410434	0	1	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	FDL LEVEL DOWN
RCKSK0410435	1	1	0	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	FDR LEVEL UP
RCKSK0410436	0	0	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	FDR LEVEL DOWN
RCKSK0410437	1	0	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	SDL LEVEL UP
RCKSK0410438	0	1	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	SDL LEVEL DOWN
RCKSK0410439	1	1	1	0	1	1	0	1	1	0	*	*	*	*	*	*	*	*	SDR LEVEL UP
RCKSK0410440	0	0	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	SDR LEVEL DOWN
RCKSK0410441	1	0	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	BDL LEVEL UP
RCKSK0410442	0	1	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	BDL LEVEL DOWN
RCKSK0410443	1	1	0	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	BDR LEVEL UP
RCKSK0410444	0	0	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	BDR LEVEL DOWN
RCKSK0410445	1	0	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	Audyssey LFC ON
RCKSK0410446	0	1	1	1	1	1	0	1	1	0	*	*	*	*	*	*	*	*	Audyssey LFC OFF
RCKSK0410456	0	0	0	1	0	0	1	1	1	0	*	*	*	*	*	*	*	*	Audyssey LFC ON/OFF
RCKSK0410522	0	1	0	1	0	0	0	0	0	1	*	*	*	*	*	*	*	*	FRONT SPEAKER
RCKSK0410542	0	1	1	1	1	0	0	0	0	0	1	*	*	*	*	*	*	*	DYNAMIC VOLUME OFF
RCKSK0410545	1	0	0	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	DYNAMIC VOLUME SELECT
RCKSK0410547	1	1	0	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	DYNAMIC EQ SELECT
RCKSK0410548	0	0	1	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	AUDIO RESTORER SELECT
RCKSK0410549	1	0	1	0	0	1	0	0	0	1	*	*	*	*	*	*	*	*	DYNAMIC EQ/VOLUME SELECT
RCKSK0410556	0	0	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	RESTORER(OFF)
RCKSK0410557	1	0	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	RESTORER(High)
RCKSK0410558	0	1	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	RESTORER(Medium)
RCKSK0410559	1	1	1	1	0	1	0	0	0	1	*	*	*	*	*	*	*	*	RESTORER(Low)
RCKSK0410605	1	0	1	1	1	0	1	0	0	1	*	*	*	*	*	*	*	*	FRONTSP A ON/OFF
RCKSK0410606	0	1	1	1	1	0	1	0	0	1	*	*	*	*	*	*	*	*	FRONTSP B ON/OFF
RCKSK0410620	0	0	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	AUDIO DELAY MODE
RCKSK0410621	1	0	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	AUDIO DELAY UP
RCKSK0410622	0	1	1	1	0	1	1	0	0	1	*	*	*	*	*	*	*	*	AUDIO DELAY DOWN
RCKSK0410624	0	0	0	0	1	1	1	0	0	1	*	*	*	*	*	*	*	*	INFO
RCKSK0410640	0	0	0	0	0	0	0	1	0	1	*	*	*	*	*	*	*	*	FLD STATUS
RCKSK0410649	1	0	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	FHL LEVEL UP
RCKSK0410650	0	1	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	FHL LEVEL DOWN
RCKSK0410651	1	1	0	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	FHR LEVEL UP
RCKSK0410652	0	0	1	1	0	0	0	1	0	1	*	*	*	*	*	*	*	*	FHR LEVEL DOWN
RCKSK0410656	0	0	0	0	1	0	0	1	0	1	*	*	*	*	*	*	*	*	Front Display(Dimmer)
RCKSK0410669	1	0	1	1	1	0	0	0	1	0	1	*	*	*	*	*	*	*	HDMI Monitor Select 1



[illegible][illegible]

RCKSK0430295	1	1	1	1	0	0	1	0	0	1	0	-	-	-	-	-	-	-	-	ZONE2 QUICK SELECT 4
RCKSK0430296	0	0	0	0	0	1	0	0	0	1	0	-	-	-	-	-	-	-	-	ZONE2 QUICK SELECT 5
RCKSK0430368	1	0	0	0	0	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VOLUME UP
RCKSK0430369	1	0	0	0	0	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VOLUME DOWN
RCKSK0430370	0	1	0	0	0	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VOLUME MUTE
RCKSK0430370	1	1	0	0	1	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VR PRESET(MUTE)
RCKSK0430372	0	0	1	0	1	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VR PRESET 1(0dB)
RCKSK0430373	1	0	1	0	1	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VR PRESET2(-20dB)
RCKSK0430374	0	1	1	0	1	1	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 VR PRESET3(-40dB)
RCKSK0430691	1	1	0	0	1	1	0	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 Internet Radio
RCKSK0430692	0	0	1	0	1	1	0	1	0	1	0	-	-	-	-	-	-	-	-	Main Zone Source CALL
RCKSK0430698	0	1	0	1	1	1	0	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 CD / PHONO
RCKSK0430699	1	1	0	0	1	1	1	0	1	0	1	-	-	-	-	-	-	-	-	ZONE2 Media Server
RCKSK0430704	0	0	0	0	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 PHONO
RCKSK0430705	1	0	0	0	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 TUNER
RCKSK0430706	0	1	0	0	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 CD
RCKSK0430711	1	1	1	0	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 HEOS MUSIC
RCKSK0430715	1	1	0	1	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 TUNER
RCKSK0430716	0	0	1	1	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 HEOS MUSIC
RCKSK0430718	0	1	1	1	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 USB
RCKSK0430719	1	1	1	1	0	0	0	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 TUNER
RCKSK0430720	0	0	0	0	1	0	1	1	0	1	0	-	-	-	-	-	-	-	-	ZONE2 DVD
RCKSK0430721	1	0	0	0	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 Blu-ray
RCKSK0430722	0	1	0	0	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 TV AUDIO
RCKSK0430723	1	1	0	0	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 CBL/SAT
RCKSK0430725	1	0	1	0	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 GAME
RCKSK0430726	0	1	1	0	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 MEDIA PLAYER
RCKSK0430729	1	0	0	1	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 AUX1
RCKSK0430730	0	1	0	1	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 AUX2
RCKSK0430732	0	0	1	1	1	0	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 DVD/Blu-ray
RCKSK0430735	1	1	1	1	1	0	1	0	1	1	0	-	-	-	-	-	-	-	-	ZONE2 MEDIA PLAYER
RCKSK0430741	1	0	1	0	0	1	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 INTERNET RADIO(Recent Play)
RCKSK0430751	1	1	1	1	0	1	1	1	1	0	1	-	-	-	-	-	-	-	-	ZONE2 Bluetooth
RCKSK0430787	1	1	0	0	1	0	0	0	0	1	1	-	-	-	-	-	-	-	-	ZONE2 INPUT SOURCE SELECT Right
RCKSK0430788	0	0	1	0	1	0	0	0	0	1	1	-	-	-	-	-	-	-	-	ZONE2 INPUT SOURCE SELECT Left
RCKSK0430788	0	0	1	0	0	0	0	1	0	1	1	-	-	-	-	-	-	-	-	ZONE2 SLEEP
RCKSK0430960	0	1	1	0	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 PAGE Previous
RCKSK0430961	1	1	1	0	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 PAGE Next
RCKSK0430966	0	0	1	1	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 REPEAT
RCKSK0430967	1	0	1	1	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 RANDOM-SHUFFLE
RCKSK0430968	0	1	1	1	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 USB DIRECT PLAY
RCKSK0430969	1	1	1	1	1	1	0	1	1	1	1	-	-	-	-	-	-	-	-	ZONE2 FAVORITE DIRECT PLAY



## Before Servicing This Unit

# Electrical

REMOTE ID SET: 2:4																											
DENON CODE																Parity		GENRE1				GENRE2					
5				2				3				0				4				2							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	1	0	0	0	1	0	0

[illegible]

## Mechanical

REMOVED ID SET: 2-4																Parity		GENRE1				GENRE2					
DENON CODE																											
4				5				2				3				0		4				8					
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
0	0	1	0	1	0	1	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	0	1

## Repair Information

# Updating

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230000	0 0 0 0 0		RCSHP0230016	0 0 0 0 1 0	FR LEVEL DOWN
RCSHP0230001	1 0 0 0 0	POWER	RCSHP0230017	1 0 0 0 1 0	
RCSHP0230002	0 1 0 0 0	FL LEVEL UP	RCSHP0230018	0 1 0 0 1 0	
RCSHP0230003	1 1 0 0 0	PHONO	RCSHP0230019	1 1 0 0 1 0	
RCSHP0230004	0 0 1 0 0	CD	RCSHP0230020	0 0 1 0 1 0	
RCSHP0230005	1 0 1 0 0	TUNER	RCSHP0230021	1 0 1 0 1 0	
RCSHP0230006	0 1 1 0 0		RCSHP0230022	0 1 1 0 1 0	SR LEVEL UP
RCSHP0230007	1 1 1 0 0	FL LEVEL DOWN	RCSHP0230023	1 1 1 0 1 0	SR LEVEL DOWN
RCSHP0230008	0 0 0 1 0	CBU/SAT	RCSHP0230024	0 0 0 1 1 0	VIDEO SELECT
RCSHP0230009	1 0 0 1 0	TV AUDIO	RCSHP0230025	1 0 0 1 1 0	
RCSHP0230010	0 1 0 1 0	Blu-ray	RCSHP0230026	0 1 0 1 1 0	
RCSHP0230011	1 1 0 1 0	FR LEVEL UP	RCSHP0230027	1 1 0 1 1 0	
RCSHP0230012	0 0 1 1 0	AUX1	RCSHP0230028	0 0 1 1 1 0	INPUT MODE ANALOG
RCSHP0230013	1 0 1 1 0	GAME	RCSHP0230029	1 0 1 1 1 0	CURSOR RIGHT
RCSHP0230014	0 1 1 1 0	MEDIA PLAYER	RCSHP0230030	0 1 1 1 1 0	STATUS
RCSHP0230015	1 1 1 1 0		RCSHP0230031	1 1 1 1 1 0	INFO

79

## DISASSEMBLY

### Flowchart


1. FRONT ASSY
2. RADIATOR ASSY
3. REAR PANEL
4. DIGITAL PCB
5. VIDEO PCB
6. INPUT PCB
7. TUNER PCB
8. SPK PCB
9. SMPS PCB
10. TRANS

## EXPLODED VIEW

## PACKAGING VIEW

## Flowchart

- Remove each part following the flow below.
- Reassemble the removed parts in the reverse order.
- Read "[SAFETY PRECAUTIONS](#)" before reassembling the removed parts.
- If wire bundles are removed or moved during adjustment or part replacement, reshape the wires after completing the work. Failure to shape the wires correctly may cause problems such as noise.
- See "[EXPLODED VIEW](#)"

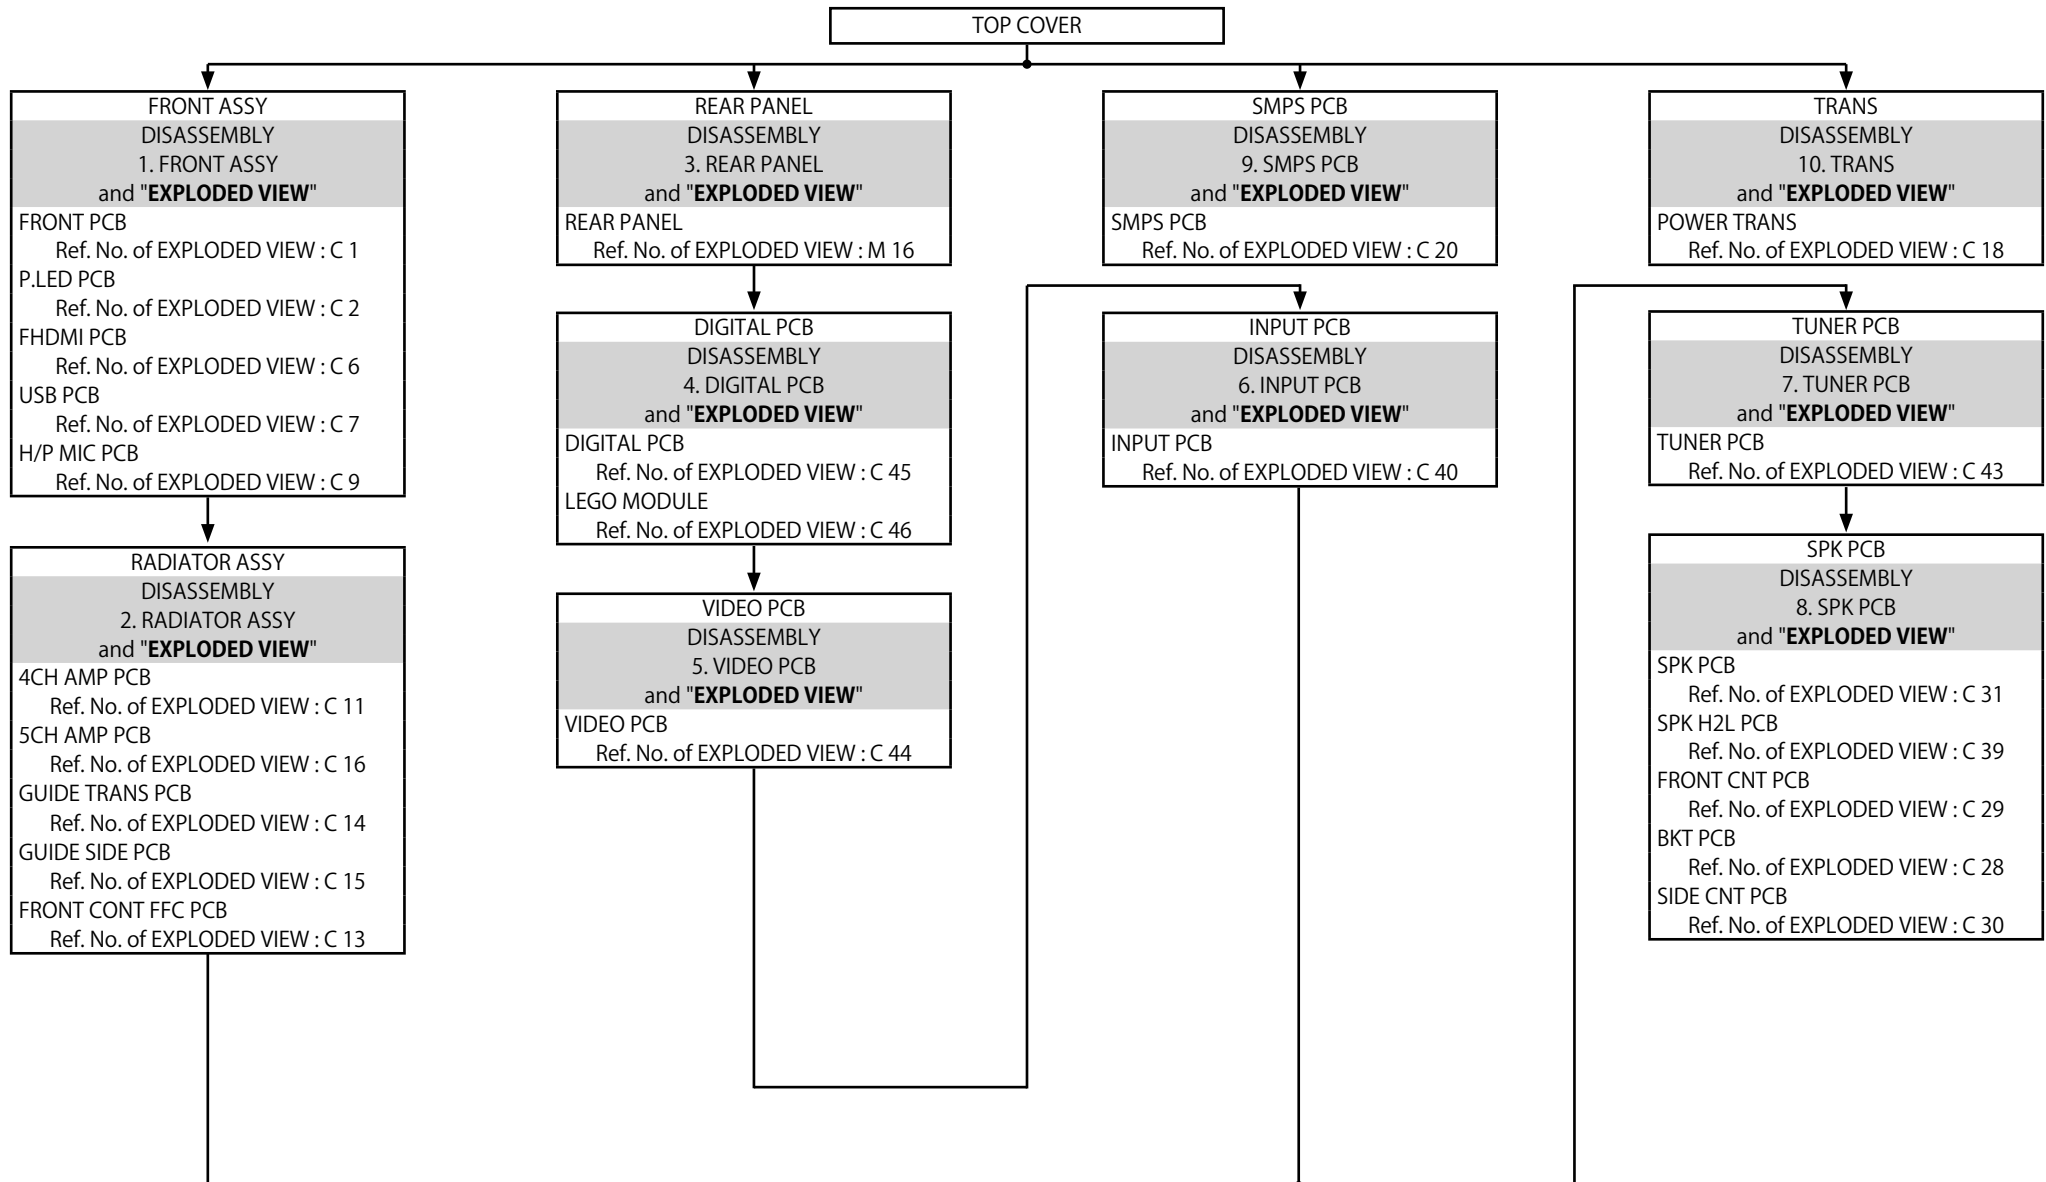


## Explanatory Photos for DISASSEMBLY

- For the shooting direction of each photos used in this manual, see the photo below.
- **A, B, C and D** in the photo below indicate the shooting directions of photos.
- The photographs with no shooting direction indicated were taken from the top of the unit.
- Photos of AVR-X4500H E3 are used in this manual.

### The viewpoint of each photograph

(Shooting direction : X) [View from the top]

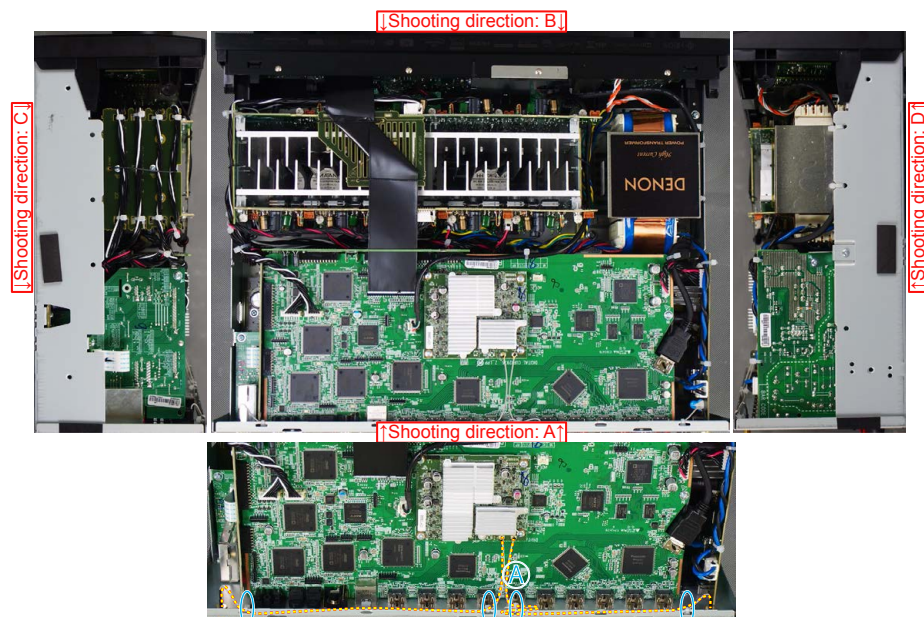

Caution : Turn up and spare wire at position ① .


## 1. FRONT ASSY

Proceeding : TOP COVER → FRONT ASSY

(1) Remove the screws.



(2) Remove the STYLE PINs and connectors. Remove the FFC.  
Cut the wire clamps. Remove the screws.

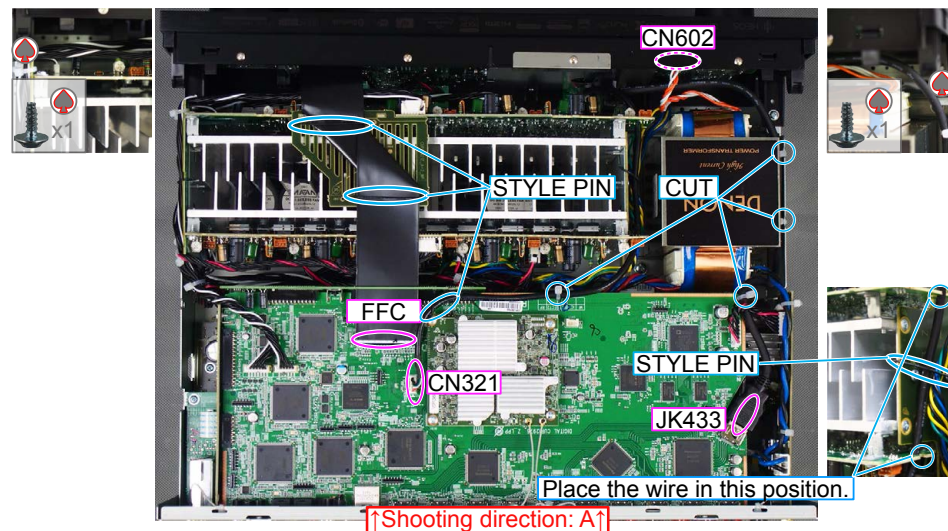






## 2. RADIATOR ASSY

Proceeding : **TOP COVER** → **FRONT ASSY** → **RADIATOR ASSY**


(1) Remove the screws.



(2) Cut the wire clamp, then remove the connector.

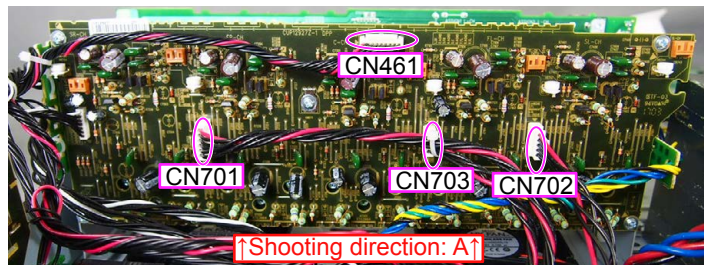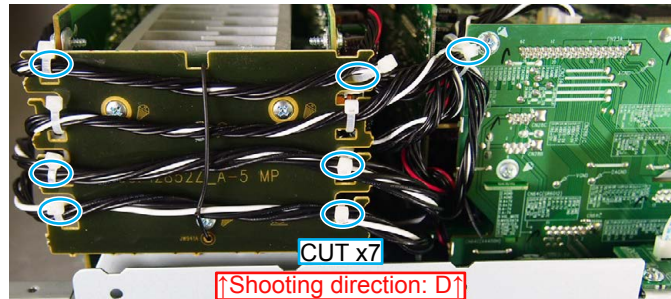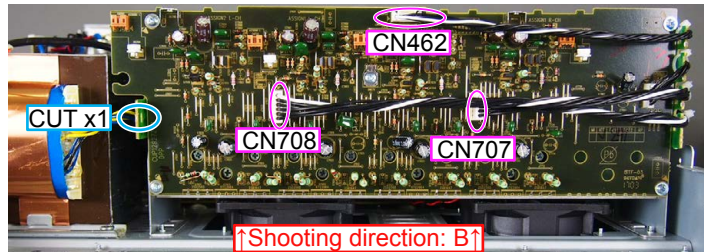


(3) Remove the connector.

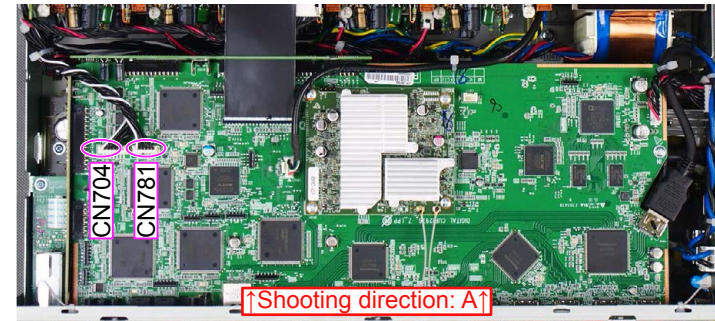

## 3. REAR PANEL

Proceeding : **TOP COVER** → **REAR PANEL**


(1) Remove the screws.

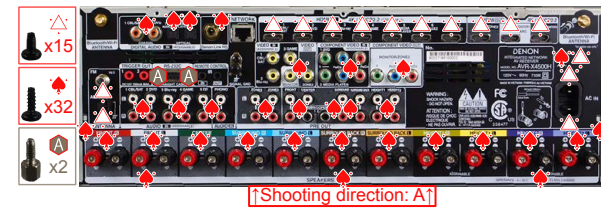


## 4. DIGITAL PCB

Proceeding : TOP COVER → REAR PANEL → DIGITAL PCB

- (1) Remove the screws. Remove the Rivet. Cut the wire clamp, then remove the connector. Remove the FFC. Remove the STYLE PIN.

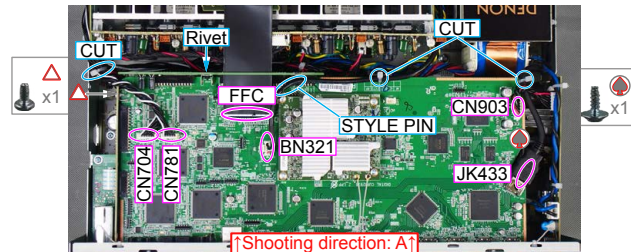


- (2) Remove the connector.

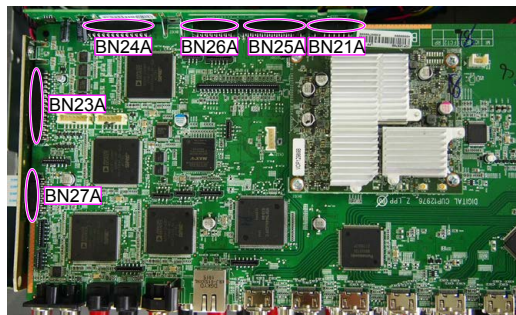

## 5. VIDEO PCB

Proceeding : TOP COVER → REAR PANEL → DIGITAL PCB → VIDEO PCB


- (1) Remove the connector.

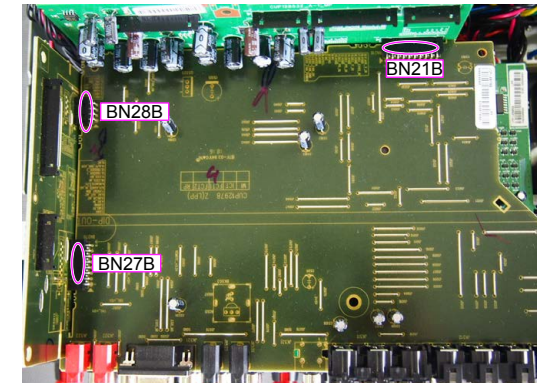

## 6. INPUT PCB

Proceeding : TOP COVER → REAR PANEL → DIGITAL PCB → VIDEO PCB  
→ INPUT PCB

- (1) Remove the screws. Remove the connector. Remove the STYLE PIN.

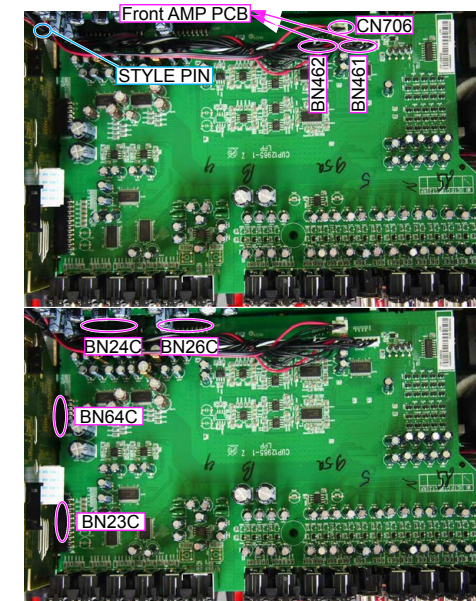



## 7. TUNER PCB


Proceeding : TOP COVER → REAR PANEL → DIGITAL PCB → VIDEO PCB  
→ INPUT PCB → TUNER PCB

See "EXPLODED VIEW" for instructions on removing the TUNER PCB.


## 8. SPK PCB

Proceeding : TOP COVER → FRONT ASSY → RADIATOR ASSY  
→ REAR PANEL → DIGITAL PCB → VIDEO PCB → INPUT PCB  
→ TUNER PCB → SPK PCB

(1) Remove the screws.

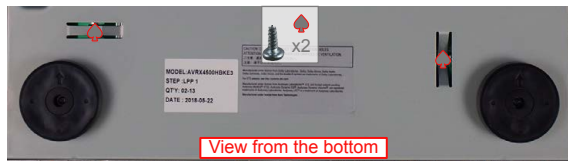

(2) Remove the screws. Remove the connector. Remove the STYLE PIN.

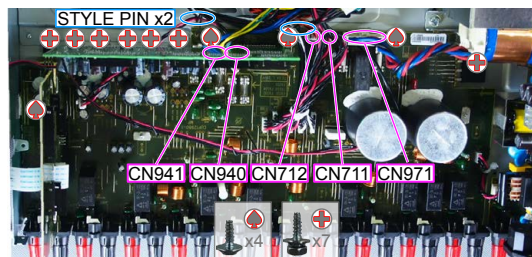

## 9. SMPS PCB

Proceeding : TOP COVER → SMPS PCB

See "EXPLODED VIEW" for instructions on removing the SMPS PCB.

## 10. TRANS

Proceeding : TOP COVER → TRANS

See "EXPLODED VIEW" for instructions on removing the transformer (TRANS).

## Precautions when affixing the BADGE


- (1) The BADGE is incredibly fragile, so using the same force as you would when applying a label is likely to cause deformation. Once deformed it is very difficult to return it to its original shape, so take care when handling it.
- (2) Make sure the BADGE is not flat before affixing it.
- (3) Use tweezers to remove the backing paper from the double-sided tape and be careful not to touch the adhesive surface with your fingers.




- (4) Place the badge in the badge-shaped recess of the panel.  
Caution : Do not touch the adhesive surface with your fingers!



- (5) To affix, press each circled area indicated below with your thumb for at least 2 seconds.

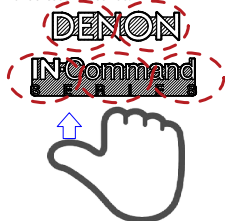



# EXPLODED VIEW [AVRX4500H]

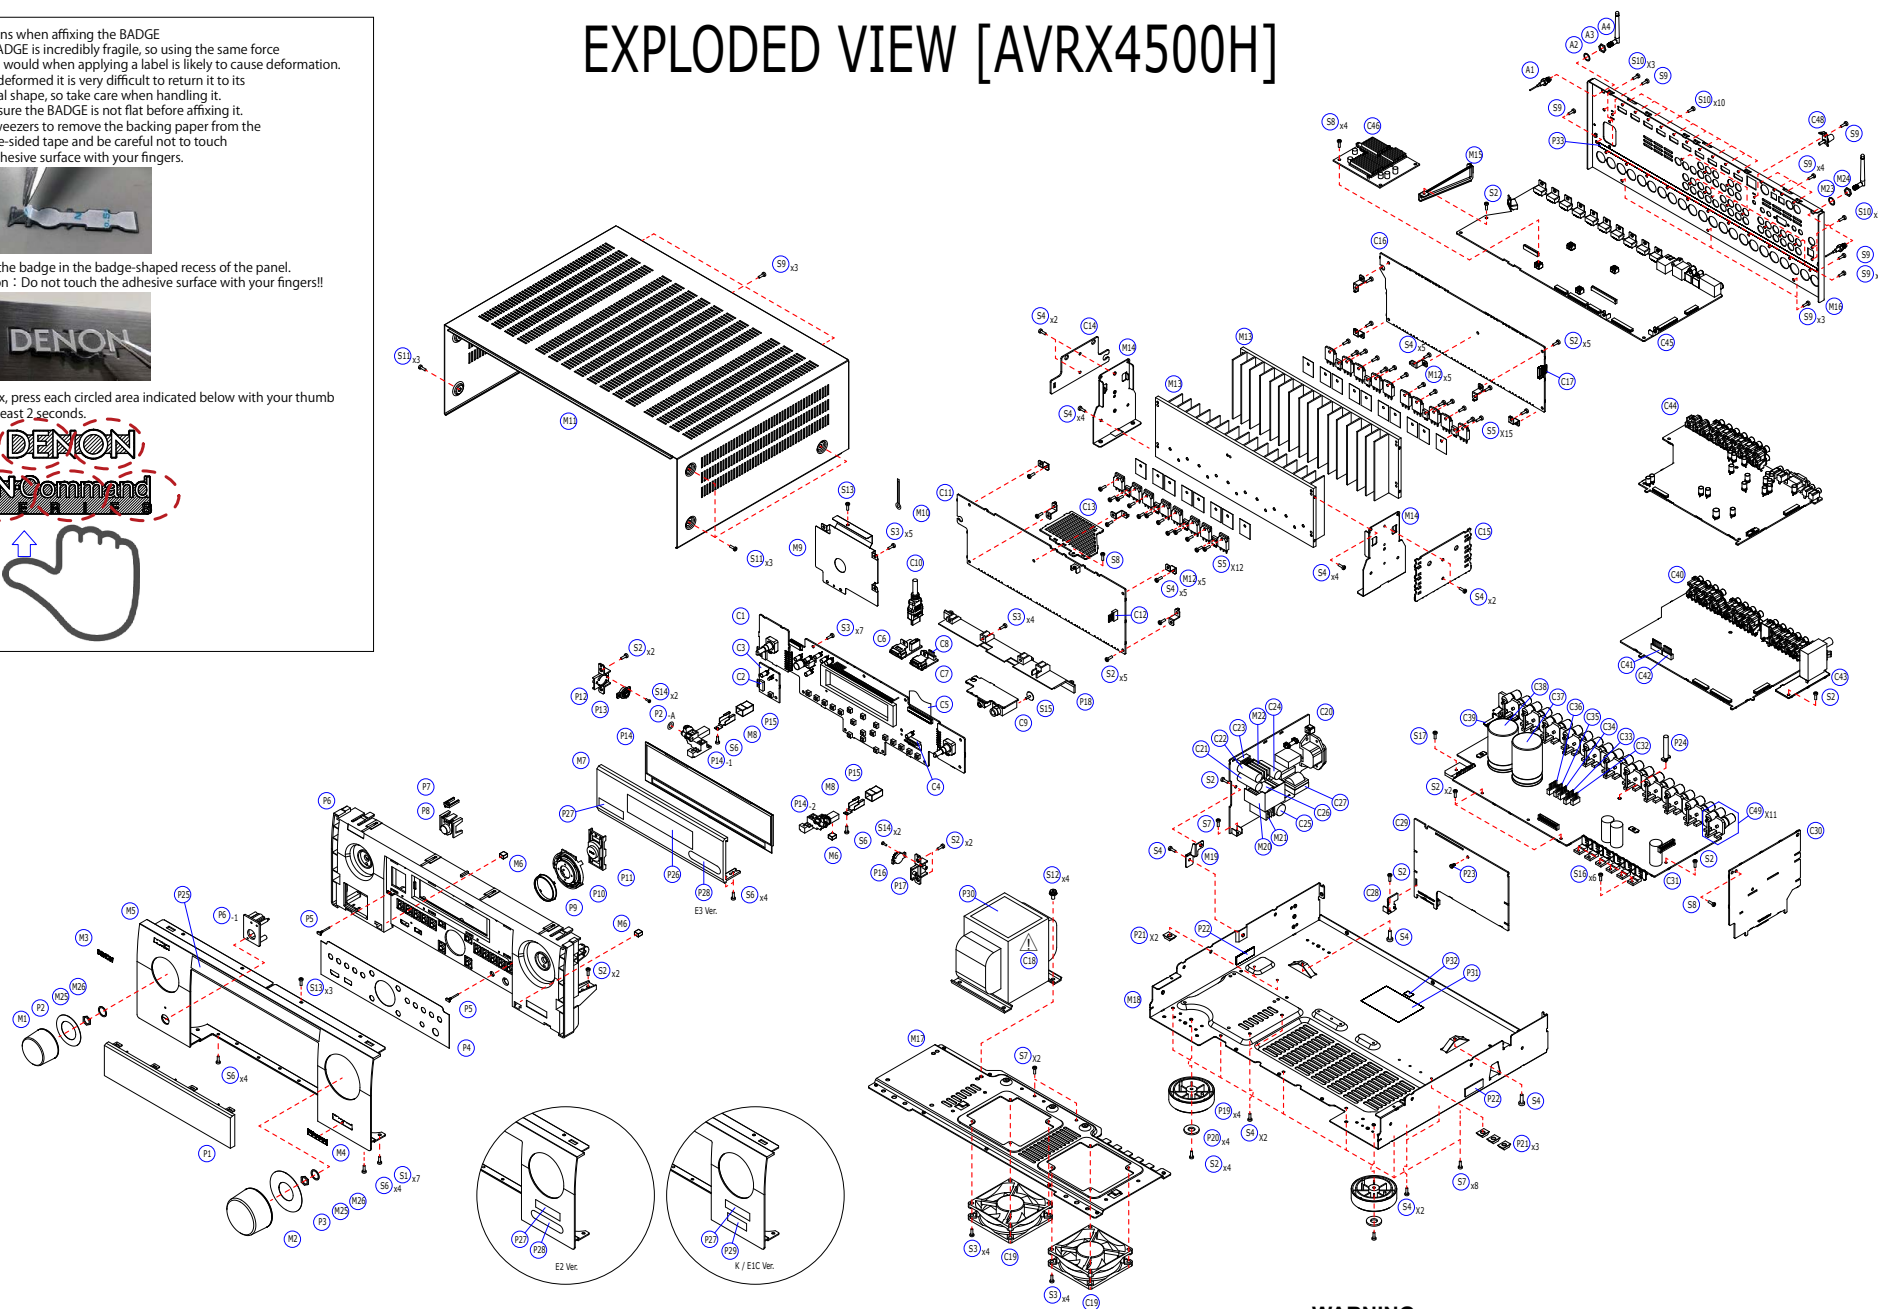

## WARNING:

Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

**Parts List :** <http://dmedia.dmglobal.com/Document/DocumentDetails/24820>

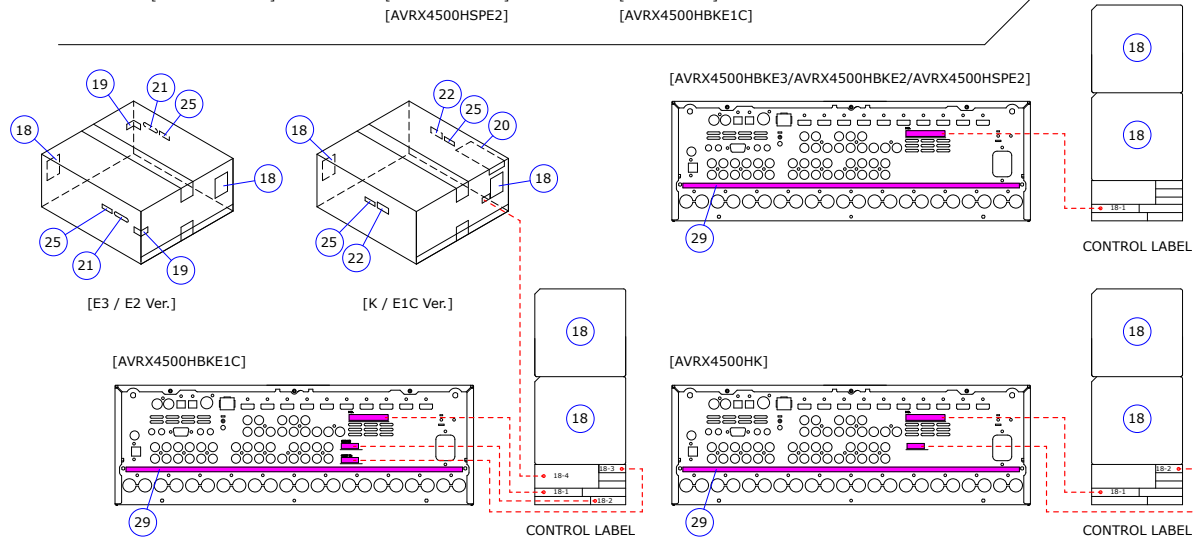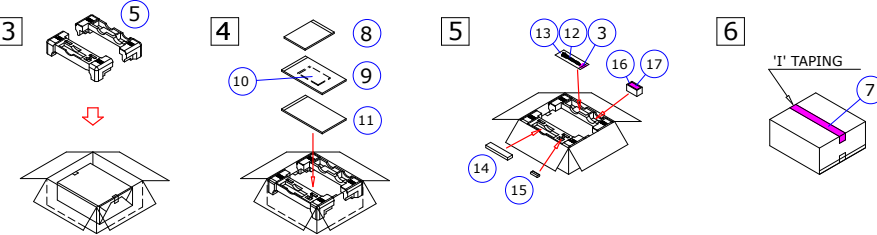

# REPAIR INFORMATION

## TROUBLE SHOOTING

1. POWER
2. Analog video
3. HDMI/DVI
4. AUDIO
5. Network / Bluetooth / USB
6. SMPS

## PROTECTION DIAGRAM

## AUDIO CHECK PATH

## HDMI "Rx/Tx" Failure Detection

1. Prior checking
2. Preparations for checking HDMI Switcher reception/transmission register
3. Starting detecting the point of failure
4. Device implementation location

## CLOCK FLOW & WAVE FORM IN DIGITAL BLOCK

## SPECIAL MODE

Special mode setting button

1. Version Display Mode
2. PANEL / REMOTE LOCK Selection Mode
  - 3-1. Selecting the Mode for Service-related
  - 3-2. Protection History Display Mode
  - 3-3. 232C Standby Clear Mode
  - 3-4. Operation Info Mode
  - 3-5. TUNER STEP mode (E3 / E2 only)
  - 3-6. Remote ID Setup Mode
4. Protection Pass Mode
5. Network Initialization Mode
6. Clearing the Operation Info
7. Log Capture feature

## DIAGNOSTIC MODE

Service Path Check Mode

DIAGNOSTIC PATH DIAGRAM


## JIG FOR SERVICING

## ADJUSTMENT


# TROUBLE SHOOTING

## 1. POWER

### 1.1. The unit does not power on

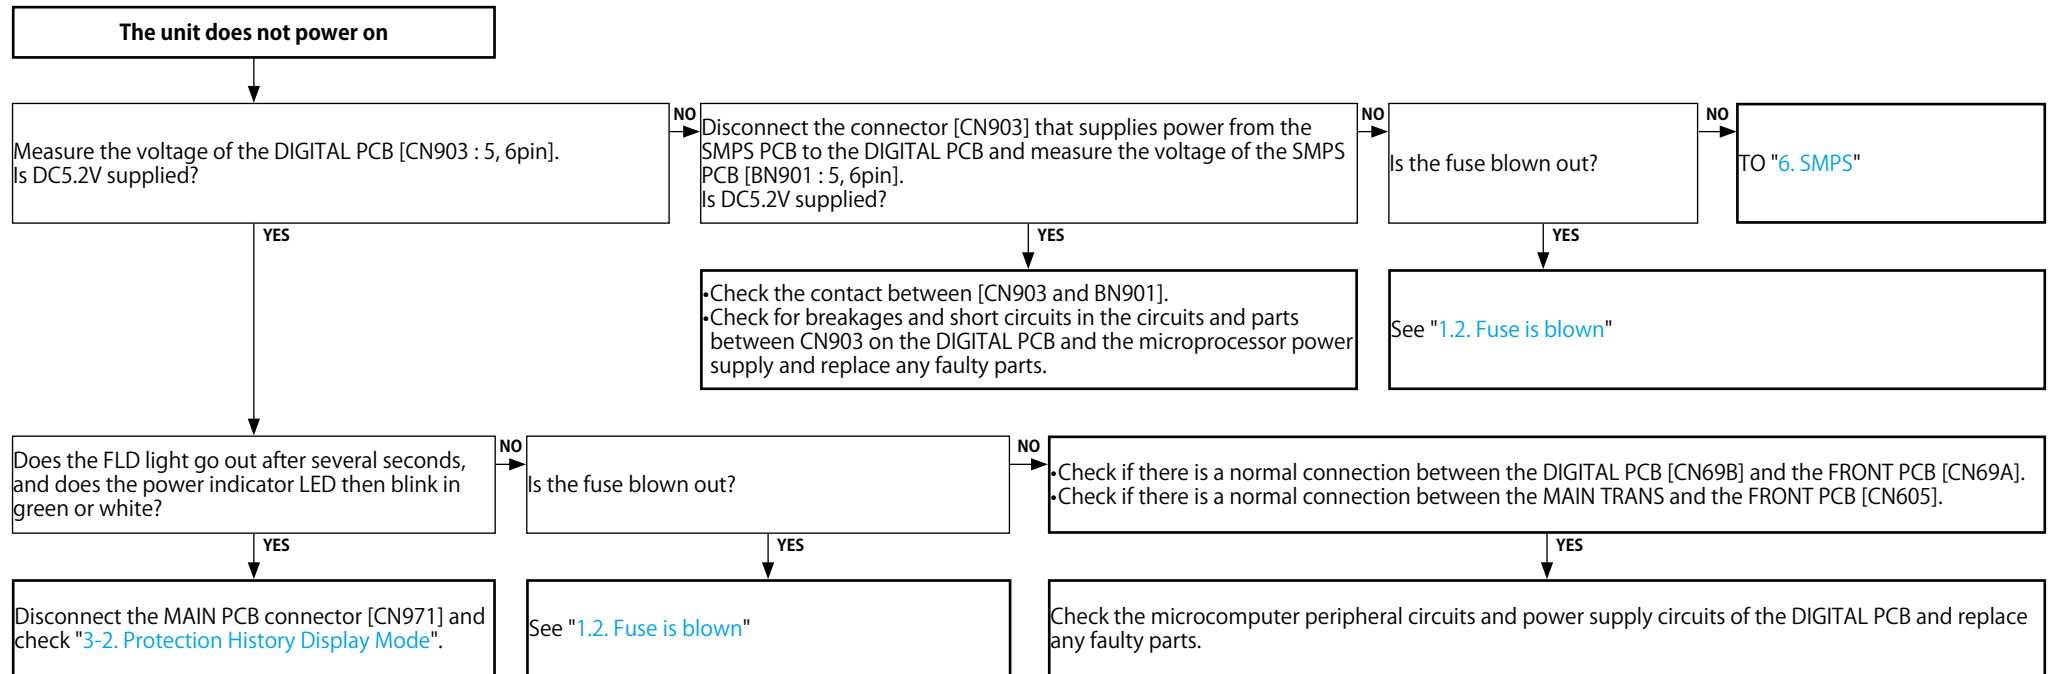

### 1.2. Fuse is blown

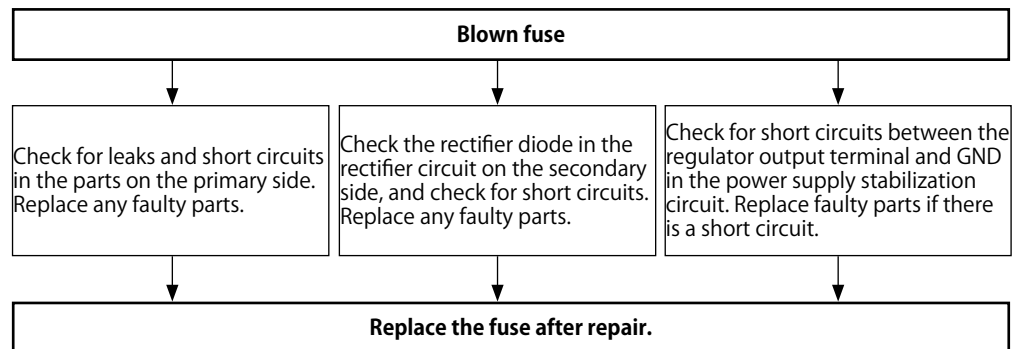

## 2. Analog video

Perform the operation below beforehand.


※ Check it whether connection cable and Monitor are normal.

※ VIDEO Convert is set to ON.


※ Setting as follows.

V : SAT

COMPONENT : DVD

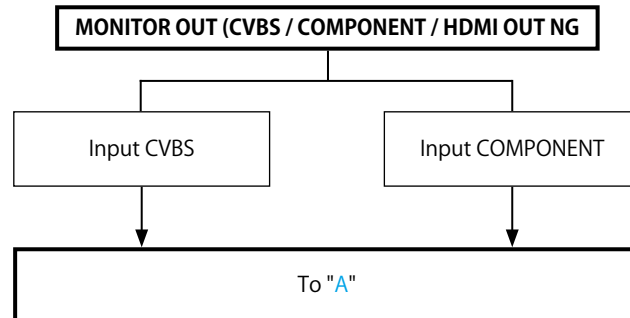

### I2C communication wave form (sample)

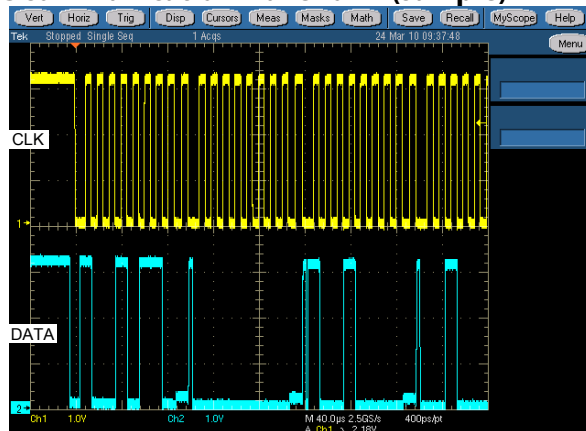

**A**

**Input  
CVBS / COMPONENT**

Is the power voltage being output correctly?  
SIDE CNT PCB  
V+5V : [CN28B : 1 pin]  
V-5V : [CN28B : 5 pin]

NO

· SIDE CNT PCB [BN77D] connection is faulty.  
· REGULATOR (SPEAKER) PCB faulty.

YES

Check of the I2C control signal for video selector  
IC [IC511].  
DIGITAL PCB  
I2C(SCL) : [BN21A : 5 pin] (AVSCL)  
I2C(SDA) : [BN21A : 4 pin] (AVSDA)  
See "I2C communication wave form (sample)"

NO

DIGITAL PCB faulty.

YES

Does the signal input to the video decoder  
[IC351]?  
DIGITAL PCB  
V : [R3526]  
COMPONENT-Y : [R3527]  
COMPONENT-Cb : [R3528]  
COMPONENT-Cr : [R3529]

NO

· FRONT CNT board is faulty or inserted incor-  
rectly.  
[CN21A]  
VIDEO PCB faulty. ⇒ TO "B"

YES

· CVBS Monitor Out is NG  
COMPONENT Monitor Out is NG ⇒ To "B"  
· HDMI Out is NG ⇒ TROUBLE SHOOTING To "3. HDMI/DVI"

**B**

**VIDEO PCB faulty.**

Extend the DIGITAL PCB using the jig.

YES

Check the I2C signal and power supply of the video selector IC.  
VIDEO PCB [IC511]  
V+3.3V : [J5043]  
V-5V : [J5042]  
I2C(SCL) : [J5046]  
I2C(SDA) : [J5047]

NO

Power supply IC [IC513] faulty.  
SIDE CNT PCB [BN28B] faulty.  
Video selector IC [IC511] faulty.

YES

Check the input signal of the video selector IC.  
VIDEO PCB [IC511]  
V : [C5107]  
COMPONENT-Y : [J5010]  
COMPONENT-Cb : [J5007]  
COMPONENT-Cr : [J5006]

NO

[IC511] part is faulty.

YES

Check the output signal of the video selector IC.  
VIDEO PCB [IC511] to MONITOR to DIGITAL PCB  
V : [J5019, BN21B : 17pin]  
COMPONENT-Y : [J5016, BN21B : 15pin]  
COMPONENT-Cb : [J5028, BN21B : 13pin]  
COMPONENT-Cr : [J5029, BN21B : 11pin]


NO

IC511 soldering problem or [IC511] is faulty.


YES

• **MONITOR OUT**  
Output connector [JK511 or JK513] or pattern fault  
• **HDMI OUT**  
FRONT CNT PCB [BN21B] connection is faulty or FRONT CNT PCB pattern is faulty.

## DIGITAL test point

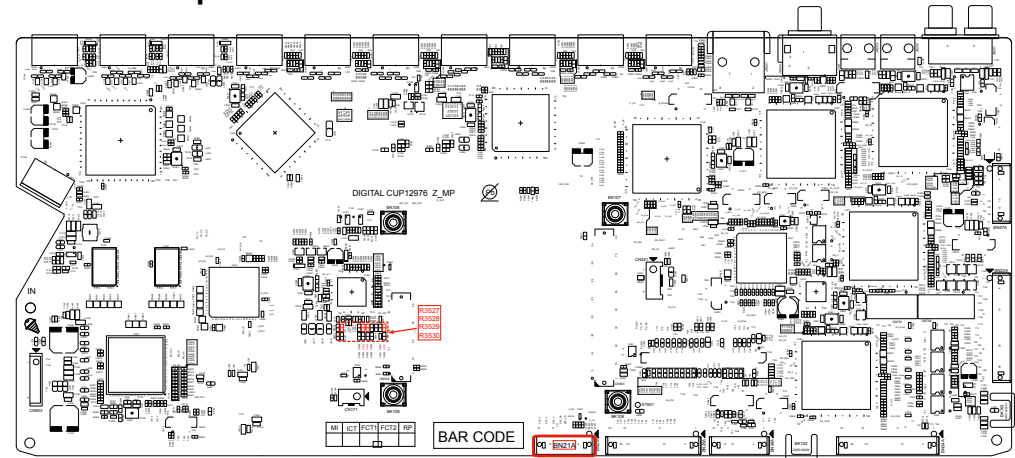


## VIDEO test point

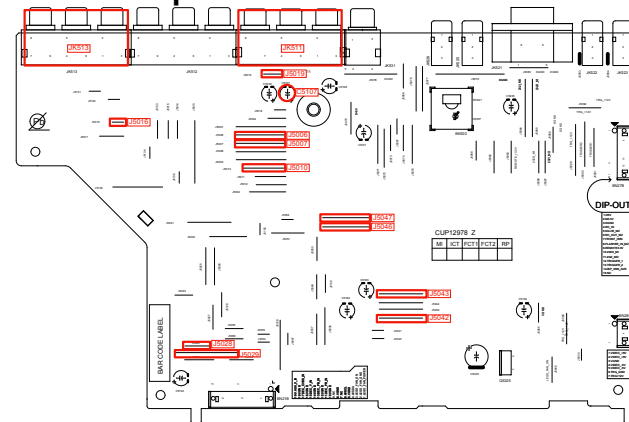


### 3. HDMI/DVI

#### 3.1. No picture or sound is output (HDMI to HDMI)

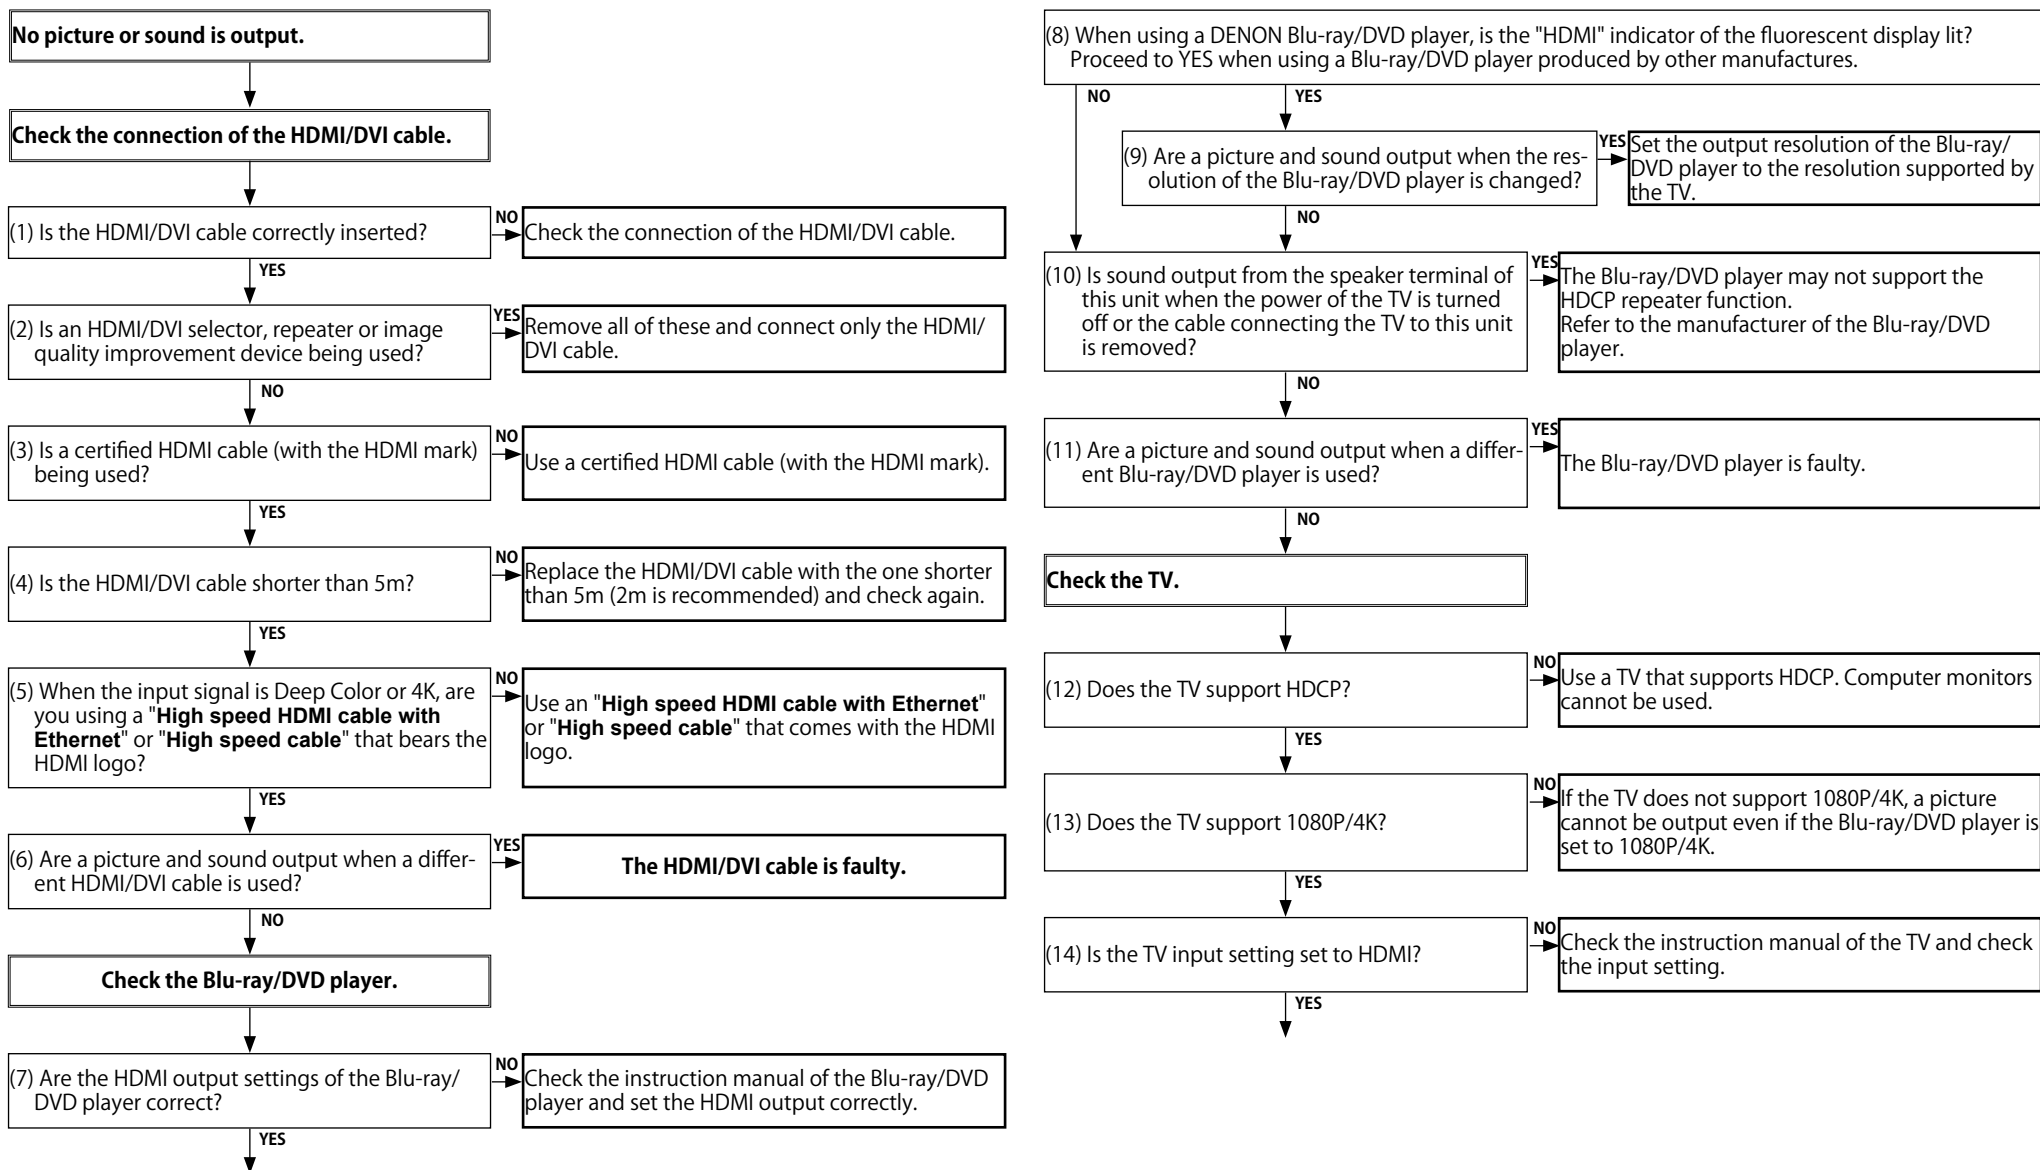

Go to next page.




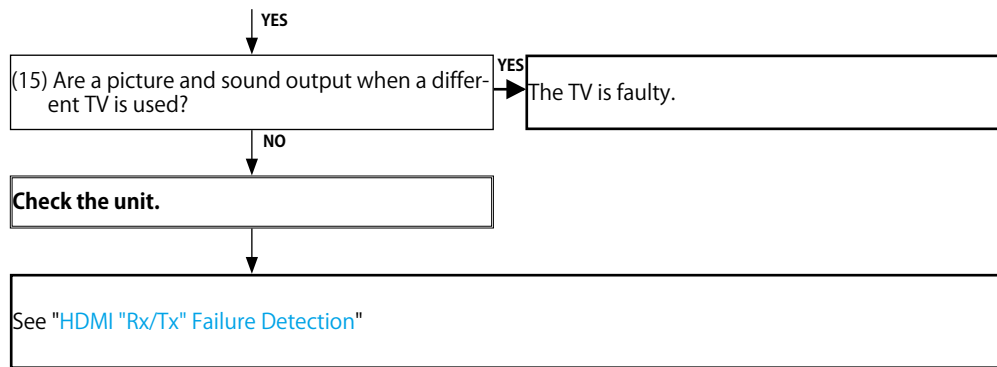

## 4. AUDIO


### 4.1. AUDIO CHECK

No audio output

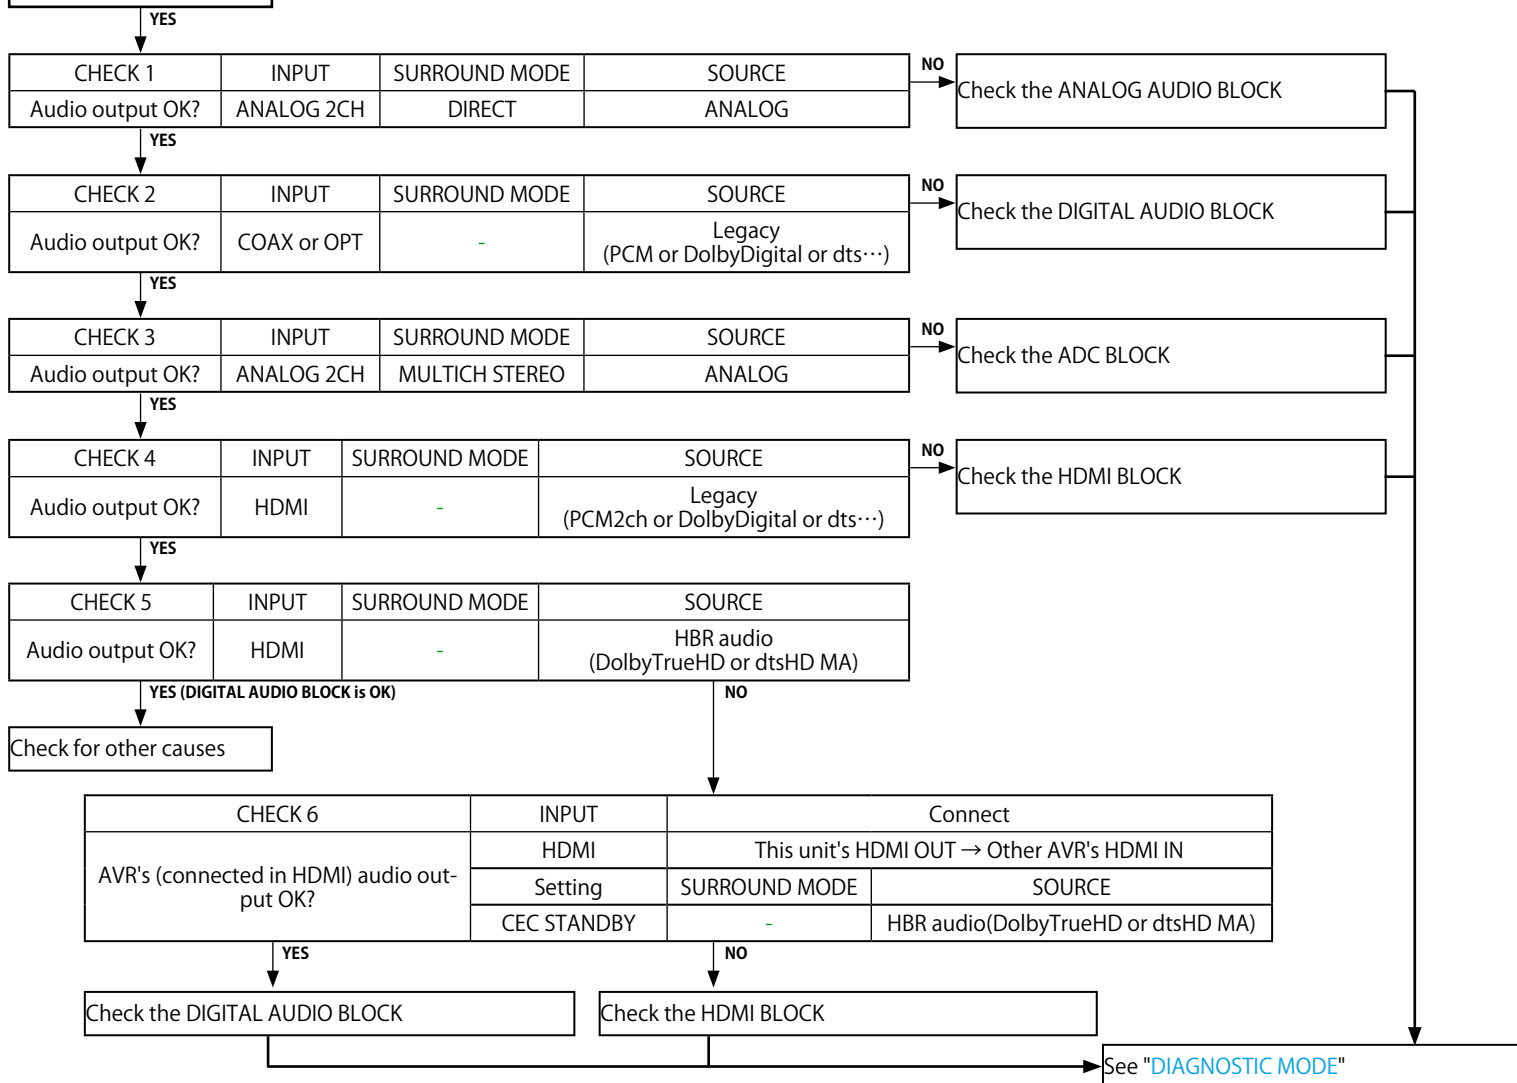


## 4.2. Power AMP (AMP PCB)

When using the protection pass mode, do not connect speakers to the speaker terminals.

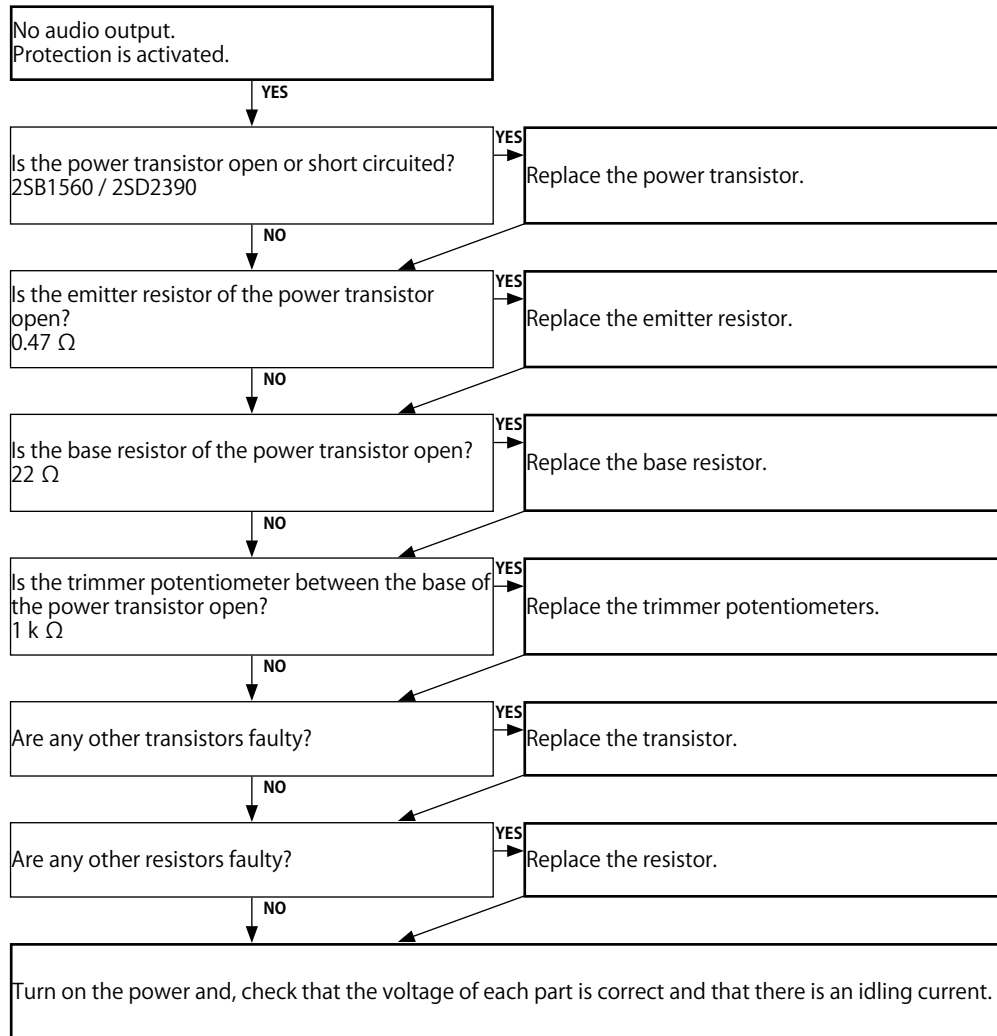


## 4.3. Analog audio

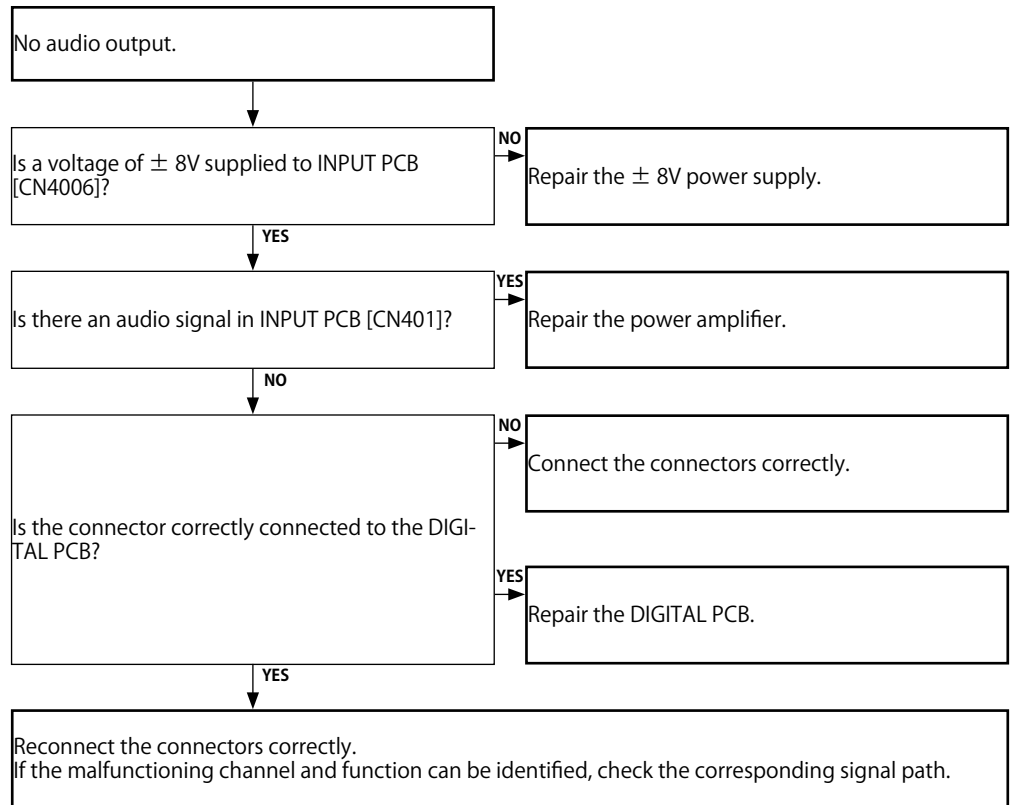


## 5. Network / Bluetooth / USB


### 5.1. Cannot connect to the network

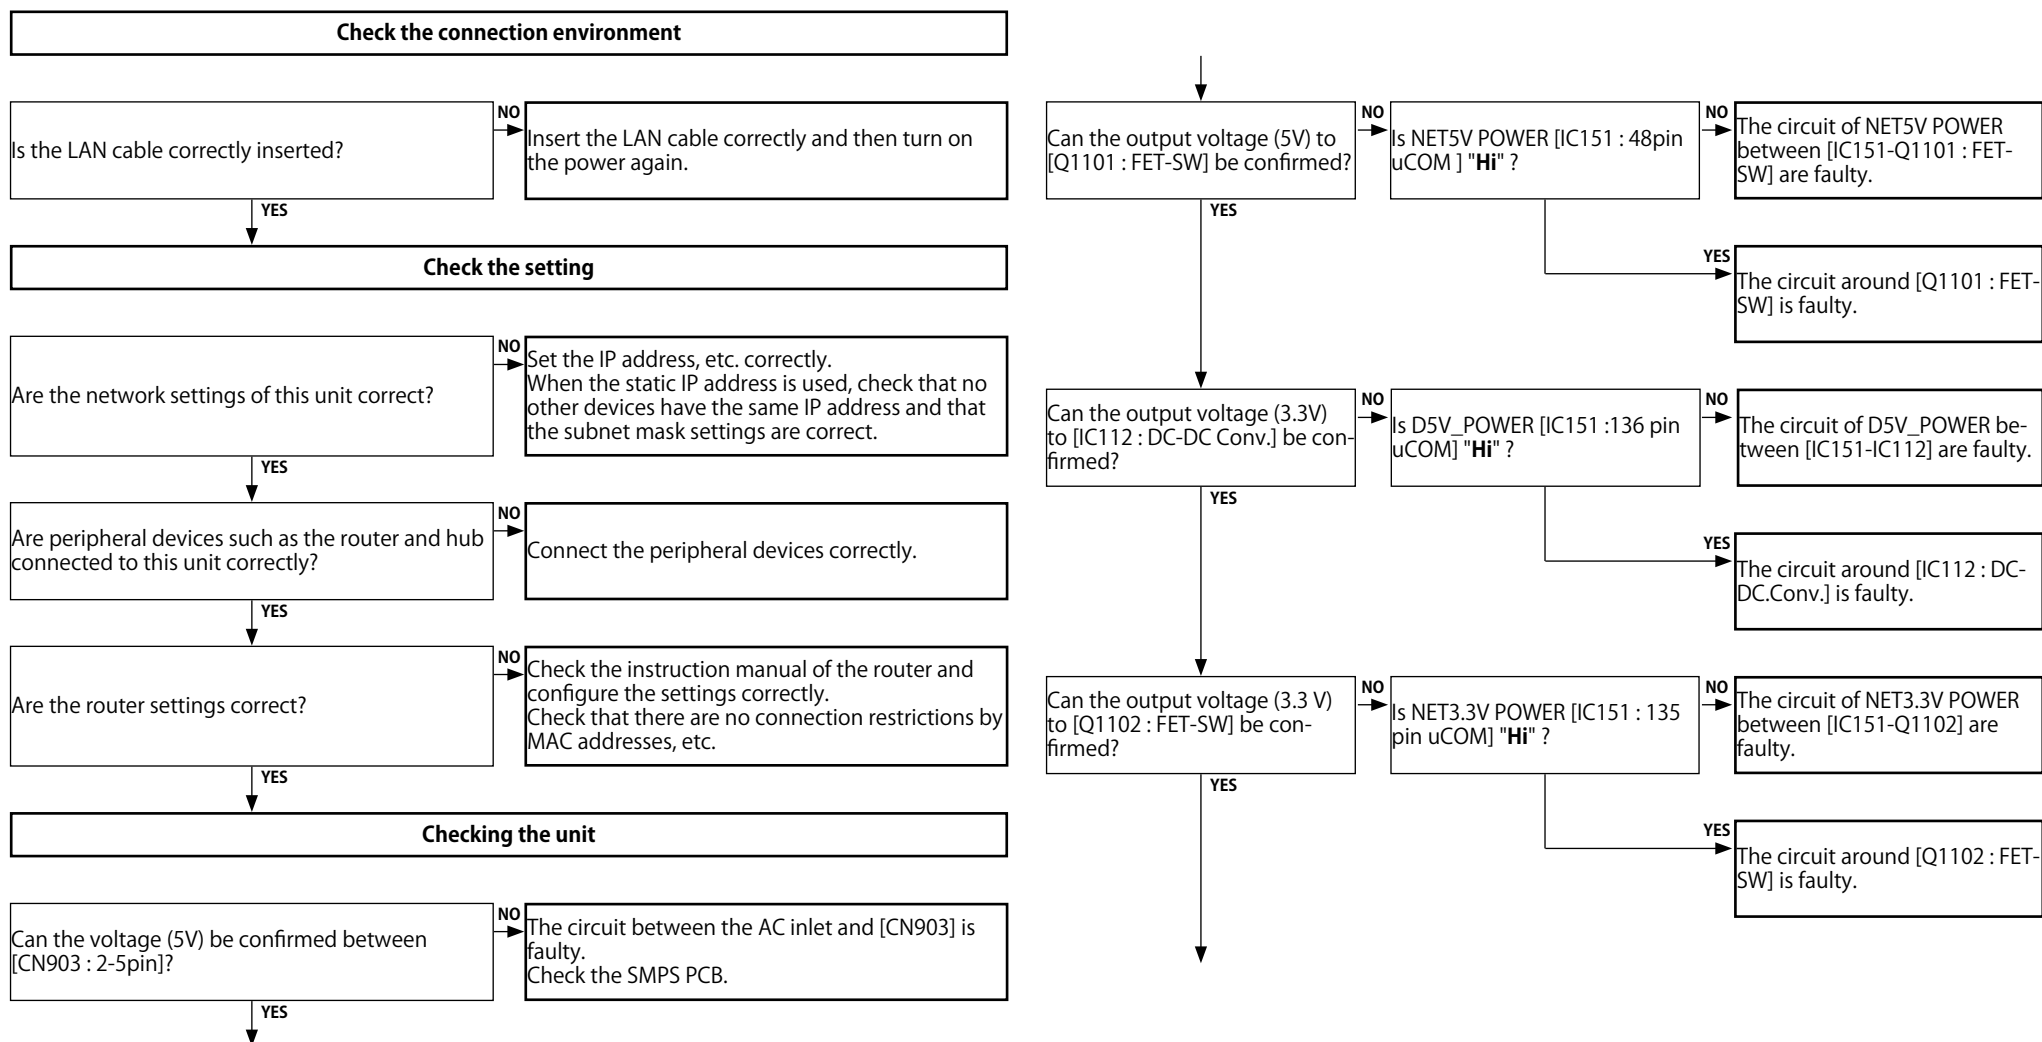


Go to next page.

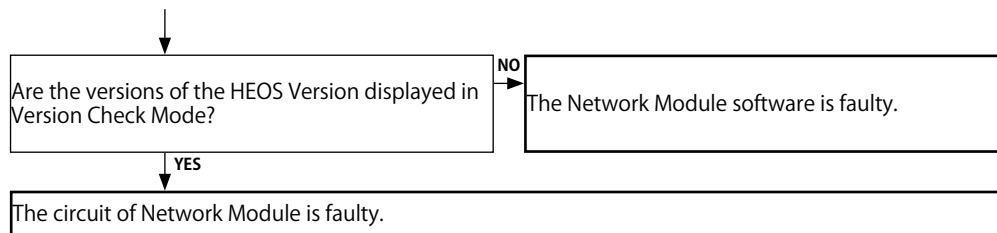


## 5.2. Cannot establish a Bluetooth connection

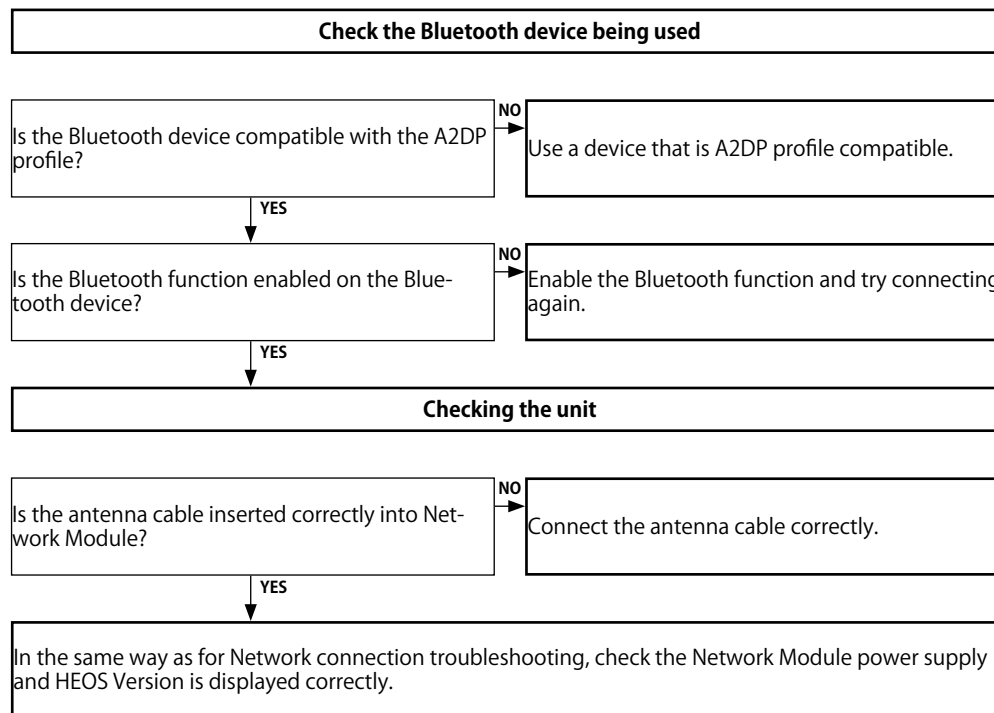


### 5.3. Cannot recognize the connected USB device

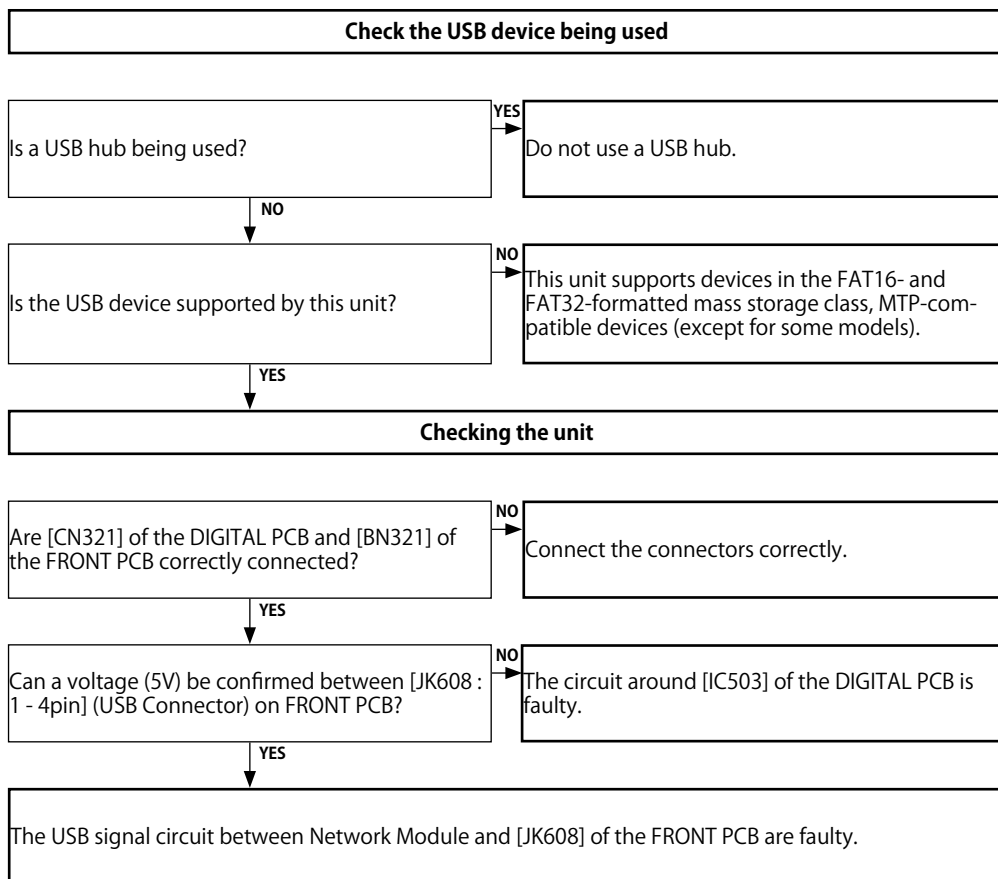


### 5.4. No picture or sound is output

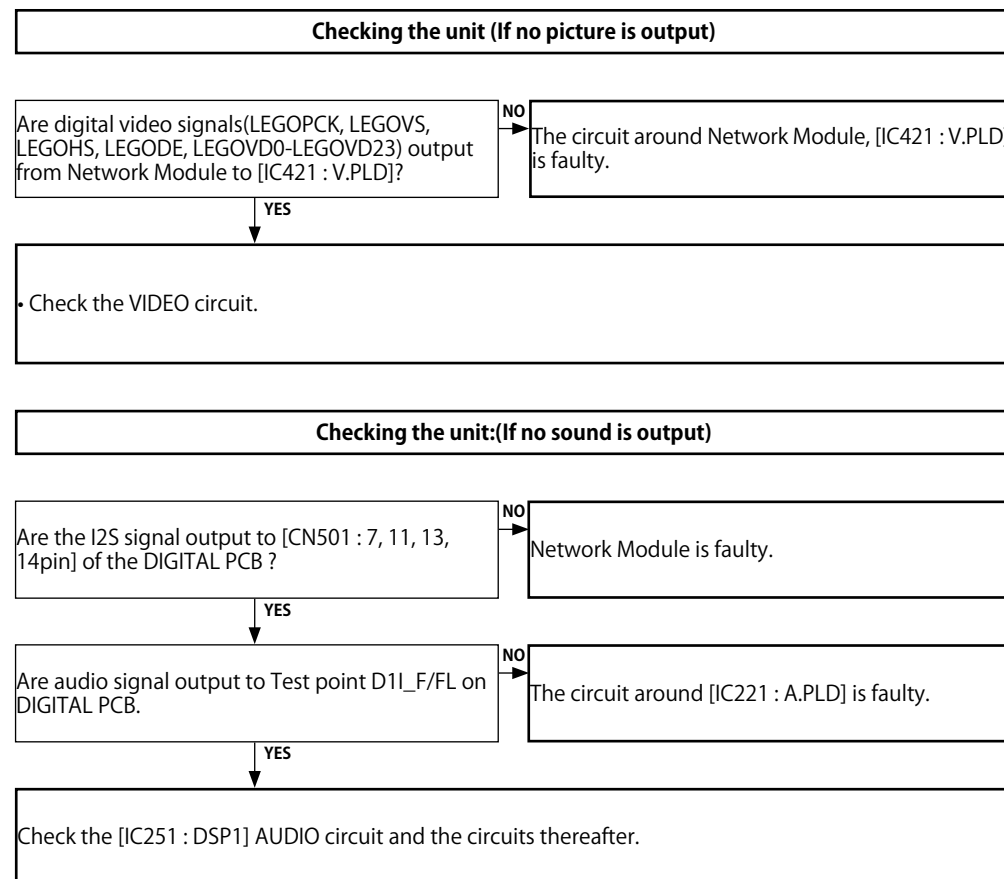

## DIGITAL test point

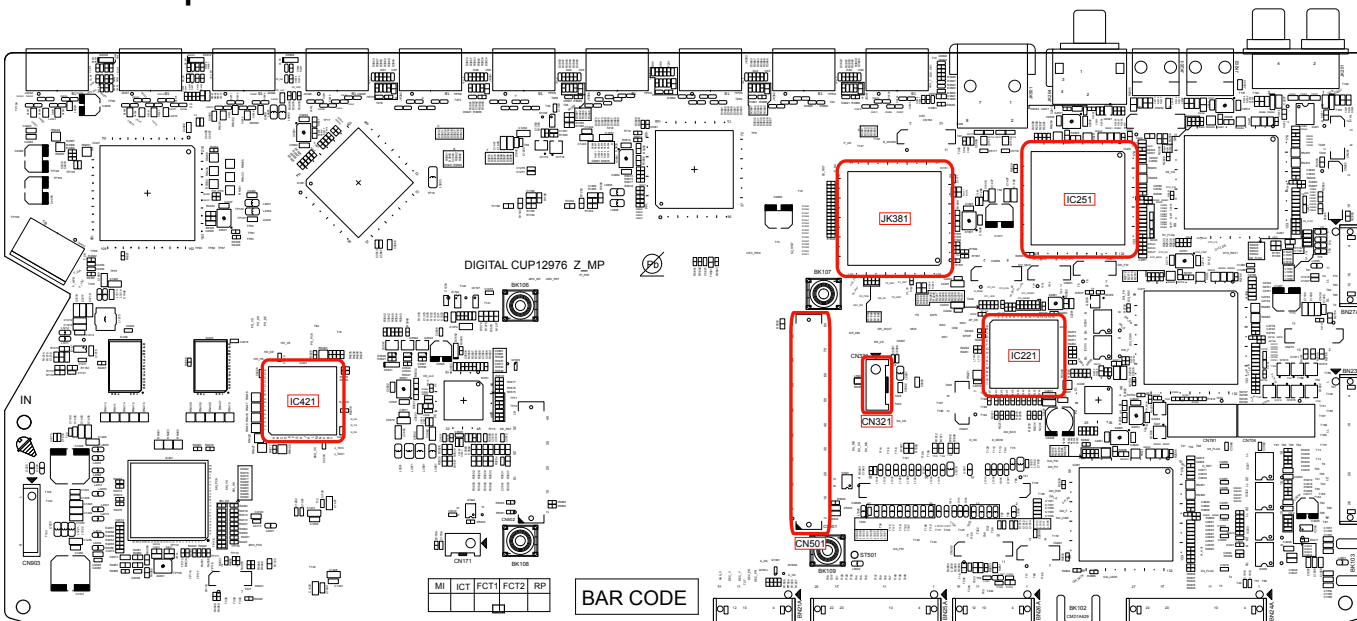


(A SIDE)

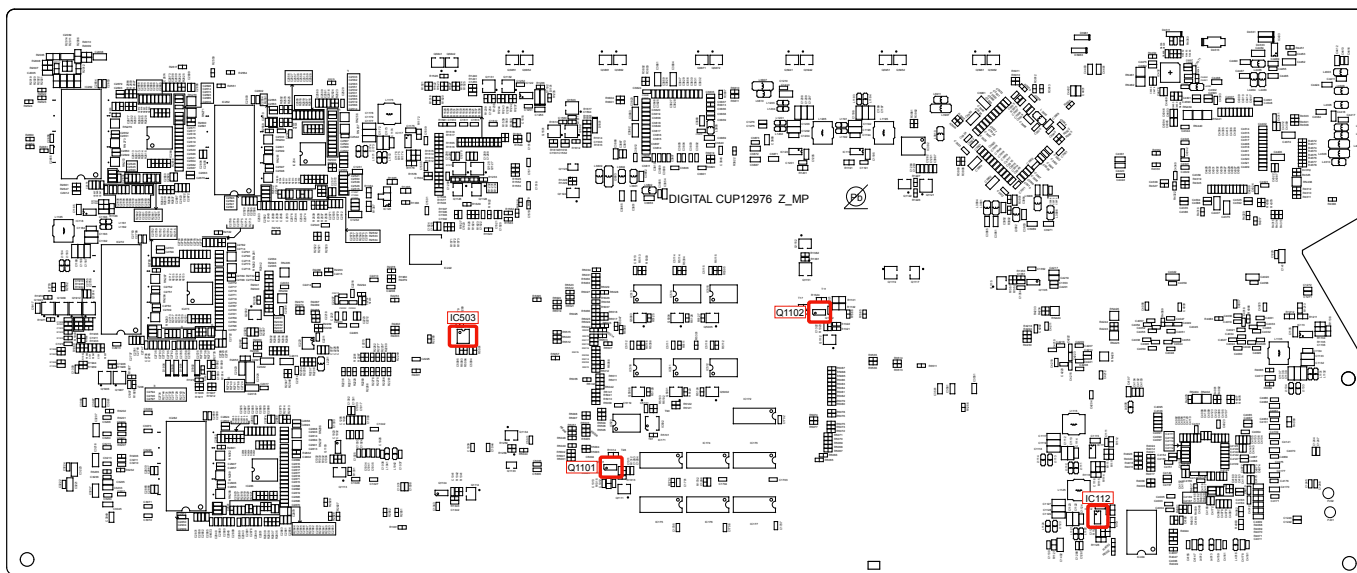

(B SIDE)


## USB test point

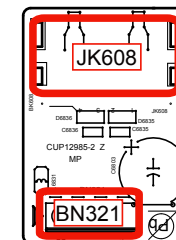


(A SIDE)




## 6. SMPS

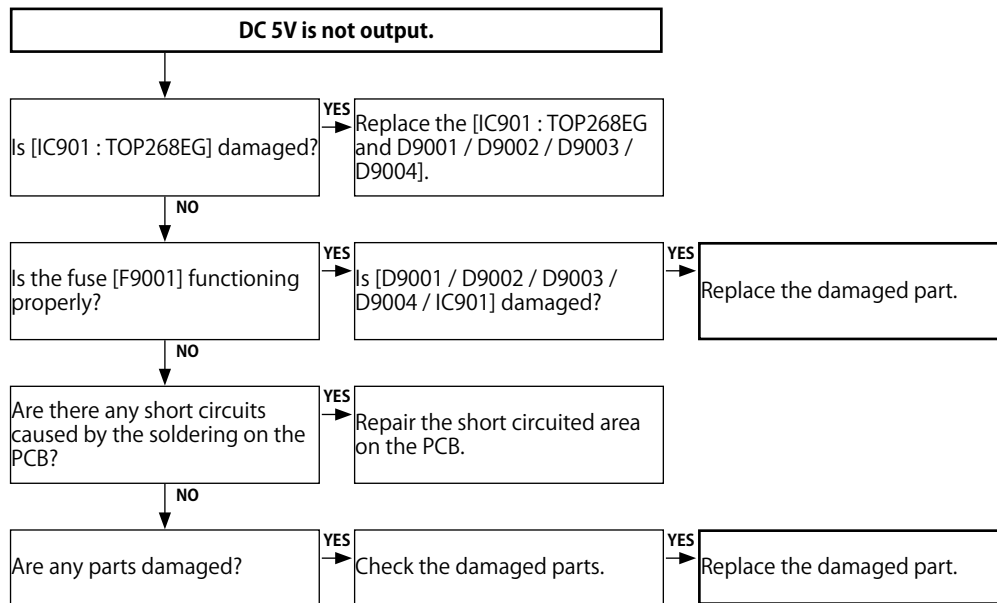


## Operation waveform for each part

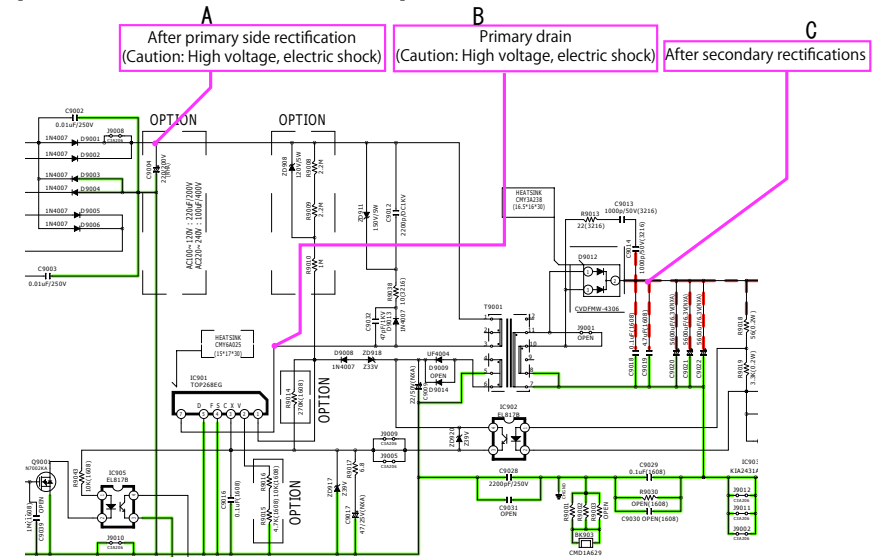




SMPS unit  
(Unloaded)

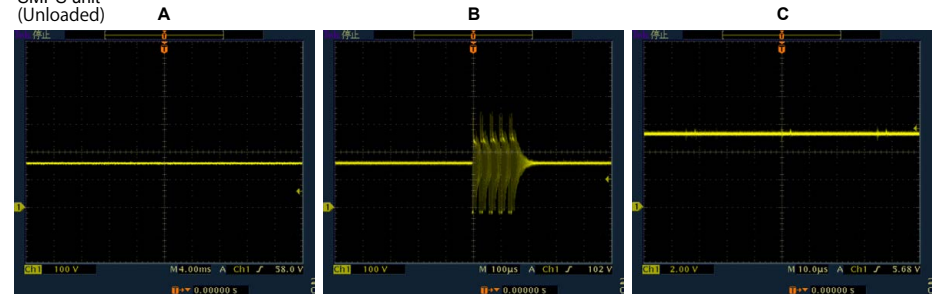


Set

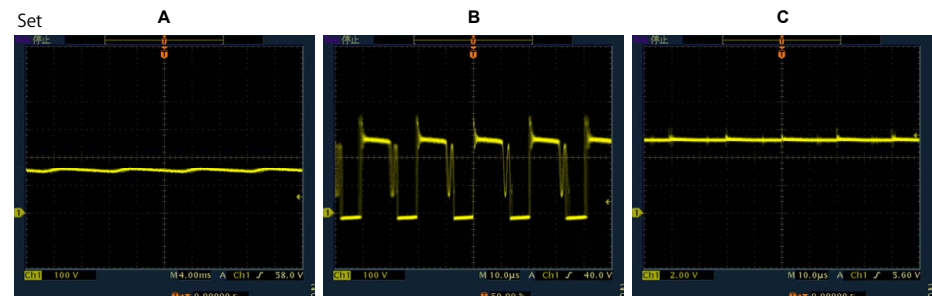


# PROTECTION DIAGRAM

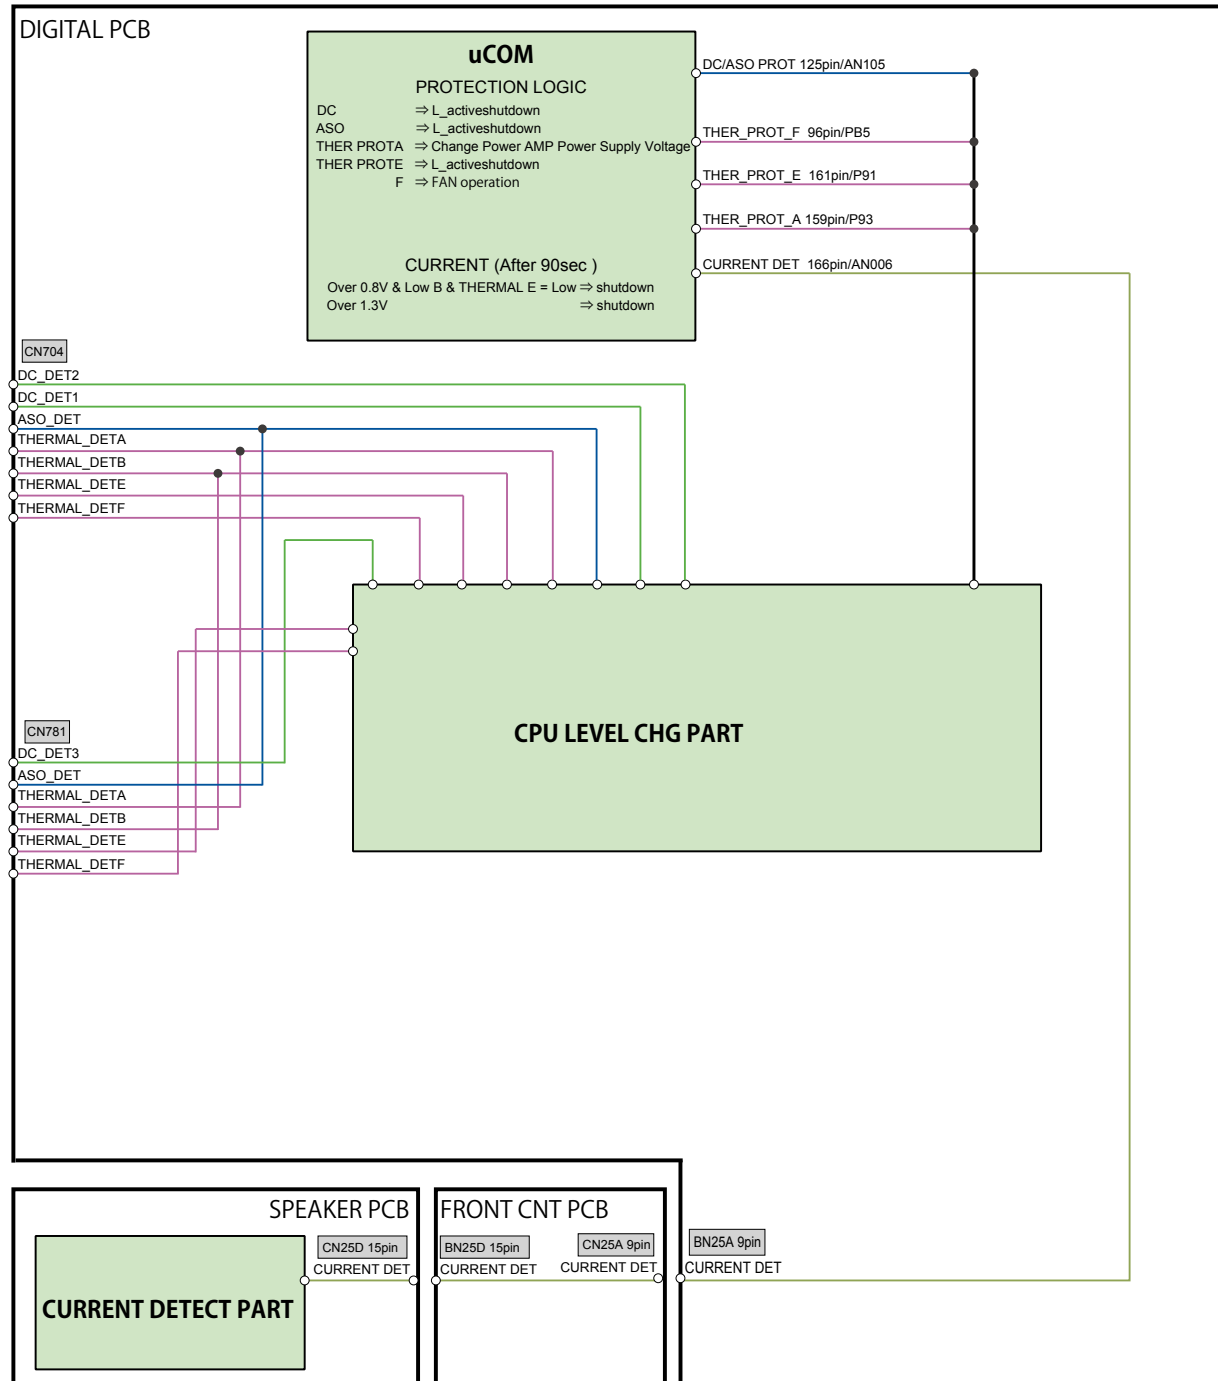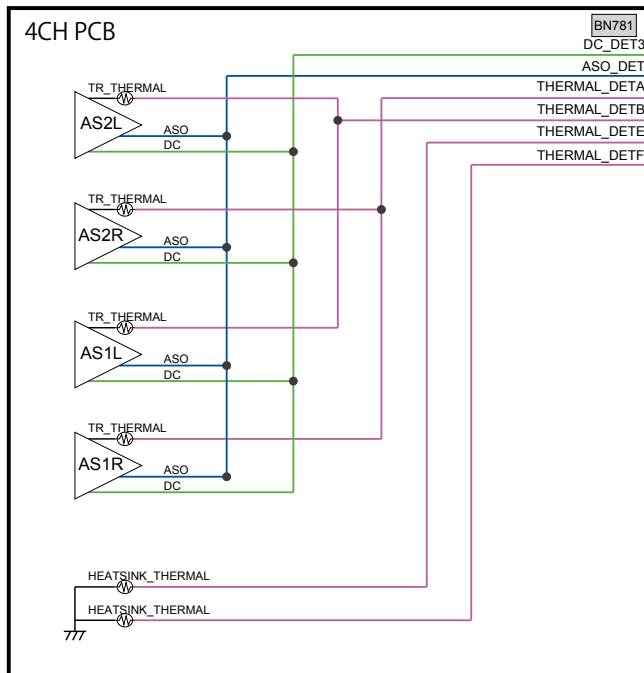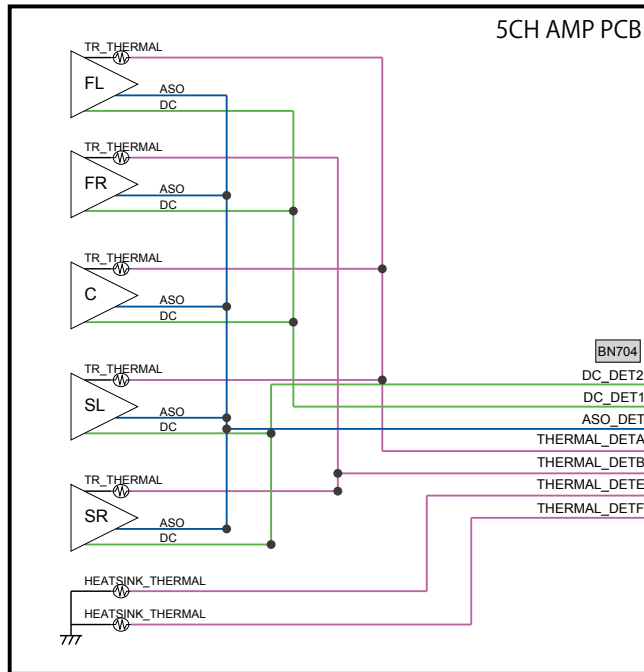


# AUDIO CHECK PATH




## HDMI BLOCK

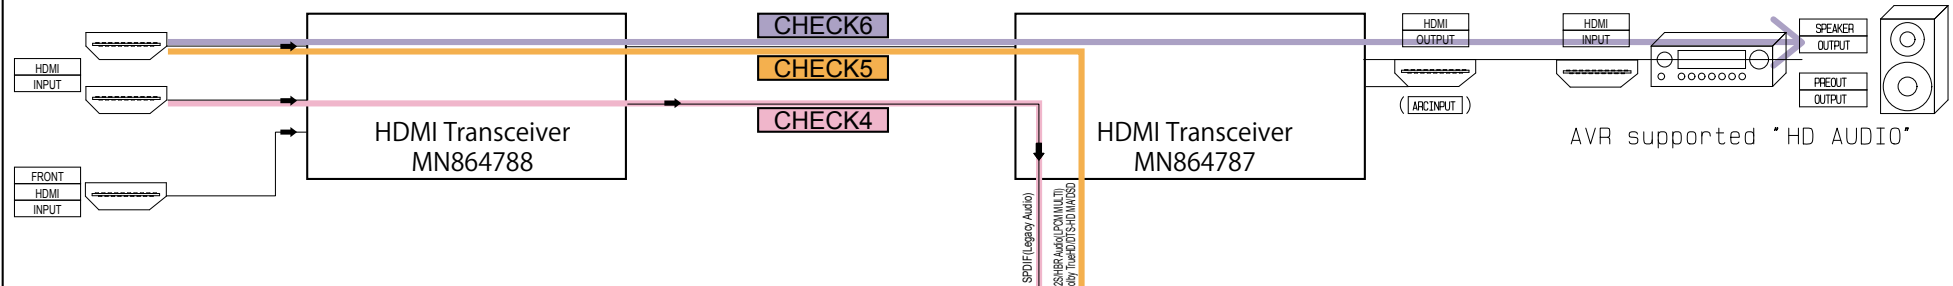


## Digital audio BLOCK

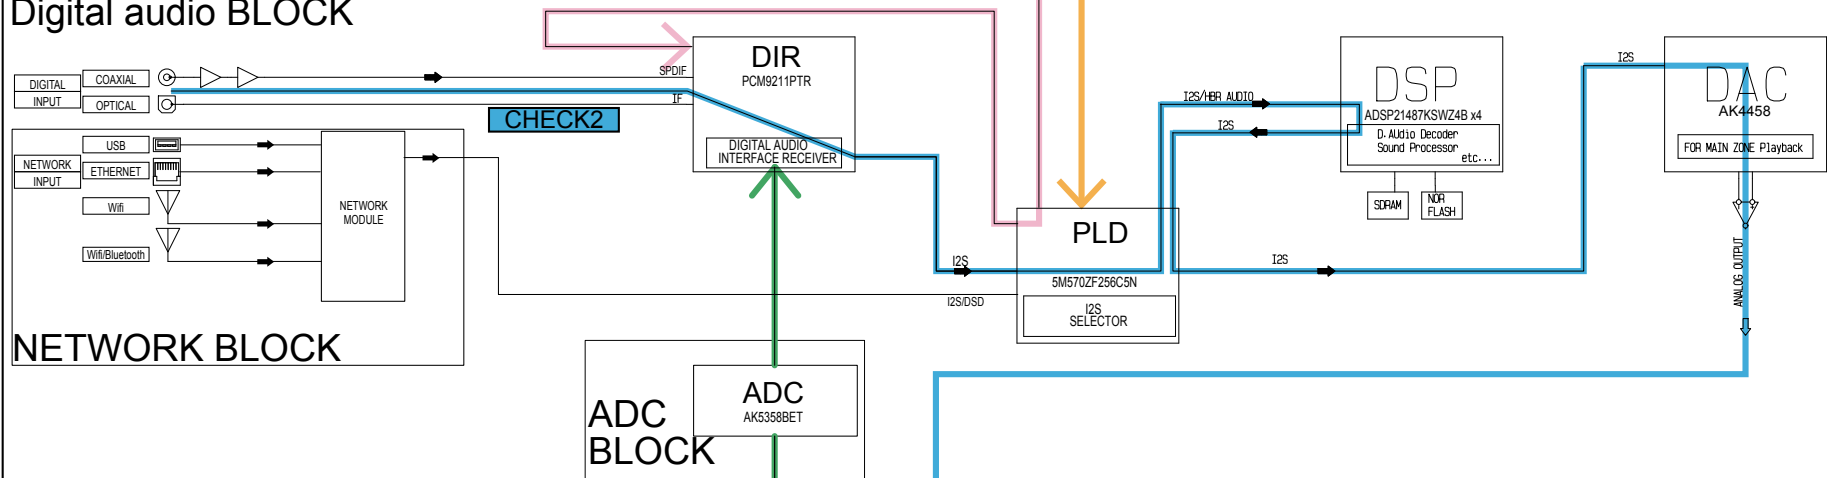

## NETWORK BLOCK

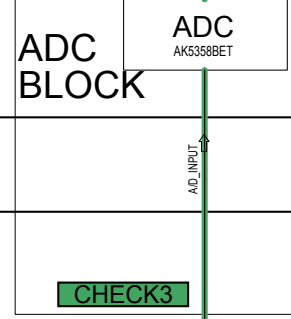

## Analog audio BLOCK

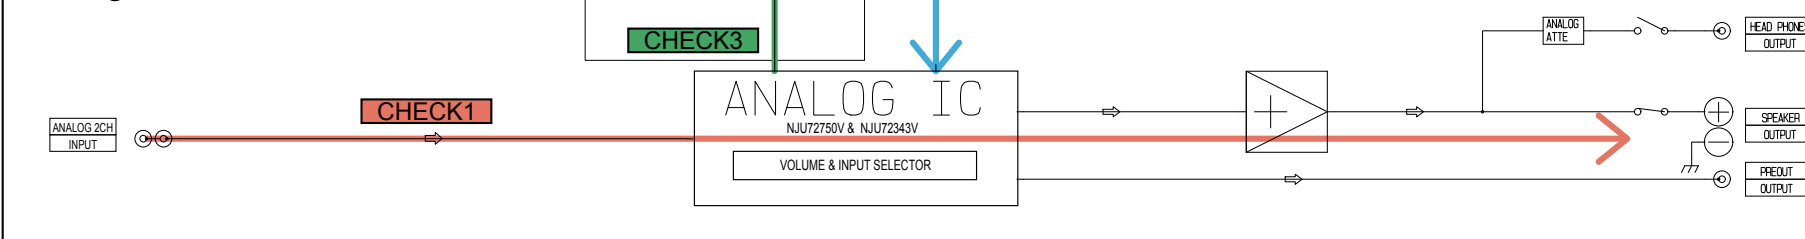

# HDMI "Rx/Tx" Failure Detection


## 1. Prior checking

**Check item(1).** Checking the HDMI connector  
Checking the condition of the HDMI pin (rear/front).



**OK**

Check for deformed pins.

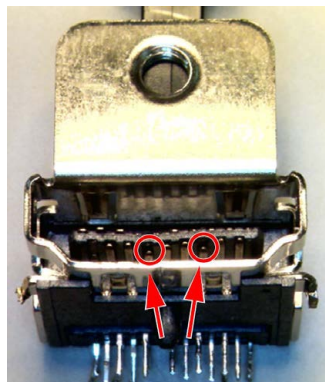

**NG**

There are deformed pins.

Replace the HDMI connector.

None of the pins are deformed.

Check by following the flow chart for "3. Starting detecting the point of failure".

NOTE :

After checking troubleshooting "3. HDMI/DVI", check "3. Starting detecting the point of failure".

## 2. Preparations for checking HDMI Switcher reception/transmission register

### 2-1. Necessary devices

- 1) Check the product settings.
- 2-a) Player with an HDMI terminal
- 2-b) TV with an HDMI terminal (\* NOTE : Do not use a computer monitor.)
- 3) Windows PC
- 4) Serial communication software "Termite.exe"  
(Download the software from [http://www.compuphase.com/software\\_termite.htm](http://www.compuphase.com/software_termite.htm) and install it.)
- 5) HDMI cable
- 6) RS-232C Straight cable
- 7) oscilloscope

### 2-2. Device Connection Method

Connect the TV and the AVR to the player using an HDMI cable and connect the AVR to the PC through an RS-232C cable as shown in Figure 1.

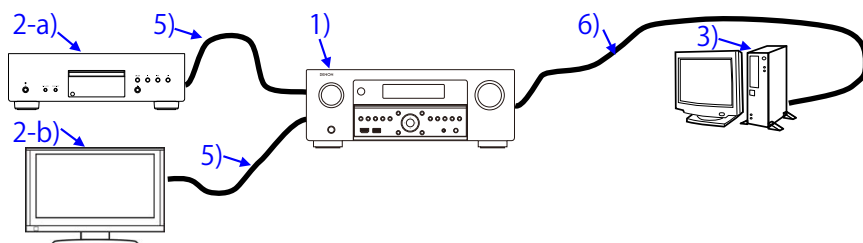


Figure 1. Device Connection Method

### 2-3. Device configuration method

PC settings : Execute the serial communication program, Termite.exe.

After executing Termite.exe, click [Settings].

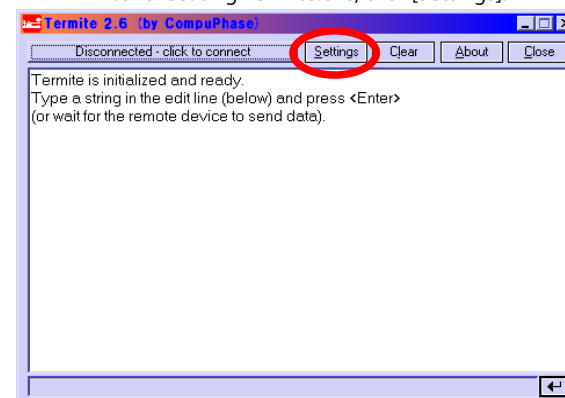


Figure 2. Screen After Executing Termite.exe

The serial port setup screen will be displayed.  
Configure the settings as shown in Figure 3 and click the "OK" button.

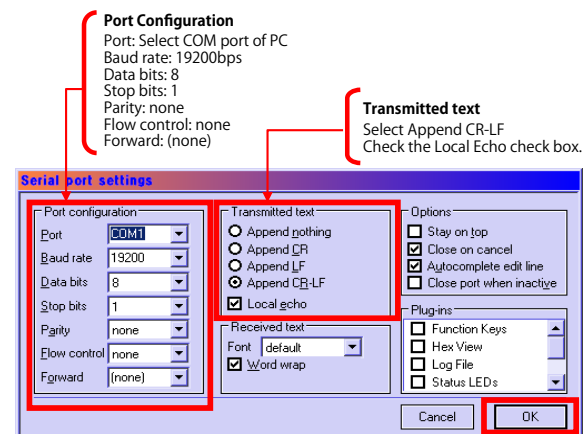


Figure 3. Serial Port Setup Screen

Click the [click to connect] button to start communication.  
After a connection is established successfully, the display of the button name will change as shown in Figure 4.

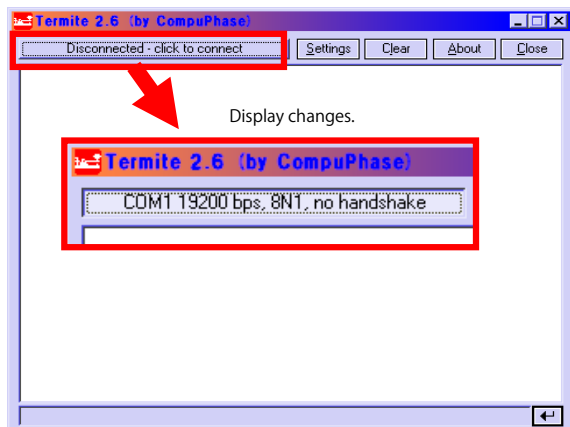


Figure 4. Change of the Display of the Communication Start Button Name

TV settings : Switch to the HDMI input in the AVR connection.  
Player settings : Turn the unit power on and configure it to play disks.  
AVR settings : While the power is On, hold down buttons "**CURSOR ▼**" and "**STATUS**" for at least 3 seconds.  
(Continue to press and hold the buttons until all segments of the FLD volume illuminate.)  
※ When the power is turned on after initialization, "**Setup Assistant**" will be displayed.  
After exiting "**Setup Assistant**" execute the above.

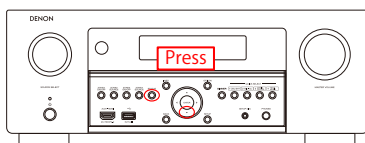


Figure 6. AVR settings



Figure 6. FLD Display When Set

When the settings are correct, the following message will be displayed in the window of Termite.

[00]Start Sub CPU Log Mode

\*\*\*\*

(\*\*\*\* is a version of Sub CPU.)

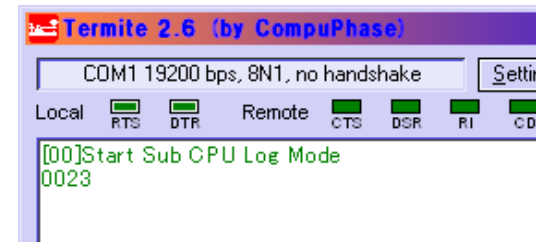


Figure 7. Display of Termite When AVR is Set

The setup is now complete.

Method for sending commands

Enter the command in the transmission command entry section, click the [Send] button and send the command.

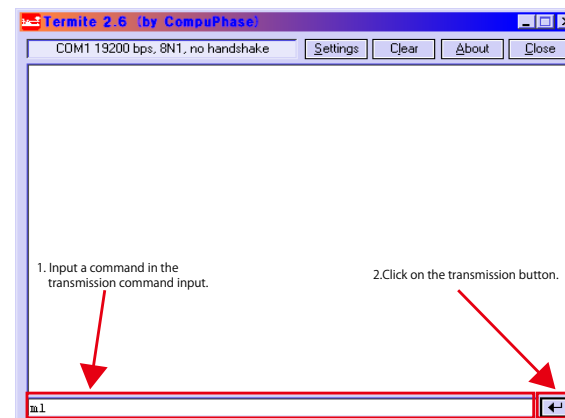


Figure 8. Method for Sending Termite Commands

### 3. Starting detecting the point of failure

#### Check item(3.1.).

Check the power supply status and communication status with the CPU of each device.  
Start in HDMI Diagnostics mode and follow the procedures below.

#### Start in HDMI Diagnostics mode

While the power is on, hold down buttons "**CURSOR ▲**" and "**BACK**" for at least 3 seconds.

L1	HDMI DIAGNOSTICS
L2	

↓ "HDMI DIAGNOSTICS" is displayed.

When the mode has switched, start Hardware Check.

L1	HDMI DIAGNOSTICS
L2	HardwareCheck...



#### Display when an Error is detected.

L1	Err#: H1-01
L2	Contact support

Check the Error Code table items.

#### Error Code table

Error Code	Check item No.	Description
H1-01	<a href="#">Check item (3-1.1.)</a>	Communication Error with HDMI Tx [IC431 : MN864787]
H1-02	<a href="#">Check item (3-2.1.)</a>	Communication Error with HDMI SW1 [IC391 : MN864788]
H1-03	<a href="#">Check item (3-3.1.)</a>	Communication Error with HDMI SW2 [IC381 : MN864788]
H1-05	<a href="#">Check item (3-7.1.)</a>	Communication Error with VIDEO DECODER [IC351 : ADV7180]
H1-06	<a href="#">Check item (3-4.1.)</a>	Communication Error with GUI IC [IC401 : ADV8003]
H1-08	<a href="#">Check item (3-8.1.)</a>	Communication Error with DSP1 [IC251 : ADSP21487]
H1-09	<a href="#">Check item (3-9.1.)</a>	Communication Error with DSP2 [IC261 : ADSP21487]
H1-10	<a href="#">Check item (3-10.1.)</a>	Communication Error with DSP3 [IC271 : ADSP21487]
H1-11	<a href="#">Check item (3-11.1.)</a>	Communication Error with DSP4 [IC281 : ADSP21487]
H1-12	<a href="#">Check item (3-12.1.)</a>	Communication Error with DIR [IC202 : PCM9211]
H1-14	<a href="#">Check item (3-5.1.)</a>	DDR check Error [IC402, IC403 : A3R12E40DBF-8E]
H1-15	<a href="#">Check item (3-6.1.)</a>	Communication Error with GUI ROM [IC404 : MX25L12835FMI-10G]
H1-16	<a href="#">Check item (3-13.1.)</a>	Communication Error with ARC IC [IC432 : Sil9437]

#### Display when an Error is not detected.

L1	HDMI DIAGNOSTICS
L2	1 Auto Test


Cancel the mode, and proceed to [check item \(3.2.\)](#).

Canceling the selected mode

Press the power button to exit off the power.




**Check item(3.2.).** : Does a video signal come from HDMI ZONE2 OUT to TV correctly?



When the HDMI input terminal (HDMI 5, 6, 7) are connected in order to the player, are the audio and video from the player played back on the TV correctly in each case?

YES

**Check item(3.3.).** : Does a video signal come from HDMI ZONE2 OUT to TV correctly?




When the HDMI input terminal (HDMI 1, 2, 3, 4) are connected in order to the player, are the audio and video from the player played back on the TV correctly in each case?

YES

NO  
Go to [check item \(3-14.1.\)](#)  
(Switcher1 failure detection procedure)

NO  
Go to [check item \(3-15.1.\)](#)  
(Switcher2 failure detection procedure)

**Check item(3.4.).** Does a video signal come from HDMI OUT to TV correctly?




Turn Video Conversion "**OFF**" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = Off)  
When the player is connected in order to the HDMI input terminals (HDMI 1, 5), in each case is the player video played back on the TV connected to the HDMI output terminal (HDMI OUT 1,2)?

YES

When the HDMI input terminal (AUX1) is connected to the player, the video from the player will be played back on the TV?  
Use any of Dolby TrueHD/DTSHD MA/PCM 8ch for the playback audio format.

YES

**Check item(3.5.).** Does a video signal come from HDMI OUT to TV correctly?



Turn Video Conversion "**ON**" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)  
When the HDMI input terminal (HDMI 1) is connected to the player, the video from the player will be played back on the TV?

YES

There are no problems with the HDMI device.

NO  
Go to [check item \(3-16.1.\)](#)  
(Tx failure detection procedure)

NO  
Is the "**DIG**" indicator illuminated on the FLD?  
When the "**DIG**" indicator is illuminated, the DIGITAL AUDIO block is faulty.  
If the "**DIG**" indicator is not illuminated, go to [check item \(3-17.1.\)](#).  
(HDMI DDC Buffer [TCA9517] failure detection procedure)

NO  
Go to [check item \(3-18.1.\)](#)  
(GUI and PLD failure detection procedure)


### 3-1. Error Code H1-01 failure detection procedure

Checking device. [IC431 : MN864787]

Check the power supply voltage. (HDMI Tx)

**Check item(3-1.1).** Check the power supply voltage. :  
Does the power supply voltage of the HDMI Tx [IC431] indicate the correct voltage (1.1V, 3.3V)?  
The test points are as follows.

HDMI Tx

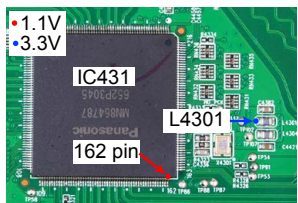

YES

NO

**Check item(3-1.2).** Check the power supply voltage. :  
Check the power components [IC121/IC113] and the pattern on the substrate.  
If there is no problem, remove the HDMI Tx [IC431] from the substrate and measure the voltage at the test point of **check item (3-1.1)**.  
Is the voltage correct (1.1V or 3.3V)?

YES

Replace with a new device.

NO



The power supply circuit is faulty.  
Replace the PCB.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI Tx)

**Check item(3-1.3).** Checking the reset waveform :  
Check the waveform.  
Is the "TP91" waveform of the TP near the HDMI Tx [IC431] correct (like the one shown in the diagram) when the power is turned on?

HDMI Tx

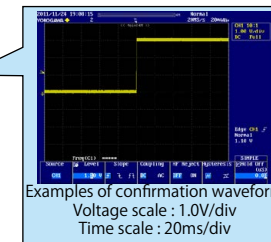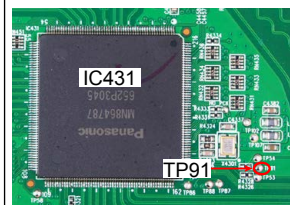


Examples of confirmation waveform  
Voltage scale : 1.0V/div  
Time scale : 20ms/div

NO

Check the reset circuit between CPU [IC151] and HDMI Tx [IC431].  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.  
Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

YES

Go to next page.

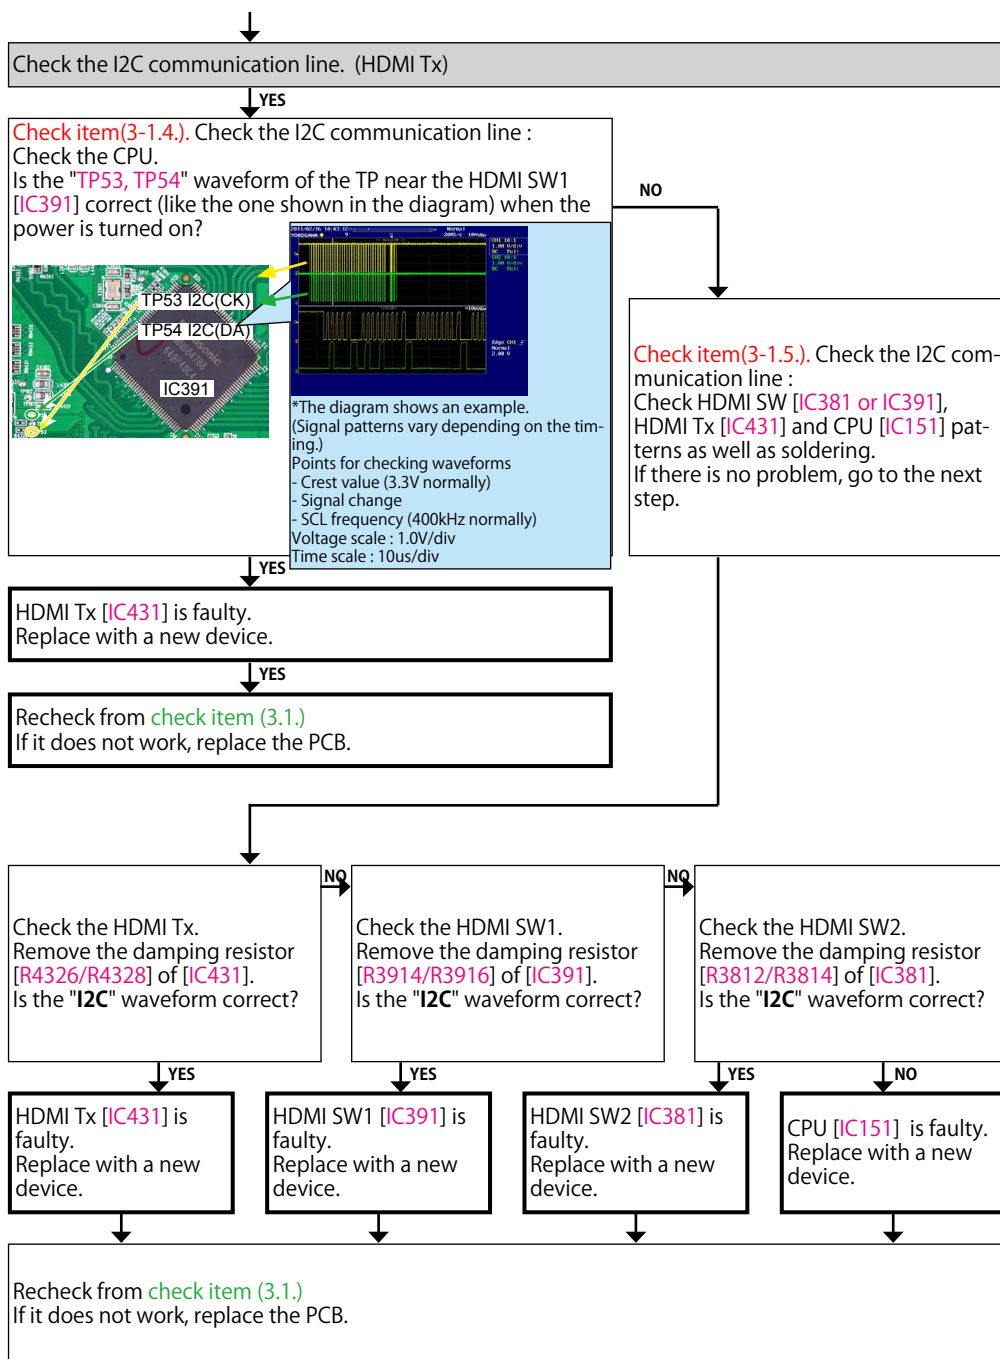

## 3-2. Error Code H1-02 failure detection procedure

Checking device. [IC391 : MN864788]


Check the power supply voltage. (HDMI SW1)

**Check item(3-2.1).** Check the power supply voltage. :

Does the power supply voltage of the HDMI SW1 [IC391] indicate the correct voltage (1.1V, 3.3V)?

The test points are as follows.

HDMI SW1

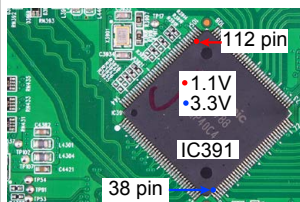

YES

NO

**Check item(3-2.2).** Check the power supply voltage. :  
Check the power components [IC119] and the pattern on the substrate.  
If there is no problem, remove the HDMI SW1 [IC391] from the substrate and measure the voltage at the test point of **check item (3-2.1)**.  
Is the voltage correct (1.1V or 3.3V)?

YES

NO

Replace with a new device.

The power supply circuit is faulty.  
Replace the PCB.



Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI SW1)

**Check item(3-2.3).** Checking the reset waveform :  
Check the waveform.

Is the "TP17" waveform of the TP near the HDMI SW1 [IC391] correct (like the one shown in the diagram) when the power is turned on?

HDMI SW1

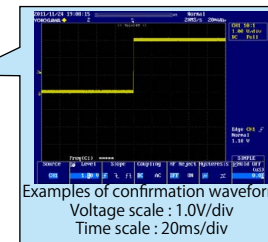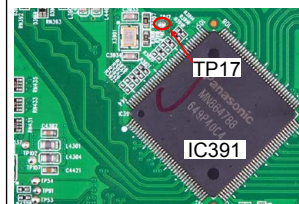

Examples of confirmation waveform  
Voltage scale : 1.0V/div  
Time scale : 20ms/div

YES

NO

**Check item (3.1)** again after replacing [R3914/R3916] with a new resistor.  
If there is still a problem, the HDMI SW1 [IC391] is faulty.  
Replace with a new device.

Check the reset circuit between CPU [IC151] and HDMI SW1 [IC391].  
If there is no problem, the HDMI SW1 [IC391] is faulty.  
Replace with a new device.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.


### 3-3. Error Code H1-03 failure detection procedure

Checking device. [IC381 : MN864788]

Check the power supply voltage. (HDMI SW2)

**Check item(3-3.1).** Check the power supply voltage. :  
Does the power supply voltage of the HDMI SW2 [IC381] indicate the correct voltage (1.1V)?  
The test points are as follows.

HDMI SW2

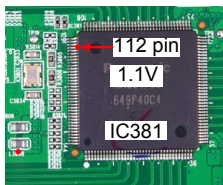

YES

NO

**Check item(3-3.2).** Check the power supply voltage. :  
Check the power components [IC120/IC113] and the pattern on the substrate.  
If there is no problem, remove the HDMI SW2 [IC381] from the substrate and measure the voltage at the test point of **check item (3-3.1)**.  
Is the voltage correct (1.1V or 3.3V)?

YES

NO

Replace with a new device.



The power supply circuit is faulty.  
Replace the PCB.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Checking the reset waveform. (HDMI SW2)

**Check item(3-3.3).** Checking the reset waveform :  
Check the waveform.  
Is the "TP19" waveform of the TP near the HDMI SW2 [IC381] correct (like the one shown in the diagram) when the power is turned on?

HDMI SW2

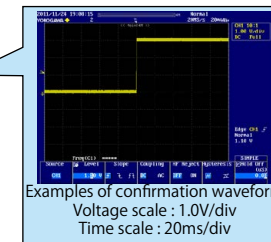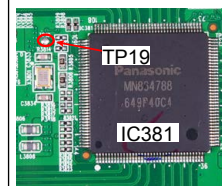

NO

Check the reset circuit between CPU [IC151] and HDMI SW2 [IC381].  
If there is no problem, the HDMI SW2 [IC381] is faulty.  
Replace with a new device.  
Recheck from **check item (3-3.3)**.  
If it does not work, replace the PCB.

YES

**check item (3.1)** again after replacing [R3812/R3814] with a new resistor.  
If there is still a problem, the HDMI SW2 [IC381] is faulty.  
Replace with a new device.


Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

### 3-4. Error Code H1-06 failure detection procedure

Checking device. [IC401 : ADV8003]

Check the power supply voltage.

**Check item(3-4.1).** Check the power supply voltage.:  
Does the power supply voltage of the GUI [IC401] indicate the appropriate voltage (1.8V, 3.3V)?  
The test points are as follows.

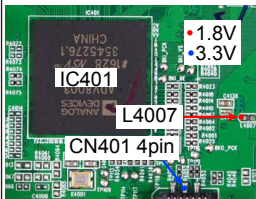

**Check item(3-4.2).** Check the power supply voltage.:  
Check the power supply components [IC111, Q1105] on the substrate and peripheral pattern.  
If there is no problem, remove the GUI [IC401] from the substrate and measure the voltage at the test point of **check item (3-4.1)**.  
Is the voltage correct (1.8V or 3.3V)?

YES

YES

NO


The power supply circuit is faulty.  
Replace the PCB.

GUI [IC401] is faulty.  
Replace with a new device.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Checking the reset waveform.

**Check item(3-4.3).** Checking the reset :  
Check the CPU.  
Is the waveform of the TP near the GUI [IC401] correct (like the one shown in the diagram) when the power is turned on?

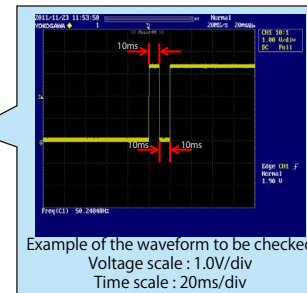


YES

NO

Check the reset circuit between CPU [IC151] and GUI [IC401].  
If there is no problem, the GUI [IC401] is faulty.  
Replace with a new device.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Go to next page.

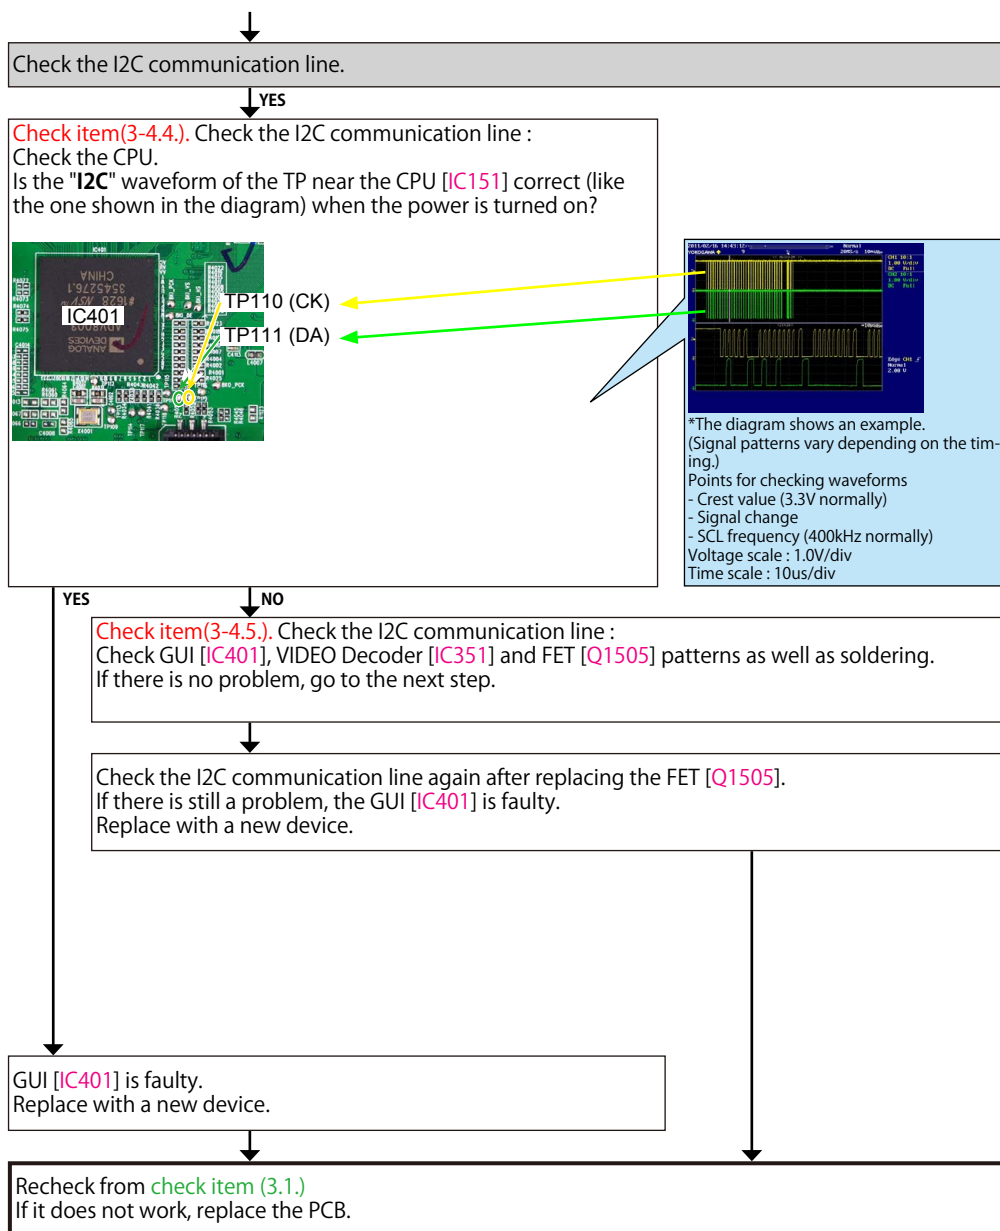



### 3-5. Error Code H1-14 failure detection procedure

Checking device. [IC402, IC403 : A3R12E40DBF-8E]

#### Check item(3-5.1.).

Check soldering of IP SCALER [IC401], DDR2 [IC402/IC403] and its peripheral circuits.  
Check soldering of the resistors [R4076 to R4082, RN401 to RN415] between IP SCALER and DDR2.  
If there is no problem with soldering, [IC401/IC402/IC403] is defective. Replace their IC. Or replace the substrate.

Recheck from [check item \(3.1.\)](#)

### 3-6. Error Code H1-15 failure detection procedure

Checking device. [IC404 : MX25L12835FMI-10G]

#### Check item(3-6.1.).

Write to the GUI ROM.

Recheck from [check item \(3.1.\)](#)  
Does Error Code H1-15 continue?

NO

YES

#### Check item(3-6.2.).

Replace [IC403] with a new device.

Recheck from [check item \(3.1.\)](#)  
Does Error Code H1-15 continue?

NO

YES

Go to [check item \(3-4.1.\)](#)

Recheck from [check item \(3.2.\)](#)

### 3-7. Error Code H1-05 failure detection procedure



Checking device. [IC351 : ADV7180]

Checking the reset waveform. (VIDEO DECODER)

Check item(3-7.1.). Checking the reset waveform :  
Check the waveform.

Is the "TP13" waveform of the TP near the VIDEO DECODER [IC351] correct (like the one shown in the diagram) when the power is turned on?

VIDEO DECODER

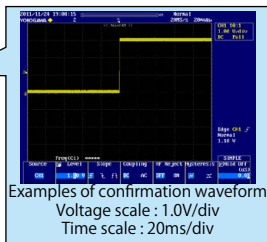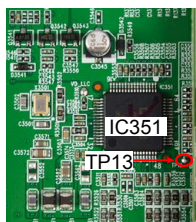

NO

Check the reset circuit between CPU [IC151] and VIDEO DECODER [IC351].  
If there is no problem, the VIDEO DECODER [IC351] is faulty.  
Replace with a new device.  
Recheck from check item (3-7.1.)  
If it does not work, replace the PCB.

YES

check item (3.1.) again after replacing [R3537/R3538] with a new resistor.  
If there is still a problem, the VIDEO DECODER [IC351] is faulty.  
Replace with a new device.


Recheck from check item (3.1.)  
If it does not work, replace the PCB.

### 3-8. Error Code H1-08 failure detection procedure

Checking device. [IC251 : ADSP21487]

Check the power supply voltage. (DSP1)

**Check item(3-8.1.).** Check the power supply voltage.:  
Does the power supply voltage of the DSP [IC251] indicate the appropriate voltage (1.1V, 3.3V)?  
The test points are as follows.

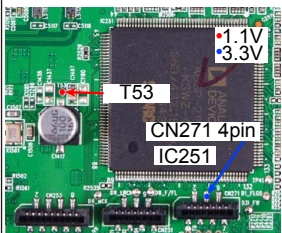

YES

**Check item(3-8.2.).** Check the power supply voltage.:  
Check the power supply components [IC112, Q1103, IC117] on the substrate and peripheral pattern.  
If there is no problem, remove the DSP [IC251] from the substrate and measure the voltage at the test point of **check item (3-8.1.)**.  
Is the voltage correct (1.1V or 3.3V)?

YES

NO



The power supply circuit is faulty.  
Replace the PCB.

DSP [IC251] is faulty.  
Replace with a new device.

Recheck from **check item (3.1.)**  
If it does not work, replace the PCB.

Checking the reset waveform. (DSP1)

**Check item(3-8.3.).** Checking the reset :  
Check the CPU.  
Is the waveform of the TP near the DSP [IC251] correct (like the one shown in the diagram) when the power is turned on?

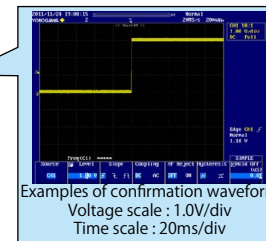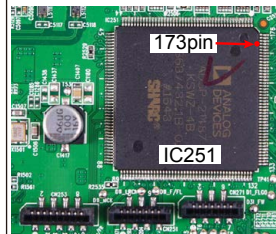


YES

NO

Check the reset circuit between CPU [IC151] and DSP [IC251].  
If there is no problem, the DSP [IC251] is faulty.  
Replace with a new device.

Recheck from **check item (3.1.)**  
If it does not work, replace the PCB.

Go to next page.

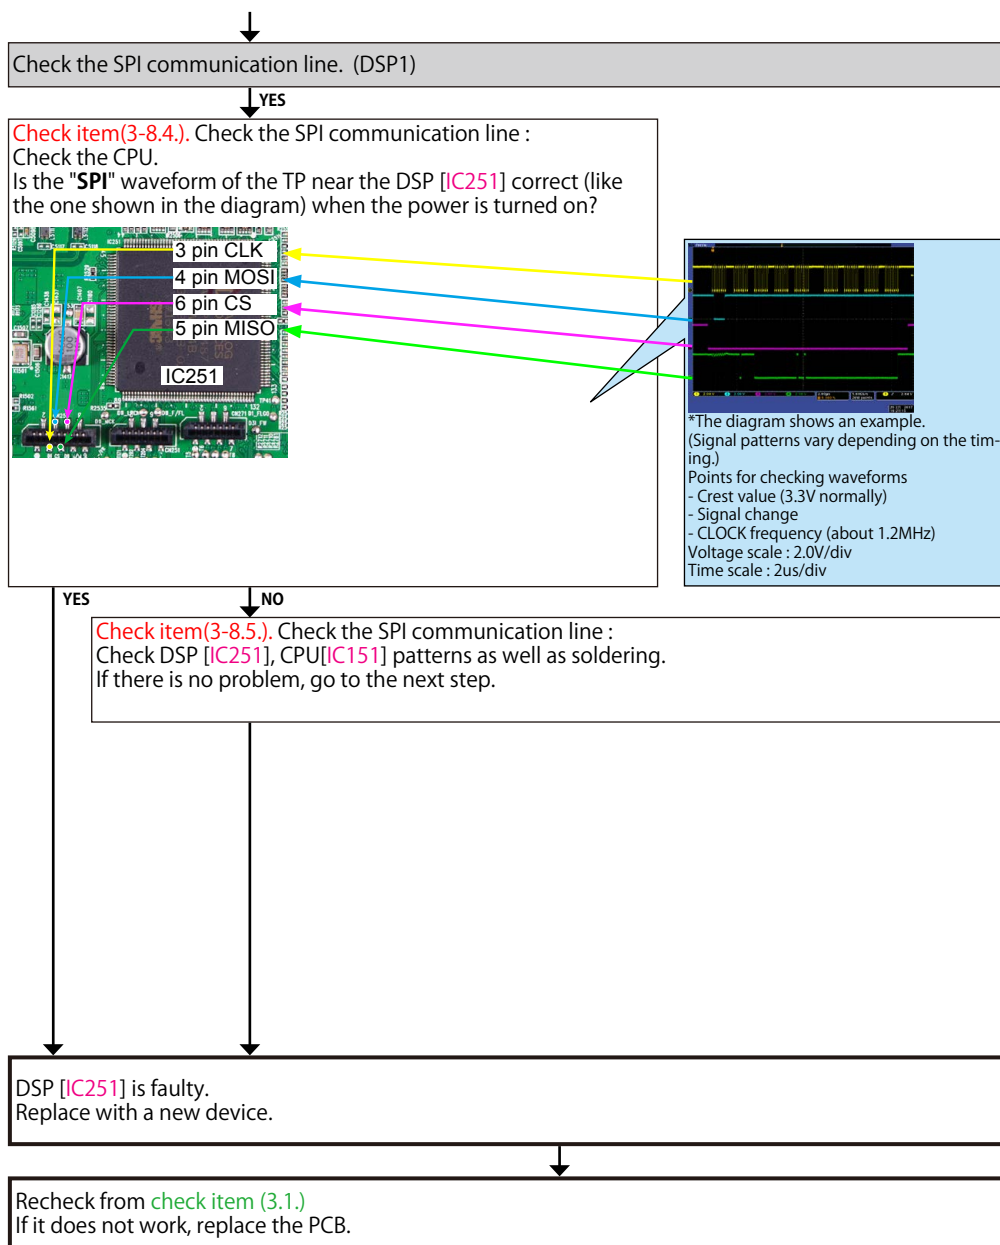

### 3-9. Error Code H1-09 failure detection procedure



Checking device. [IC261 : ADSP21487]

Checking the reset waveform. (DSP2)

Check item(3-9.1.). Checking the reset :

Check the CPU.

Is the waveform of the TP near the DSP [IC261] correct (like the one shown in the diagram) when the power is turned on?

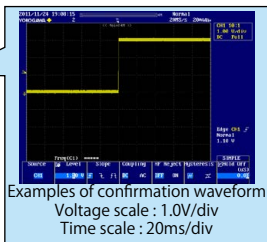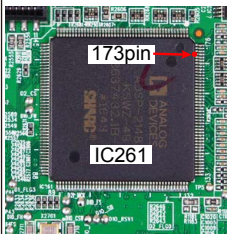

YES

NO

Check the reset circuit between CPU [IC151] and DSP [IC261].  
If there is no problem, the DSP [IC261] is faulty.  
Replace with a new device.



Recheck from check item (3.1.)  
If it does not work, replace the PCB.

Check the SPI communication line. (DSP2)

Check item(3-9.2.). Check the SPI communication line :

Check the CPU.

Is the "SPI" waveform of the TP near the DSP [IC261] correct (like the one shown in the diagram) when the power is turned on?

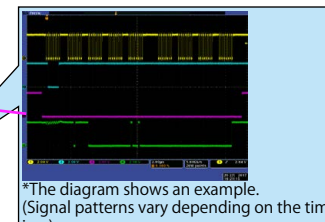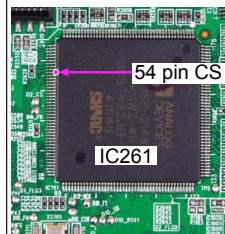

YES

NO

Check item(3-9.3.). Check the SPI communication line :  
Check DSP [IC261], CPU[IC151] patterns as well as soldering.  
If there is no problem, go to the next step.

DSP [IC261] is faulty.  
Replace with a new device.


Recheck from check item (3.1.)  
If it does not work, replace the PCB.

### 3-10. Error Code H1-10 failure detection procedure

Checking device. [IC271 : ADSP21487]

Check the power supply voltage. (DSP3)

**Check item(3-10.1).** Check the power supply voltage.:  
Does the power supply voltage of the DSP [IC271] indicate the appropriate voltage (1.1V)?  
The test points are as follows.

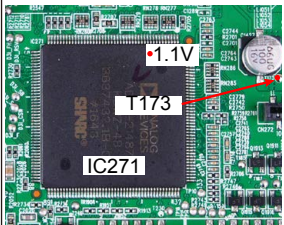

YES

**Check item(3-10.2).** Check the power supply voltage.:  
Check the power supply components [IC112, Q1103, IC118] on the substrate and peripheral pattern.  
If there is no problem, remove the DSP [IC271] from the substrate and measure the voltage at the test point of **check item (3-10.1)**.  
Is the power supply voltage correct (1.1V)?

YES

The power supply circuit is faulty.  
Replace the PCB.



NO

DSP [IC271] is faulty.  
Replace with a new device.

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Checking the reset waveform. (DSP3)

**Check item(3-10.3).** Checking the reset :  
Check the CPU.  
Is the waveform of the TP near the DSP [IC271] correct (like the one shown in the diagram) when the power is turned on?

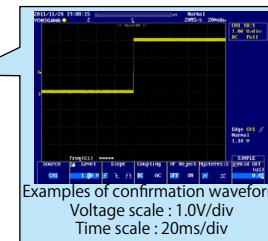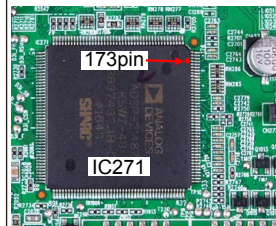


YES

Check the reset circuit between CPU [IC151] and DSP [IC271].  
If there is no problem, the DSP [IC271] is faulty.  
Replace with a new device.

NO

Recheck from **check item (3.1)**.  
If it does not work, replace the PCB.

Go to next page.

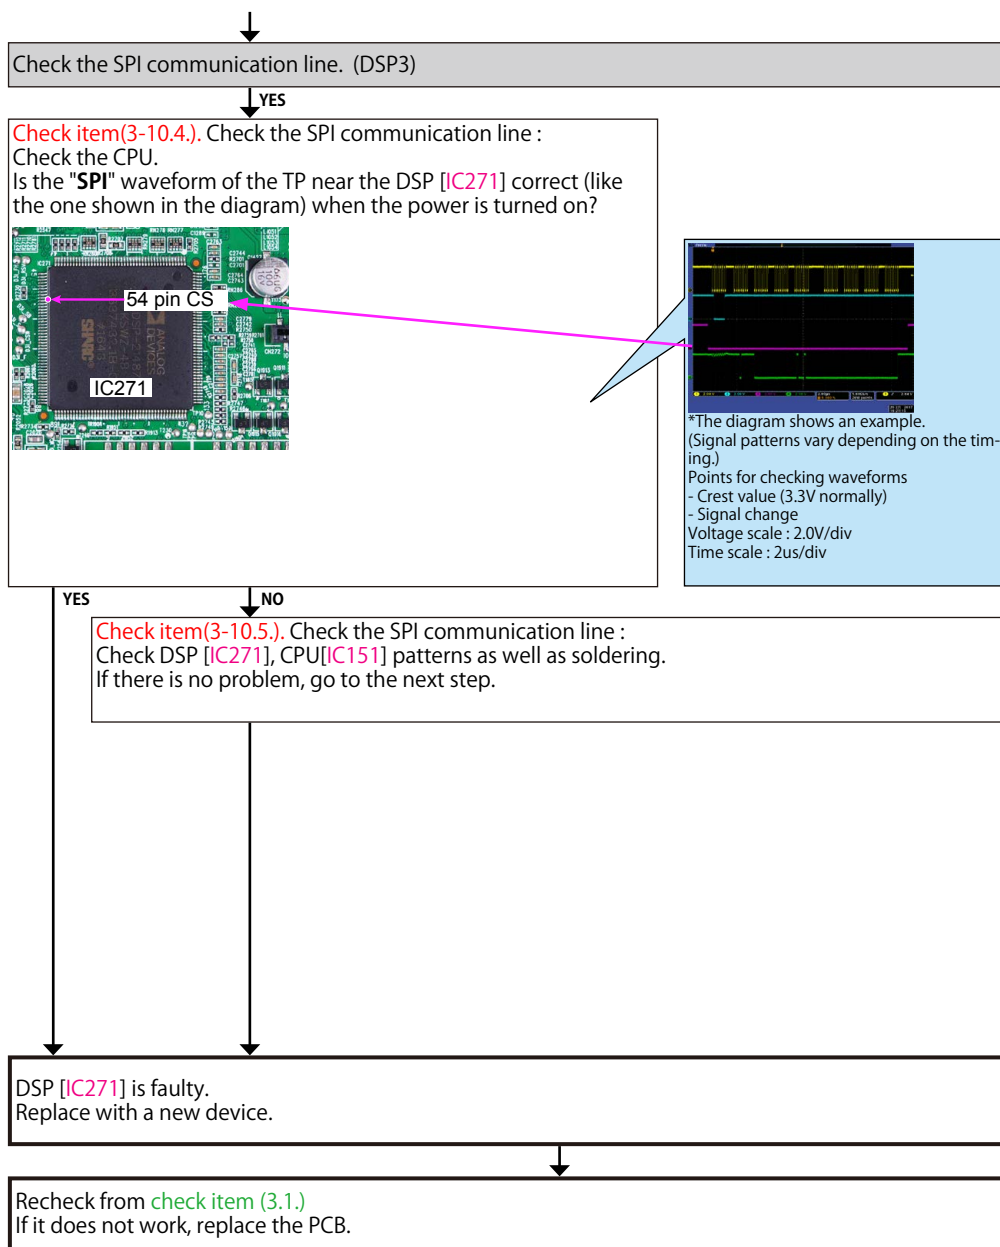





### 3-11. Error Code H1-11 failure detection procedure

Checking device. [IC281 : ADSP21487]

Checking the reset waveform. (DSP4)

Check item(3-11.1.). Checking the reset :  
Check the CPU.

Is the waveform of the TP near the DSP [IC281] correct (like the one shown in the diagram) when the power is turned on?

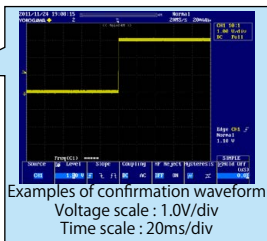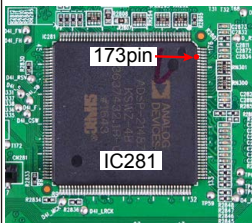

YES

NO



Check the reset circuit between CPU [IC151] and DSP [IC281].  
If there is no problem, the DSP [IC281] is faulty.  
Replace with a new device.

Recheck from [check item \(3.1.\)](#)  
If it does not work, replace the PCB.

Check the SPI communication line. (DSP4)

Check item(3-11.2.). Check the SPI communication line :  
Check the CPU.

Is the "SPI" waveform of the TP near the DSP [IC281] correct (like the one shown in the diagram) when the power is turned on?

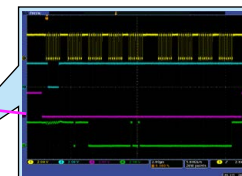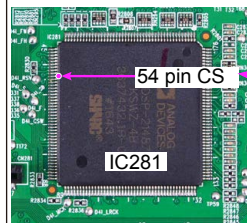

YES

NO

Check item(3-11.3.). Check the SPI communication line :  
Check DSP [IC281], CPU[IC151] patterns as well as soldering.  
If there is no problem, go to the next step.

DSP [IC281] is faulty.  
Replace with a new device.

Recheck from [check item \(3.1.\)](#)  
If it does not work, replace the PCB.


### 3-12. Error Code H1-12 failure detection procedure

Checking device. [IC202 : PCM9211]

Checking the reset waveform. (DIR)

Check item(3-12.1.). Checking the reset :  
Check the CPU.

Is the waveform of the TP near the DIR [IC202] correct (like the one shown in the diagram) when the power is turned on?

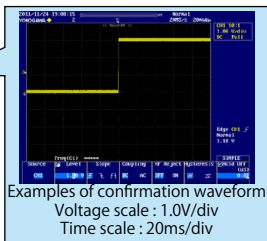

YES

NO

Check the reset circuit between CPU [IC151] and DIR [IC202].  
If there is no problem, the DIR [IC202] is faulty.  
Replace with a new device.



Recheck from [check item \(3.1.\)](#)  
If it does not work, replace the PCB.

Check the communication line. (DIR)

YES

Check item(3-12.2.). Check the communication line :  
Check the CPU.

Is the waveform of the TP near the DIR [IC202] correct (like the one shown in the diagram) when the power is turned on?

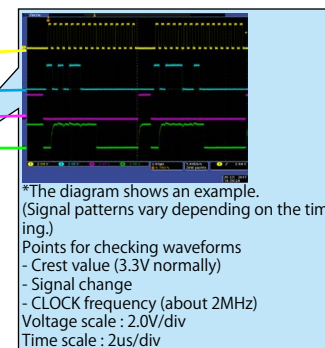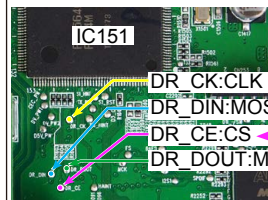

YES

NO

Check item(3-12.3.). Check the communication line :  
Check DIR [IC202], CPU [IC151] patterns as well as soldering.  
If there is no problem, go to the next step.

DIR [IC202] is faulty.  
Replace with a new device.

Recheck from [check item \(3.1.\)](#)  
If it does not work, replace the PCB.

### 3-13. Error Code H1-16 failure detection procedure

Checking device. [IC432 : Sil9437]

Check the power supply voltage. (ARC IC)

**Check item(3-13.1.).** Check the power supply voltage. :  
Does the power supply voltage of the ARC IC [IC432] indicate the correct voltage (1.21V)?  
The test points are as follows.



YES

NO

**Check item(3-13.2.).** Check the power supply voltage. :  
Check the power components [IC433] and the pattern on the substrate.  
If there is no problem, remove the ARC IC [IC432] from the substrate and measure the voltage at the test point of **check item (3-13.1.)**.  
Is the power supply voltage correct (1.2V)?

YES

NO


Replace with a new device.

The power supply circuit is faulty.  
Replace the PCB.

Recheck from **check item (3.1.)**  
If it does not work, replace the PCB.

Checking the reset waveform. (ARC IC)

**Check item(3-13.3.).** Checking the reset waveform :  
Check the waveform.  
Is the "RESET" waveform of the ARC IC [IC432] correct (like the one shown in the diagram) when the power is turned on?

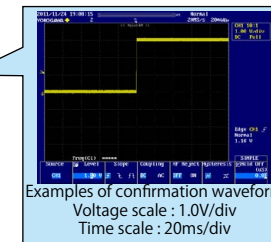

NO


Check the reset circuit between CPU [IC151] and ARC IC [IC432].  
If there is no problem, the ARC IC [IC432] is faulty.  
Replace with a new device.

YES

ARC IC [IC432] is faulty.  
Replace with a new device.

Recheck from **check item (3.1.)**  
If it does not work, replace the PCB.

### 3-14. Switcher1 failure detection procedure

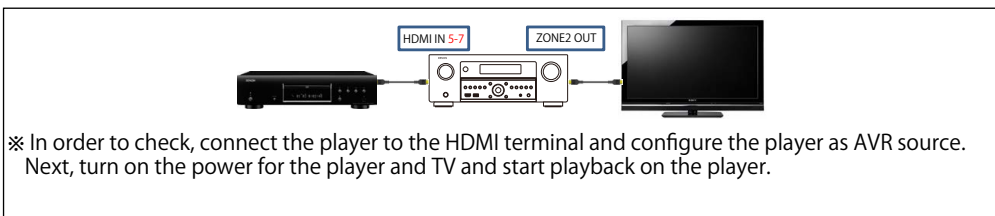


Checking the +5V/DDC status register (HDMI Switcher1)

Check item(3-14.1.). Checking the 5V status register :  
Send the following command from Termite.exe.

Send the command "i 002E 00FF 0001".

Case of IN5  
Is the return value "C4 or C0" ?  
(IN6 : "A2 or A0", IN7 : "91 or 90")

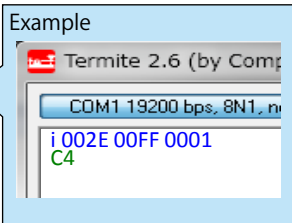

YES

NO


Go to [check item \(3-14.3.\)](#)

Check item(3-14.2.). Checking the DDC status register :  
Send the following command from Termite.exe.

Case of IN5  
Send the command "i 002B 0084 0001".  
Case of IN6  
Send the command "i 002B 0054 0001".  
Case of IN7  
Send the command "i 002B 0024 0001".

Move to the branch destination according to the value returned.

Example


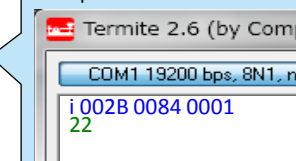





"00 or 04"  
(Detection of DDC is not OK.)

Go to [check item \(3-14.4.\)](#)

"22 or 11"  
(Detection of DDC is OK)

Go to [check item \(3-14.5.\)](#)

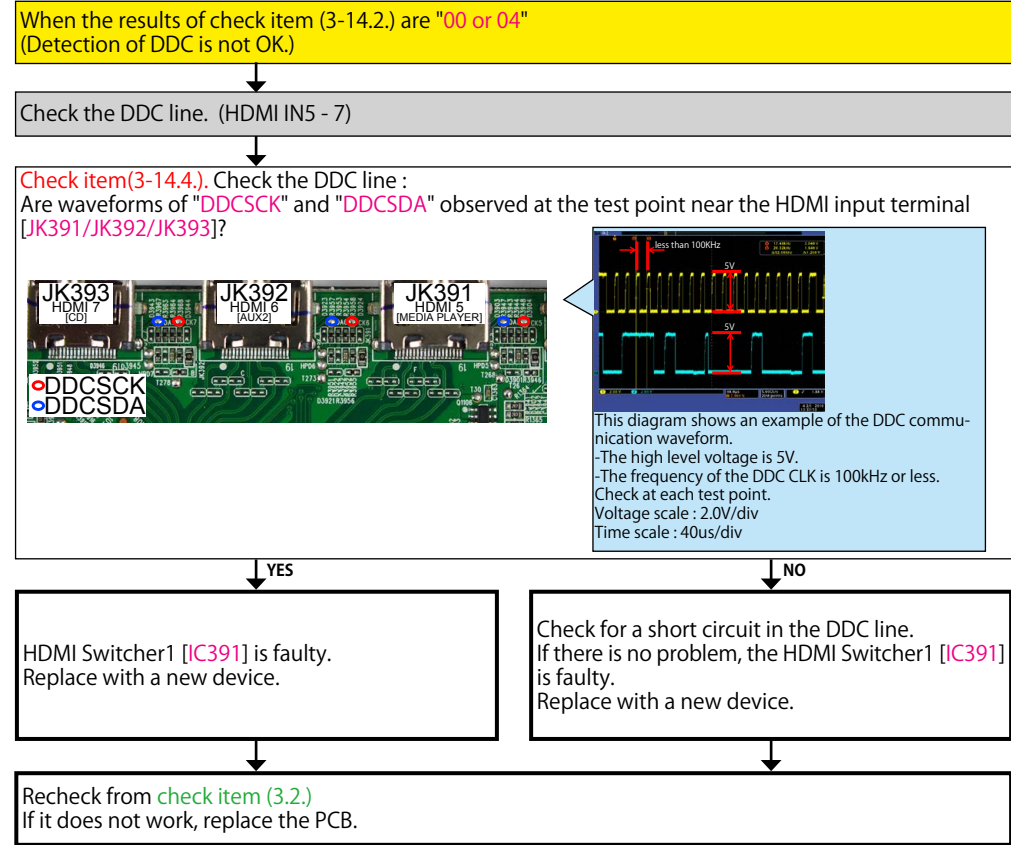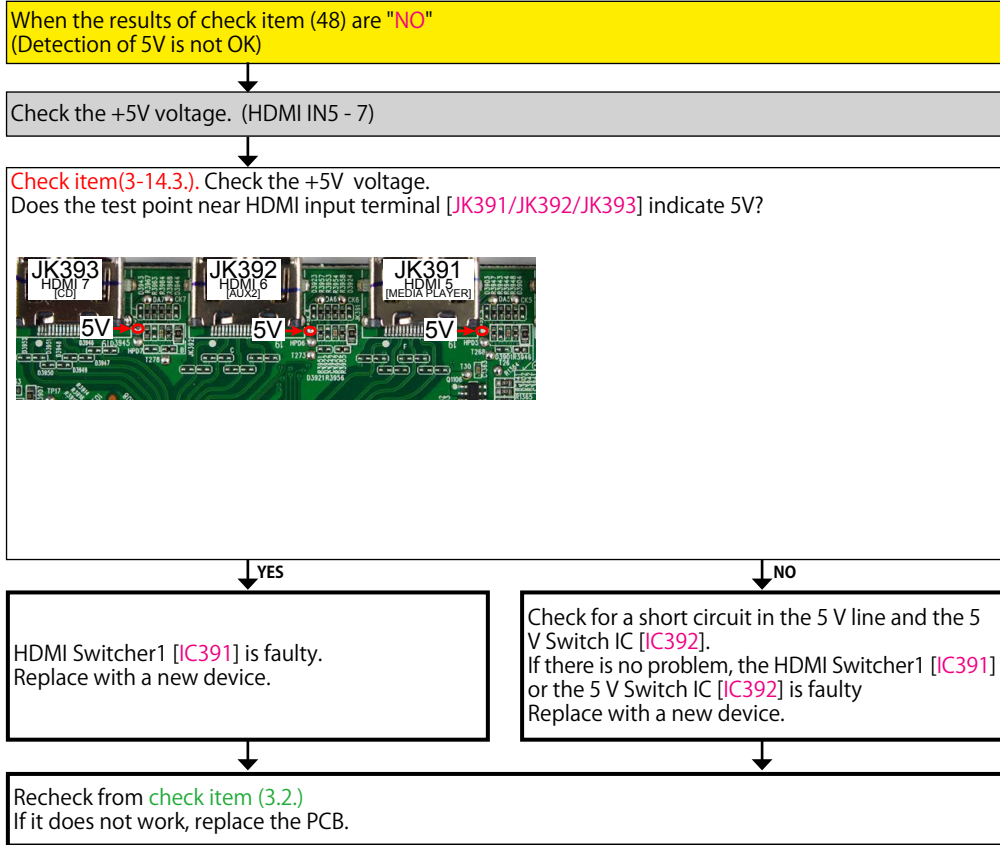

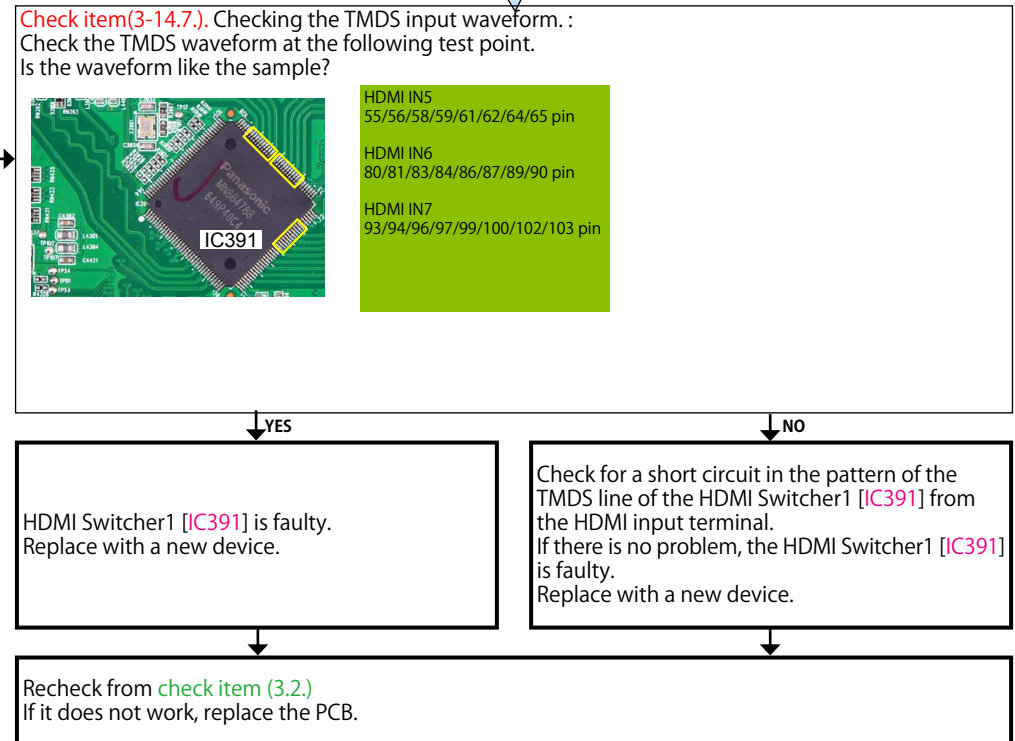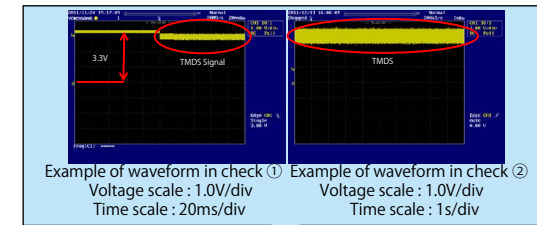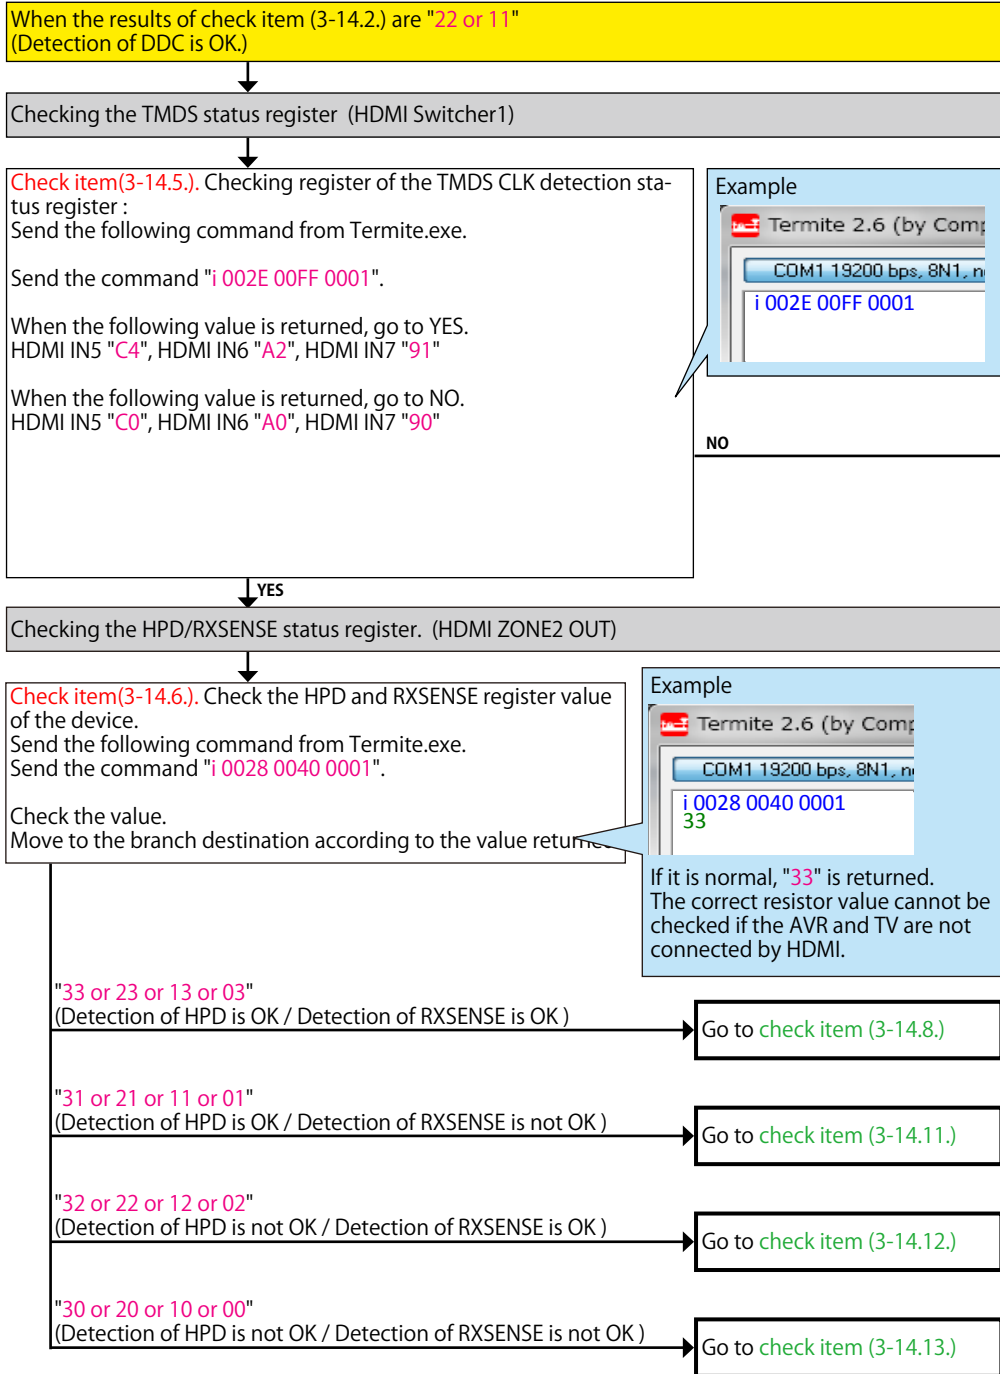

When the results of check item (3-14.6.) are "33 or 23 or 13 or 03"  
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (HDMI ZONE2 OUT)



Check item(3-14.8). Check the Monitor EDID :

- ① Unplug the AC cord. Plug the AC cord into a power outlet.
  - ② Send the transmission command "m\_3" from Termite.exe.
- Are the first eight bytes of the returned value "00FFFFFFF00"?


Example

Termite 2.6 (by CompuPhase)  
COM1 19200 bps, 8N1, no handshake [Setin]  
m\_3  
00FFFFFFF0009D1177945540000  
3213010380351E782E6085A6564A9C25  
125054A56808180810081C0A9C08140  
D1C061C0B300023A801871382D40582C  
4500132B2100001E000000FF00394339

The first eight bytes are normally "00FFFFFFF00".  
The correct resistor value cannot be checked if the AVR and TV are not connected by HDMI.

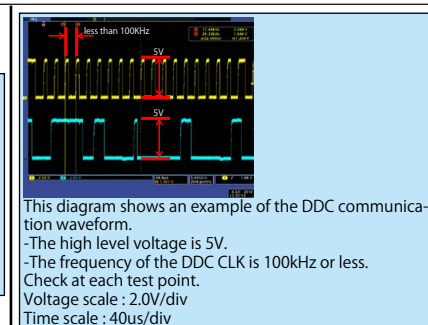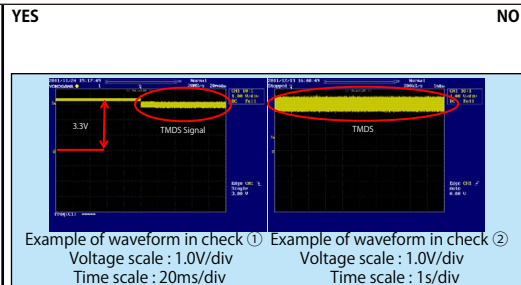

Check item(3-14.9). Checking the TMDS :  
Check the TMDS waveform at the following test point.

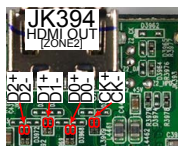

YES


NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from check item (3.2.)  
If it does not work, replace the PCB.

Check item(3-14.10). Check the communication :  
Do "CK" and "DA" indicate (5V) at the test point near HDMI output connector [JK394]?

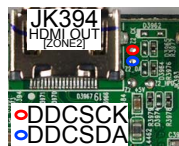

YES

NO

Check for a short circuit in the DDC line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.


HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.



When the results of check item (3-14.6.) are "31 or 21 or 11 or 01"  
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the TMDS. (HDMI ZONE2 OUT)

Check item(3-14.11.). Checking the RXSENSE :  
Does the test point near HDMI output terminal [JK394] indicate  
(3.3V)?

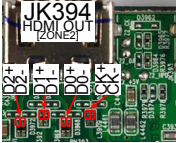

YES NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.


HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from check item (3.2.)  
If it does not work, replace the PCB.

When the results of check item (3-14.6.) are "32 or 22 or 12 or 02"  
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (HDMI ZONE2 OUT)

Check item(3-14.12.). Checking the HPD :  
Does the test point near HDMI output terminal [JK394] indicate  
Hi(3-5V)?

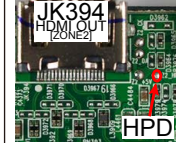

YES NO

Check for a short circuit in the HPD line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.


HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from check item (3.2.)  
If it does not work, replace the PCB.

When the results of check item (3-14.6.) are "30 or 20 or 10 or 00"  
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Check the TMDS/HPD. (HDMI ZONE2 OUT)

Check item(3-14.13.). Checking the HPD and RXSENSE. :  
Does the test point near HDMI output terminal [JK394] indicate (3.3V)?  
Does the test point (HPD) near HDMI output terminal [JK394] indicate "Hi(3-5V)"?

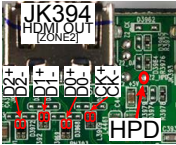

YES


NO

Check for a short circuit in the TMDS/HPD line.  
If there is no problem, the HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from check item (3.2.)  
If it does not work, replace the PCB.

### 3-15. Switcher2 failure detection procedure

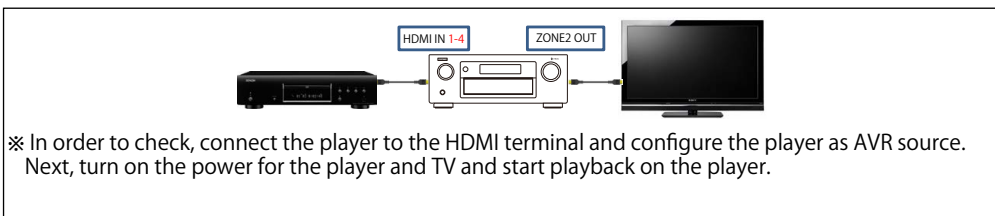


Checking the +5V/DDC status register (HDMI Switcher2)

**Check item(3-15.1).** Checking the 5V status register :  
Send the following command from Termite.exe.

Send the command "i 0056 00FF 0001".

Case of IN1  
Is the return value "88 or 80" ?  
(IN2 : "44 or 40", IN3 : "22 or 20", IN4 : "11 or 10")

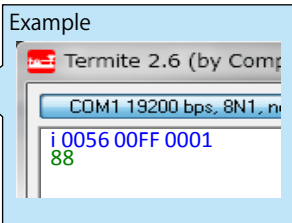

YES

NO


Go to **check item (3-15.3)**

**Check item(3-15.2).** Checking the DDC status register :  
Send the following command from Termite.exe.

Case of IN1  
Send the command "i 0053 00B4 0001".  
Case of IN2  
Send the command "i 0053 0084 0001".  
Case of IN3  
Send the command "i 0053 0054 0001".  
Case of IN4  
Send the command "i 0053 0024 0001".

Move to the branch destination according to the value returned.

Example


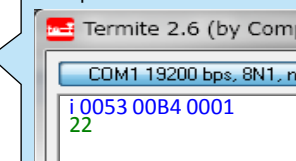


"00 or 04"  
(Detection of DDC is not OK.)

Go to **check item (3-15.4)**

"22 or 11"  
(Detection of DDC is OK)

Go to **check item (3-15.5)**

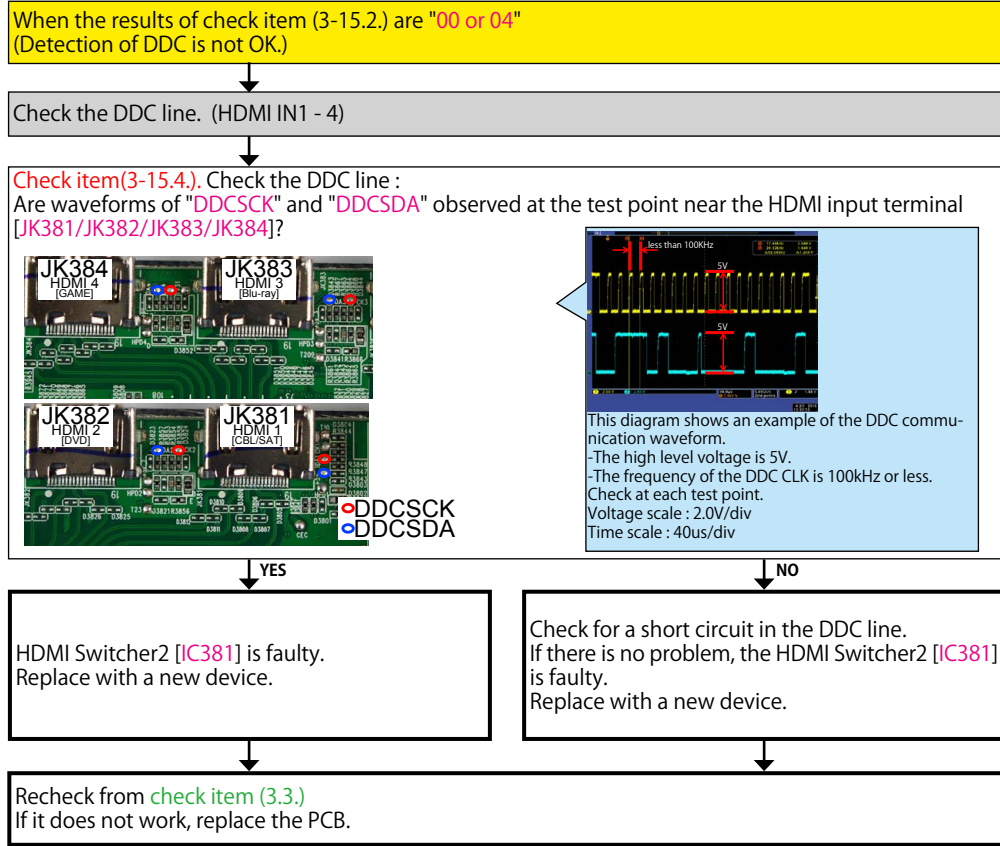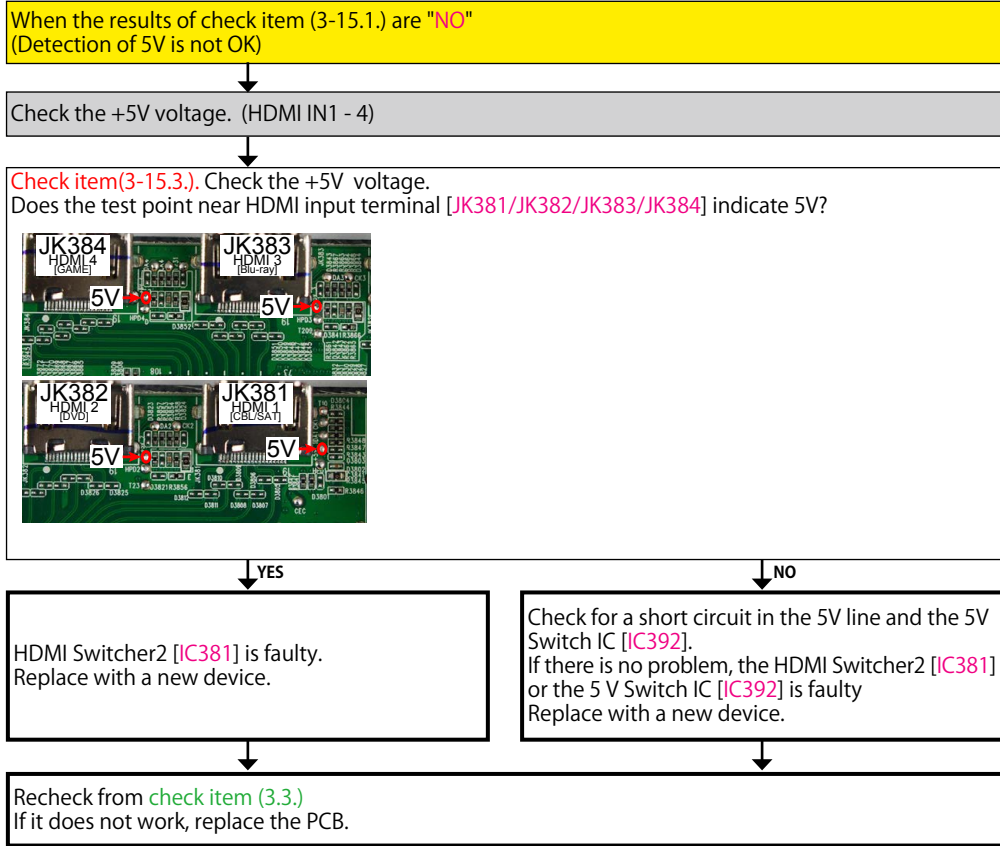

When the results of check item (3-15.2.) are "22 or 11"  
(Detection of DDC is OK.)

Checking the TMDS status register (HDMI Switcher2)


**Check item(3-15.5).** Checking register of the TMDS CLK detection status register :

Send the following command from Termit.exe.  
Send the command "i 0056 00FF 0001".

When the following value is returned, go to YES.  
HDMI IN1 "88", HDMI IN2 "44", HDMI IN3 "22", HDMI IN4 "11"

When the following value is returned, go to NO.  
HDMI IN1 "80", HDMI IN2 "40", HDMI IN3 "20", HDMI IN4 "10"

Example

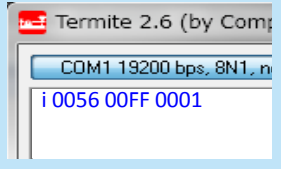

NO

YES


Checking the TMDS status register (HDMI Switcher2 -> HDMI Switcher1)

**Check item(3-15.7).** Check the TMDS CLK detection status of the register.

Send the following command from Termit.exe.  
Send the command "i 002E 00FF 0001".

Is the return value "88" ?

Example :

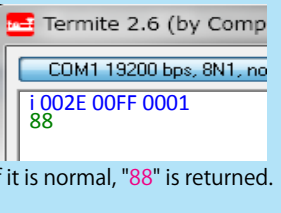

NO

YES

HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Recheck from [check item \(3.3.\)](#)  
If it does not work, replace the PCB.

**Check item(3-15.6).** Checking the TMDS input waveform. :  
Check the TMDS waveform at the following test point.  
Is the waveform like the sample?



HDMI IN1  
42/43/45/46/48/49/51/52 pin  
HDMI IN2  
55/56/58/59/61/62/64/65 pin  
HDMI IN3  
80/81/83/84/86/87/89/90 pin  
HDMI IN4  
93/94/96/97/99/100/ 102/103 pin

YES

NO

HDMI Switcher2 [IC381] is faulty.  
Replace with a new device.

Check for a short circuit in the pattern of the TMDS line of the HDMI Switcher2 [IC381] from the HDMI input terminal.  
If there is no problem, the HDMI Switcher2 [IC381] is faulty.  
Replace with a new device.

Recheck from [check item \(3.3.\)](#)  
If it does not work, replace the PCB.

**Check item(3-15.8).** Checking the TMDS input waveform. :  
Check the TMDS waveform at the following test point.  
Is the waveform like the sample?




42/43/45/46/48/49/51/52 pin

YES

NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Switcher2 [IC381] is faulty.  
Replace with a new device.

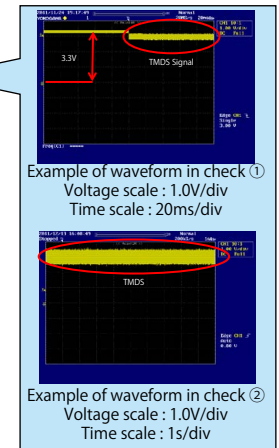

### 3-16. Tx failure detection procedure

Check the output terminal.

Check item(3-16.1.). Check the video output port for failure. :  
Check the Monitor 1 output video signal is correct.

After checking the Monitor 1, change the HDMI cable connection from OUT1 to OUT2.  
Turn off the AV AMP and turn it on again.  
To check under the same conditions, use the same procedure as that for checking Monitor 1 when checking the Monitor 2 output.


No video signal is output from both Monitor 1 and  
Monitor 2.

Also, No video signal is output from Monitor 1 only.

Go to [check item \(3-16.2.\)](#)

No video signal is output from Monitor 2 only.

Go to [check item \(3-16.11.\)](#)

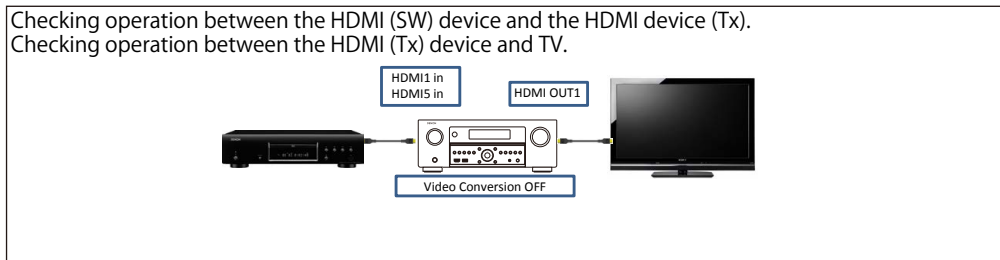

Checking the TMDS status register (Switcher1/2 -> HDMI Tx)

**Check item(3-16.2).** Check the TMDS CLK detection status of the register.  
Send the following command from Termite.exe.

Send the command "**i 0006 00FF 0001**".  
When checking the signal path from HDMI1 to HDMI OUT1  
"72" : Go to YES.  
"74" : Go to No.

When checking the signal path from HDMI5 IN to HDMI OUT1  
"71" : Go to YES.  
"74" : Go to No.


Example

YES  
The first operation : Checking between Monitor 1 and the TV.  
Go to **check item (3-16.1.)**  
Next operation : Checking between Monitor 2 and the TV.  
Go to **check item (3-16.8.)**


**Check item(3-16.3).** Checking the TMDS input :  
TMDS waveform at the following points.



HDMI IN1  
124/125/127/128/130/131/133/134 pin  
HDMI IN5  
137/138/140/141/143/144/146/147 pin

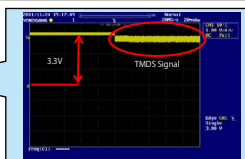

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 20ms/div

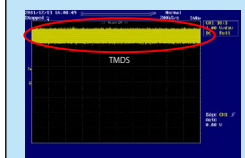

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1s/div

HDMI Tx [IC431] is faulty.  
Replace with a new device.

YES

Recheck from **check item (3.4.)**  
If it does not work, replace the PCB.

Case of HDMI IN1  
HDMI Switcher2 [IC381] is faulty.  
Replace with a new device.

Case of HDMI IN5  
HDMI Switcher1 [IC391] is faulty.  
Replace with a new device.

Checking between Monitor1 and the TV.  
Connect Monitor1 to the TV and check the following items with the TV turned on.

Checking the HPD/RXSENSE status register. (HDMI Tx -> Monitor)

**Check item(3-16.4).** Check the HPD and RXSENSE register value of the HDMI TX device :  
Send the following command from Termite.exe.

Send the command "**i 0000 0040 0001**".

Move to the branch destination according to the value returned.

Example

"30"

(Detection of HPD is OK / Detection of RXSENSE is OK)

Go to **check item (3-16.5.)**

"10"

(Detection of HPD is OK / Detection of RXSENSE is not OK)

Go to **check item (3-16.8.)**

"20"

(Detection of HPD is not OK / Detection of RXSENSE is OK)

Go to **check item (3-16.9.)**

"00"

(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Go to **check item (3-16.10.)**


When the results of check item (3-16.4.) are "30"  
(Detection of HPD is OK / Detection of RXSENSE is OK)

Checking the EDID register. (HDMI OUT1)


Check item(3-16.5). Check the Monitor EDID :

- ① Unplug the AC cord. Plug the AC cord into a power outlet.
  - ② Send the transmission command "m\_1" from Terminate.exe.
- Are the first eight bytes of the returned value "00FFFFFFF00"?


YES

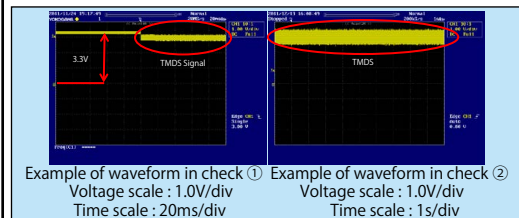

NO

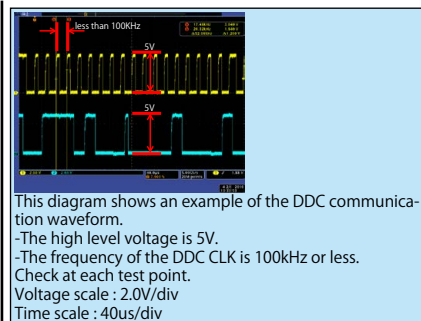

Check item(3-16.6). Checking the TMDS :  
Check the TMDS waveform at the following test point.

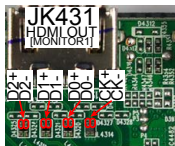

YES


NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Tx  
[IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

Check item(3-16.7). Check the communication :  
Are the waveforms for "CLK" and "DATA" at the  
test point near the HDMI output connector  
[JK431] correct (as shown in the figure)?

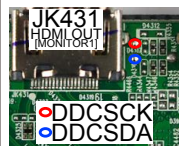

YES

NO

Check for a short circuit in the DDC line.  
If there is no problem, the HDMI Tx  
[IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

Example

```

Termite 2.6 (by CompuPhase)
COM1 19200 bps, 8N1, no handshake
m_1
00FFFFFFF000D1177945540000
3213010380351E782E6085A6564A9C25
125054A56808180810081C0A9C08140
D1C61C0B300023A801871382D40582C
4500132B2100001E000000FF00394339
  
```


The first eight bytes are normally "00FFFFFFF00".  
The correct resistor value cannot be checked if the AVR and TV are not connected by HDMI.



When the results of check item (3-16.4.) are "10"  
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the TMDS. (HDMI OUT1)

Check item(3-16.8.). Checking the RXSENSE :  
Does the test point near HDMI output terminal [JK431] indicate (3.3V)?

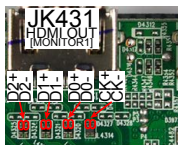

YES NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

When the results of check item (3-16.4.) are "20"  
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (HDMI OUT1)

Check item(3-16.9.). Checking the HPD :  
Does the test point (HPD) near HDMI output terminal [JK431] indicate "Hi(3-5V)"?



YES NO

Check for a short circuit in the HPD line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

When the results of check item (3-16.4.) are "00"  
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Check the TMDS/HPD. (HDMI OUT1)

Check item(3-16.10.). Checking the HPD and RXSENSE. :  
Does the test point near HDMI output terminal [JK431] indicate (3.3V)?  
Does the test point (HPD) near HDMI output terminal [JK431] indicate "Hi(3-5V)"?

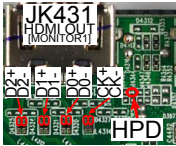

YES

NO

Check for a short circuit in the TMDS/HPD line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

Checking between Monitor 2 and the TV.  
Connect Monitor2 to the TV and check the following items with the TV turned on.

Checking the HPD/RXSENSE status register. (HDMI OUT2)

**Check item(3-16.11).** Check the HPD and RXSENSE register value of the HDMI TX device.:  
Send the following command from Termit.exe.  
Send the command "i 0000 0040 0001".  
Move to the branch destination according to the value returned.

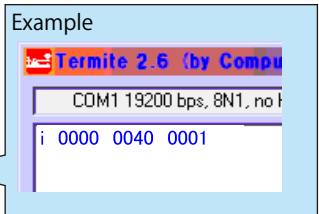

"03"  
(Detection of HPD is OK / Detection of RXSENSE is OK )

Go to [check item \(3-16.12.\)](#)

"01"  
(Detection of HPD is OK / Detection of RXSENSE is not OK )

Go to [check item \(3-16.15.\)](#)

"02"  
(Detection of HPD is not OK / Detection of RXSENSE is OK )

Go to [check item \(3-16.16.\)](#)

"00"  
(Detection of HPD is not OK / Detection of RXSENSE is not OK )


Go to [check item \(3-16.17.\)](#)



When the results of check item (3-16.11.) are "01"  
(Detection of HPD is OK / Detection of RXSENSE is not OK)

Check the RXSENSE. (OUT2)

Check item(3-16.15.). Checking the RXSENSE :  
Does the test point of RXSENSE close to the HDMI output terminal  
[JK432] indicate the (3.3V)?

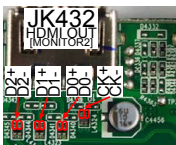

YES NO

Check for a short circuit in the TMDS line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

When the results of check item (3-16.11.) are "02"  
(Detection of HPD is not OK / Detection of RXSENSE is OK)

Check the HPD. (OUT2)

Check item(3-16.16.). Checking the HPD :  
Does the voltage of HPD test point close to the HDMI output terminal  
[JK432] indicate Hi (3-5V)?



YES NO

Check for a short circuit in the HPD line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

When the results of check item (3-16.11.) are "00"  
(Detection of HPD is not OK / Detection of RXSENSE is not OK)

Checking the HPD/RXSENSE status register. (OUT2)

Check item(3-16.17.). Checking the HPD and RXSENSE. :  
Does the test point of RXSENSE close to the HDMI output terminal  
[JK432] indicate the (3.3V)?  
Does the voltage of HPD test point close to the HDMI output terminal  
[JK432] indicate Hi (3-5V)?

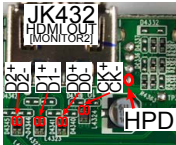

YES

NO

Check for a short circuit in the TMDS/ HPD line.  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

### 3-17. HDMI DDC Buffer (TCA9517) failure detection procedure

Checking operation between the HDMI (HDMI DDC Buffer) and the player



※ In order to check, connect the player to the HDMI terminal and configure the player as AVR source. Check the sound output while turning on the player.

Checking the +5V/DDC status register (HDMI DDC Buffer)

**Check item(3-17.1.).** Checking the 5V status register :  
Send the following command from Termite.exe.  
Send the command "i 0006 00FF 0001".

Check the value.  
Move to the branch destination according to the value returned.

Example

```
Termite 2.6 (by Com
COM1 19200 bps, 8N1.r
i 0006 00FF 0001
F8
```

"78 or 70"  
(Detection of 5V is not OK.)

Go to **check item (3-17.3.)**

"F8 or F0"  
(Detection of 5V is OK)

**Check item(3-17.2.).** Checking the status register :  
Send the following command from Termite.exe.  
Send the command "i 0003 00B4 0001".

Check the value.  
Move to the branch destination according to the value returned.

Example



```
Termite 2.6 (by Com
COM1 19200 bps, 8N1.r
i 0003 00B4 0001
22
```

"00 or 04"  
(Detection of DDC is not OK.)

Go to **check item (3-17.4.)**

"22"  
(Detection of DDC is OK)

Go to **check item (3-17.5.)**

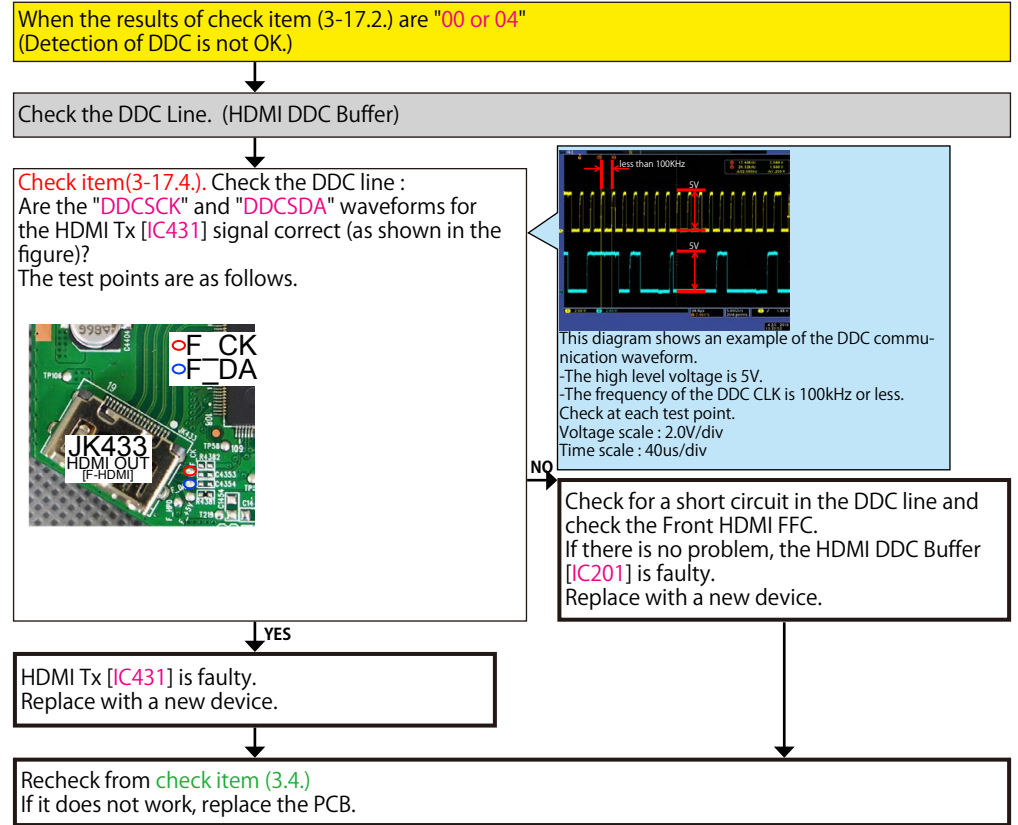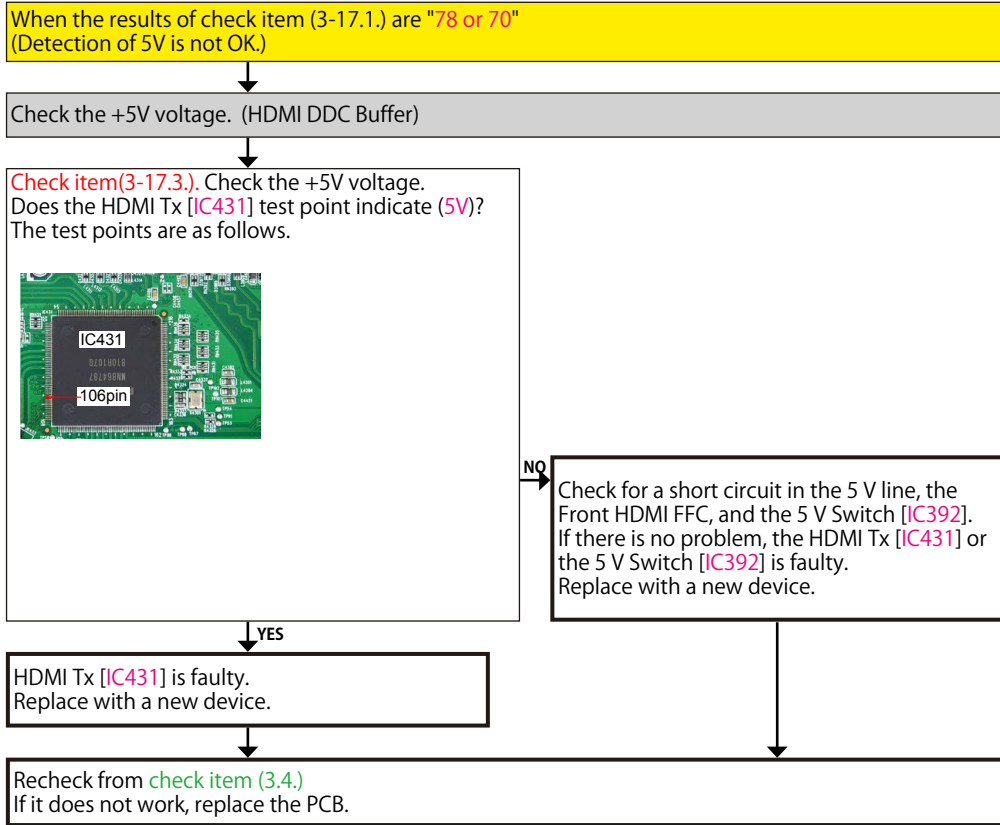



When the results of check item (3-17.2.) are "22"  
(Detection of DDC is OK)

Checking the TMDS status register (HDMI DDC Buffer)

Check item(3-17.5.). Check the TMDS CLK detection status of the register.

Send the following command from Termit.exe.  
Send the command "i 0006 00FF 0001".

When the following value is returned, go to YES.  
"F8"

When the following value is returned, go to NO.  
"F0"


Example

Termite 2.6 (by Com  
COM1 19200 bps, 8N1, r  
i 0006 00FF 0001  
F8

NO

YES

Check item(3-17.7.). Check the AUDIO signal output :  
Check the AUDIO signal waveform at the following test point.  
Is the waveform like the sample?  
(MCK/64FS/FS/I2S0/I2S1/I2S2/I2S3/SPDIF)

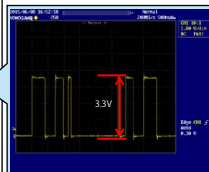

The diagram shows an example of the waveform of I2S0.  
Waveform check points  
- Crest value (3.3 V normally)  
- Signal change  
Check the waveform of each pin.  
Voltage scale : 1.0V/div  
Time scale : 500us/div

YES

NO

The DIGITAL AUDIO block is faulty.  
Check the DIGITAL AUDIO device.  
Check "AUDIO" in troubleshooting.  
If it does not work, replace the PCB.

HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

Check item(3-17.6.). Checking the TMDS input waveform :  
Check the TMDS waveform at the following test point.  
Is the waveform like the sample?



70/71/73/74/76/77/79/80 pin


YES

NO

HDMI Tx [IC431] is faulty.  
Replace with a new device.


Check for a short circuit in the TMDS line and the Front HDMI FFC.  
If there is no problem, the HDMI DDC Buffer [IC201] is faulty.  
Replace with a new device.

Recheck from check item (3.4.)  
If it does not work, replace the PCB.

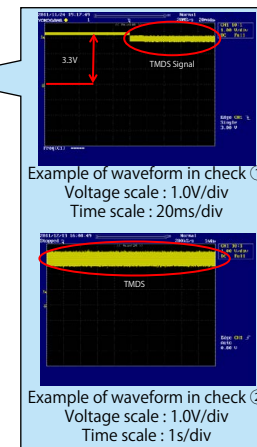

### 3-18. GUI and PLD failure detection procedure

Check item(3-18.1.). Does a video signal come from HDMI OUT to TV correctly? :



Turn Video Conversion "ON" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)  
When the "SETUP" button on a remote control is pressed, is "MENU" displayed on TV which is connected to the HDMI output terminal on the AVR?

NO

Go to check item (3-18.2.)

YES

Go to check item (3-18.5.)

When the results of check item (3-18.1.) are "NO"  
(When the menu display is not OK)


Check the Video signal line. (GUI -> HDMI Tx)

Check item(3-18.2.). Check the format of the resistor video signal :

Send the following command from Termite.exe.  
Send the command "i 0020 0070 0001".

Is the return value "22/21/20/1F/15/14/13/11/10/06/05/04/02" ?

Example

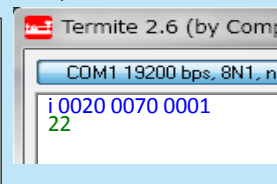

NO



Check the Video signal line. (GUI -> PLD)

YES


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.5.)  
If it does not work, replace the PCB.

Check item(3-18.3.). Check the PLD video signal line from the GUI :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

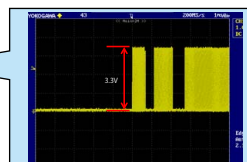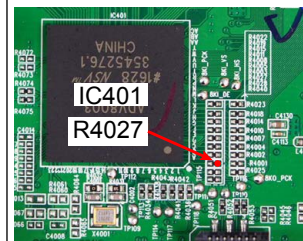

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

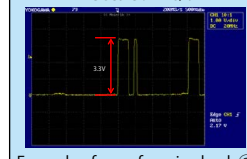

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 50ns/div



NO

Check the peripheral pattern between the GUI [IC401] and PLD [IC421].  
If there is no problem, the GUI [IC401] is faulty.  
Replace with a new device.


Recheck from check item (3.5.)  
If it does not work, replace the PCB.

Check the Video signal line. (PLD -> HDMI Tx)

Check item(3-18.4.). Check the HDMI Tx video signal line from the PLD :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

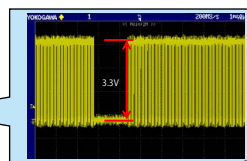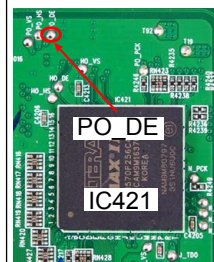

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

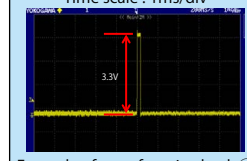

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES


HDMI Tx [IC431] is faulty.  
Replace with a new device.

Recheck from check item (3.5.)  
If it does not work, replace the PCB.

NO

Check the peripheral pattern between the PLD [IC421] and HDMI Tx [IC431].  
If there is no problem, the PLD [IC421] is faulty.  
Replace with a new device.



When the results of check item (3-18.1.) are "YES"  
(When the menu display is OK)




Turn Video Conversion "ON" on the setup menu.  
(SETUP MENU-> Video-> Output Settings-> Video Conversion = On)  
In order to check, connect the player to the HDMI terminal and configure the player as AVR source.  
Next, turn on the power for the player and TV and start playback on the player.

Check the Video signal line. (HDMI Tx -> PLD)

**Check item(3-18.5.).** Check the PLD video signal line from the HDMI Tx:  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

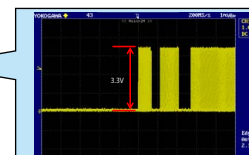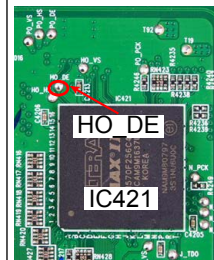

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

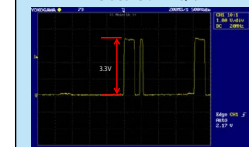

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES



NO

Check the peripheral pattern between the HDMI Tx [IC431] and PLD [IC421].  
If there is no problem, the HDMI Tx [IC431] is faulty.  
Replace with a new device.


Recheck from [check item \(3.5.\)](#)  
If it does not work, replace the PCB.

Check the Video signal line. (PLD -> GUI)

**Check item(3-18.6.).** Check the GUI video signal line from the PLD :  
Check the video signal waveform at the following test point.  
Is the waveform like the sample?

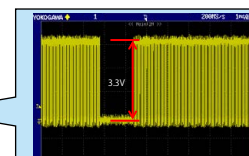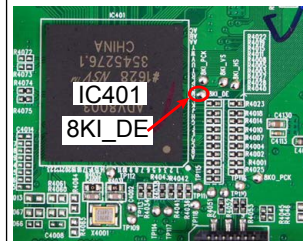

Example of waveform in check ①  
Voltage scale : 1.0V/div  
Time scale : 1ms/div

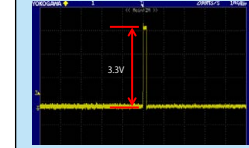

Example of waveform in check ②  
Voltage scale : 1.0V/div  
Time scale : 1us/div

YES

NO


GUI [IC401] is faulty.  
Replace with a new device.

Check the peripheral pattern between the PLD [IC421] and GUI [IC401].  
If there is no problem, the PLD [IC421] is faulty.  
Replace with a new device.


Recheck from [check item \(3.5.\)](#)  
If it does not work, replace the PCB.

## 4. Device implementation location


DIGITAL (A SIDE)

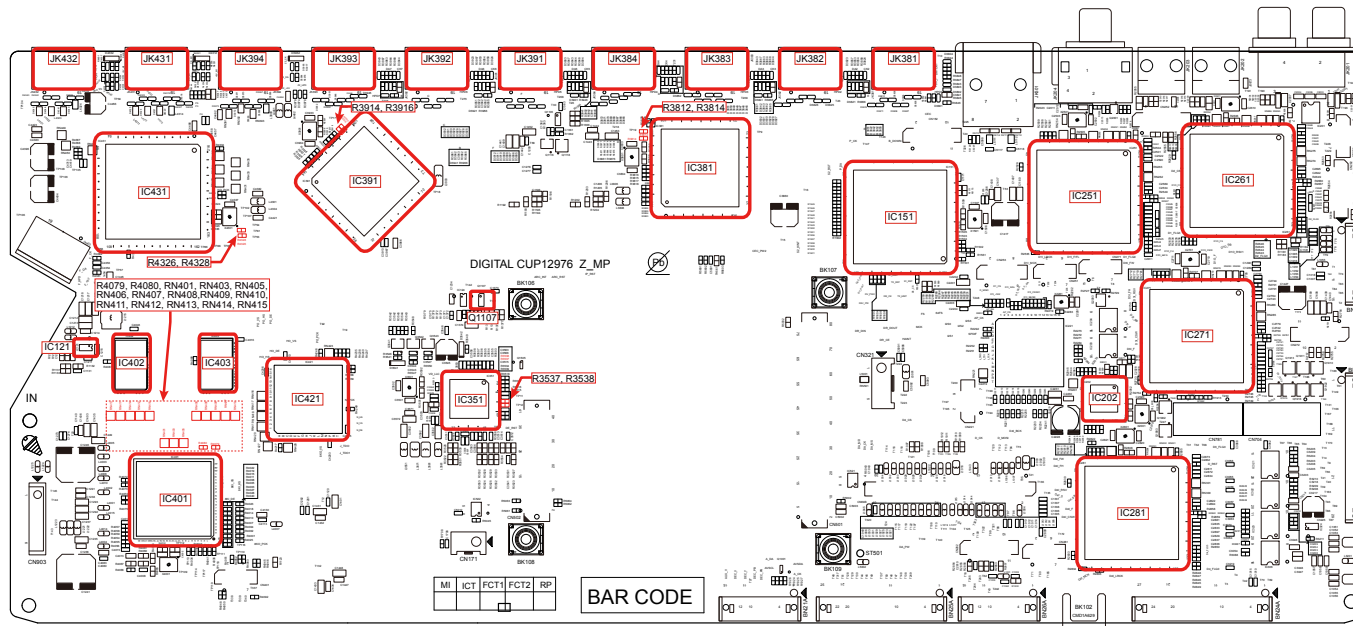

F HDMI (A SIDE)

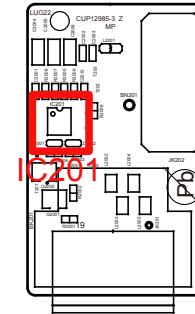

DIGITAL (B SIDE)

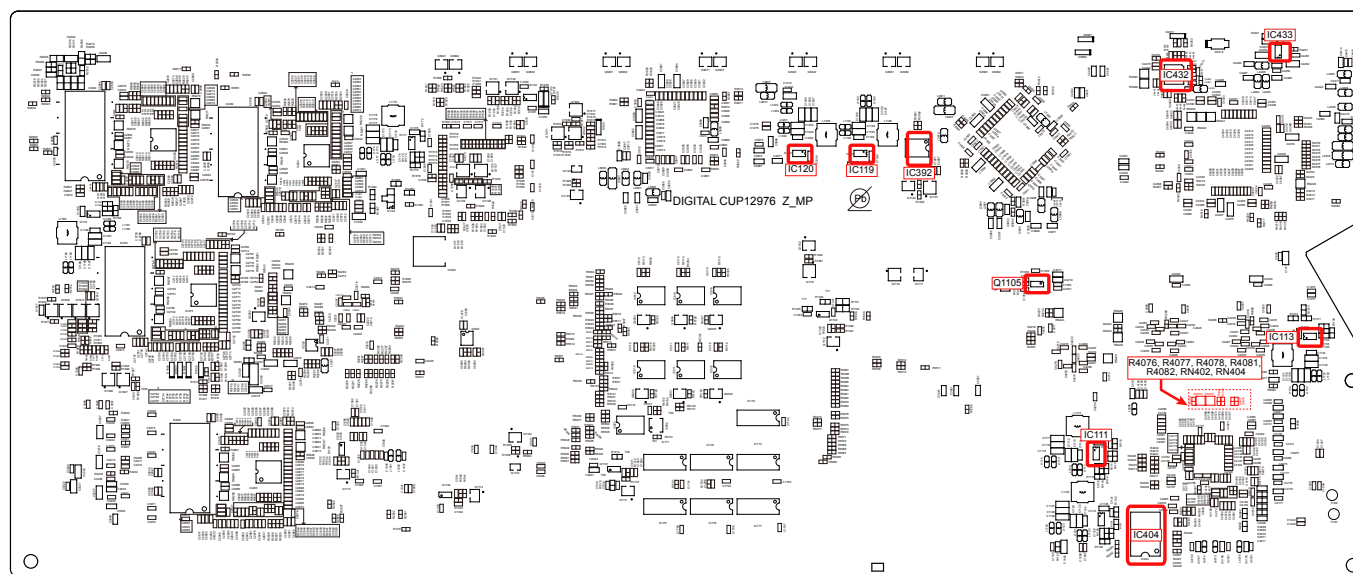

Before Servicing  
This Unit

Electrical

Mechanical








Repair Information

Updating



# CLOCK FLOW & WAVE FORM IN DIGITAL BLOCK

## WAVE FORM

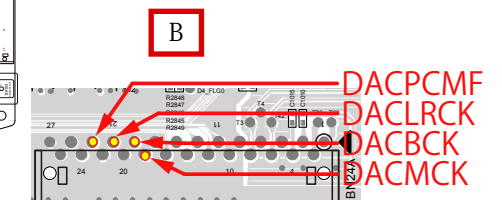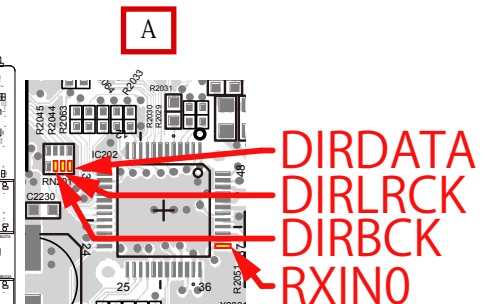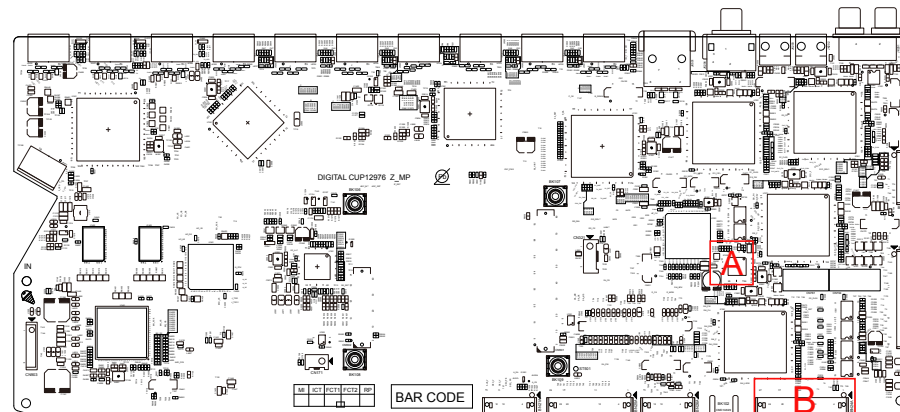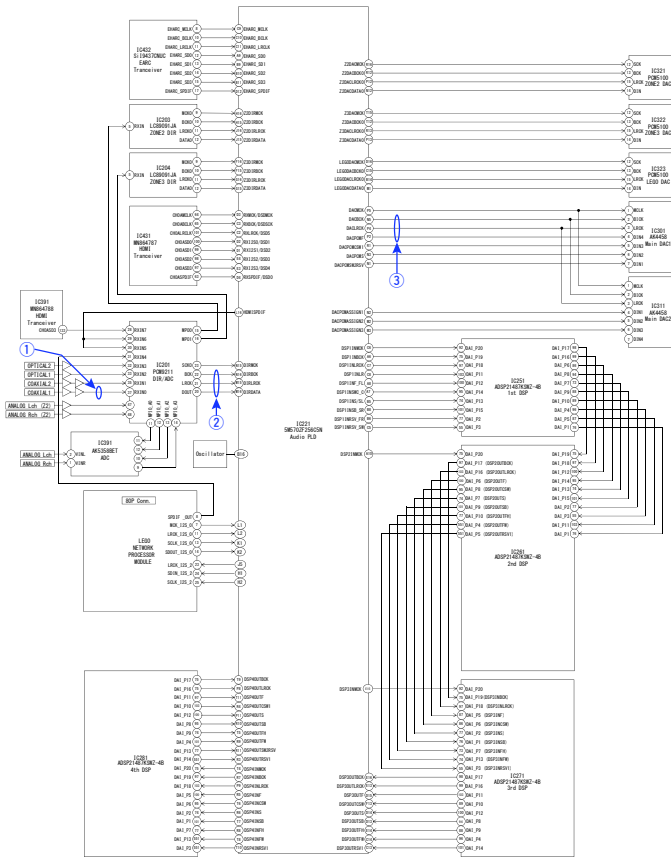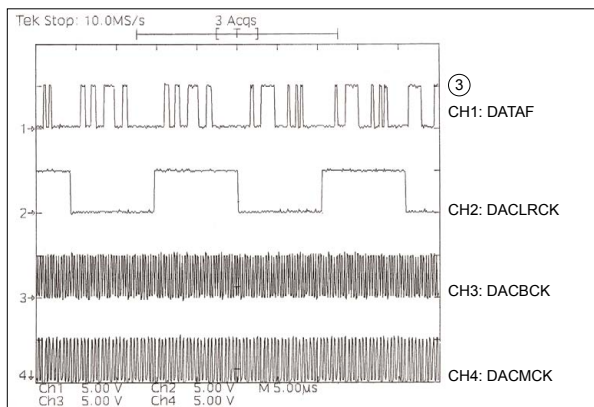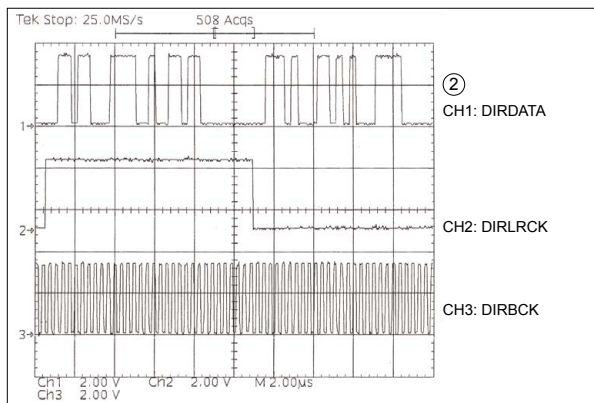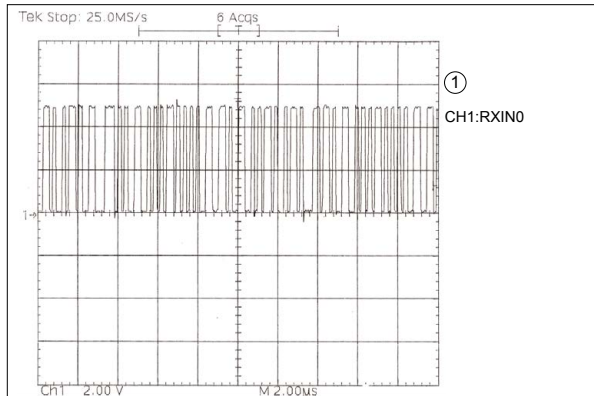

# SPECIAL MODE

## Special mode setting button

※ No. 1 - 4, 6 - 8 : While holding down buttons "A", "B" and "C" simultaneously, press the power button to turn on the power.


※ No. 5, 9, 10 : While the power is on, hold down buttons "A", "B", and "C" for at least 3 seconds .

No.	Mode	Button A	Button B	Button C	Descriptions
1	Version Display Mode (u-COM / DSP Error Display)	SETUP	OPTION	-	Displays the version of firmware such as the main firmware or DSP. Errors that have occurred are displayed. (See <a href="#">1. Version Display Mode</a> )
2	PANEL / REMOTE LOCK Selection Mode	STATUS	INFO	-	Start this unit in the PANEL/REMOTE LOCK selection mode so that PANEL LOCK and Remote Lock can be switched between On and Off. (See <a href="#">2. PANEL / REMOTE LOCK Selection Mode</a> ) •PANEL LOCK Mode (with Volume) Disables reception from all keys and encoders on the front panel except the power button (including the volume). •PANEL LOCK Mode (without Volume) Disables reception from all keys and encoders on the front panel except the power button and volume encoder. •PANEL LOCK mode is turned off
3	Selecting the Mode for Service-related	ZONE3 SOURCE	STATUS	-	This is a display for turning on each service-related mode. Service-related modes:No. 3-1 - No. 3-6
3-1	Check the Video/Audio path Mode	↑	↑	-	This is a special mode for service confirmation used during repair work to simplify the confirmation work for the Audio channel / video channel. (See <a href="#">Service Path Check Mode</a> )
3-2	Protection history display mode	↑	↑	-	Displays the protection occurrence history. (See <a href="#">3-2. Protection History Display Mode</a> )
3-3	232C Standby Clear Mode	↑	↑	-	Switches from 232C standby mode to normal standby mode. (See <a href="#">3-3. 232C Standby Clear Mode</a> )
3-4	Operation Info Mode	↑	↑	-	Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See <a href="#">3-4. Operation Info Mode</a> )
3-5	TUNER STEP Mode (E3 and E2 model only)	↑	↑	-	Enables reception STEP of the ANALOG TUNER to be changed. (See <a href="#">3-5. TUNER STEP mode (E3 / E2 only)</a> )
3-6	Remote ID Setup Mode	↑	↑	-	If there are multiple DENON AV receivers in the same area, this mode prevents other AV receivers from being operated concurrently with this device. (See <a href="#">3-6. Remote ID Setup Mode</a> )
4	Protection Pass Mode	ZONE3 SOURCE	STATUS	CURSOR ◀	Enables the power to be turned on when protection detection is disabled. (See <a href="#">4. Protection Pass Mode</a> )
5	Network Initialization Mode	CURSOR ▶	DIMMER	-	Network module backup data is initialized. (See <a href="#">5. Network Initialization Mode</a> )
6	User Initialization Mode	BACK	INFO	-	Initialize the backup data for the MCU and network module. (Settings for the Installer Setup are not initialized.)
7	Factory Initialization Mode	INFO	SETUP	-	Initialize the backup data only for MCU. (Settings for the Installer Setup are initialized) (Network function settings are not initialized.) (See <a href="#">Initializing this Unit</a> )
8	Clearing the Operation Info	OPTION	DIMMER	-	Clear the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection. (See <a href="#">6. Clearing the Operation Info</a> )
9	HDMI Diagnostics Mode	CURSOR ▲	BACK	-	This mode is used to identify and solve the cause when there is a connectivity issue with this unit and an HDMI device. For details on the operating methods and diagnosis procedures, see the HDMI Diagnostics and Troubleshooting guide issued on SDI.
10	Log Capture feature	BACK	OPTION	-	Acquires the Network Module log. The log is deleted when the Network Module is deleted. (See <a href="#">7. Log Capture feature</a> )

**NOTE :** When the volume indicator displays "-88.8", the unit has entered a special mode for developers. In this case, the RS-232C communication is not available.

To release this special mode, press and hold the "STATUS" and "CURSOR ▼" buttons for 3 seconds or more while the power is ON. When the volume indicator returns to the normal display, the RS-232C communication is available.

-88.8  
All the indicator Lights

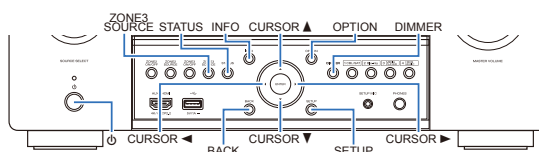

# 1. Version Display Mode

## 1.1. Actions

Version information is displayed when the device is started in this mode.

## 1.2. Starting up

While holding down buttons "SETUP" and "OPTION" simultaneously, press the power button to turn on the power.

then press the "STATUS" button to display the information in section 1.3 on the display.

※ The version list is also displayed on GUI while the version is displayed on the display.

## 1.3. Display Order

Error information(See "1.4. Error display") → ① Model destination information, Serial Number → ② Firmware Package → ③ Main  $\mu$ -com, Main 1st Boot Loader → ④ DSP1/2/3/4 ROM → ⑤ Audio Video PLD → ⑥ GUI SFLASH → ⑦ HEOS Version → ⑧ HEOS Build → ⑨ HEOS Module → ⑩ HEOS Configuration → ⑪ HEOS Locale → ⑫ Restore Version → ⑬ Ether Mac Address → ⑭ WiFi Mac Address → ⑮ BT Mac Address → ⑯ Audyssey App Interface Version

① Model destination information, Serial Number :

L1	AUR-X4500H \\\
L2	S/N. *****

\\ : Region (E3, E2, E1C, JP)

② Firmware Package :

L1	Firm. Package
L2	Ver. : ****

③ Main  $\mu$ -com, Main 1st Boot Loader :

L1	Main : **.*
L2	Main FBL : **.*

④ DSP 1/2/3/4 ROM :

L1	DSP1 : **.*
L2	DSP2 : **.*

L1	DSP3 : **.*
L2	DSP4 : **.*

⑤ Audio, Video PLD :

L1	Audio PLD: **.*
L2	Video PLD: **.*

⑥ GUI SFLASH :

L1	GUI : @@\$~****
----	-----------------

@ : Model code

\$ : Brand code (Non=0, De=1, Mz=2, Mc=3)

~ : Region code (E3=1, E2=2, E1C=5, JP=4, ALL=0)

\* : version

⑦ HEOS Version :

L1	HEOS Version
L2	*.***.*

⑧ HEOS Build :

L1	HEOS Build
L2	*****

⑨ HEOS Module :

L1	HEOS Module
L2	***

⑩ HEOS Configuration :

L1	HEOS Config
L2	Development
	Production

⑪ HEOS Locale :

L1	HEOS Locale
L2	*****

⑫ Restore Version :

L1	RSTR
L2	*****

⑬ Ether Mac Address :

L1	*Ether MAC
L2	*****-*****

⑭ WiFi Mac Address :

L1	*Wi-Fi MAC
L2	*****-*****

⑮ BT Mac Address :

L1	*BT MAC Address
L2	*****-*****

⑯ Audyssey App Interface Version :

L1	Audy IFVer: **.*
L2	

## 1.4. Error display

See the table below for descriptions of the displayed errors and countermeasures for these.

If multiple errors occur, only one item is displayed.

The priority order is ②, ③, ④, ⑤, ⑥, ①.

Condition	States	Display	TROUBLE SHOOTING
① Firm Check NG (# : 1/2/3/4)	<p>The model name, brand name and region information written in the firmware are compared to the region settings in the PCB. This error is displayed if the information does not match.</p> <p>"▲" is displayed as the first character if the firmware is not correct (see the illustrations on the right).</p>	<div>FIRM ERROR</div> <div>▲M:*****</div> <div>▲Main FBL :**,**</div> <div>▲DSP# :**,**</div> <div>▲Audio PLD:**,**</div> <div>▲Video PLD:**,**</div> <div>▲GUI :*****</div>	<ul style="list-style-type: none"> <li>•Check the resistor for setting the region [R1590/R1589, DIGITAL PCB].</li> <li>•Write the firmware for the correct region.</li> </ul>
② IP SCALER NG	<p>An error occurs in Loop back Test of the DDR memory which is performed during the initial setting of i/p Scaler(ADV8003).</p> <p>During the initial setting of i/p Scaler ( ADV8003 ) , there is not the reply of the Loop back Test result of the DDR memory .</p>	<div>IP SCALER ERR 01</div> <div>IP SCALER ERR 02</div>	<ul style="list-style-type: none"> <li>•Check the circuits around the IP SCALER [IC401, DIGITAL PCB] and DDR2 [IC402/IC403].</li> <li>If there appear to be no problems, [IC401] or [IC402/IC403] is faulty.</li> </ul>
③ GUI Serial Flash NG	<p>If the Main CPU version is not supported by the GUI Serial Flash (ADV8003), "▼" is displayed as the first character of the GUI firmware version.</p> <p>If GUI Serial Flash is damaged, "▲" is displayed as the first character.</p>	<div>GUI VER. ERROR</div> <div>▼GUI :*****</div> <div>▲GUI :*****</div>	<ul style="list-style-type: none"> <li>•Check the firmware version.</li> </ul>
④ DIR NG	<p>This error is displayed if there is no response from the DIR.</p>	<div>DIR ERROR 01</div>	<ul style="list-style-type: none"> <li>•Check the DIR [IC202, DIGITAL PCB] and surrounding circuits.</li> </ul>
⑤ DSP# NG (# : 1/2/3/4)	<p>Boot error 1 (After reset the DSP, DSP_Flag0 port is "Low")</p> <p>Boot error 2 (After reset the DSP, DSP initialization is not completed)</p> <p>(Unused)</p> <p>Command error 1 (After sending the command to the DSP, DSP_Flag0 port is "Low".)</p> <p>Command error 2 (After sending the command to the DSP, MCU received "COMMAND ERROR".)</p> <p>Command error 3 (After sending the command to the DSP, MCU did not receive "COMMAND SUCCESS".)</p> <p>IDL error 1 (Before receiving IDL, "COMMAND BYTE" is not cleared.)</p> <p>IDL error 2 (MCU received "IDL SERIOUS ERROR".)</p> <p>SPI communication error</p>	<div>DSP ERROR 01</div> <div>DSP ERROR 02</div> <div>DSP ERROR 03</div> <div>DSP ERROR 04</div> <div>DSP ERROR 05</div> <div>DSP ERROR 06</div> <div>DSP ERROR 07</div> <div>DSP ERROR 08</div> <div>DSP ERROR 09</div>	<ul style="list-style-type: none"> <li>•Check the DSP [IC251/IC261/IC271/IC281, DIGITAL PCB] and surrounding circuits.</li> </ul>
⑥ BACKUP NG	<p>Error occurred in BACKUP. it is an error of the check sum.</p>	<div>BACKUP ERROR</div>	




## 1.5. Version Display in the Setup Menu

Follow the steps below to display the firmware information.


- (1) Press the "SETUP" button on the remote control.
- (2) Select "General - Information - Firmware".

The version information is displayed as a 16-digit number as shown in the screenshot below.

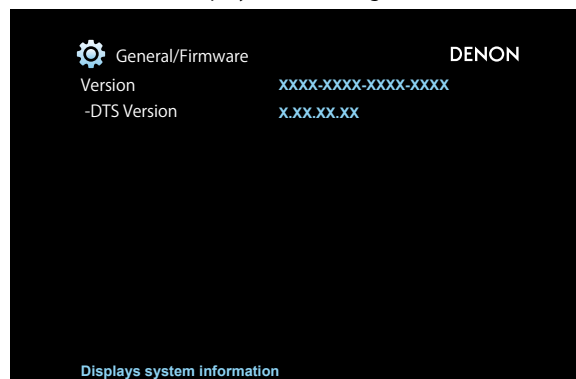

GUI Image

This 16-digit number comprises a part of the version number of each device and module. Numerics and version numbers correspond as shown below.

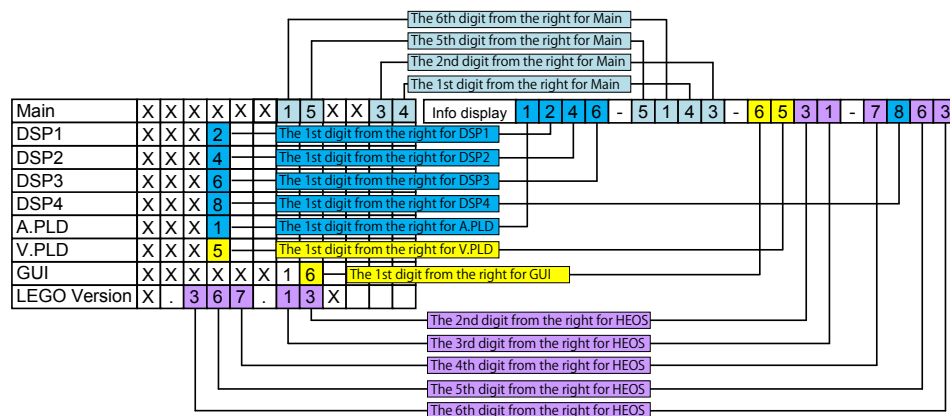

※ The firmware version numbers and this 16-digit version information are written in the Service Information.

※ Replace as follows for the 5th to 7th digits of HEOS version.

X.XXX.X → X.XXX.00X  
 X.XXX.XX → X.XXX.0XX  
 X.XXX.XXX → X.XXX.XXX

## 2. PANEL / REMOTE LOCK Selection Mode

### 2.1. Actions

Switch the PANEL LOCK and REMOTE LOCK modes between on and off.

### 2.2. Starting up

While holding down buttons "STATUS" and "INFO" simultaneously, press the power button to turn on the power.

Select the desired mode using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 2.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "CURSOR ▼/▲" button is pressed.

Press the "ENTER" button to set the currently displayed mode and restart the device.

The setting with "\*" is selected for each mode.

①

L1	▶FP/VOL LOCK*On
L2	FP LOCK On

The buttons on the unit and the master volume knob does not function.



②

L1	FP/VOL LOCK*On
L2	▶FP LOCK On

The buttons on the unit does not function.



③

L1	FP LOCK On
L2	▶FP LOCK Off

The PANEL LOCK mode is turned off.



④

L1	FP LOCK Off
L2	▶RC LOCK On

The device cannot be operated by the remote control.



⑤

L1	RC LOCK On
L2	▶RC LOCK *Off

The REMOTE LOCK mode is turned off.

## 3-1. Selecting the Mode for Service-related

### 3-1.1. Actions

Select diagnostic mode (service path check mode), protection history display mode, 232C standby clear mode, Operation Info mode, TUNER STEP mode or Remote ID Setup Mode.

### 3-1.2. Starting up

While holding down buttons "ZONE3 SOURCE" and "STATUS" simultaneously, press the power button to turn on the power.

Select the desired mode using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 3-1.3. Displaying and Selecting Each Mode

The information shown on the display switches each time the "CURSOR ▼/▲" button is pressed. Press the "ENTER" button to set the currently displayed mode and restart the device.

①

L1	▶1.SERVICE CHECK
L2	2.PROTECTION

Service Path Check Mode : See "DIAGNOSTIC MODE"

The Video and Audio paths can be checked.

This function is convenient for confirming problem paths in the product and checking the paths after repairing.



②

L1	1.SERVICE CHECK
L2	▶2.PROTECTION

The protection history can be checked.



③

L1	2.PROTECTION
L2	▶3.RS232C RESET

Switches from 232C standby mode to normal standby mode.



④

L1	3.RS232C RESET
L2	▶4.OP INFO

Operation Info for the unit can be checked.



⑤

L1	4.OP INFO
L2	▶5.TUNER FRQ SET

Enables reception STEP of the ANALOG TUNER to be changed.



⑥

L1	5.TUNER FRQ SET
L2	▶6.REMOTE ID

This function is for operating only the desired AV receiver.

### 3-1.4. Canceling the selected mode

Press the power button to turn off the power.

## 3-2. Protection History Display Mode

### 3-2.1. Actions

This mode enables the unit to record and display the event when the THERMAL, ASO or DC protection is activated.

If protections have been activated multiple times, the latest protection operation is recorded.

### 3-2.2. Starting up

While holding down buttons "**ZONE3 SOURCE**" and "**STATUS**" simultaneously, press the power button to turn on the power.

Select the "**2. PROTECTION**" using the "**CURSOR ▼/▲**" button, then press the "**ENTER**" button to confirm.

### 3-2.3. Protection information and displays

- Press the "**STATUS**" button in Protection History Display Mode.
- The protection history can be checked.

- (1) If no protections has occurred.

L1	PROTECT HISTORY
L2	: NO PROTECT

- (2) ASO (if the last protection is ASO)

L2	: ASO
----	-------

**Cause** A short circuit occurred between the speaker terminals, or speakers with an impedance outside the rating were connected.

**Note** : Short circuits in speaker terminals or speakers can be identified.

If the power is turned on in the abnormal state, protection is activated after around 6 seconds and the power is turned off.

- (3) DC (if the last protection is DC)

L2	: DC
----	------

**Cause** : DC output of the power amplifier is abnormal.

If the power is turned on in the abnormal state, protection is activated after around 6 seconds and the power is turned off.

- (4) Case of THERMAL (when the last protection incident is THERMAL(E) protection)

L2	: THERMAL E
----	-------------

**Cause** : Abnormal heat sink temperature.

If the power is turned on in the abnormal state, protection is activated after around 180 seconds and the power is turned off.

- (5) Case of CURRENT (when the last protection incident is CURRENT protection)

L2	: CURRENT
----	-----------

**Cause** : An over current flowed in power amp.

If the power is turned on in the abnormal state, protection is activated after around 90 seconds and the power is turned off.

**Caution** : These protections may also be activated due to other factors such as disconnection of connectors or operations around the microcomputer.

After viewing the above protection history, press the "**STATUS**" button to return to the normal display.

### 3-2.4. Clearing the Protection History

There are two ways to clear the protection history.

- (1) Activate Protection History Display Mode. Press the **"STATUS"** button to display the protection history.

L1	PROTECT HISTORY
L2	≡DC

Press and hold the **"ENTER"** button for 3 seconds.



L2	CLEAR
----	-------

The above message is displayed and the protection history is cleared.



L2	≡NO PROTECT
----	-------------

- (2) Initialize this unit. (See ["POST-SERVICE PRECAUTIONS"](#))

※ Use the method in **3-2.4. (1)** if you do not want to erase your settings from this unit.

### Warning Displays by POWER LED

If the power is turned Off while a protection is being detected, the POWER LED flashes in red to warn you depending on the protection status as follows.

- (1) ASO/DC protection: Flashes at 0.5-second intervals (0.25 seconds lit, 0.25 seconds unlit)
- (2) THERMAL(E) protection: Flashes at 2-second intervals (1 seconds lit, 1 seconds unlit)
- (3) CURRENT protection: Flashes at 4-second intervals (2 seconds lit, 2 seconds unlit)

## 3-3. 232C Standby Clear Mode

### 3-3.1. Actions

Switches from 232C standby mode to normal standby mode.

### 3-3.2. Starting up

While holding down buttons **"ZONE3 SOURCE"** and **"STATUS"** simultaneously, press the power button to turn on the power.

Select the **"3.RS232C RESET"** using the **"CURSOR ▼/▲"** button, then press the **"ENTER"** button to confirm.

L1	2. PROTECTION
L2	➡3. RS232C RESET

## 3-4. Operation Info Mode

### 3-4.1. Actions

This mode enables the unit to display the accumulated operating time, power On count and each protection count.

### 3-4.2. Starting up

While holding down buttons "ZONE3 SOURCE" and "STATUS" simultaneously, press the power button to turn on the power.

Select the "4. OP INFO" using the "CURSOR ▼/▲" button, then press the "ENTER" button to confirm.

### 3-4.3. Operations

Press the "STATUS" button after starting up this device in Operation Info mode.

The following information is displayed in the following order.

- (1) Accumulated operating time

L1	Operation Time
L2	Total: _____H

↓ "STATUS"      ↑ Time display

- (2) Power On time

L1	Power On Time
L2	Total: _____H

↓ "STATUS"      ↑ Time display

- (3) DC / ASO Protection count

L1	Protection Time
L2	DC: ____/ASO: ____

↓ "STATUS"

- (4) Thermal Protection (E) count

L1	Protection Time
L2	THM E: ____

↓ "STATUS"

- (5) Current Protection count

L1	Protection Time
L2	Current: ____

↓ "STATUS"

(Returns to normal display)

## 3-5. TUNER STEP mode (E3 / E2 only)

### 3-5.1. Actions

This is a special mode for enabling reception STEP of the ANALOG TUNER to be changed.

### 3-5.2. Starting up

While holding down buttons "**ZONE3 SOURCE**" and "**STATUS**" simultaneously, press the power button to turn on the power.

Select the "**5. TUNER FRQ SET**" using the "**CURSOR ▼/▲**" button, then press the "**ENTER**" button to confirm.

### 3-5.3. Displays

Start up this unit in TUNER STEP mode, select the desired option using the "**CURSOR ◀/▶**" button, then enter using the "**ENTER**" button.

The following information is displayed in the following order.

- (1) AM9 kHz / FM50 kHz is selected

L1	*TUNER FRQ Set
L2	< AM9/FM50 >

"CURSOR ◀" ↓      ↑ "CURSOR ▶"

- (2) AM10 kHz / FM200 kHz is selected

L2	< AM10/FM200 >
----	----------------

↓ "ENTER"

- (3) Press the power button to turn off the power.  
(4) Press the power button to turn on the power.

## 3-6. Remote ID Setup Mode

### 3-6.1. Actions

This function allows only the desired AV receiver to be operated if multiple DENON AV receivers are used in the same room.

### 3-6.2. Starting up

While holding down buttons "**ZONE3 SOURCE**" and "**STATUS**" simultaneously, press the power button to turn on the power.

Select the "**6. REMOTE ID**" using the "**CURSOR ▼/▲**" button, then press the "**ENTER**" button to confirm.

### 3-6.3. Operations

- (1) When Remote ID Setup mode is activated, the following message is displayed.

L1	
L2	REMOTE ID ?

- (2) Press the desired "**QUICK SELECT 1 - 4**" button.

Button	Display
QUICK SELECT 1	L2 REMOTE ID 1
QUICK SELECT 2	L2 REMOTE ID 2
QUICK SELECT 3	L2 REMOTE ID 3
QUICK SELECT 4	L2 REMOTE ID 4

- (3) Press the power button to turn off the power.  
(4) Press the power button to turn on the power.

※ Only "**QUICK SELECT 1 - 4**" and the POWER button on the unit can be used in Remote ID Setup Mode.

### 3-6.4. Setting the Remote control unit

- (1) Press and hold the "**DEVICE MENU**" button for at least 3 seconds until the "**DEV.**", "**TU**" and "**AVR**" indicators flash.  
(2) Press "**MAIN**" button.  
The "**DEV.**", "**TU**" and "**AVR**" indicators flash twice.  
(3) Press the "**1**", "**2**", "**3**" or "**4**" button.  
The "**DEV.**", "**TU**" and "**AVR**" indicators flash twice.

#### NOTE :

If the ID of the unit and remote control do not match, "**AVAMP\***" appears on the display of the unit when the remote control is used

(\* : own remote control ID).

## 4. Protection Pass Mode

### 4.1. Actions

- This mode allows the power to be turned on without activating protections.
- This mode functions in the same way as normal power-on, except that protections are not activated.
- When using the protection pass mode, do not connect speakers to the speaker terminals.

### 4.2. Operations

While holding down buttons "**ZONE3 SOURCE**", "**STATUS**" and "**CURSOR ◀**" simultaneously, press the power button to turn on the power.

The device returns to the normal display message after the following is displayed.

A rectangular LCD display with a black border. The text 'L1 Protection Pass' is shown in a white, monospaced font on a black background. 'L1' is on the first line, and 'Protection Pass' is on the second line.

This is displayed for 5 seconds before returning to the normal display.

## 5. Network Initialization Mode

### 5.1. Actions

The following items are initialized.

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

### 5.2. Operations

When the power is on and the input source is HEOS Music, press and hold the "**CURSOR ▶**" and "**DIMMER**" buttons for more than 3 seconds.

Initializing Display

A rectangular LCD display with a black border. The text 'L1 Network Reset...' is shown in a white, monospaced font on a black background. 'L1' is on the first line, and 'Network Reset...' is on the second line.

Complete Display

A rectangular LCD display with a black border. The text 'L1 Completed' is shown in a white, monospaced font on a black background. 'L1' is on the first line, and 'Completed' is on the second line.

This is displayed for 5 seconds before returning to the normal display.



## 6. Clearing the Operation Info

### 6.1. Actions

- Displays the accumulated operating time of the unit, the number of times the power was switched on, and the number of occurrences of each protection.

### 6.2. Operations

Remove all input/output terminals and the AC plug.

Connect the AC plug again and place the product in standby mode.

While holding down buttons "**OPTION**" and "**DIMMER**" simultaneously, press the power button to turn on the power.

L1	PRODUCT MODE
----	--------------

When "**PRODUCT MODE**" appears on the display, release the button and press the button "**power**" → "**ZONE2 ON/OFF**" → "**ZONE3 ON/OFF**" to place the product in standby mode.

## 7. Log Capture feature

### 7.1. Actions

- Acquires the Network Module log.
- The log is deleted when the Network Module is deleted.  
If an error occurs, it is acquired without turning off the power of this unit.
- The log can be copied to a writable USB flash drive.  
It can also be sent to a server if this unit is connected to the Internet.
- The log is stored in the root folder of the USB flash drive with the name "**logs-<friendlyname>-<number>.tar.gz**".  
<friendlyname> indicates the friendly name and <number> indicates the sequence number.  
Previous logs on the USB flash drive are not overwritten. The log is encrypted.

### 7.2. Starting up

While the power is on, hold down buttons "**BACK**" and "**OPTION**" for at least 3 seconds.

#### 7.2.1. If the USB flash drive is connected after starting the unit

- The log is written to the USB flash drive and "**Storing Logs...**" is displayed.  
The log is also sent to the server.

L1	Storing Logs...
----	-----------------

- When a log package is saved to a USB flash drive, "**USB SUCCESS**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

L1	USB SUCCESS
----	-------------

- When saving of the log package fails, "**USB FAILED**" appears in the display for 5 seconds, regardless of whether the upload to the server was successful.

L1	USB FAILED
----	------------

#### 7.2.2. When the USB flash drive is not connected after startup, and this unit is connected to the Internet.

- The log is sent to the server and the display shows "**Storing Logs...**" for 5 seconds.

L1	Storing Logs...
----	-----------------

- When the log package is uploaded, the ticket numbers "**UPLOAD No : XXXXX**" and "**Push ENTER**" are displayed until RC or the "**Enter**" or "**Back**" button of this machine is pressed.

L1	Ticket No:XXXXX
----	-----------------

L2	Push ENTER
----	------------

- If the log package upload fails, "**FAILED**" is displayed for 5 seconds.

L1	FAILED
----	--------

## Service Path Check Mode

### 1.1. Actions

This function is convenient for confirming problem paths in the product and checking the paths after repairing.  
The video system, audio system and fan operation paths can be checked.  
The backup data is not rewritten.

### 1.2. Starting up

While holding down buttons "ZONE3 SOURCE" and "STATUS" simultaneously, press the power button to turn on the power.

### 1.3. Canceling diagnostic mode

Press the power button to turn off the power.

### 1.4. Selecting items to check

Press the ① button to switch between video items and audio items.

Press the ② or ③ button to select the previous or next item.

Actions	The unit			Remote control unit		
	①	②	③	①	②	③
	Audio ⇄ Video ⇄ FAN	PREVIOUS	NEXT	Audio ⇄ Video ⇄ FAN	PREVIOUS	NEXT
Button	DIMMER	CURSOR ◀	CURSOR ▶	SLEEP	CURSOR ◀	CURSOR ▶

### 1.5. Audio system confirmation items

See the block diagram fig.AXXth.

Paths to be confirmed			Display	Settings	What to confirm
1	Analog	fig.A01	A01:ANALOG PASS	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : DIRECT Amp assign : 9.1ch Floor Layout : 5.1&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ Speaker output (Front L/R)</li> <li>• Analog input ⇒ Pre OUT output (Front L/R)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
2	DIGITAL (MAIN)	fig.A02a fig.A02b	A02:DIGITAL	Input Source : CBL/SAT Input Mode : DIGITAL (fixed) Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5.1&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor Speaker Config ALL Speaker = Small / SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Digital input ⇒ Speaker output (Front L/R, Center, Surround L/R, S.Back L/R)</li> <li>• Digital input ⇒ Pre OUT output (Front L/R, Center, Surround L/R, S.Back L/R, Subwoofer1/2)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)

Paths to be confirmed			Display	Settings	What to confirm
3	DIGITAL (ZONE2)	fig.A03a fig.A03b fig.A03c	A03: DIGITAL-Z2	Input Source : HEOS Music Input Mode : Auto Sound mode : STEREO Amp assign : 7.1ch + ZONE2 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On ZONE3 : Off	<ul style="list-style-type: none"> <li>• Digital(PCM) input ⇒ Speaker output (Height2 (ZONE2) L/R)</li> <li>• Digital(PCM) input ⇒ Pre OUT output (ZONE2 L/R)</li> </ul> (※ The input source can be switched to any source except HEOS Music.)
4	DIGITAL (ZONE3)	fig.A04a fig.A04b	A04: DIGITAL-Z3	Input Source : HEOS Music Input Mode : Auto Sound mode : STEREO Amp assign : 7.1ch + ZONE Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : On	<ul style="list-style-type: none"> <li>• Digital(PCM) input ⇒ Speaker output (Height2 (ZONE3) L/R)</li> <li>• Digital(PCM) input ⇒ Pre OUT output (ZONE3 L/R)</li> </ul> (※ The input source can be switched to any source except HEOS Music.)
5	HDMI	fig.A05a fig.A05b fig.A05c	A05: HDMI	Input Source : CBL/SAT Input Mode : HDMI (fixed) Sound mode : STEREO Amp assign : 9.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• HDMI input ⇒ Speaker output (Front L/R)</li> <li>• HDMI input ⇒ Pre OUT output (Front L/R)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
6	Analog AD (MAIN)	fig.A06a fig.A06b	A06: AD	Input Source : CBL/SAT Input Mode : Analog (fixed) Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5ch&SB Height Sp : 2ch Dolby Sp : None Height Layout : Front Height Speaker Select : Floor & Height Speaker Config ALL Speaker = Small/SW = Yes(2ch) MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ Speaker output (Front L/R, Center, Surround L/R, S.Back L/R, Height1 L/R)</li> <li>• Analog input ⇒ Speaker output, SW(20Hz) (Front L/R, Center, Surround L/R, S.Back L/R, Height1 L/R, Subwoofer1/2)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)
7	Analog Amp Assign (Amp Assign : ZONE2)	fig.A07	A07: ASSIGN-Z2	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z2 Source : Source Amp assign : 7.1ch + ZONE2 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : On ZONE3 : Off	<ul style="list-style-type: none"> <li>• Analog input ⇒ Speaker output (Height2 (ZONE2) L/R)</li> <li>• Analog input ⇒ Pre OUT output (ZONE2 L/R)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)
8	Analog Amp Assign (Amp Assign : ZONE3)	fig.A08	A08: ASSIGN-Z3	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z3 Source : Source Amp assign : 7.1ch + ZONE3 Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : On	<ul style="list-style-type: none"> <li>• Analog input ⇒ Speaker output (Height2 (ZONE2) L/R)</li> <li>• Analog input ⇒ Pre OUT output (ZONE3 L/R)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)

Paths to be confirmed			Display	Settings	What to confirm
9	Analog Amp Assign (Amp Assign : ZONE2/ZONE3- MONO)	fig.A09	A09: ASSIGN-Z2/3M	Input Source : CBL/SAT Input Mode : Auto Sound mode : STEREO Z2 Source : Source Z3 Source : Source Amp assign : 7.1ch + ZONE2/3 Floor Layout : 5ch&SB MAIN ZONE : On ZONE2 : On ZONE3 : On	<ul style="list-style-type: none"> <li>Analog input ⇒ Speaker output (Height2 (ZONE2) L, Height2 (ZONE3) R)</li> <li>Analog input ⇒ Pre OUT output (ZONE2 L/R MONO, ZONE3 L/R MONO) (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</li> </ul>
10	Amp Assign (Amp Assign : BiAMP)	fig.A10a fig.A10b	A11: ASSIGN-BiAMP	Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 7.1ch + BiAMP Floor Layout : 5ch Height Sp : 2ch Dolby Sp : None Height Layout : Front Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>Analog input ⇒ Speaker output (Height2 L/R (Top Front)) (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</li> </ul>
11	Front Height	fig.A11a fig.A11b	A14: FRONT HEIGHT	Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 9.1ch Floor Layout : 5ch Height Sp : 4ch Dolby Sp : None Height Layout : Top Front & Top Rear Speaker Select : Floor & Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>Analog input ⇒ Speaker output (Height1 L/R (Top Front), Height2 L/R (Top Front))</li> <li>Analog input ⇒ Pre OUT output (Height1 L/R (Top Front), Height2 L/R (Top Rear))</li> <li>Pre OUT 出力 (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</li> </ul>
12	Front Amp ⇒ Sur- round Back	fig.A12a fig.A12b	A20: F-AMP BACK	Input Source : CBL/SAT Input Mode : Auto Sound mode : MULTI CH STEREO Amp assign : 11.1ch Height Speakers : 4Height Speakers Height Layout : Top Front & Top Rear Pre OUT Channel : Front Speaker Select : Floor & Height MAIN ZONE : On ZONE2 : Off ZONE3 : Off	<ul style="list-style-type: none"> <li>Analog input ⇒ Speaker output (S.Back L/R) (※ The input source can be switched to any source except CBL/SAT.) (※ Volume 60 is the value when Absolute settings are used. The value is -20 when Relative settings are used)</li> </ul>

## 1.6. Confirmation items for the video system

See the block diagram fig.VXXth.

Paths to be confirmed			Display	Settings	What to confirm
1	Analog Video pass	fig.V01	V01:VIDEO PASS	Input Source : CBL/SAT MAIN ZONE : On ZONE2 : On	<ul style="list-style-type: none"> <li>• Component input ⇒ Component output</li> <li>• CVBS input ⇒ CVBS output</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
2	Video Convert (Analog or HDMI ⇒ HDMI)	fig.V02a fig.V02b	V02:V. CONVERT	Input Source : CBL/SAT Video Conversion (IP Scaler) : "Auto", All sources IP Scaler : "HDMI", All sources Resolution : "Auto", All sources MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> <li>• HDMI input ⇒ IP Scaler ⇒ HDMI output.</li> <li>• ETHERNET input ⇒ IP Scaler ⇒ HDMI output.</li> <li>• CVBS input ⇒ IP Scaler ⇒ HDMI output.</li> <li>• Component input ⇒ IP Scaler ⇒ HDMI output.</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
3	HDMI pass (MAIN ZONE)	fig.V03	V03:HDMI PASS	Input Source : CBL/SAT Video Conversion (IP Scaler) : Off MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> <li>• HDMI input (MAIN function) ⇒ HDMI output (MAIN)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
4	HDMI CEC (Control Monitor : HDMI Monitor1)	fig.V04	V04:HDMI CEC	Input Source : CBL/SAT HDMI Control : On MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> <li>• When the power supply of a TV is put in the standby mode, make sure that the power supply of this unit is also put in the standby mode.</li> <li>(※ The input source can be switched to any source except CBL/SAT.)</li> <li>• The ARC path can also be checked (check this using the TV input source).</li> </ul>
5	HDMI Audio (Audio : AVR)	fig.V05a fig.V05b fig.V05c	V05:H. AUDIO-AVR	Input Source : CBL/SAT HDMI Control : Off HDMI Audio : AVR (if checking the audio output from AVR)	<ul style="list-style-type: none"> <li>• HDMI input (PCM, DolbyDigital, DTS) ⇒ Speaker output.</li> <li>• HDMI input(HD audio) ⇒ Speaker output.</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
6	HDMI Audio (Audio : TV)	fig.V06a fig.V06b	V06:H. AUDIO-TV	HDMI Audio : TV (if checking the audio output from TV)	<ul style="list-style-type: none"> <li>• HDMI input (PCM, DolbyDigital, DTS) ⇒ HDMI output (audio output from connected TV)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
7	GUI	fig.V07	V07:GUI MENU ON	Input Source : CBL/SAT IP Scaler : On, All sources Resolution : "AUTO", All sources Setup Menu : On MAIN ZONE : On ZONE2 : Off	<ul style="list-style-type: none"> <li>• GUI display ⇒ HDMI output.</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
8	HDMI pass (MAIN ZONE2)	fig.V08	V08:ZONE2 HDMI	Input Source : CBL/SAT Z2 Source : Source MAIN ZONE : On ZONE2 : On ZONE3 : Off	<ul style="list-style-type: none"> <li>• HDMI input (ZONE2 Function) ⇒ HDMI output (ZONE2)</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)

## 1.7. Confirmation items for fan operation

Paths to be confirmed			Display	Settings	What to confirm
1	Low-speed fan	-	F01:FAN LOW	FAN CONT_LOW = HIGH FAN CONT_HIGH = LOW MAIN ZONE ON ZONE2 OFF ZONE3 OFF	<ul style="list-style-type: none"> <li>• Low-speed fan</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)
2	High-speed fan	-	F03:FAN HIGH	FAN CONT_LOW = LOW FAN CONT_HIGH = HIGH MAIN ZONE ON ZONE2 OFF ZONE3 OFF	<ul style="list-style-type: none"> <li>• High-speed fan</li> </ul> (※ The input source can be switched to any source except CBL/SAT.)

fig.A01

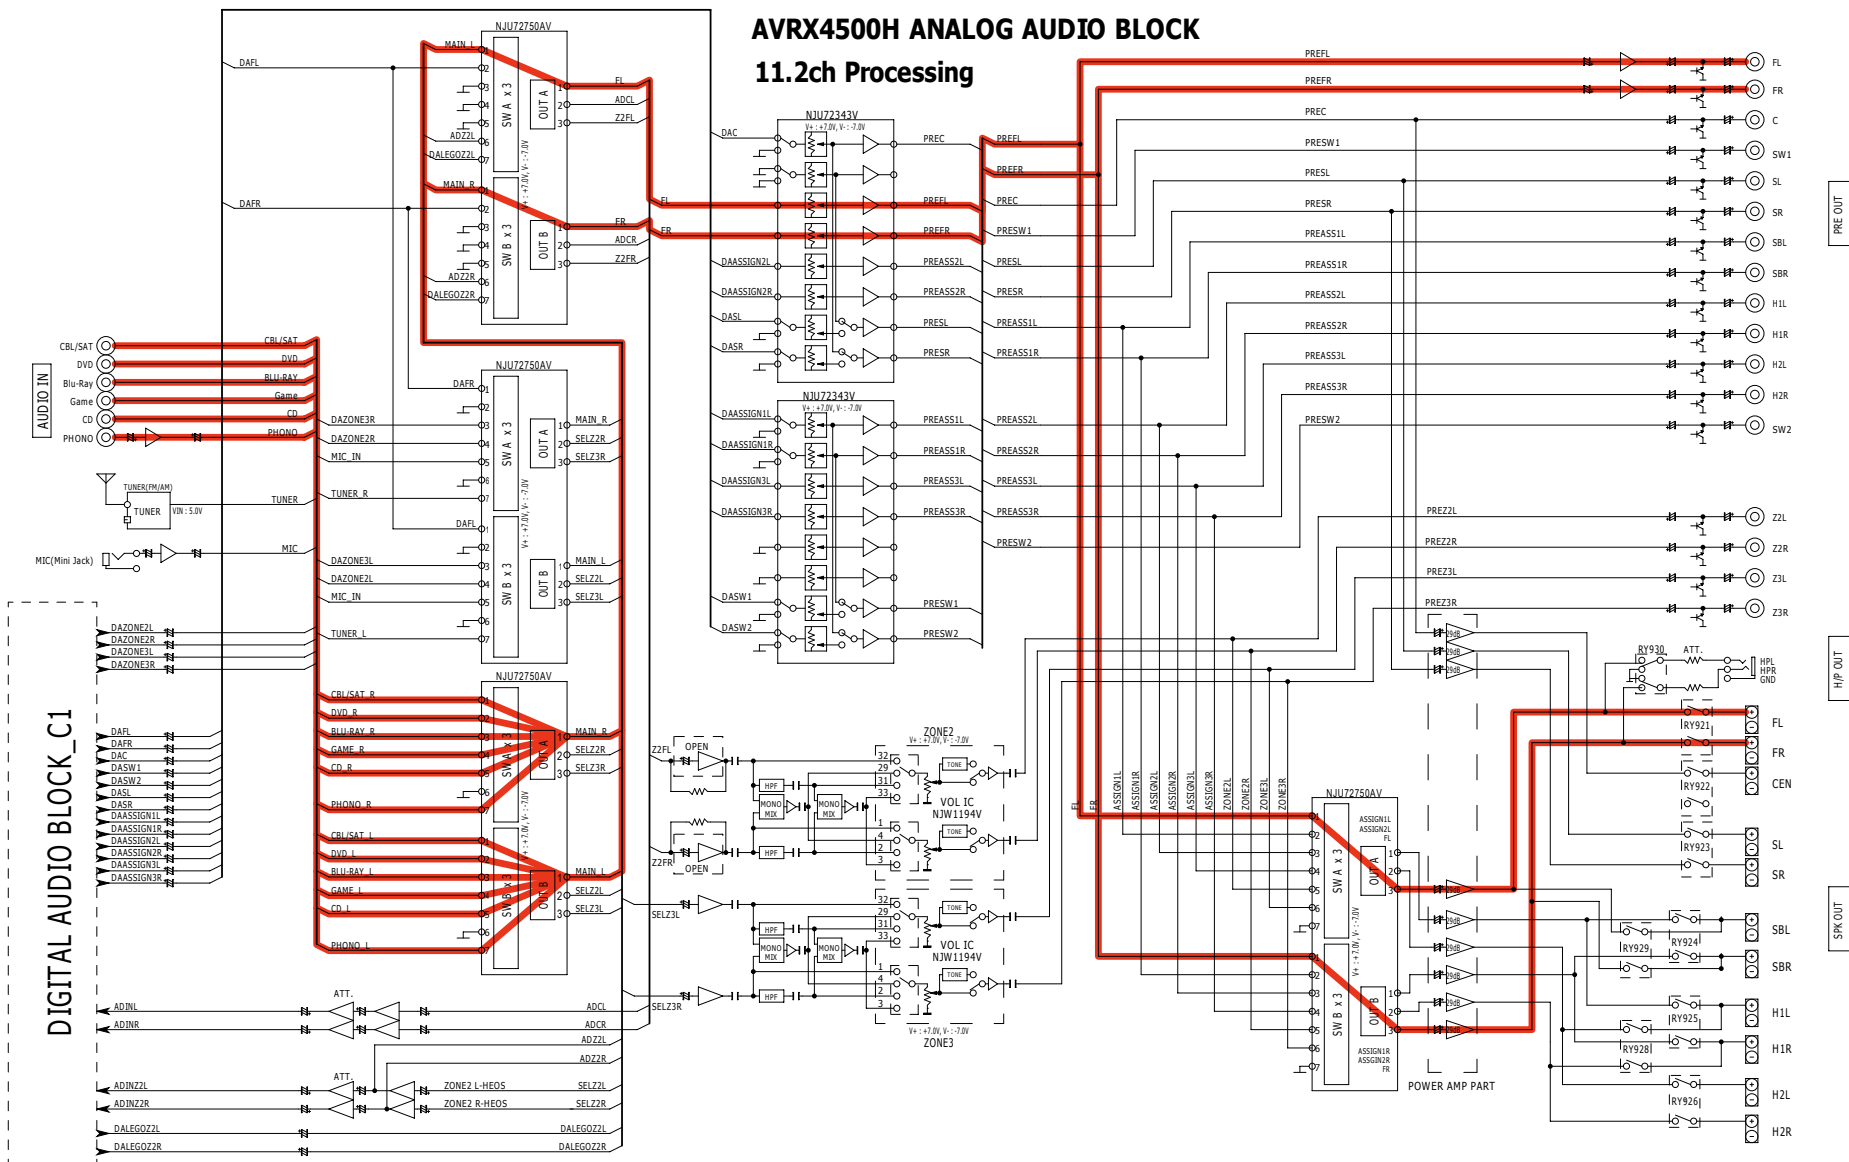




fig.A02b

# AVRX4500H DIGITAL AUDIO BLOCK(ADI)

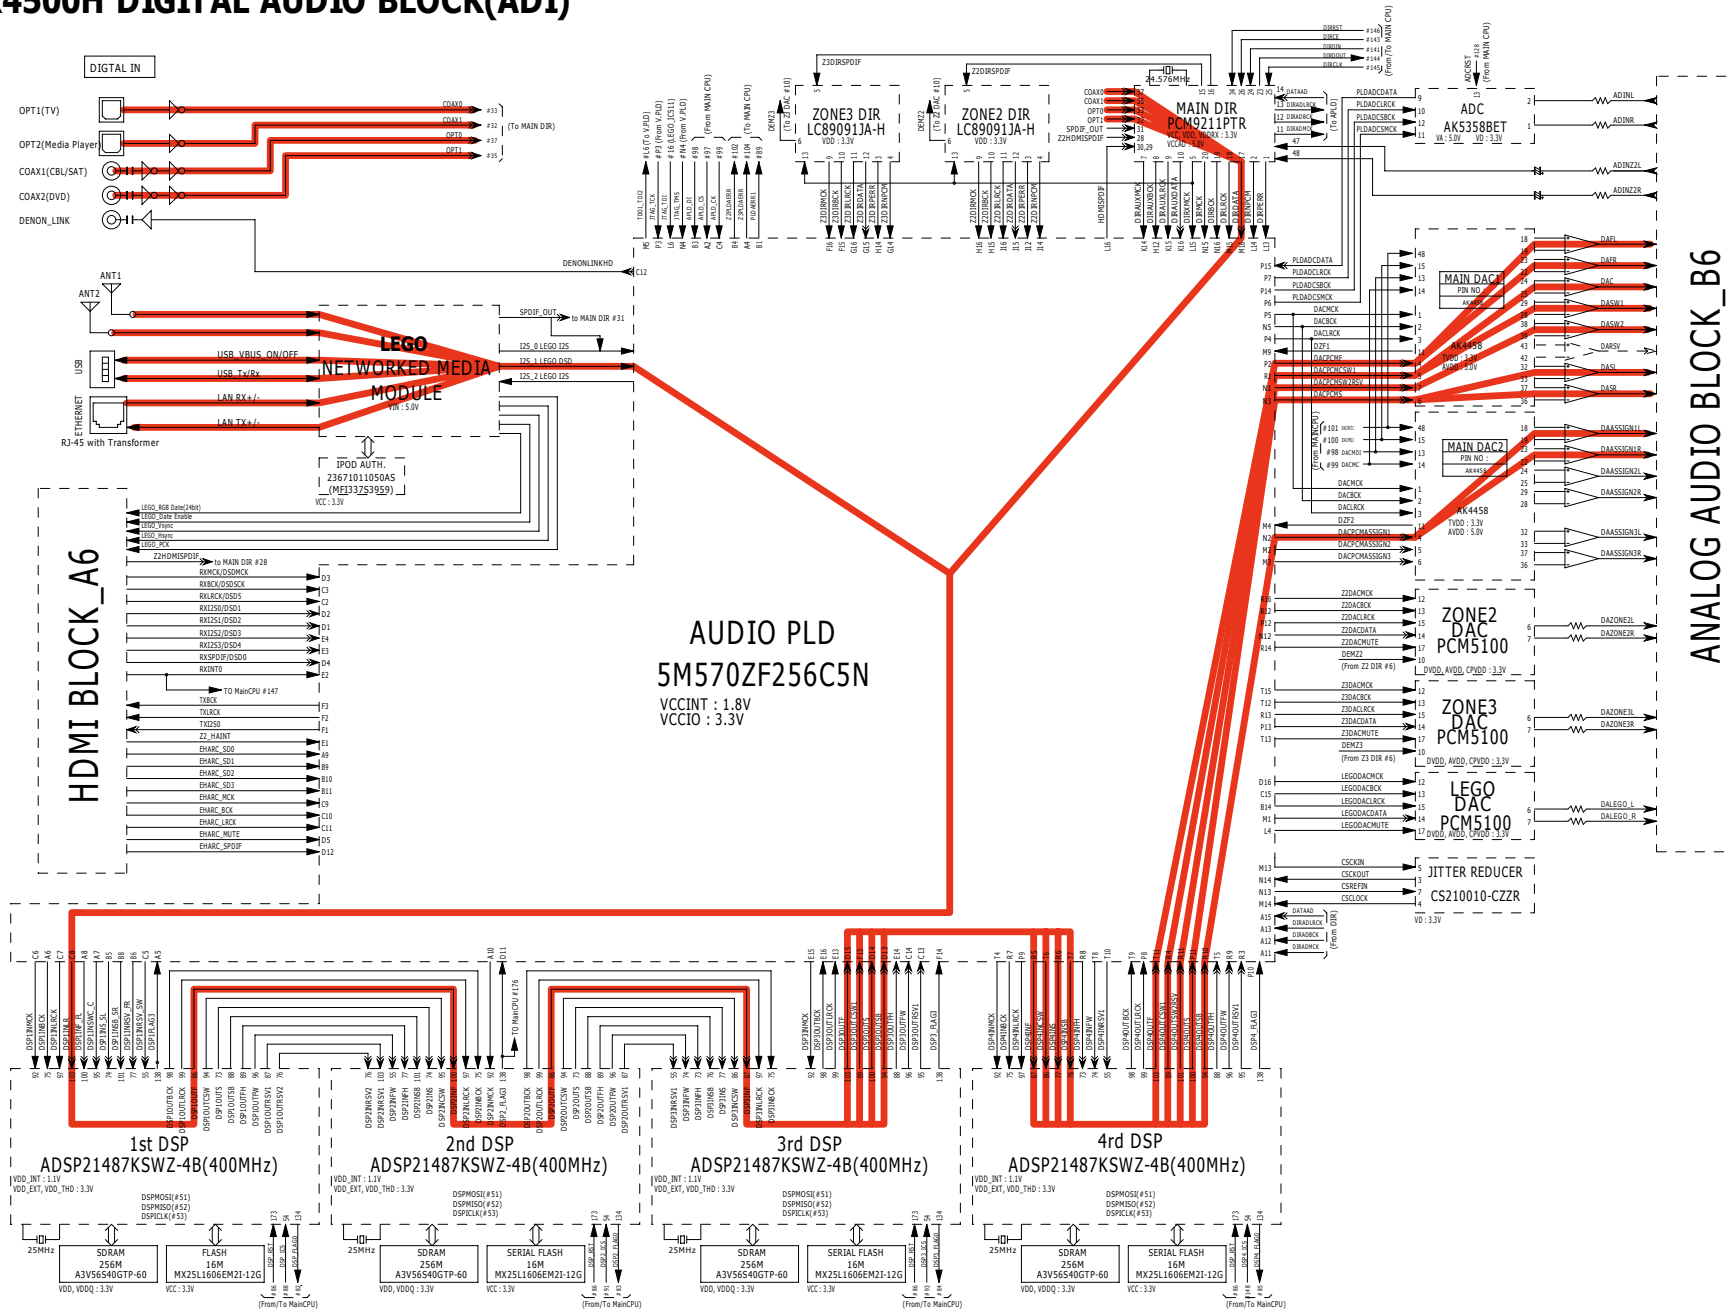






fig.A03b

# AVRX4500H DIGITAL AUDIO BLOCK(ADI)

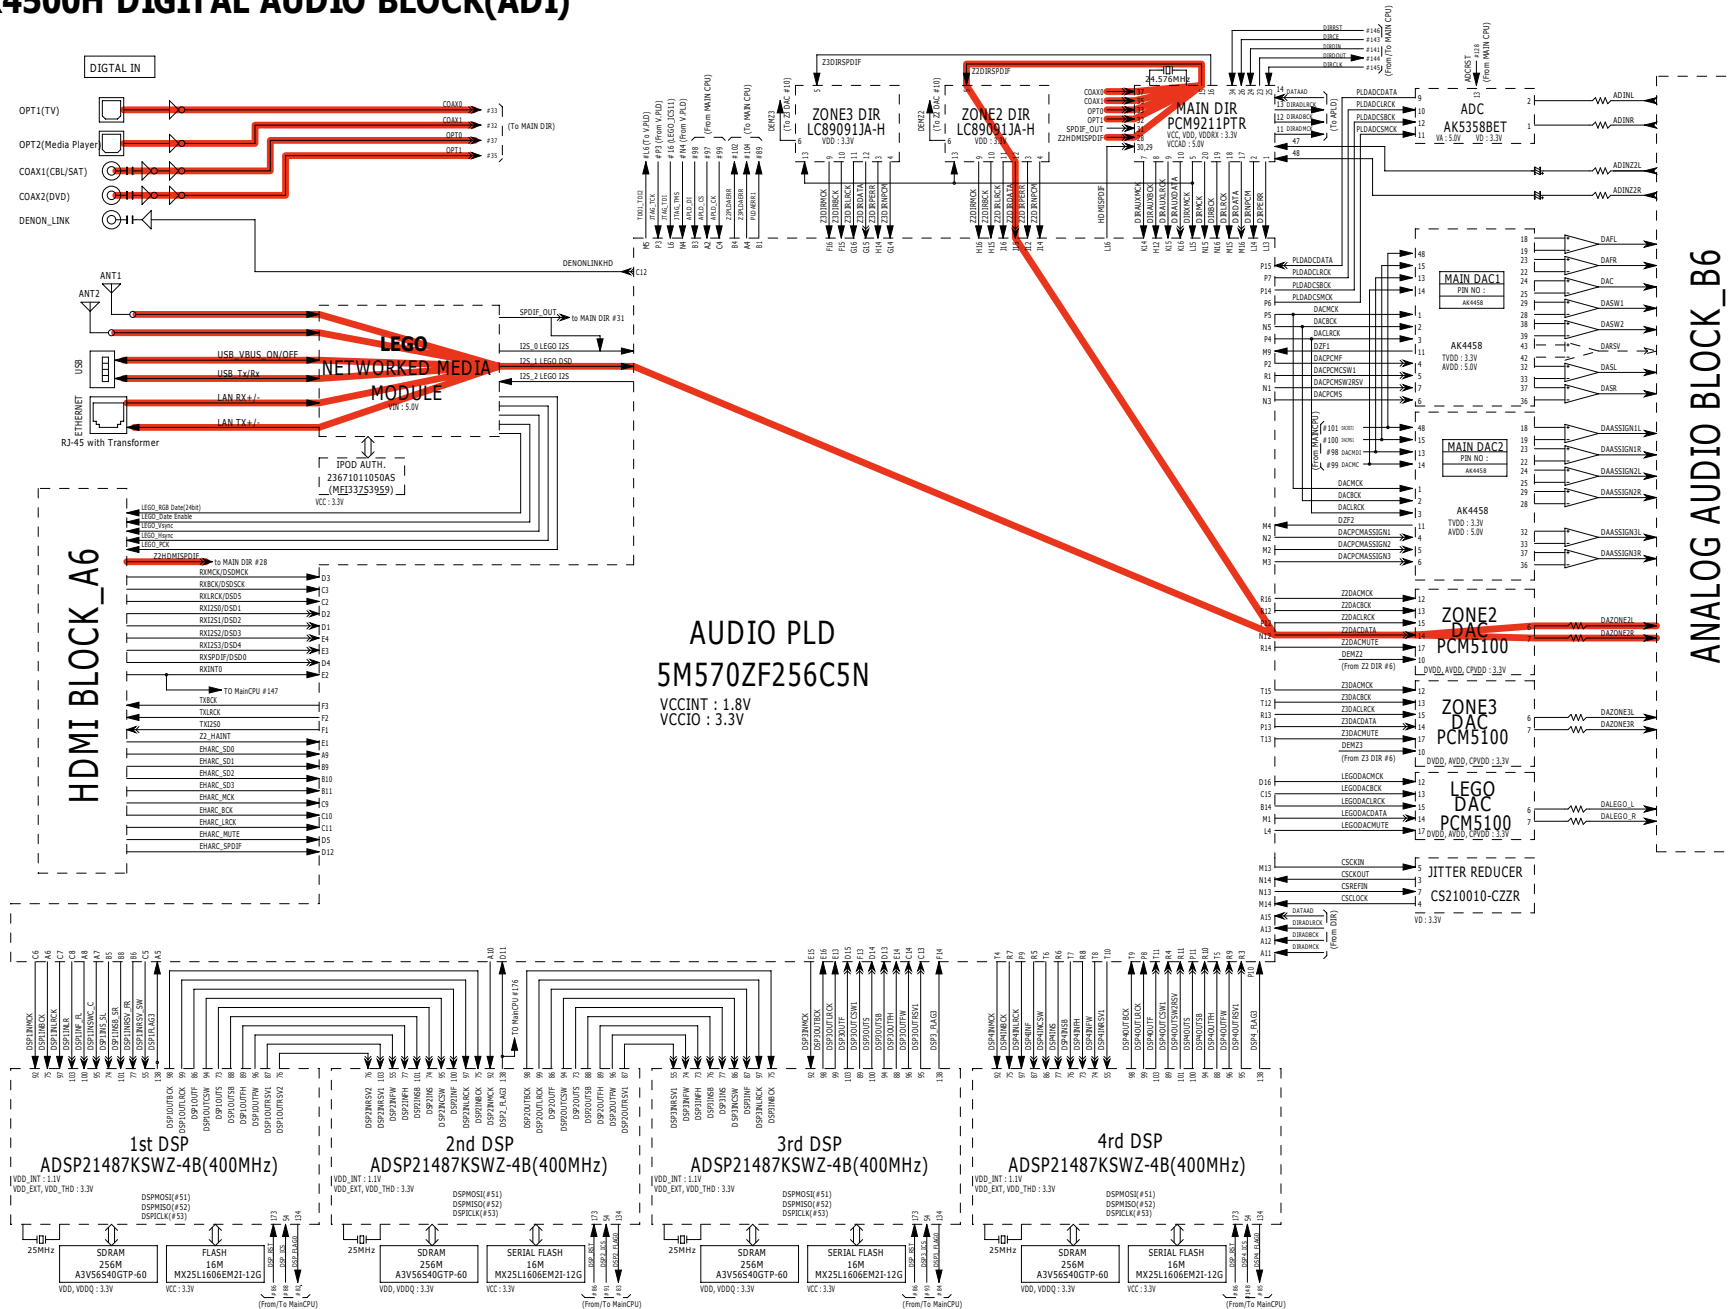


fig.A03c

# AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK


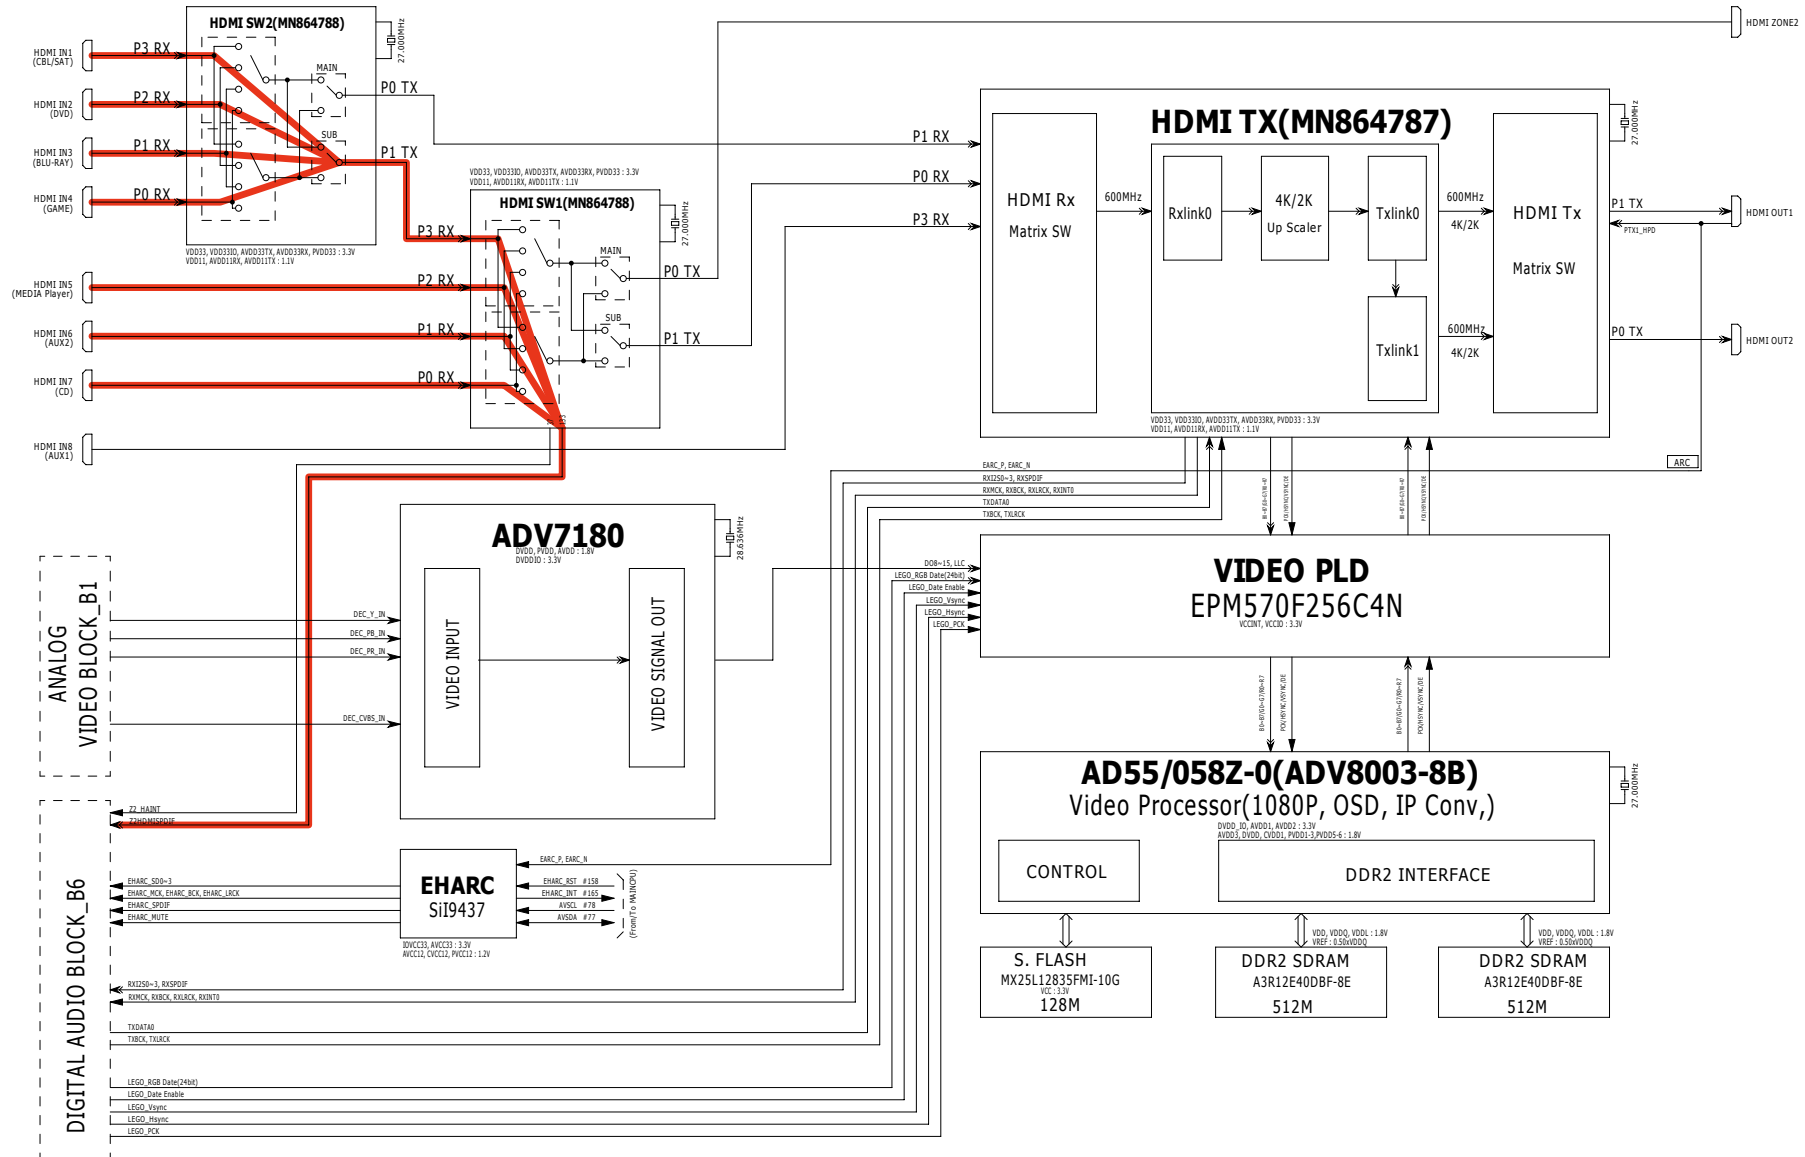




fig.A04b

# AVRX4500H DIGITAL AUDIO BLOCK(ADI)



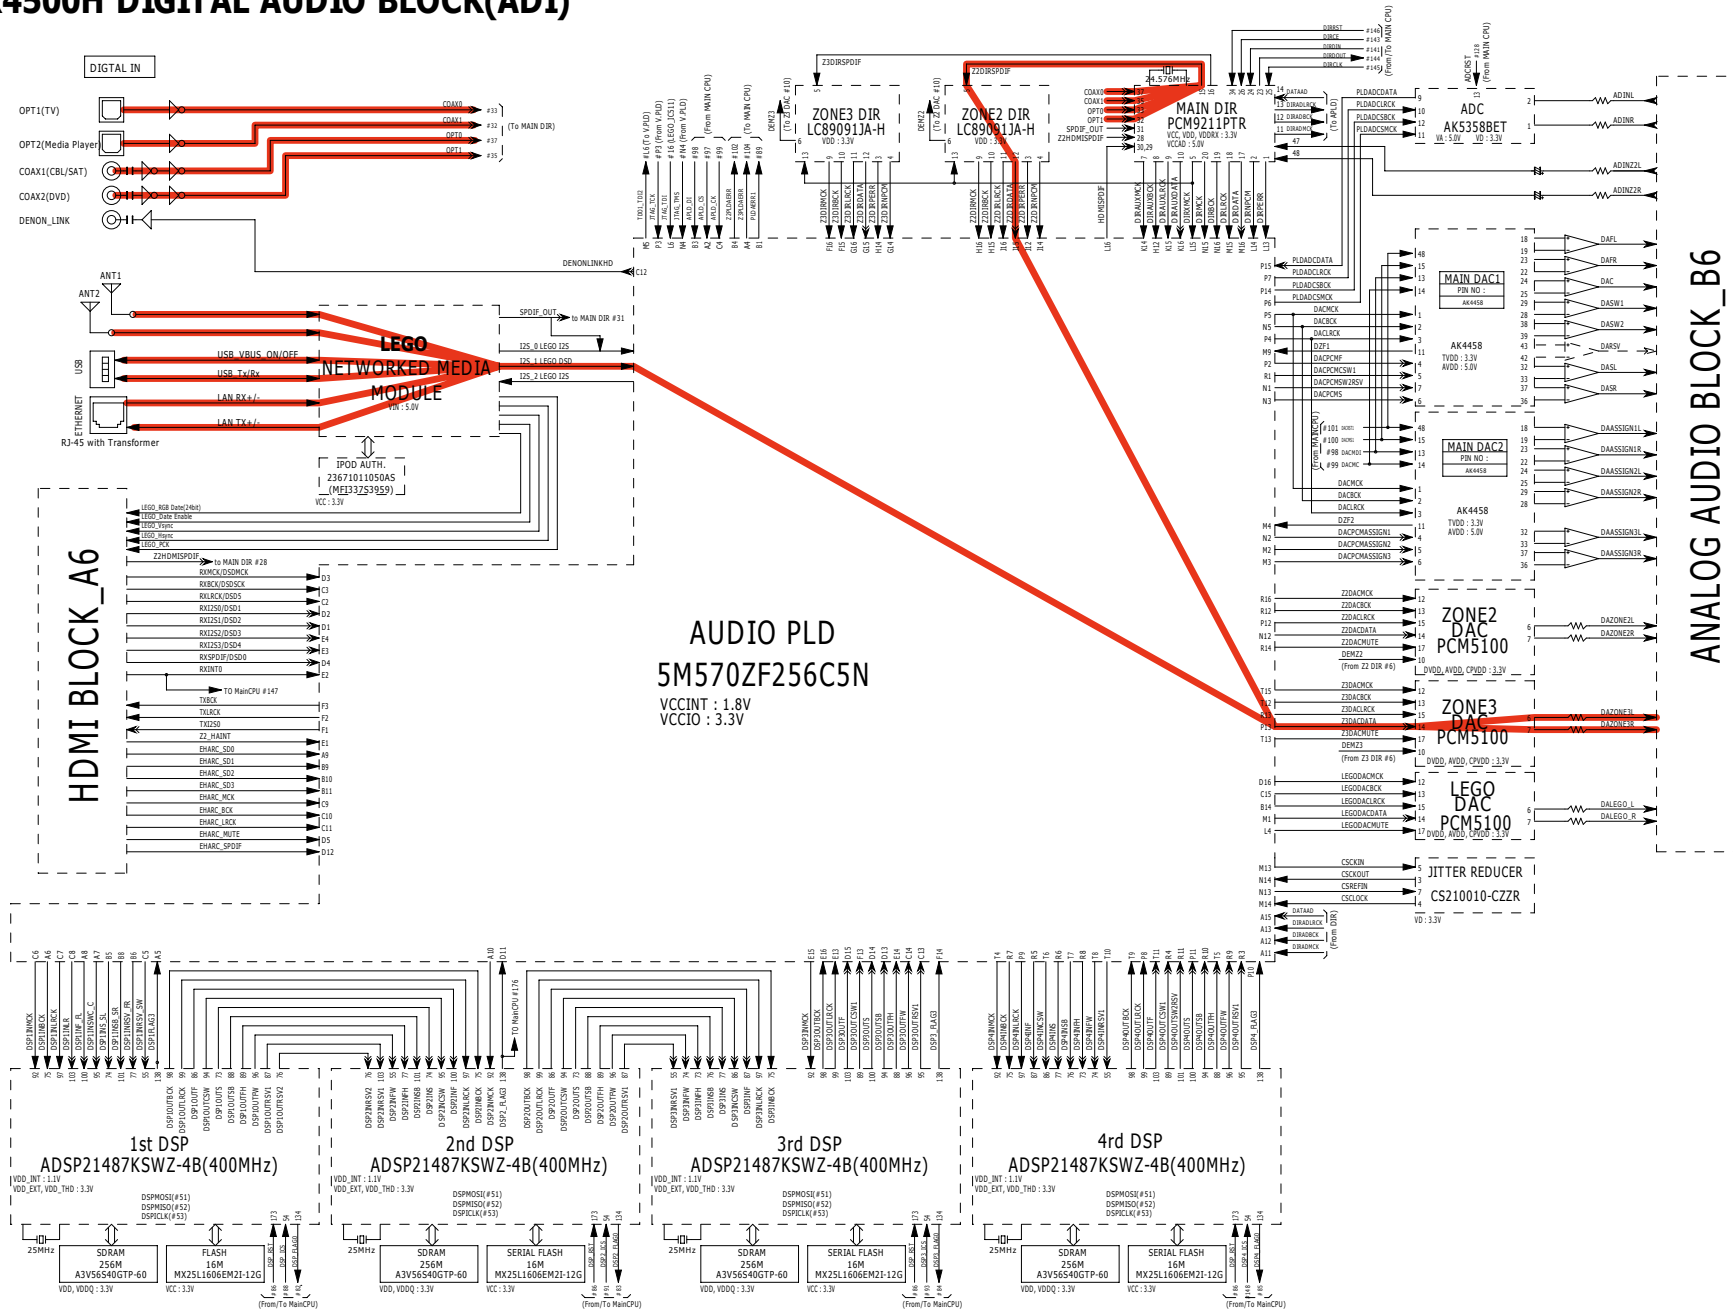

## AVRX4500H DIGITAL AUDIO BLOCK(ADI)



## AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK



## Mechanical

## Repair Information

## Updating



fig.A06a

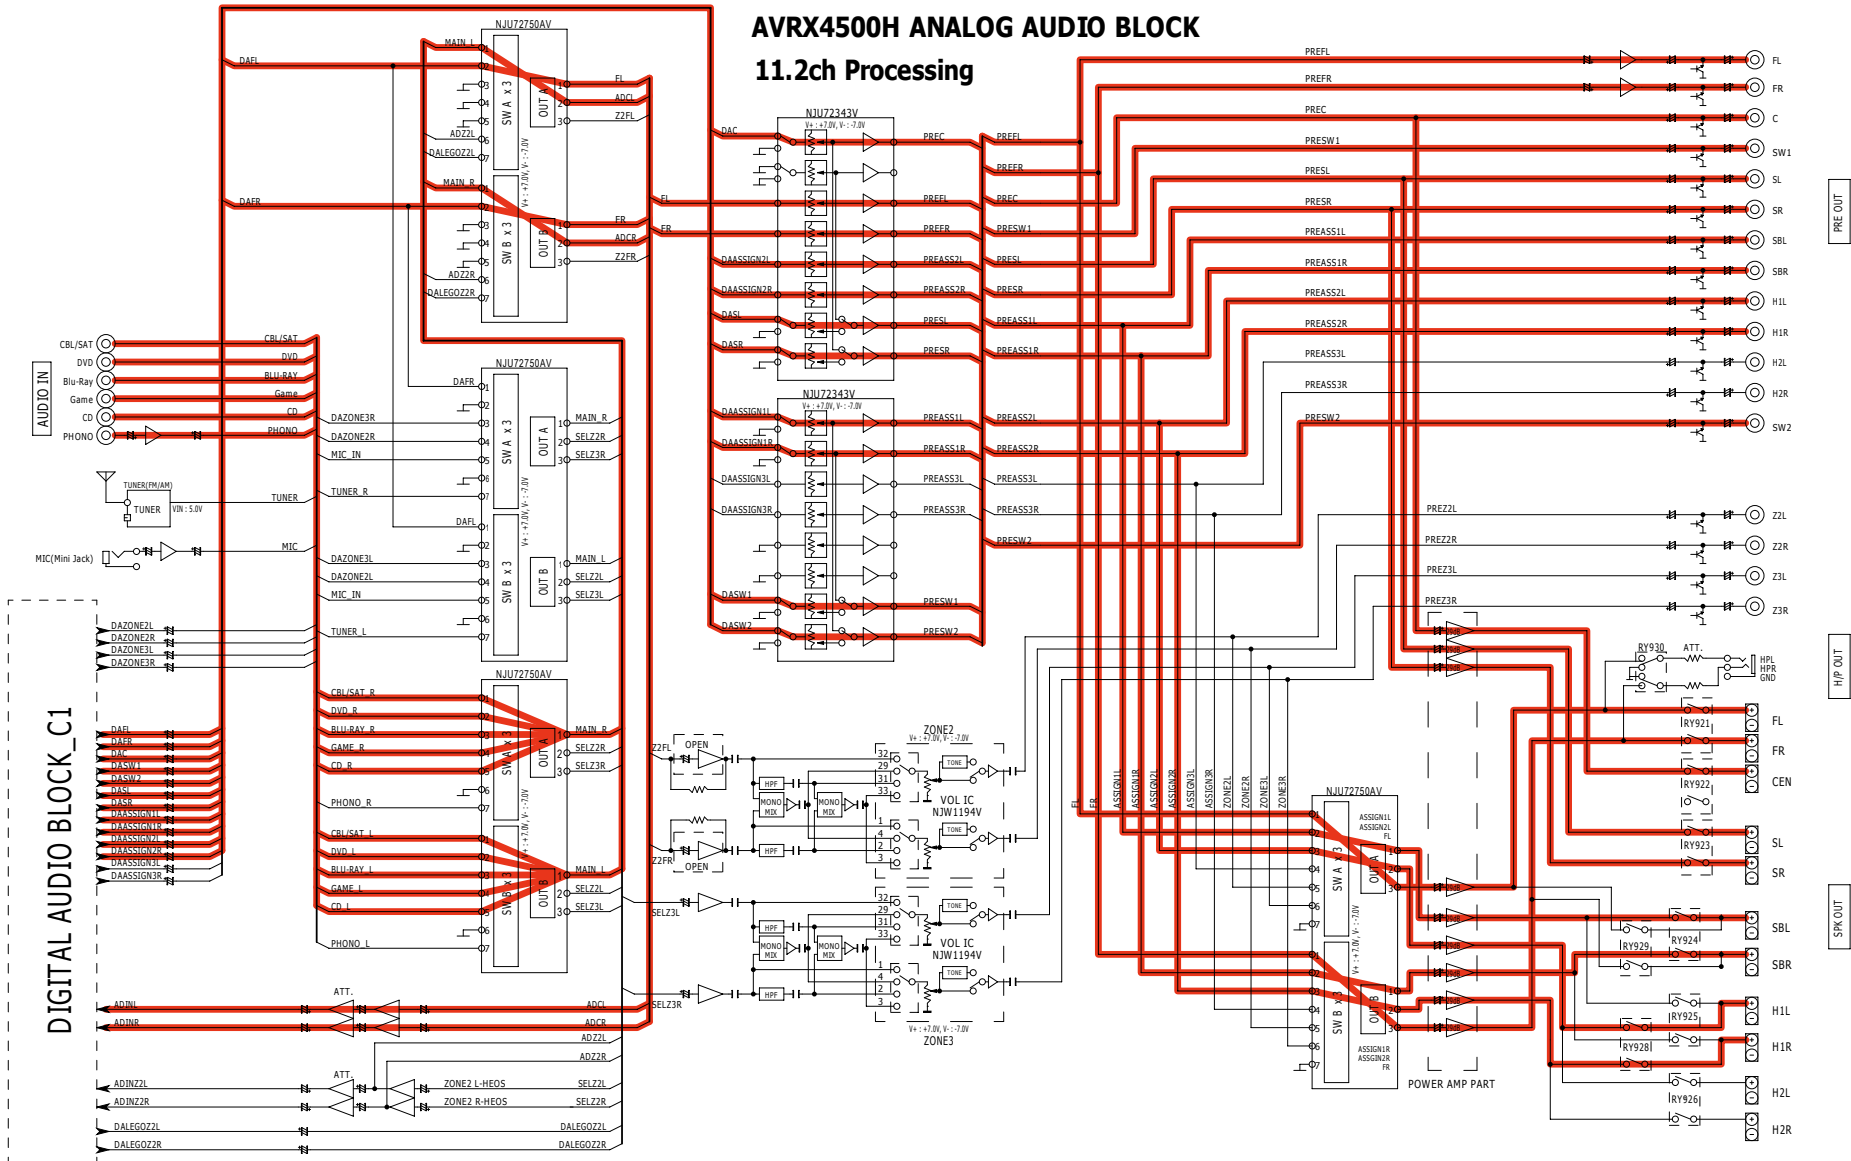


fig.A06b

# AVRX4500H DIGITAL AUDIO BLOCK(ADI)

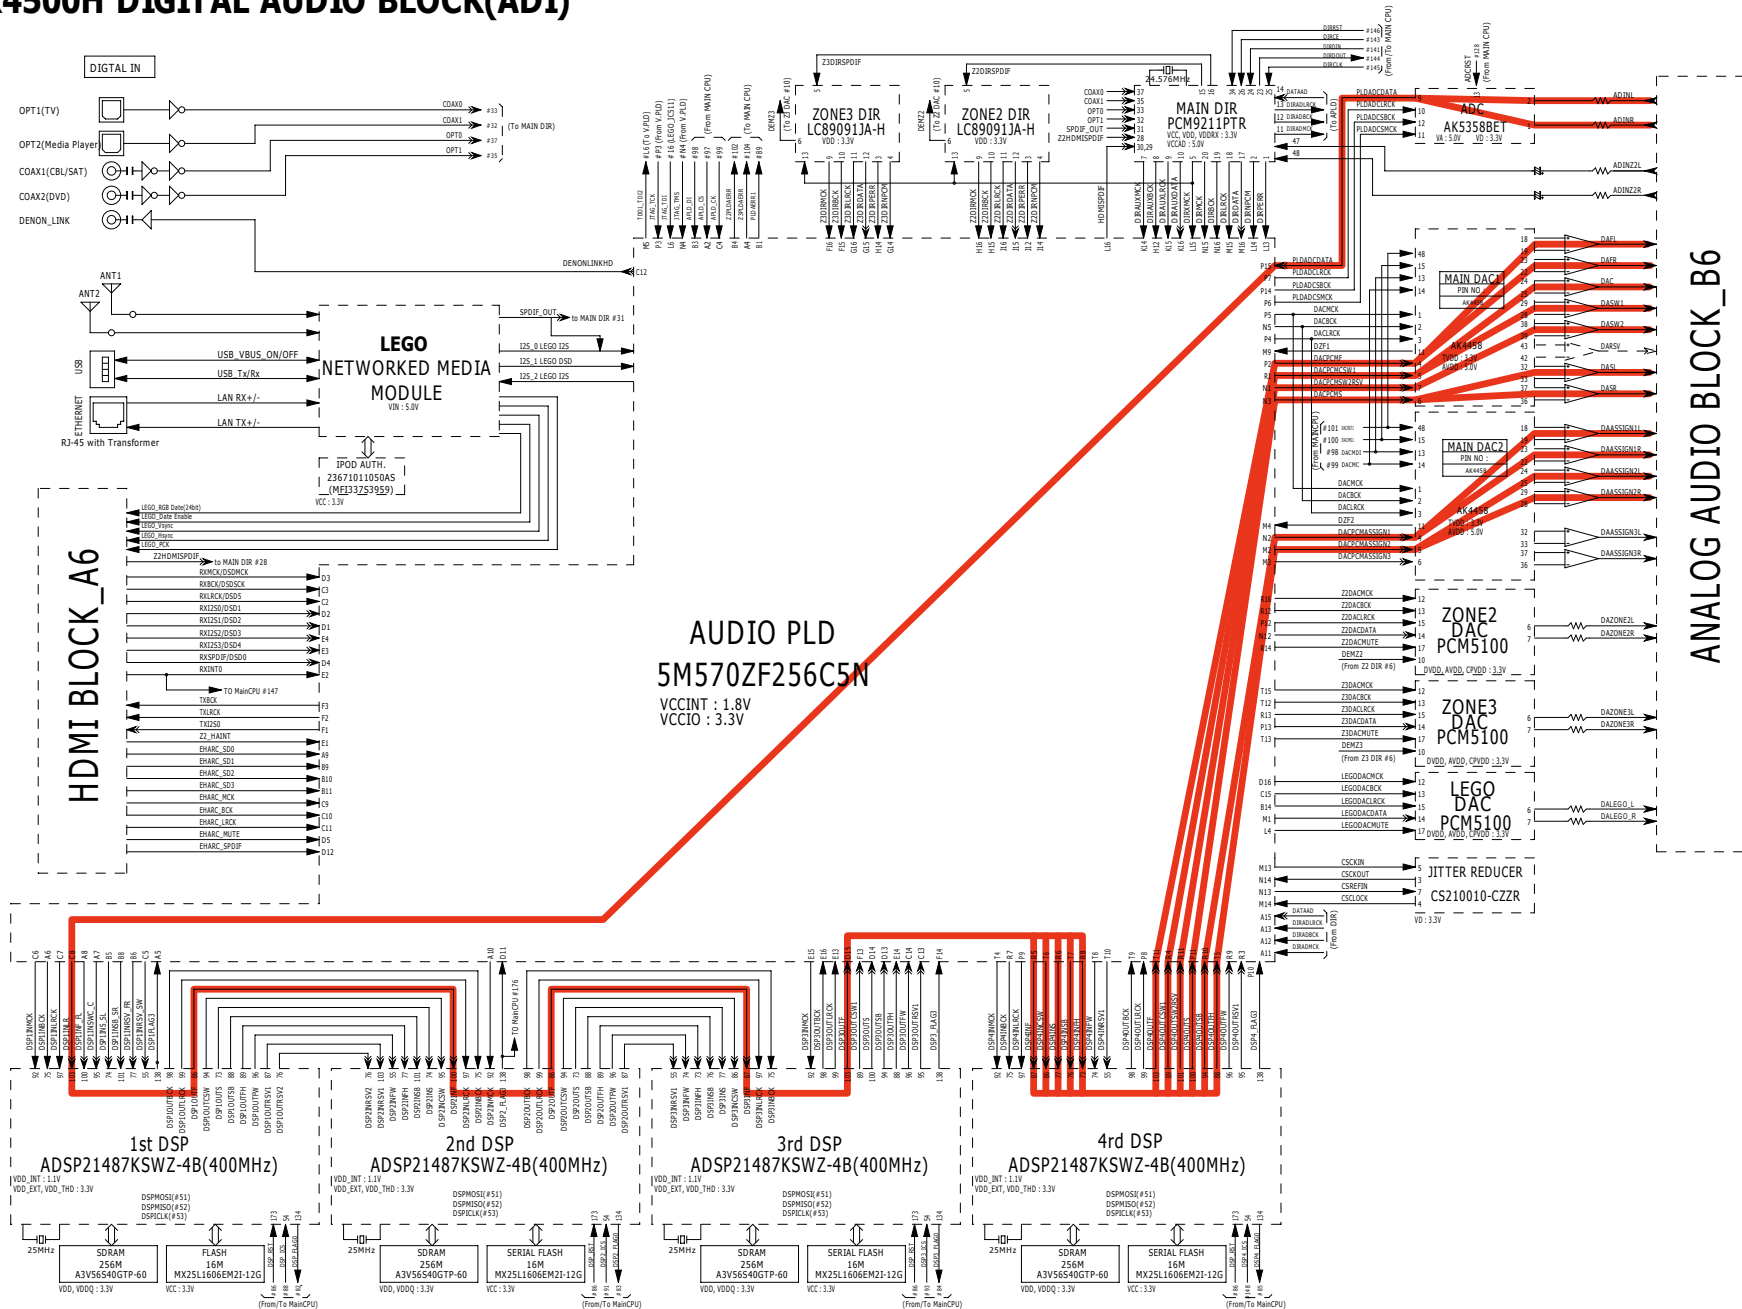
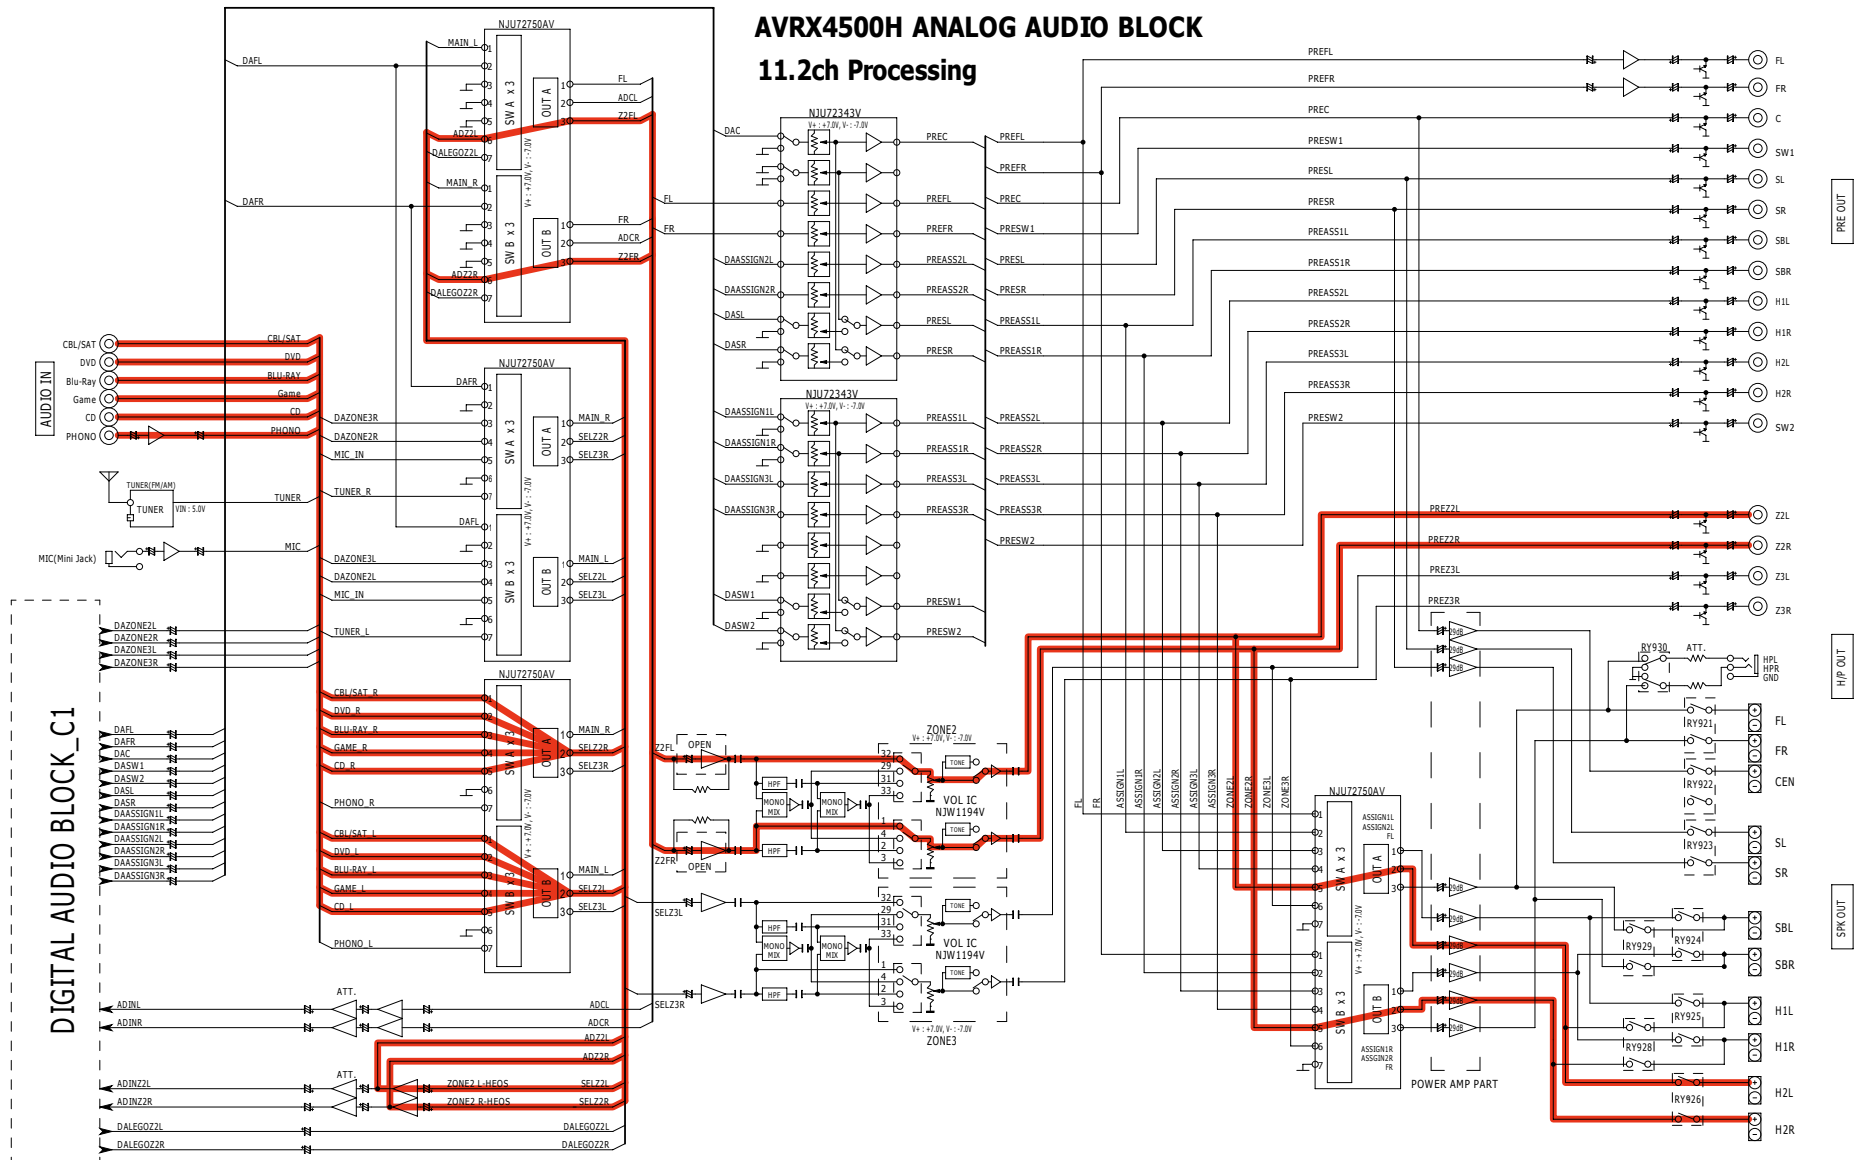
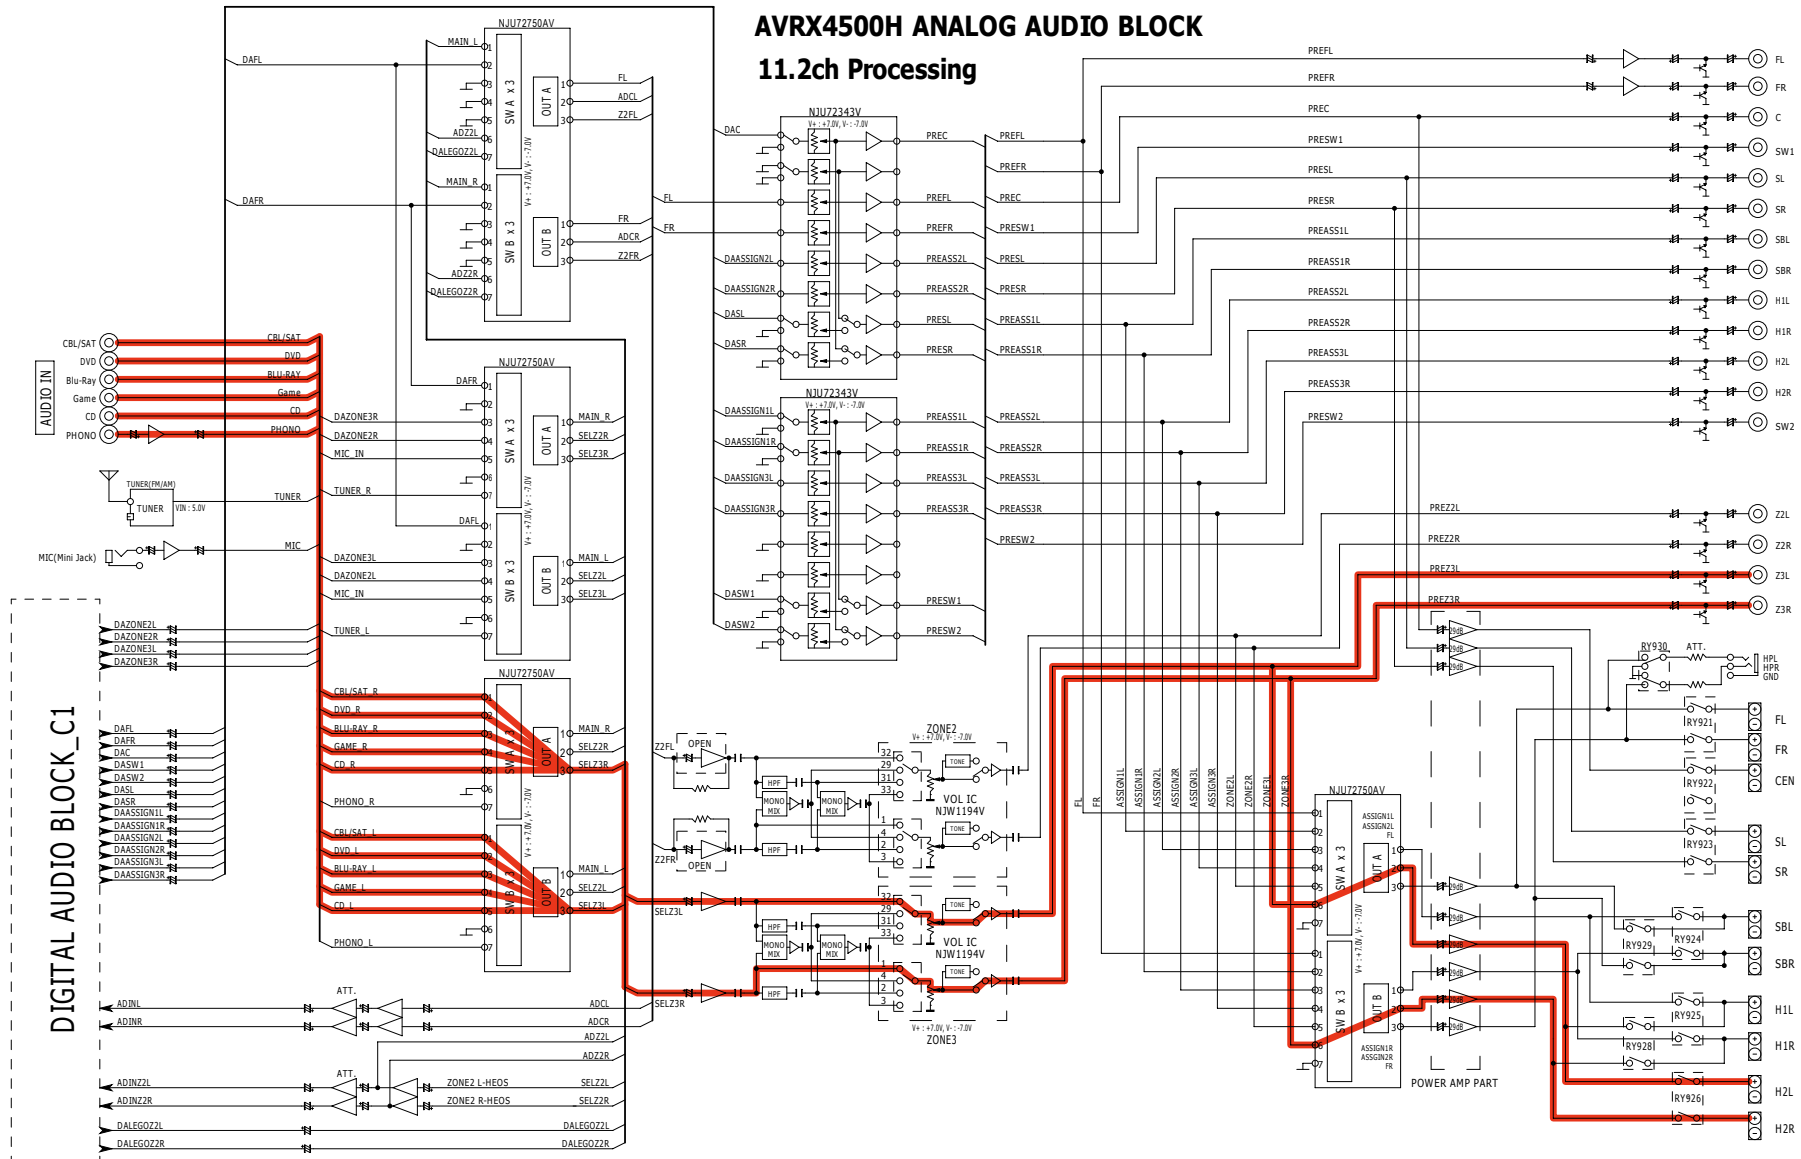


fig.A07



**fig.A08**



**fig.A09**



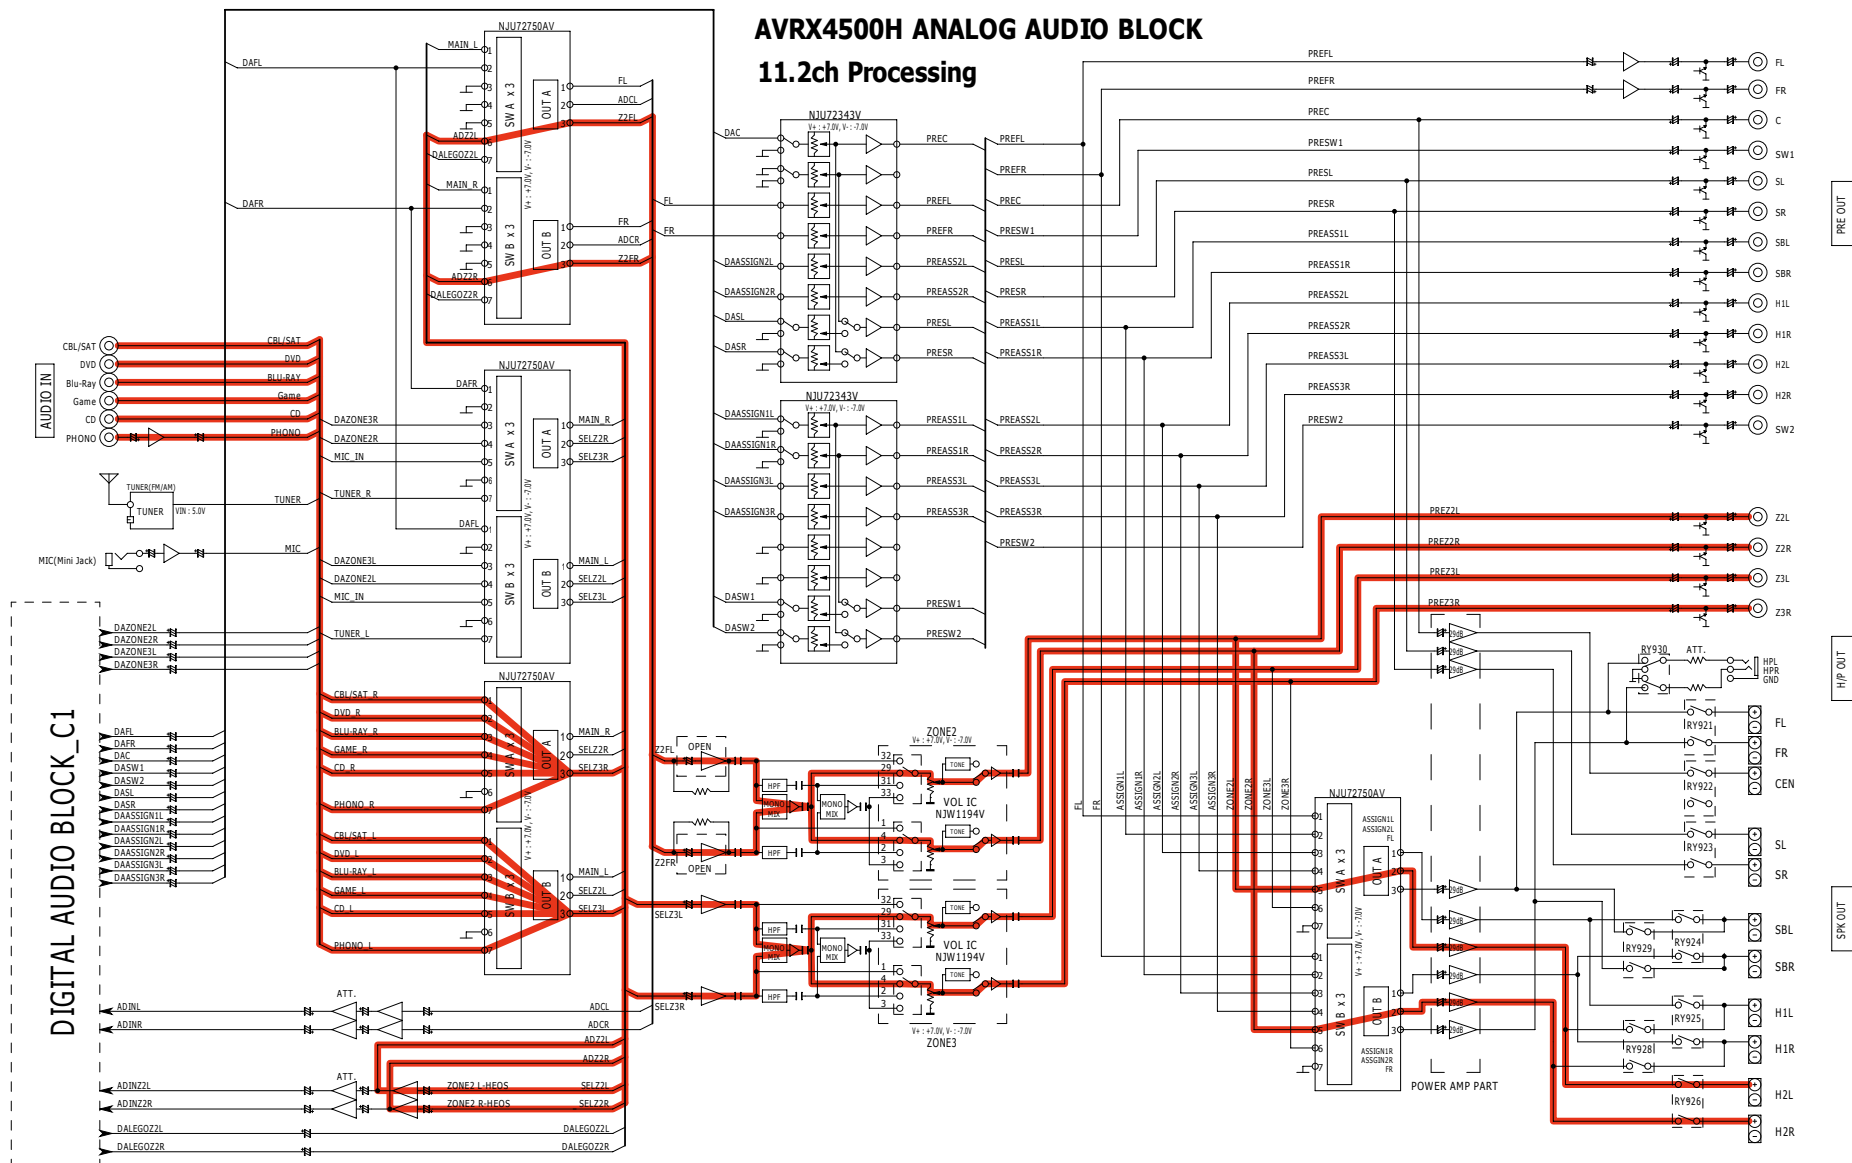


fig.A10a



## AVRX4500H DIGITAL AUDIO BLOCK(ADI)

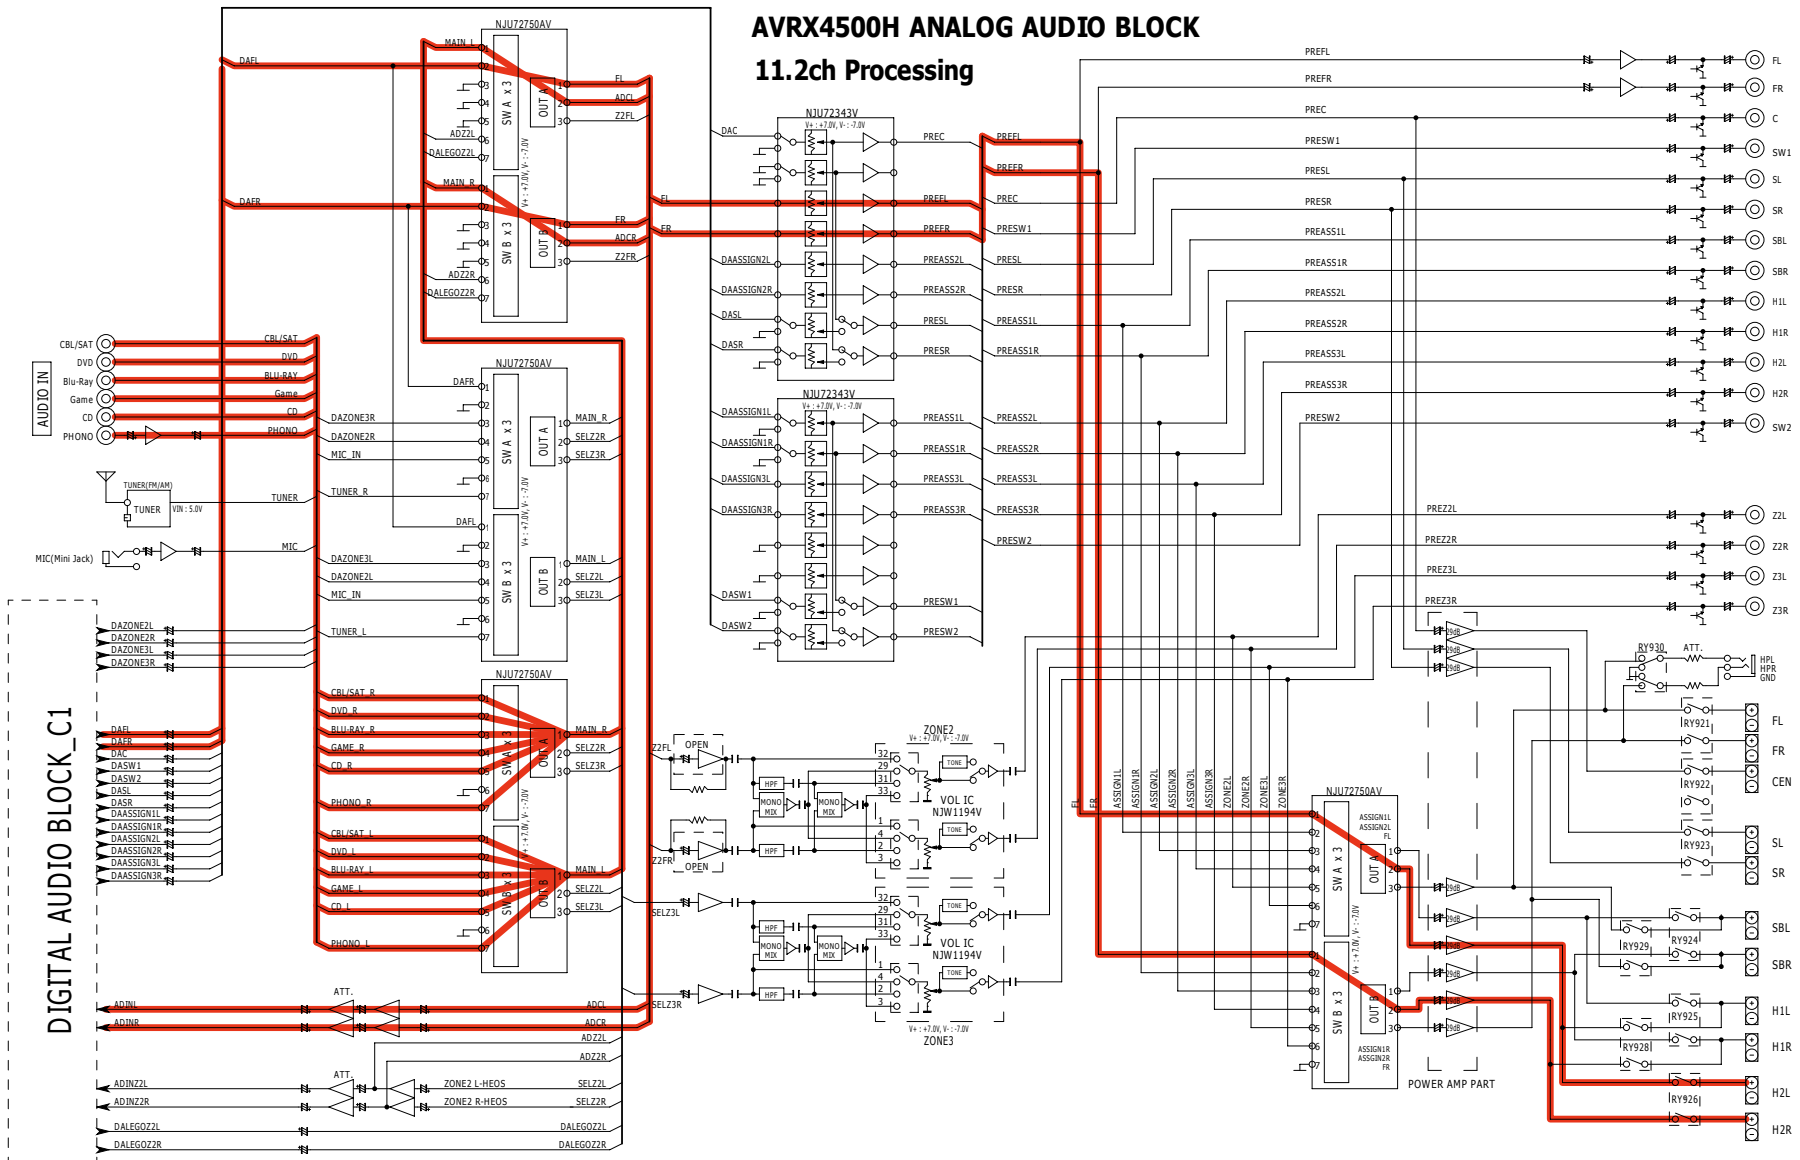

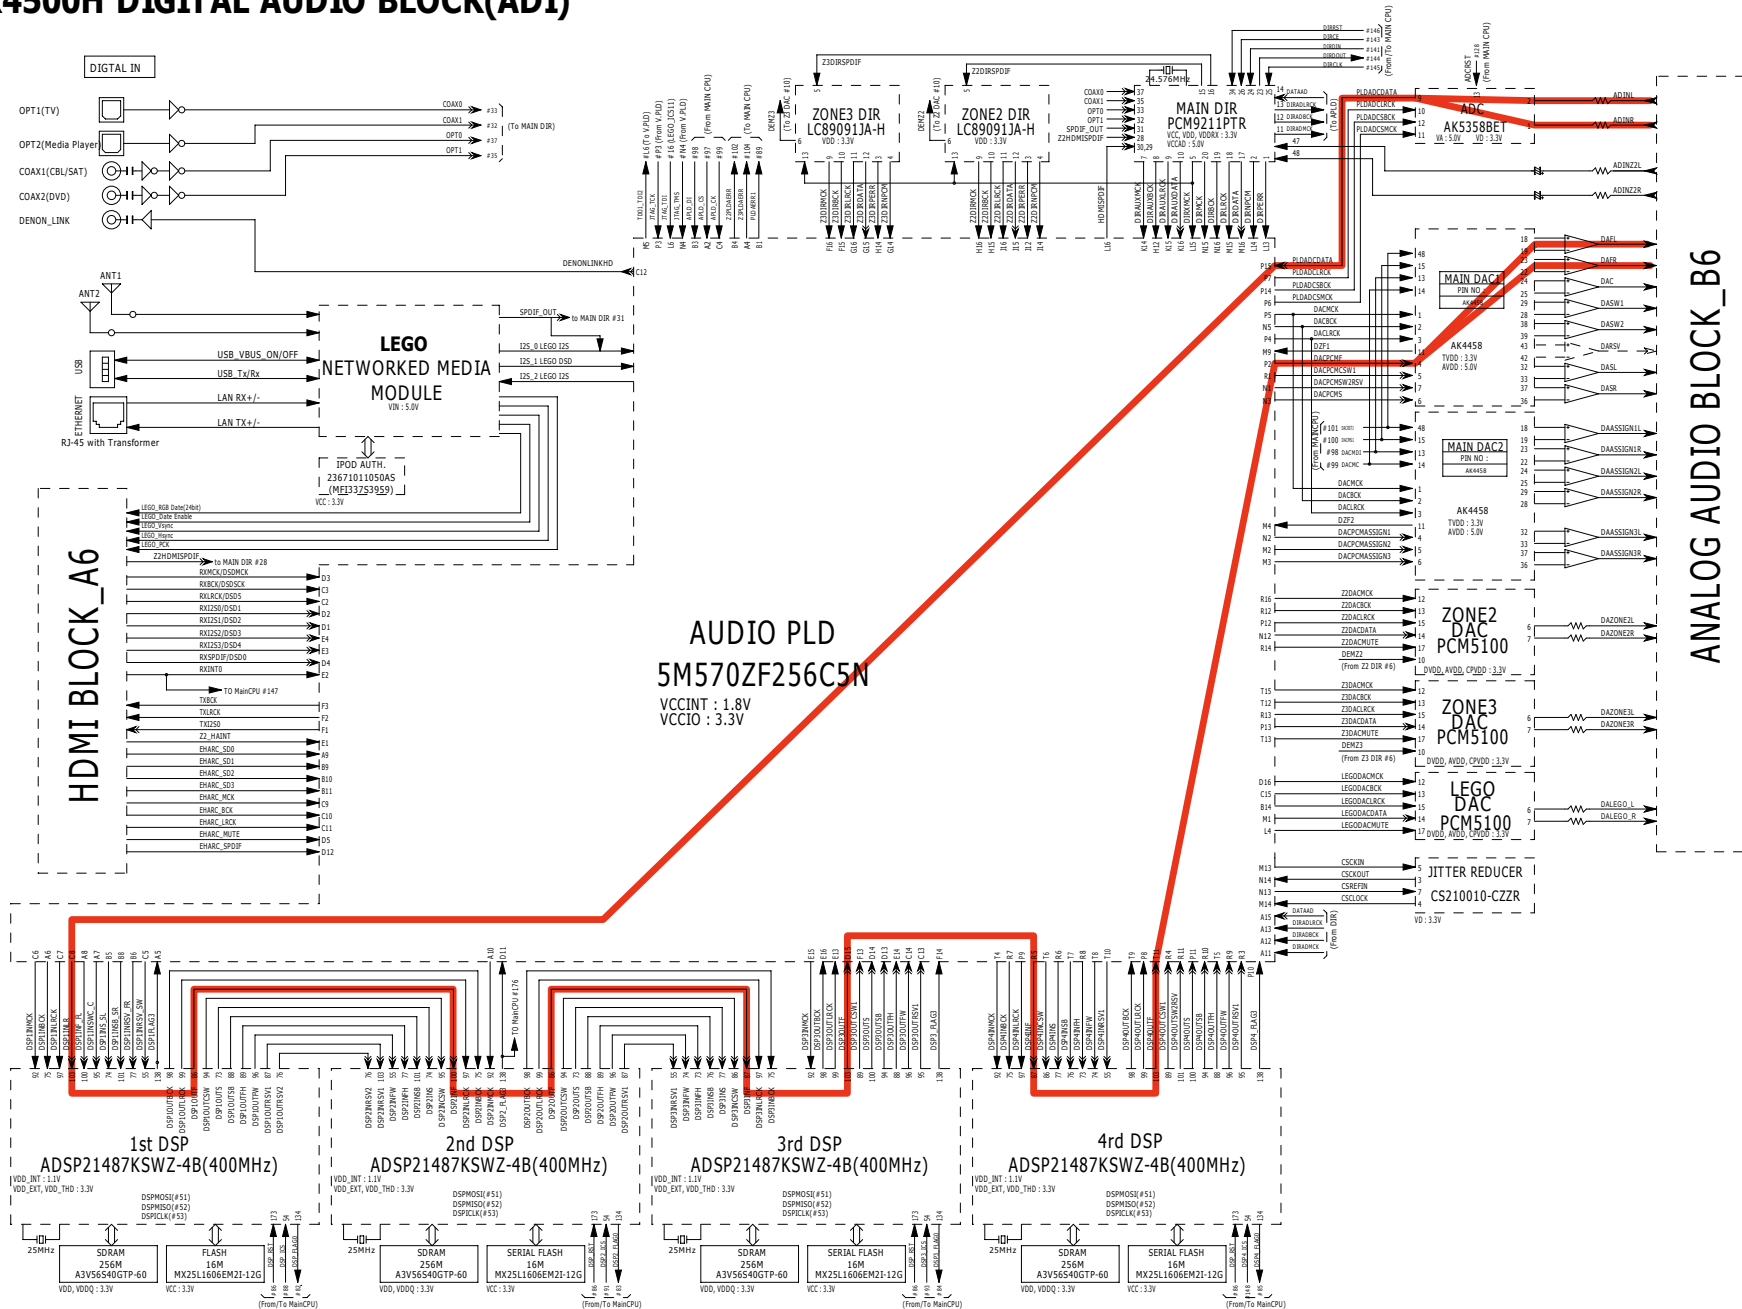






## AVRX4500H DIGITAL AUDIO BLOCK(ADI)



fig.A12a

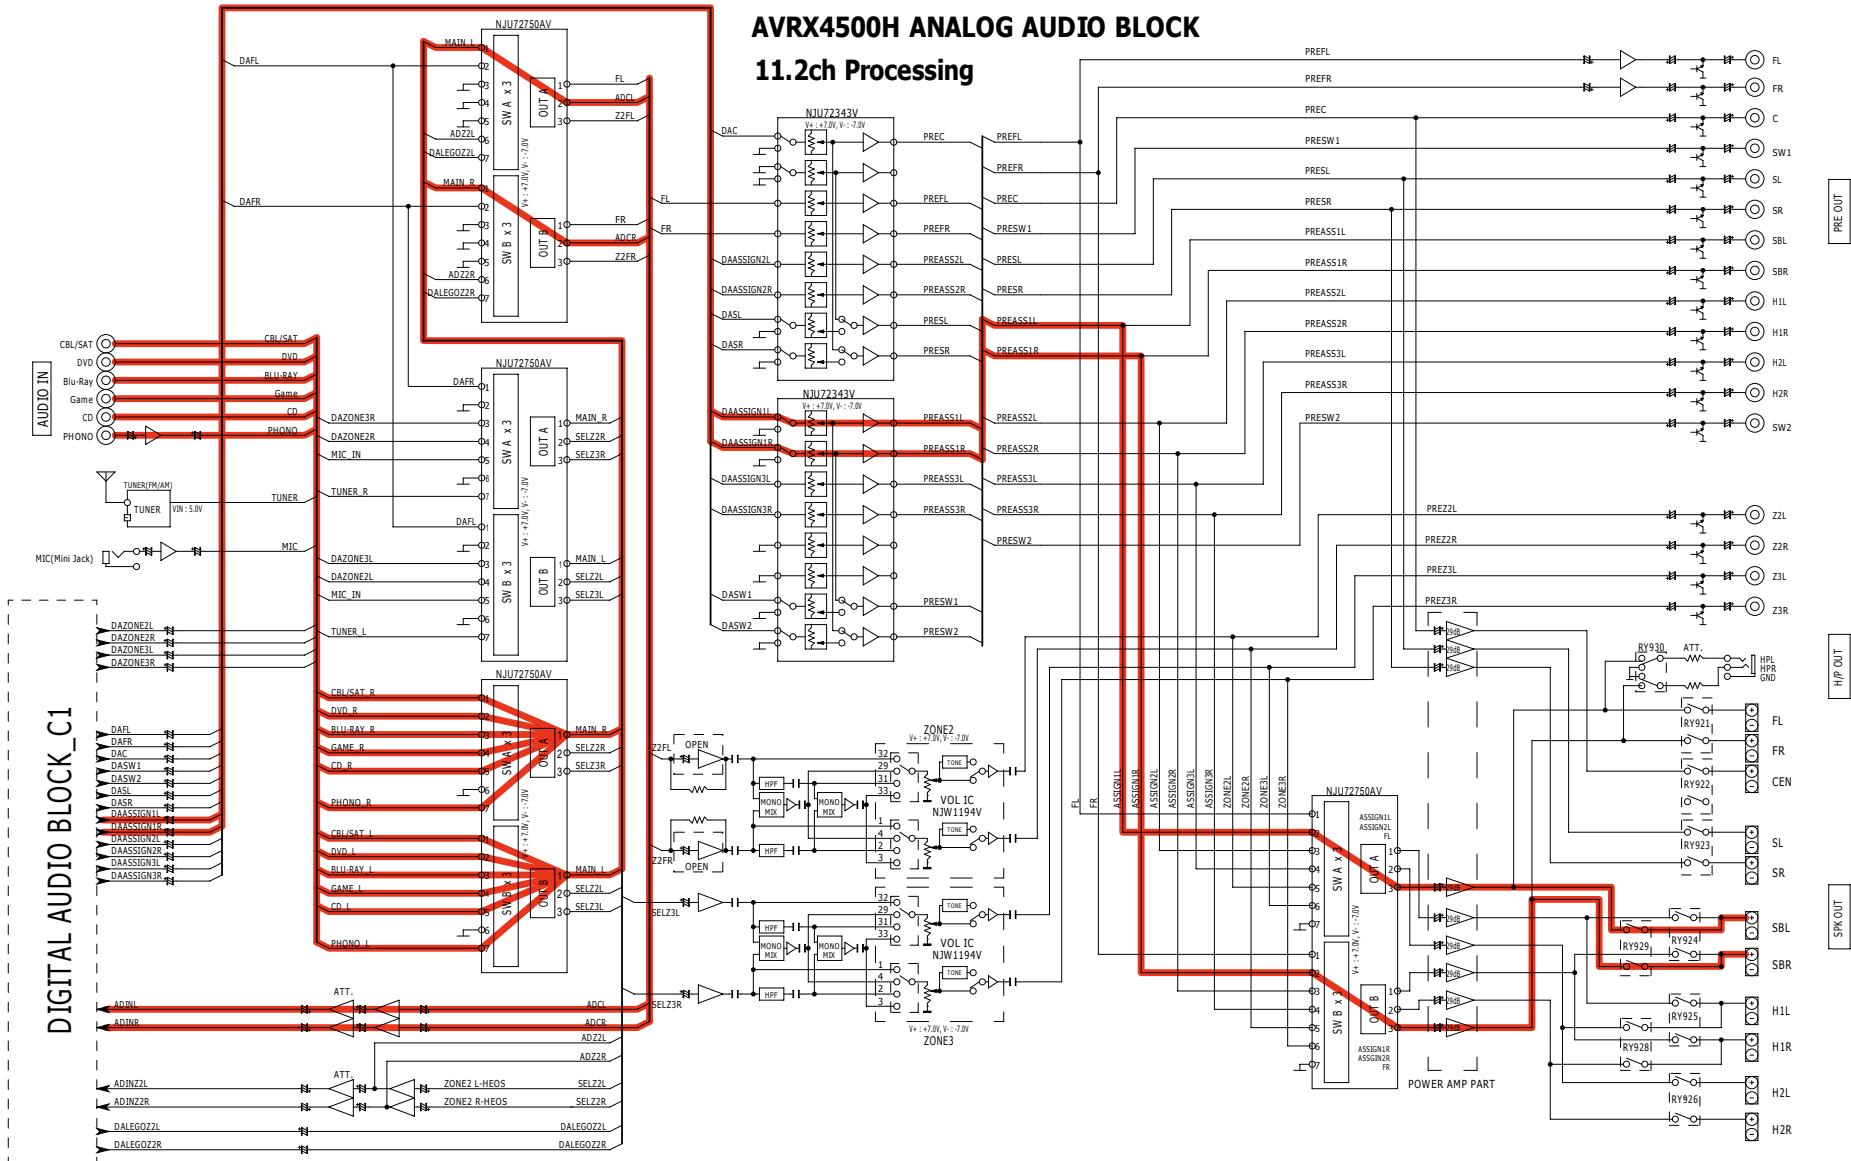

## AVRX4500H DIGITAL AUDIO BLOCK(ADI)



## AVRX4500H ANALOG VIDEO BLOCK



## AVRX4500H ANALOG VIDEO BLOCK




## Mechanical

## Repair Information

## Updating

fig.V02b

# AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK

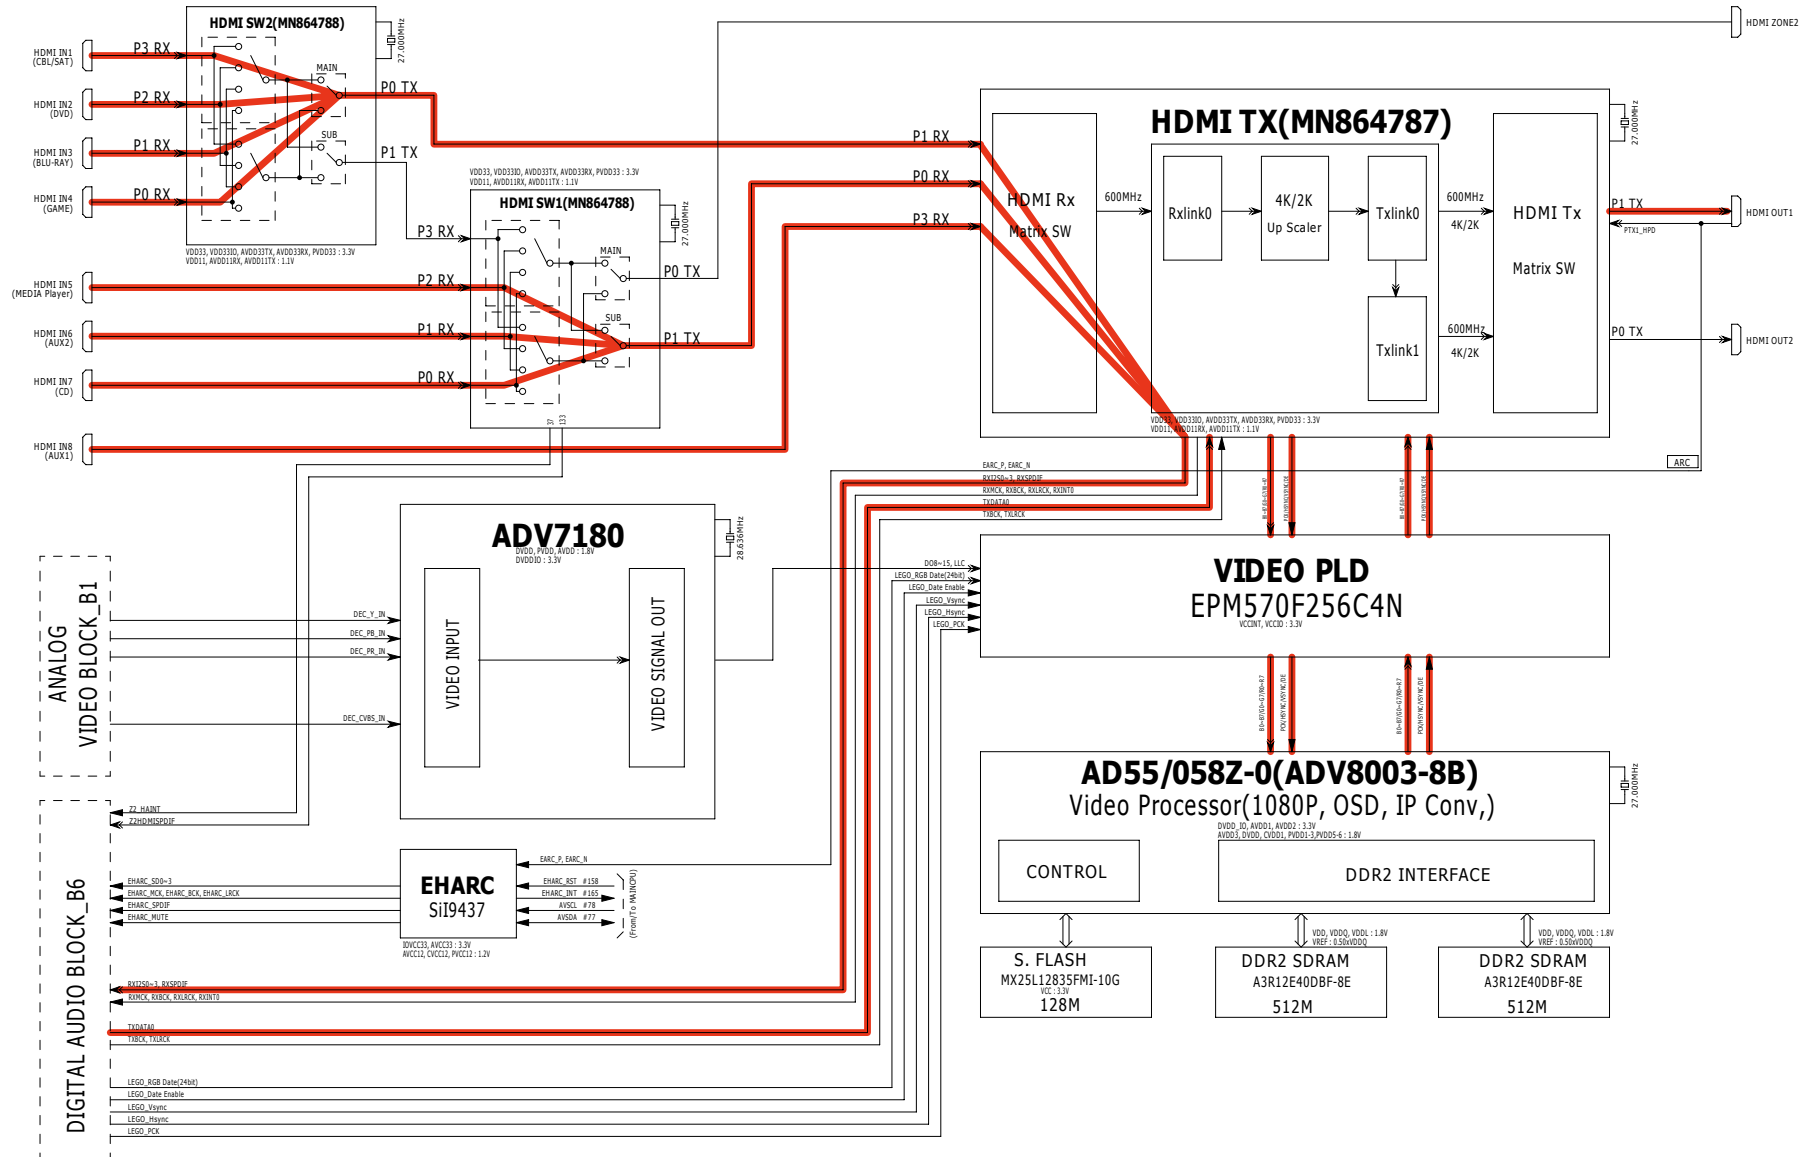

## AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK



## AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK




## Mechanical

## Repair Information

# Updating



fig.V05a

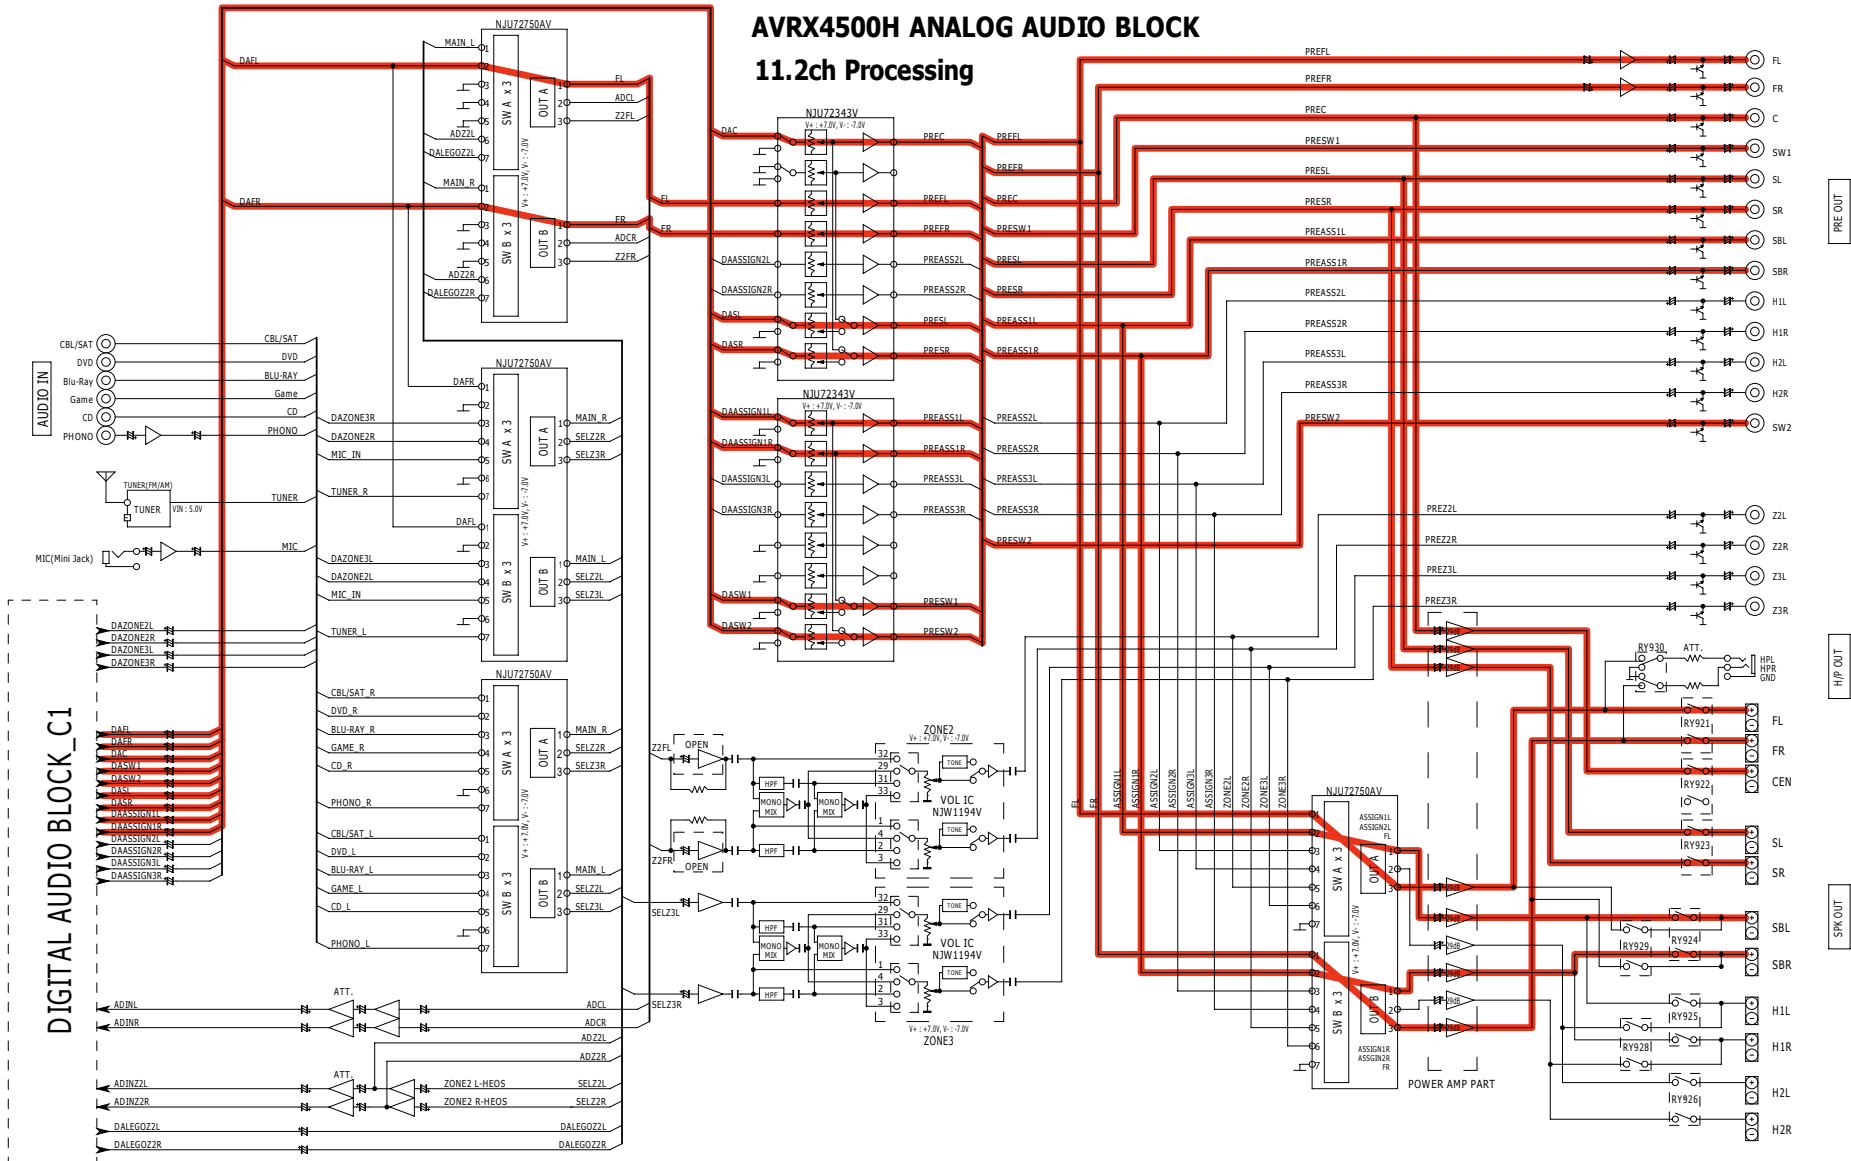


## AVRX4500H DIGITAL AUDIO BLOCK(ADI)



fig.V05c

# AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK

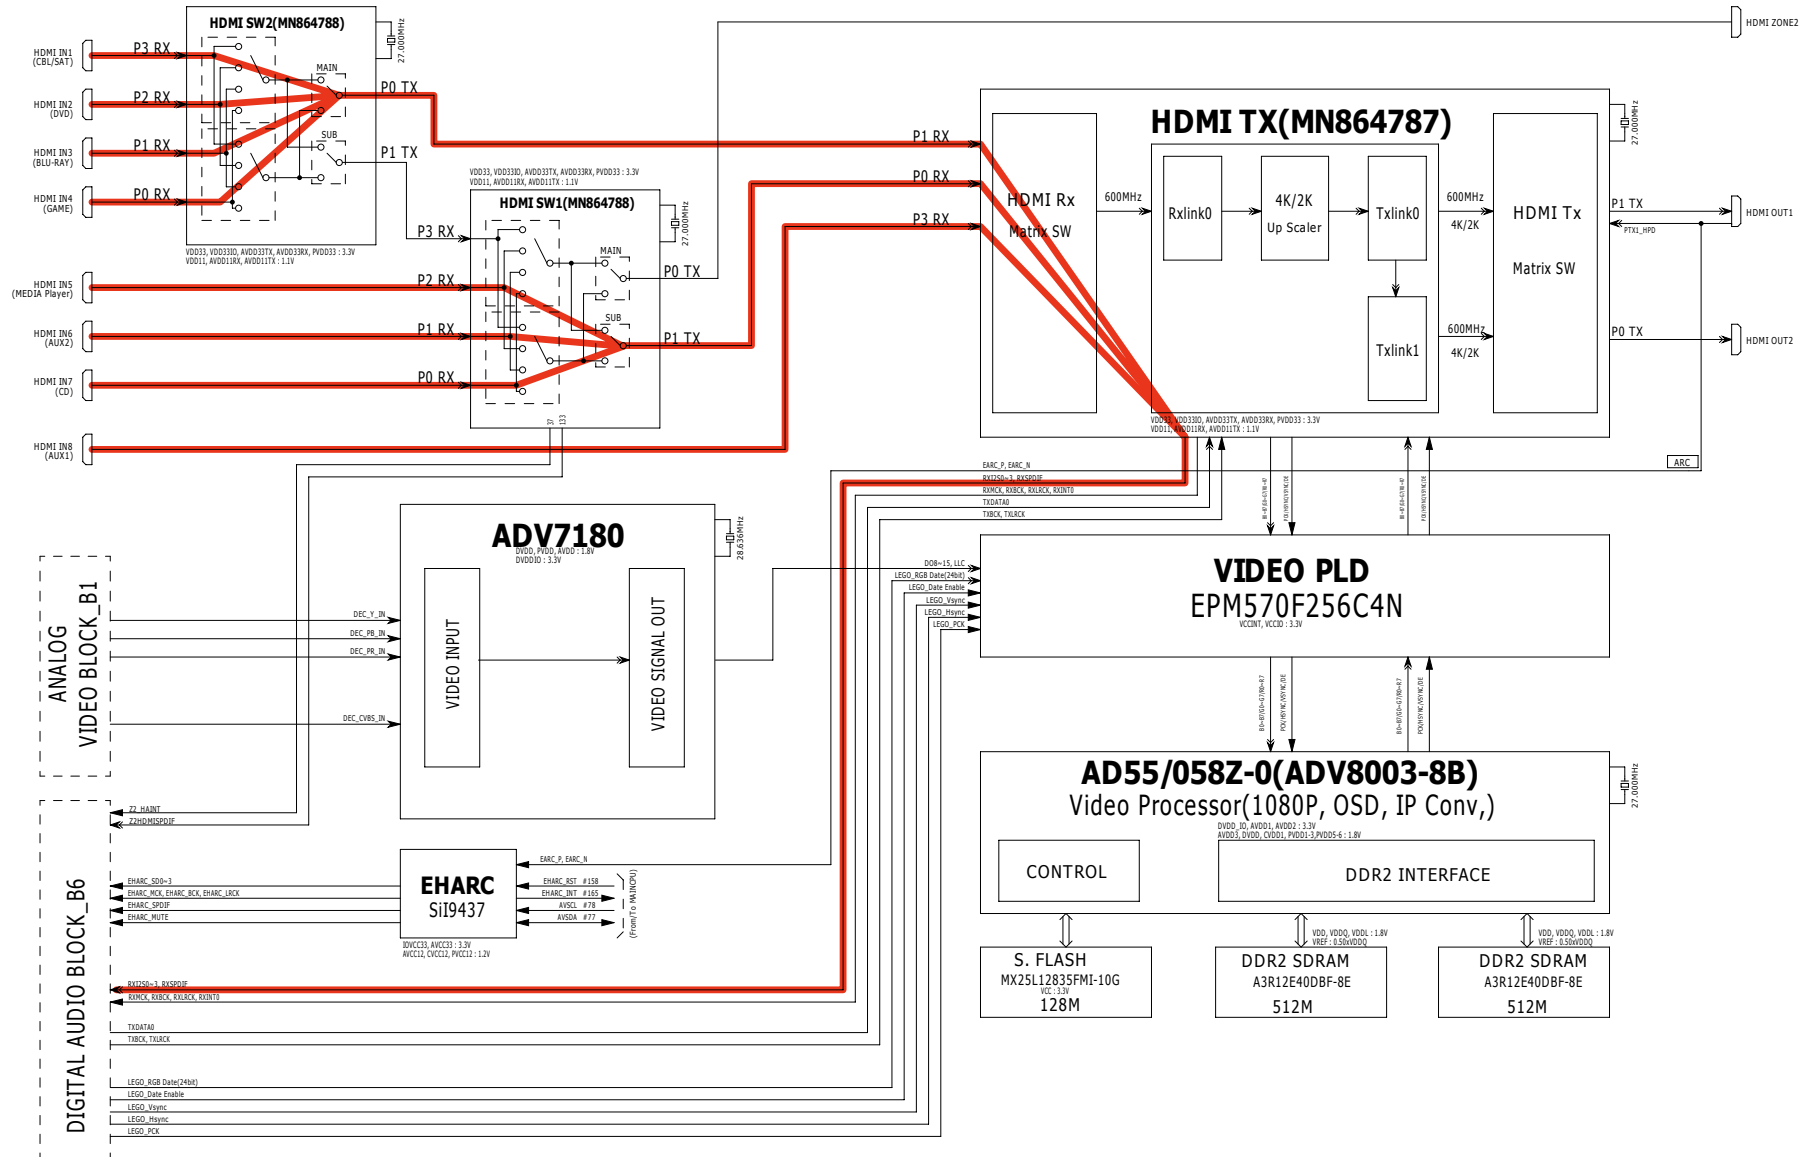

## AVRX4500H DIGITAL AUDIO BLOCK(ADI)



## AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK



## Mechanical

## Repair Information

## Updating

fig.V07

# AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK


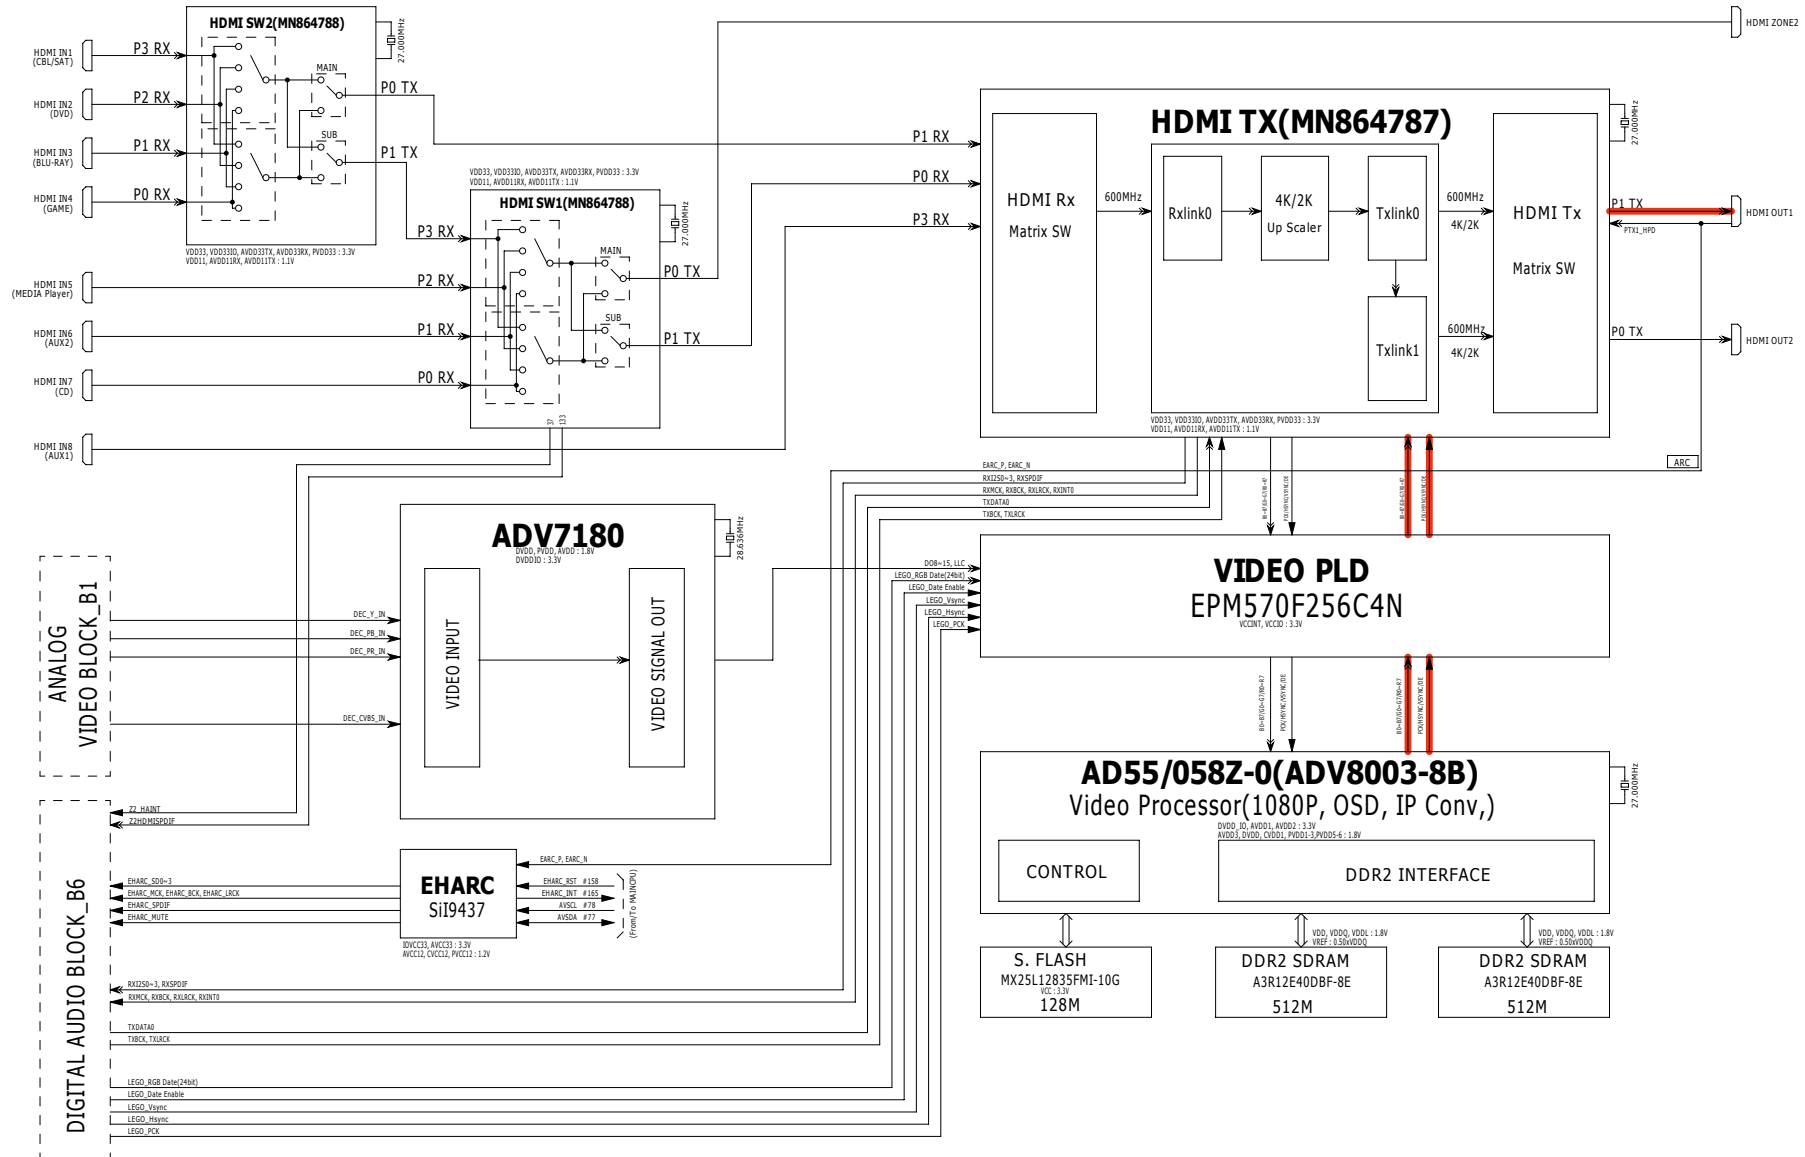


fig.V08

# AVRX4500H/SR7013/AV7705/SR6013 HDMI BLOCK



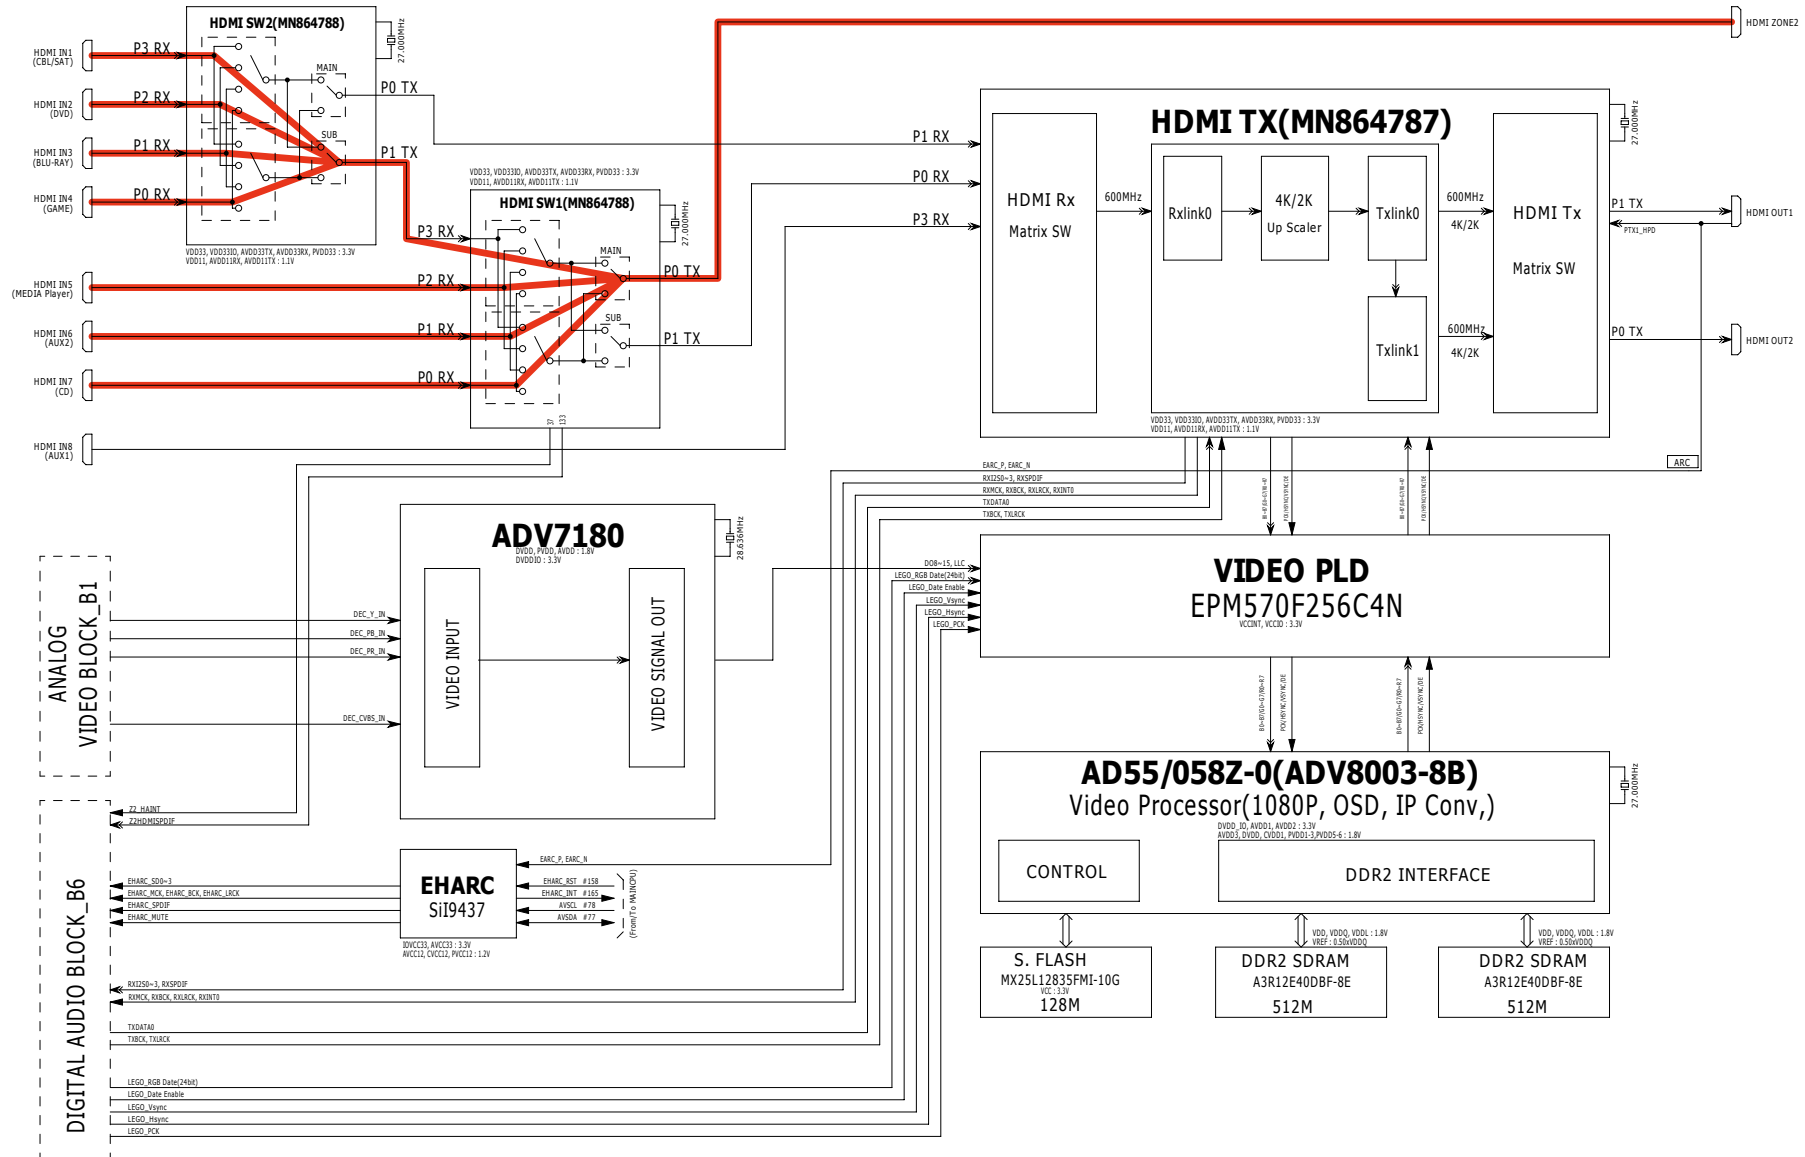

# JIG FOR SERVICING

Use the following jigs (extension cable kit) when repairing the PCBs.  
Order with your dealer for the jigs your dealer if necessary.

**CAUTION : Incorrect connections may cause malfunction.**


Connection of Jig for DIGITAL PCB

---Items to Be Prepared---




8U-110084S : EXTENSION UNIT KIT	:	1 Set
8U-110136S : EXTENSION UNIT KIT	:	1 Set
900639103810S : JIG 29P EXTENSION CABLE	:	1 Set
Insulation sheet (Not supplied)	:	3 sheet
Ground lead (Not supplied)	:	3 pc

-Proceeding-


(1) Remove the screws.

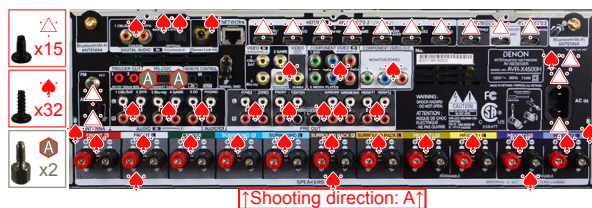

(2) Remove the connector PCB.

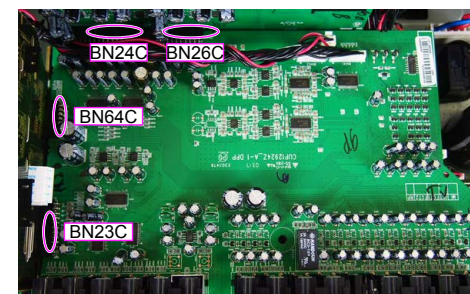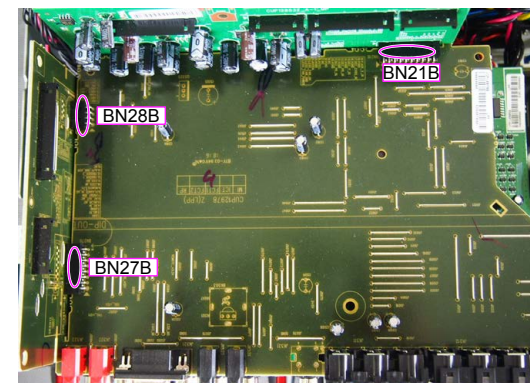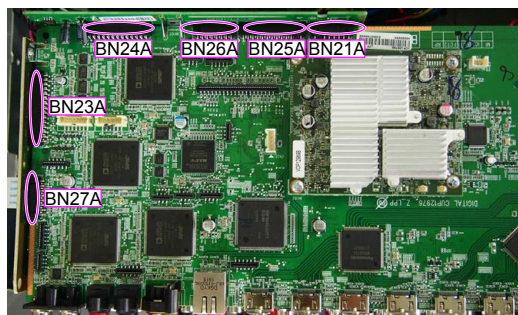

(3) Remove the DIGITAL PCB from the chassis and turn it over.  
Place an insulation sheet larger than the PCB underneath the DIGITAL PCB.  
※ Connect the earth of the PCB to the chassis using an earth wire, etc.

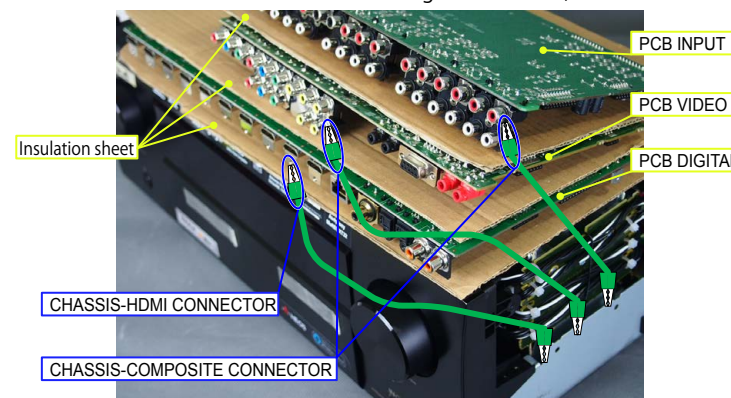

Before Servicing  
This Unit

Electrical


Mechanical

Repair Information

Updating



(4) Connect the expansion cables.

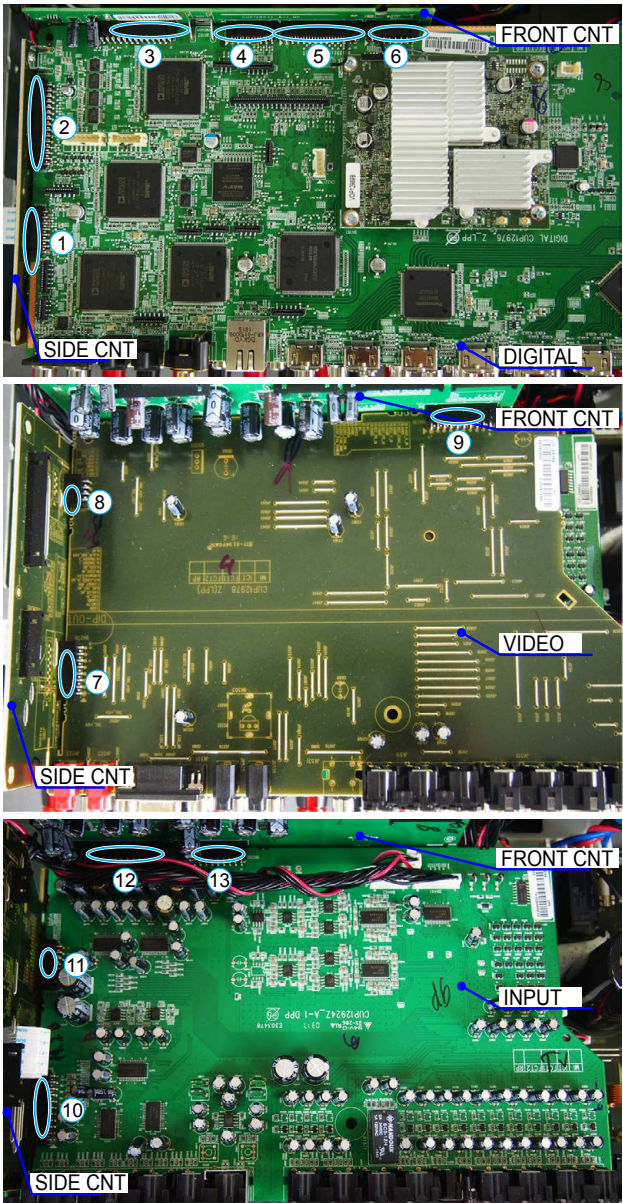

Board-to-Board Connections

No.	Pin	Ref. No.	PCB		Ref. No.	PCB
①	15pin	CN27A	SIDE CNT	↔	BN27A	DIGITAL
②	29pin	CN23A	SIDE CNT	↔	BN23A	DIGITAL
③	27pin	CN24A	FRONT CNT	↔	BN24A	DIGITAL
④	15pin	CN26A	FRONT CNT	↔	BN26A	DIGITAL
⑤	25pin	CN25A	FRONT CNT	↔	BN25A	DIGITAL
⑥	15pin	CN21A	FRONT CNT	↔	BN21A	DIGITAL
⑦	15pin	CN27B	SIDE CNT	↔	BN27B	VIDEO
⑧	7pin	CN28B	SIDE CNT	↔	BN28B	VIDEO
⑨	19pin	CN21B	FRONT CNT	↔	BN21B	VIDEO
⑩	21pin	CN23C	SIDE CNT	↔	BN23C	INPUT
⑪	13pin	CN64C	SIDE CNT	↔	BN64C	INPUT
⑫	27pin	CN24C	FRONT CNT	↔	BN24C	INPUT
⑬	21pin	CN26C	FRONT CNT	↔	BN26C	INPUT

# ADJUSTMENT

## Adjusting Idling Current

**NOTE** : Adjusting the idling current when "ECO Mode" is set may damage the Power AMP.

### 1. Preparation

- (1) Prepare a DC voltmeter.
- (2) Place the unit under normal usage conditions, away from highly ventilated areas such as next to an air conditioning machine or electric fan.  
The set requires an ambient temperature of 15°C to 30°C and standard humidity.
- (3) Settings of This Unit
  - POWER (Power source switch)      STANDBY
  - SPEAKER (Speaker terminal)      No load(Do not connect equipment such as speakers or dummy resistors.)

### 2. Adjustment Procedure


- (1) Make sure that "ECO Mode" is off.
  - Press the "SETUP" button on the remote control to display the GUI menu.
  - Press the cursor button to select "General" → "ECO" → "Mode" → "Off".
- (2) Remove the top cover and turn **VR714** (ALL Channel) of the AMP PCB counterclockwise(↺) as far as possible.
- (3) Connect the DC Voltmeter to the test points.

FRONT-Lch	: CN715	: VR714
FRONT-Rch	: CN725	: VR724
CENTER ch	: CN735	: VR734
SURROUND-Lch	: CN745	: VR744
SURROUND-Rch	: CN755	: VR754
ASSIGN-2Rch	: CN765	: VR764
ASSIGN-1Rch	: CN775	: VR774
ASSIGN-2Lch	: CN785	: VR784
ASSIGN-1Lch	: CN795	: VR794
- (4) Connect the power cord to an outlet. Next, press the power button to turn on the power.
- (5) Set this unit as follows.

MASTER VOLUME	: "---" (↺ min.) : turn counterclockwise to the lowest position.
SPEAKER (Speaker terminal)	: No load

(Do not connect equipment such as speakers or dummy resistors.)

MODE	: MCH STEREO
FUNCTION	: DVD
- (6) Turn **VR741** clockwise (↻) and adjust the voltage of the test point to "**8.0mV ± 0.5mV DC**" within 2 minutes.
- (7) Check whether the voltage is within the range "**8.0mV ± 2mV DC**" 10 minutes after adjustment.
- (8) Adjust the variable resistance of each channel using the same method.

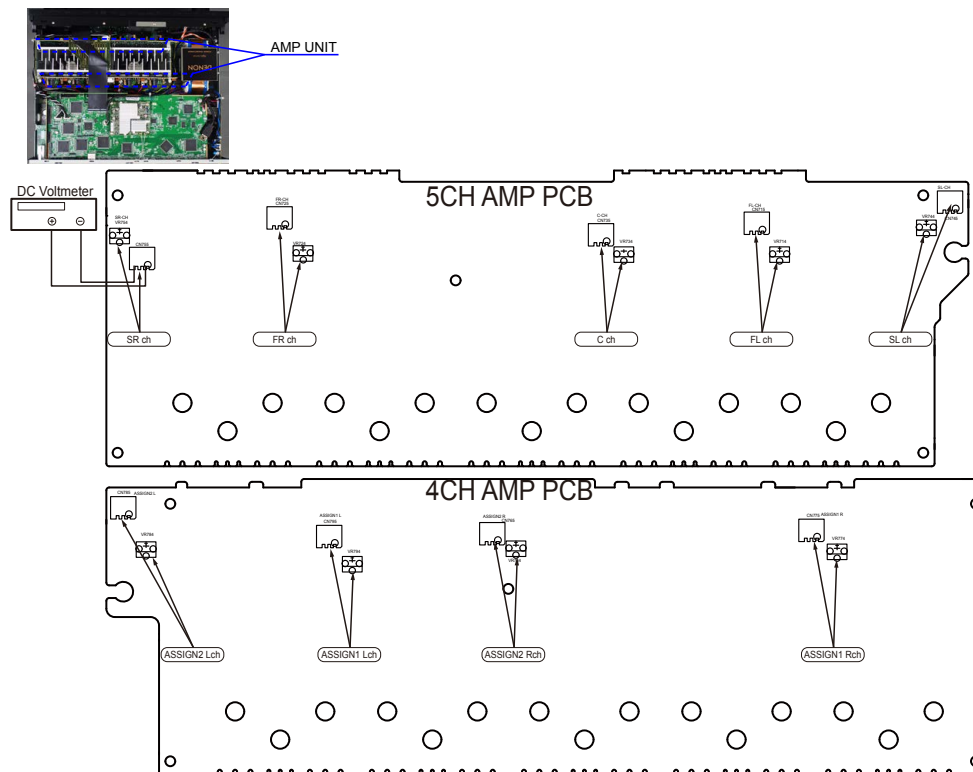

## PROCEDURE AFTER REPLACING THE PCB.

## PROCEDURE AFTER REPLACING THE U-COM, ETC.

## FIRMWARE UPDATE PROCEDURE

1. Items necessary for update
2. Update preparation with a USB flash drive
3. Update method when the DIGITAL PCB or network module is replaced (Using a USB flash drive)
4. Update Method for Service Region Settings
5. Normal Firmware Update Method from USB Flash Drive
6. Normal Firmware Update Method from OTA
7. About the error codes

## PROCEDURE AFTER REPLACING THE PCB.


The procedure after replacing the printed circuit boards is as follows.

(1) Change the resistor for setting the region.

Model Area	DIGITAL PCB	
	R1589	R1590
North America (E3)	0	OPEN
Europe (E2)	OPEN	0
China (E1C)	10k	10k
Japan (JP)	22k	10k

See the PCB below.

(2) Be sure to replace the software with the latest version.

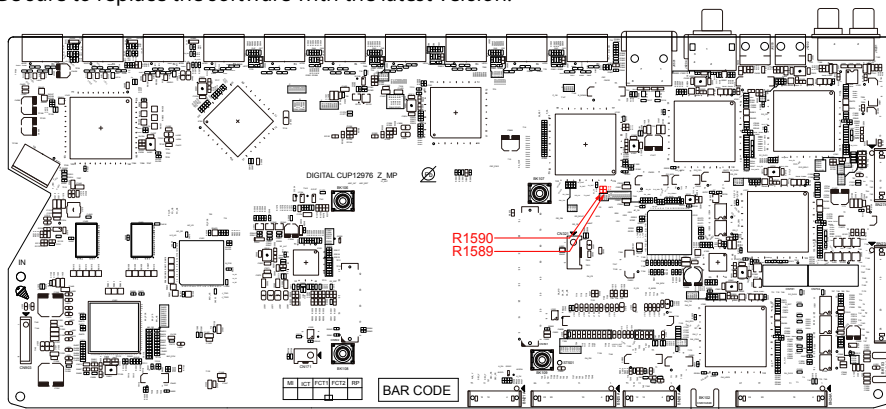

## PROCEDURE AFTER REPLACING THE U-COM, ETC.

The procedure after replacing the u-COM (microprocessor), flash ROM, etc. is as follows.

Implement the update method when the DIGITAL PCB or network module is replaced.

PCB Name	Ref. No.	Description	Procedure after Replacement	Remark
DIGITAL	IC151	R5F564MJCDFC	B	SOFTWARE : Main
DIGITAL	IC254 IC264 IC273 IC283	MX25L1606EM2I-12G	B	SOFTWARE : DSP1/2/3/4 ROM
DIGITAL	IC404	MX25L12835FMI-10G 128M	B	SOFTWARE : GUI ROM
DIGITAL	IC421	EPM570F256C4N	C	SOFTWARE : VIDEO PLD
DIGITAL	IC221	5M570ZF256C5N	C	SOFTWARE : AUDIO PLD
MODULE	C46	NETWORK MODULE	D	SOFTWARE : Network

Procedure after Replacement

**A :** The software has been written. The software is not written at the time of replacement.

**B :** The software has been written. The software may need to be rewritten by version updates. Check the version.

**C :** The software has not been written. The software needs to be written after replacement.

See "[FIRMWARE UPDATE PROCEDURE](#)" for information on writing the software.

**D :** The software has been written. Be sure to rewrite with the latest software for your service region.

See "[3. Update method when the DIGITAL PCB or network module is replaced \(Using a USB flash drive\)](#)" for information on rewriting the software.

# FIRMWARE UPDATE PROCEDURE

## 1. Items necessary for update

Items necessary for update are as follows.

Update Type	Needed Part for Update	Requirement	Offered / not Offered		
			Standard Service Equipment Not offered by D&M	Purchase from D&M Article code	Download from SDI
Via USB	USB flash drive (USB 2.0 : Min 1GB) • We recommend a USB memory device that has an LED installed.	Formatting FAT16 or FAT 32	X	-	"Table 1" or "Table 2"
Via OTA	Internet Connection by Broadband Circuit	-	X	-	-
	Modem	-	X	-	-
	Router	-	X	-	-
	Ethernet cable (CAT-5 or greater is recommended)	-	X	-	-

**Table 1**

Update download file when the DIGITAL PCB or network module is replaced

Model Name	Model Area	Download from SDI
AVR-X4500H	ALL	avr_40.prod.update.factory.xxxx.zip

**Table 2**

Update download file when the firmware is updated (Two files, "HW component" and "LEGO component")

Model Name	Model Area	Download from SDI		
		For HW component		For LEGO component
AVR-X4500HE3	North America (E3)	Product ID : 000101090100	DPMS_AVR-X4500HALL_LEGO_xxxx.zip	heos_40.prod_x.xxx.xx.zip
AVR-X4500HE2	Europe (E2)	Product ID : 000101090200		
AVR-X4500HE1C	China (E1C)	Product ID : 000101090500		
AVR-X4500HJP	Japan (JP)	Product ID : 000101090400		

## 2. Update preparation with a USB flash drive

You can update the firmware by downloading the latest version with USB flash drive.

### 2.1. Connecting to the USB flash drive

(1) Preparation


- Windows PC
- USB flash drive format : Prepare a USB flash drive formatted in FAT16 or FAT32.  
※We recommend a USB flash drive that has an LED installed.

NOTE :

- Use a memory that supports USB2.0.
- Do not run the USB flash drive through a hub.
- Do not connect a computer to the USB port of this unit using a USB cable.
- Do not use an extension cable when connecting the USB flash drive.
- Save the update file on a blank USB flash drive for use.
- If a USB flash drive cannot be updated, replace it with a different USB flash drive and perform the update again.

### 2.2. Unzipping the Downloaded File

Unzip the downloaded file on your computer.

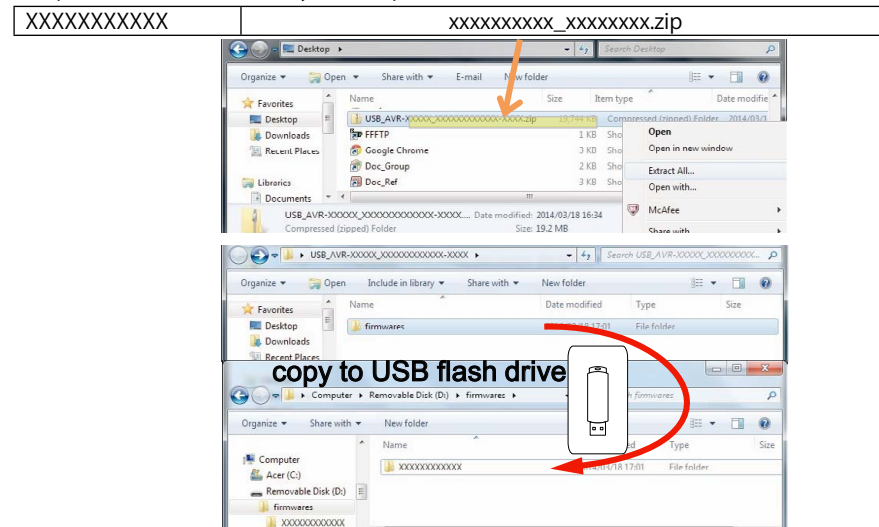

There are folders or files after unzipping.

Copy these folders or files onto the USB flash drive.

The folders or files must be placed in the root directory of the USB flash drive.



### 3. Update method when the DIGITAL PCB or network module is replaced (Using a USB flash drive)

#### 3.1. File structure on USB flash drive

DIGITAL PCB or network module is replaced onto the USB flash drive in the following structure.


After unzipping the files, store them in the root of the same USB flash drive.

Model Area	Download from SDI
ALL	avr_40.prod.update.factory.xxxx.zip

USB flash drive root

+ avr\_40.prod.update.factory  
+ xxxxxxzz.ota-download  
+ heos\_40.prod.update.factory

xxxxxx : Model name  
zz : Region

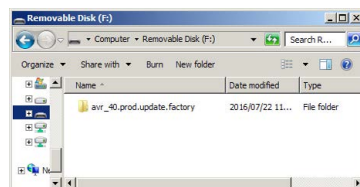

#### 3.2. Start the update.

NOTE :


- Remove the LAN cable from this unit when updating.  
(Do not connect to a wired or wireless network.)
- The GUI menu setting details and image quality adjustment setting details are initialized when Firmware Factory Restore is performed. Therefore, take a note of the setting details beforehand and reconfigure the settings after update.

- Press the power button to turn on the power.
- Wait for this unit to start up.
- Set the input source to HEOS Music.  
Check that the display is as shown below.

L1	▶TuneIn Internet Radio	or	No Network Connection
L2	HEOS Favorites		

L1 : Content of the display is scrolled.

- Insert the USB flash drive into the USB port.

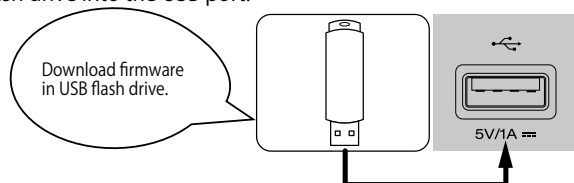

- USB Update starts automatically.  
The Standby LED lights red.

Display during USB update

L1	Please wait▶▶▶▶▶
L2	
L1	Updating▶▶▶▶▶ **%
L2	**min
L1	Update Completed

It takes a maximum of approximately 25 minutes for update to complete.

- The unit restarts when update is complete.  
※When update is complete, the folder name on the USB flash drive changes to "avr\_40.prod.update.factory.  
**done**". To use the files again, delete the ".done" part.

- Execute Firmware Factory Restore.  
While holding down buttons "SETUP" and "DIMMER" simultaneously, press the power button to turn on the power.

Display during Firmware Factory Restore

L1	Restoring FW...
L2	
L1	Restore ▶▶▶▶▶ **%
L2	**min
L1	Completed

It takes approximately 15 minutes for Firmware Factory Restore to complete.

- Execute Service Region Settings.  
See "4. Update Method for Service Region Settings"
- Check that the version is the specified version. See "1. Version Display Mode"
- If necessary, use OTA or the USB flash drive to update the firmware to the newest version.  
※We recommend using the firmware update method using OTA.  
See "5. Normal Firmware Update Method from USB Flash Drive" or "6. Normal Firmware Update Method from OTA"

#### ---Cautions on Firmware Update---

- Do not remove the USB flash drive until updating is completed.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed.


## 4. Update Method for Service Region Settings

Copy the Service Region Settings from the USB flash drive to this unit.


### 4.1. Creating a Service Region Settings file

(1) Click [Start button] - [Accessories] - [notepad] on the PC to launch the notepad.

(2) Enter "TEXT".

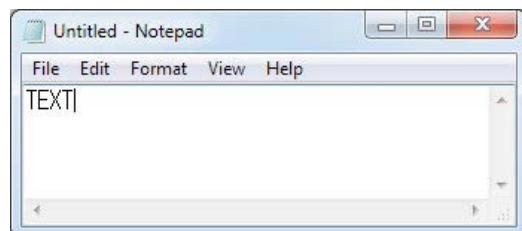


(3) Click "File", and then click "Save As...".

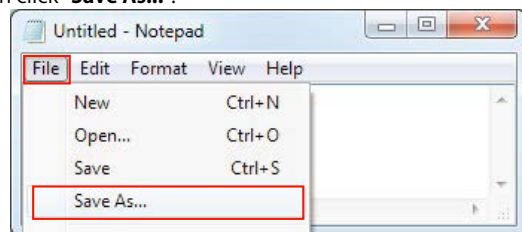


(4) Enter the file name and click the Save button.

NOTE : Enter the file name in double quotation marks. (The file extension is not required.)

Service Region	File name
North America	"denon-config-locale-set-1"
Europe	"denon-config-locale-set-2"
Japan	"denon-config-locale-set-3"
Australia	"denon-config-locale-set-4"
Korea	"denon-config-locale-set-5"
China	"denon-config-locale-set-6"
Israel	"denon-config-locale-set-7"

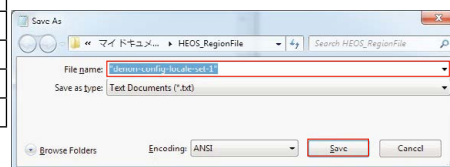

(5) Copy the files created on the USB flash drive.

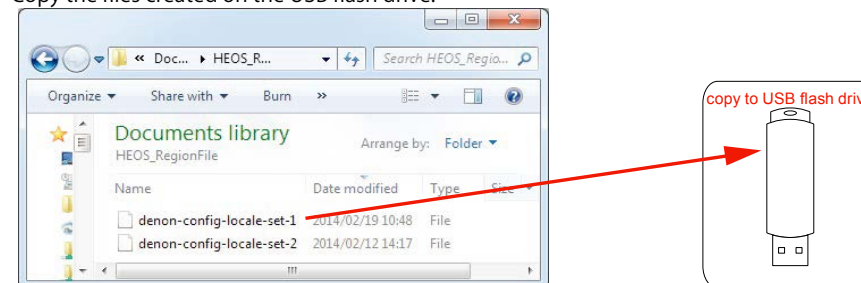

### 4.2. Starting Service Region Settings

NOTE :

- Remove the LAN cable from this unit when updating. (Do not connect to a wired or wireless network.)
- We recommend a USB memory device that has an LED installed.

(1) Press the power button to turn on the power.

(2) Wait for this unit to start up.


(3) Set the input source to HEOS Music.

Check that the display is as shown below.

L1	▶TuneIn Internet Radio	or	No Network Connection
L2	HEOS Favorites		

L1 : Content of the display is scrolled.

(4) Insert the USB flash drive into the USB port.

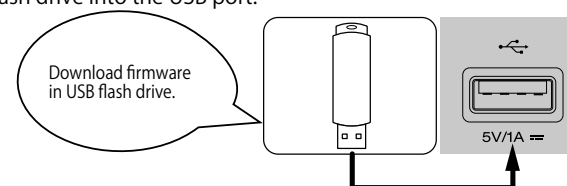

(5) Wait for at least 10 seconds before removing the USB flash drive.

(If the USB flash drive has an LED, this LED will be flashing. Remove the USB flash drive when the LED stops flashing.)



## 5. Normal Firmware Update Method from USB Flash Drive

### 5.1. File structure on USB flash drive


Copy the normal update files onto the USB flash drive in the following structure.

After unzipping the HW component USB update files for the target model and LEGO USB update files, store them in the root of the same USB flash drive.

Model Area	Download from SDI	
	For HW component	For LEGO component
North America (E3)	DPMS_AVR-X4500HALL_LEGO_PopupNone.zip Product ID : 000101090100	heos_40.prod_x.xxx.xx.zip
Europe (E2)	DPMS_AVR-X4500HALL_LEGO_PopupNone.zip Product ID : 000101090200	
China (E1C)	DPMS_AVR-X4500HALL_LEGO_PopupNone.zip Product ID : 000101090500	
Japan (JP)	DPMS_AVR-X4500HALL_LEGO_PopupNone.zip Product ID : 000101090400	

USB flash drive root

+ AVR-X4500Hxx\_xxxx.update.auto  
+ heos\_40.prod.update.x-xxx-xx

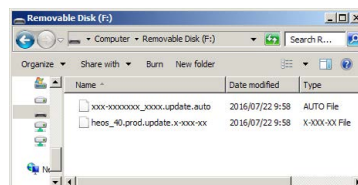

### 5.2. Start normal update

NOTE :


- Remove the LAN cable from this unit when updating.  
(Do not connect to a wired or wireless network.)

- Press the power button to turn on the power.
- Wait for this unit to start up.
- Set the input source to HEOS Music.  
Check that the display is as shown below.

L1	▶TuneIn Internet Radio	or	No Network Connection
L2	HEOS Favorites		

L1 : Content of the display is scrolled.

- Insert the USB flash drive into the USB port.

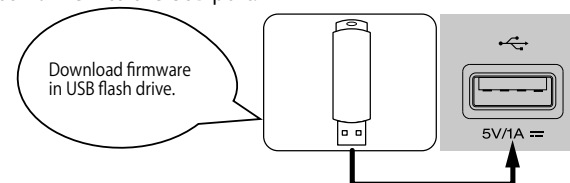

- USB Update starts automatically.  
The Standby LED lights red.

**Display during USB update**

L1 Please wait▶▶▶▶▶



L1 Updating▶▶▶ \*\*%  
L2 \*\*min



L1 Update Completed

It takes a maximum of approximately 25 minutes for update to complete.

- The unit restarts when update is complete.
- After updating the firmware, check the version.  
See "1. Version Display Mode"

#### ---Cautions on Firmware Update---


- Do not remove the USB flash drive until updating is completed.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed.  
The GUI menu settings and image adjustment settings of this unit may be initialized.  
Note down the settings before updating, and set them again after updating.

## 6. Normal Firmware Update Method from OTA

Download the latest firmware from our website and update the firmware.

### 6.1. Network Connection

- (1) System Requirements
  - Internet Connection by Broadband Circuit
  - Modem
  - Router
  - Ethernet cable (CAT-5 or greater is recommended)
- (2) Setting

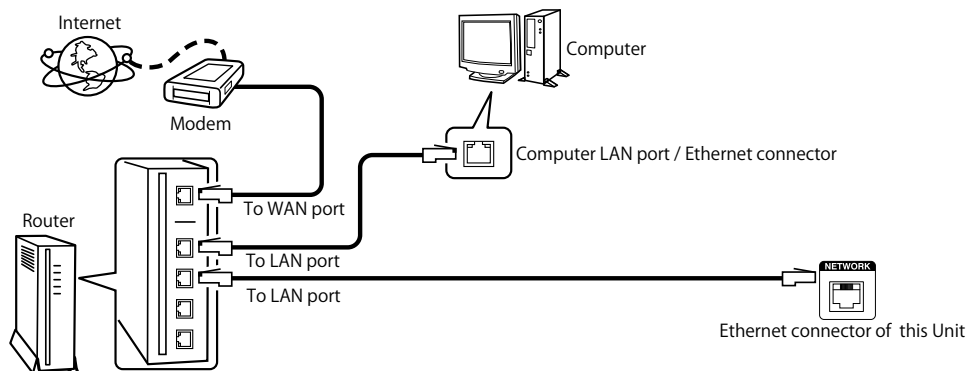

### 6.2. Check and update the firmware

Check if there is a firmware update available. It is also possible to check approximately how long the update will take.

- (1) Press the **"SETUP"** button on the remote control to display the GUI menu.
- (2) Press the cursor button to select **"General"** → **"Firmware"** → **"Check for Update"**.
- (3) Check update
  - If the firmware version is anything other than the latest version, select **"Update Now"** to update the firmware.
  - **"No update required. Latest version installed."** is displayed when the firmware version is up to date.
- (4) OTA Update starts automatically.  
The Standby LED lights red.

#### Display during OTA update

L1 Please wait▶▶▶▶▶



L1 Updating▶▶▶ \*\*%  
L2 \*\*min



L1 Update Completed

It takes a maximum of approximately 25 minutes for update to complete.

- (5) The unit restarts when update is complete.
- (6) After updating the firmware, check the version.  
See ["1. Version Display Mode"](#)

#### ---Cautions on Firmware Update---

- For the update procedure, a proper broadband Internet connection environment and settings are required.
  - Do not turn off the power until updating is completed.
  - It takes a maximum of approximately 25 minutes for update to complete.
- Once an update is started, normal operations cannot be performed until it is completed. The GUI menu settings and image adjustment settings of this unit may be initialized. Note down the settings before updating, and set them again after updating.

## 7. About the error codes

See the table below for details on error codes and solutions when updating the firmware.  
Error codes are displayed in 4 digits, **YYXX** (**YY** : DeviceID, **XX** : ErrorCode).

### Display

L1	Updating▶▶▶▶ **%
L2	***min



L1	Update ErrorYYXX
L2	Please check you

**L2 : Content of the display is scrolled.**

### Remedies

Error Code (YYXX) (DeviceID/ErrorCode)	Remedies
000A	"Connection failed. Please check your network, then try again."
0009	"Update failed. Please check your network, then try again."
0009	"Upgrade failed. Please check your network, then try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please check your network, unplug and reconnect the power cord, and try again."
YY00 YY01 YY02 YY03 YY04 YY07	"Please unplug and reconnect the power cord, and try again."
0005	"Incompatible update file found on the USB device. Please check the file."
0006	"Update file is corrupted. Please check the file."
000B	"Please contact customer service in your area." ※ Check the power supply and communication lines of each device.

### Device ID table

Device ID (YY)	Device Name
00	General
01	Main CPU
0B	Main FBL (No used)
11	DSP1 or DSP
12	DSP2 ※ Except : AVR-S640H/S740H/S940H/X1500H/X2500H/X3500H
13	DSP3 ※ Except : AVR-S640H/S740H/S940H/X1500H/X2500H/X3500H
19	DSP4 ※ Except : AVR-S640H/S740H/S940H/X1500H/X2500H/X3500H
15	Audio PLD
22	Video PLD ※ Except : AVR-S640H/S740H/S940H/X1500H/X2500H
2A	GUI
2B	PIMG ※ ONLY : S640H/S740H/S940H/X1500H/X2500H
33	LEGO

### Error Code table

Type code (XX)	Description
00	Logical error
01	Error during erasing
02	Error during writing
03	Error during verifying
04	No access for the component
05	Package mismatched. Product ID, package version un-matched of the package manifest
06	Unpack dis-available of component package file
07	Time out
08	Latest firmware has already installed.
09	Error during download
0A	Error connection
0B	Hardware Error

### ---Checking the Firmware Version After the Update---

After updating the firmware, check the version.

See "1. Version Display Mode"

**DENON®**  
[www.denon.com](http://www.denon.com)