

# KV-13M10 / MT1300 / 14R10 / 1460R

RM-Y116

RM-Y123

RM-Y116

RM-Y123

## SERVICE MANUAL

*US Model*

*KV-13M10*

*Chassis No. SCC-G92A-A*

*Canadian Model*

*KV-13M10*

*Chassis No. SCC-G94B-A*

*KV-MT1300*

*Chassis No. SCC-G94A-A*


*E Model*

*KV-14R10*

*Chassis No. SCC-G93D-A*

*KV-1460R*

*Chassis No. SCC-G93A-A*

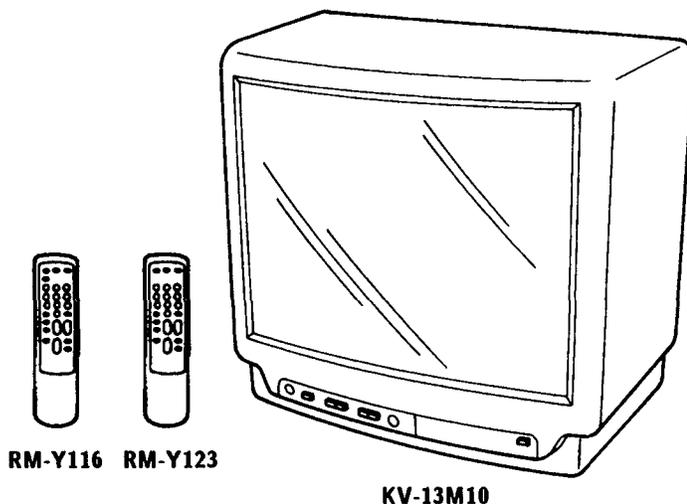

RM-Y116 RM-Y123

KV-13M10

## BA-2 CHASSIS

### MODELS OF THE SAME SERIES

KV-13M10/MT1300/14R10/1460R

KV-20M10/20S10/MT2000/ST2050

KV-21R10/21RS10/2180R/2190RS

### SPECIFICATIONS

Television system  
American TV standard

Channel coverage  
VHF: 2-13  
UHF: 14-69  
CATV: 1-125

Antenna  
75-ohm external antenna terminal for VHF/UHF

Picture tube  
Trinitron® tube

Power requirements  
120 V, 60 Hz

Screen size  
13 in.

Inputs  
1 video, 1 audio (*KV-13M10/14R10 only*)

Speaker output  
1 W

Power consumption  
75 W when in use  
4 W in standby

Dimensions (W/H/D)  
372 × 339 × 408 mm  
(14 <sup>3</sup>/<sub>4</sub> × 13 <sup>3</sup>/<sub>8</sub> × 16 <sup>1</sup>/<sub>8</sub> in.)

Mass  
10.3 kg (22 lb 12 oz)

Supplied accessories  
Size AA batteries (2)  
*KV-13M10*: Remote commander  
RM-Y116 (1) Dipole antenna(1)  
*KV-MT1300*: Remote commander  
RM-Y123 (1) Antenna connector (1)  
*KV-1460R*: Remote commander  
RM-Y123 (1) Dipole antenna(1),  
Antenna connector (1)

Design and specifications are subject to change without notice.



TRINITRON® COLOR TV  
**SONY®**

**TABLE OF CONTENTS**

| <u>Section</u>                                     | <u>Title</u>                           | <u>Page</u> | <u>Section</u>                                    | <u>Title</u> | <u>Page</u> |
|--|--|-------------|---|--------------|-------------|
| <b>1. GENERAL</b>                                  |  |             | <b>4. SAFETY RELATED ADJUSTMENT</b>               |              | 17          |
|  | Connections                            | 4           | <b>5. CIRCUIT ADJUSTMENTS</b>                     |              |             |
|  | Setting Cable TV on or off             | 4           | 5-1. Electrical Adjustment by Remote Commander    |              | 19          |
|  | Presetting Channels                    | 5           | 5-2. A Board Adjustments                          |              | 21          |
|  | Functions                              | 6           | <b>6. DIAGRAMS</b>                                |              |             |
|  | Setting the Language Preference        | 7           | 6-1. Block Diagrams                               |              | 25          |
|  | Adjusting the Picture                  | 8           | 6-2. Circuit Boards Location                      |              | 29          |
|  | Displaying Caption Vision              | 9           | 6-3. Printed Wiring Boards and Schematic Diagrams |              | 29          |
|  | Customizing the Channel Unmber Buttons | 9           | • A Board   |              | 30          |
|  | Listening with Headphones              | 10          | • C Board   |              | 37          |
| <b>2. DISASSEMBLY</b>                              |  |             | 6-4. Semiconductons                               |              | 39          |
| 2-1. Rear Cover Removal                            |  | 11          | <b>7. EXPLODED VIEW</b>                           |              |             |
| 2-2. A Board Removal                               |  | 11          | 7-1. Chassis                                      |              | 40          |
| 2-3. Service Position                              |  | 11          | <b>8. ELECTRICAL PARTS LIST</b>                   |              | 41          |
| 2-4. Picture Tube Removal                          |  | 12          |   |              |             |
| <b>3. SET-UP ADJUSTMENTS</b>                       |  |             |   |              |             |
| 3-1. Beam Landing                                  |  | 13          |   |              |             |
| 3-2. Convergence                                   |  | 14          |   |              |             |
| 3-3. Focus   |  | 16          |   |              |             |
| 3-4. Screen (G2)                                   |  | 16          |   |              |             |
| 3-5. Mothod of Setting the Service Adjustment Mode |  | 16          |   |              |             |
| 3-6. White Balance Adjustment                      |  | 16          |   |              |             |

**(CAUTION)**

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

**WARNING!!**

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

**SAFETY-RELATED COMPONENT WARNING !!**

COMPONENTS IDENTIFIED BY SHADING AND MARK  $\Delta$  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

**(ATTENTION)**

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

**ATTENTION!!**

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DEPANNAGE. LE CHASSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDE A L'ALIMENTATION SECTEUR.

**ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!**

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MAPQUE  $\Delta$  SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTE.

## SAFETY CHECK-OUT

( US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.



### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

### HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

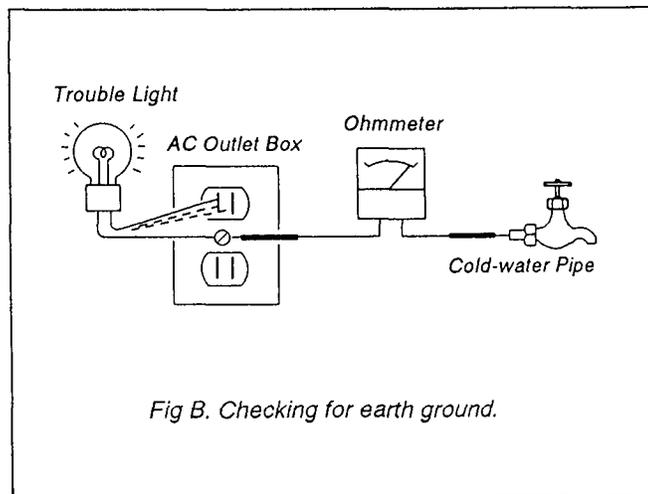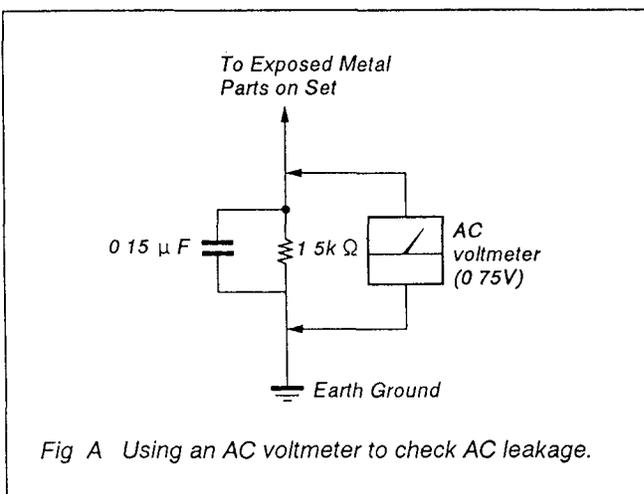

## SECTION 1 GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.


### Connections

#### Connecting to a VCR

To connect the VCR to the TV, first check the model number of the TV and select the appropriate connection diagram below. For details on connection, see the instruction manual of the VCR. Before making the connection, disconnect the AC power cords of equipment being used.

##### ■ For KV-13M10/14R10

(Rear of TV)

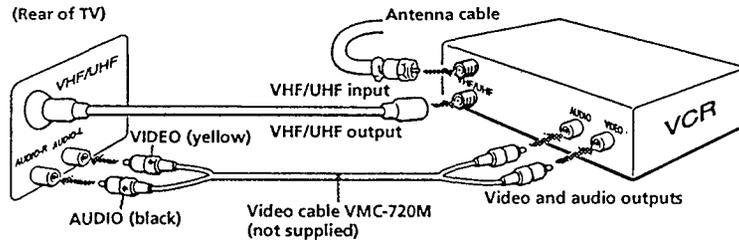


#### To watch video tapes

Press the TV/VIDEO button until "VIDEO" appears on the screen.

##### ■ For KV-MT1300/1460R

(Rear of TV)

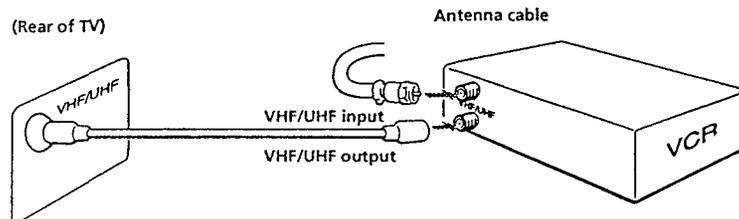

#### To watch video tapes

- 1 On the TV: Preset channel 3 or 4, whichever is not used in your area, following the instructions for adding channels in "Presetting channels" (page 13).
- 2 On the VCR: Set the channel to the same channel as chosen above. Then begin viewing the video tape.

### 8 | **Setting up**

### Setting cable TV on or off

If the TV is connected to a cable TV system, then the factory setting CABLE ON is correct. If the TV is not connected, set CABLE to OFF.


#### Note

If more than 90 seconds elapse after you press a button, the menu disappears automatically.

- 1 Press MENU.  
The main menu appears.



- 2 Press  $\Delta$ + or  $\nabla$ - on the remote commander to move the cursor ( $\blacktriangleright$ ) on the screen to SET UP. To select that function, press RETURN.  
The SET UP menu appears.

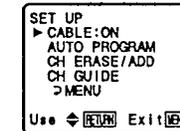


#### Note

If CABLE appears in black, the TV is set to video input and CABLE cannot be selected. Press TV/VIDEO so that a channel number appears.

- 3 Set CABLE to ON or OFF.

(1) If the cursor is not beside CABLE, press  $\Delta$ + or  $\nabla$ - to move the cursor and press RETURN.

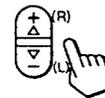


### 10 | **Setting up**

(2) Press  $\Delta+$  or  $\nabla-$ , to select ON or OFF.



(3) Press RETURN.

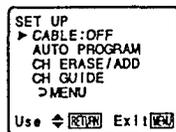


4 Press MENU to return to the original screen.



## Presetting channels

TV channels can be preset easily: first store all the receivable channels automatically, following the procedure below. Next, erase unwanted channels or add additional channels. Preset channels during the day rather than late at night, when some channels may not be broadcasting.


- 1 Press MENU.
- 2 Press  $\Delta+$  or  $\nabla-$  on the remote commander to move the cursor ( $\blacktriangleright$ ) on the screen to SET UP and press RETURN. The SET UP menu appears.

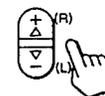


### Note

If AUTO PROGRAM appears in black, the TV is set to video input and AUTO PROGRAM cannot be selected. Press TV/VIDEO so that a channel number appears.

- 3 Select AUTO PROGRAM.  
(1) Press  $\Delta+$  or  $\nabla-$  to move the cursor ( $\blacktriangleright$ ) to AUTO PROGRAM.

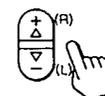


(2) Press RETURN.

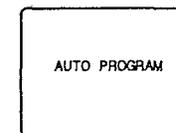

"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

## Erasing or adding channels


- 1 Press MENU.
- 2 Press  $\Delta+$  or  $\nabla-$  to select SET UP and press RETURN.
- 3 Press  $\Delta+$  or  $\nabla-$  to select CH ERASE/ADD and press RETURN.
- 4 To erase an unwanted channel:
  - (1) Press CH +/- to select the channel you want to erase.
  - (2) Make sure the cursor ( $\blacktriangleright$ ) is beside ERASE.

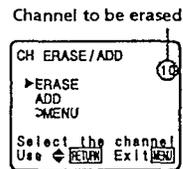

- (3) Press RETURN.  
The indication "-" appears beside the channel number, showing that the channel is erased from the preset memory.

To add a channel that you want:

- (1) Press 0-9 buttons to select the channel you want to add and press ENTER.
- (2) Press  $\Delta+$  or  $\nabla-$  to select ADD.

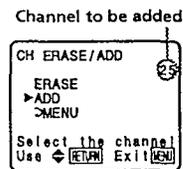

- (3) Press RETURN.  
The indication "+" appears beside the channel number, showing that the channel is added to the preset memory.

- 5 To erase and/or add other channels, repeat step 4.
- 6 When finished, press MENU.

### Note

If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.

## Available Features


### Functions

### Note

If "VIDEO" appears on the screen, press TV/VIDEO so that a channel number appears.


### Selecting a channel directly

Press the 0-9 buttons to select a channel. Or press ENTER after entering the channel for immediate selection.

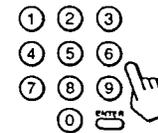

### To scan through channels

Press CH +/- until the channel you want appears.

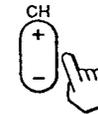

### Switching quickly between two channels


Press JUMP.

The channel you watched previously appears. Pressing JUMP again switches back to the previous channel.



### Adjusting the volume

Press VOL +/- to adjust the volume.

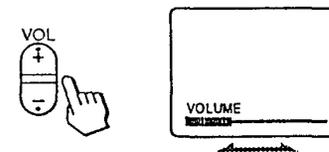

## Muting the sound

Press MUTING.  
"MUTING" appears on the screen.



To restore the sound, press MUTING again, or press VOL +.

## Displaying on-screen information

Use this feature to check your channels and MTS mode.  
Press DISPLAY.



To cancel the display, press DISPLAY again.

## Setting the Sleep Timer

The TV stays on for the length of time specified and then shuts off automatically.  
Press SLEEP repeatedly until the time (minutes) wanted appears. Each time you press SLEEP, the time changes as follows: 30 → 60 → 90 → OFF.



To cancel the Sleep Timer, press SLEEP repeatedly until "SLEEP OFF" appears, or turn the TV off.

### Note


If DISPLAY or MUTING is pressed with Caption Vision selected, the channel or muting display will disappear after a few seconds.

## Setting the language preference


### ■ For models KV-14R10/1460R

If Spanish is preferred to English, the menu language can be changed.

- 1 Press MENU.
- 2 Press Δ+ or ∇- to move the cursor (▶) to ENGLISH and press RETURN.

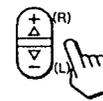

- 3 Press Δ+ or ∇- to select SPANISH and press RETURN.

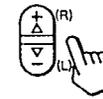


- 4 Press MENU to return to the normal screen.






## Adjusting the picture

When watching TV programs, the quality of the picture can be adjusted to suit your taste.


- 1 Press MENU.
- 2 Make sure the cursor (▶) is beside VIDEO and press RETURN.

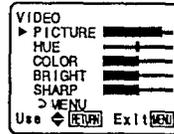

- 3 Select the item to adjust. See following chart for details on results of adjustments. For example:  
To adjust brightness, press Δ+ or ▽- to select BRIGHT and press RETURN.

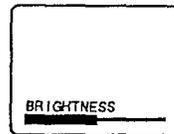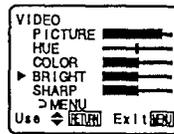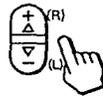

- 4 Adjust the selected item:  
(1) Press Δ+ or ▽- to adjust the item.

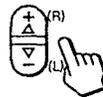

- (2) Press RETURN.  
The new setting appears in the VIDEO menu.

- 5 To adjust other items, repeat steps 3 and 4 above.

## Description of adjustable items

| Item    | Adjustment                                |  |
|---------|---|--|
|         | Press Δ+ to                               | Press ▽- to                              |
| PICTURE | Increase picture contrast for vivid color | Decrease picture contrast for soft color |
| HUE     | Make skin tones become greenish           | Make skin tones become purplish          |
| COLOR   | Increase color intensity                  | Decrease color intensity                 |
| BRIGHT  | Brighten the picture                      | Darken the picture                       |
| SHARP   | Sharpen the picture                       | Soften the picture                       |

## To restore the factory settings


Press RESET while the VIDEO menu is displayed. All the settings except PICTURE are restored to factory settings.

## Displaying Caption Vision



### USA and Canadian models only

Some programs are broadcast with Caption Vision. To display Caption Vision, select either CC1, CC2, TEXT1, or TEXT2 from the menu. CC1 or CC2 shows you a caption, that is a printed version of the dialog or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1 or TEXT2 shows you text, that is information presented using half of the screen. It is not usually related to the program.

- 1 Press MENU.
- 2 Press  $\Delta+$  or  $\nabla-$  to select **CC** /TEXT and press RETURN.

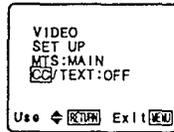

- 3 Press  $\Delta+$  or  $\nabla-$  to select the caption type and press RETURN.

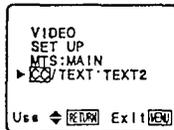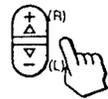

#### Notes


- Captions disappear for a few seconds when you press the DISPLAY or MUTING button.
- Captions may appear with a white box or other errors instead of a certain word. Poor reception of TV programs can also cause errors in captions.

## Customizing the channel number buttons


Up to 12 channels can be assigned to a specific channel number. This feature allows the easy selection of your favorite channels using the on-screen menu. For example, channel number button 2 can be assigned to channel 124.

### Assigning a channel number button to a favorite channel



- 1 Press MENU.
- 2 Press  $\Delta+$  or  $\nabla-$  to select SET UP and press RETURN.
- 3 Press  $\Delta+$  or  $\nabla-$  to select CH GUIDE and press RETURN.

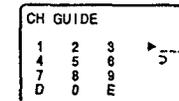



- 4 Press RETURN again.

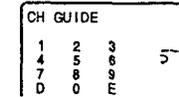

- 5 Press  $\Delta+$  or  $\nabla-$  to select a customized channel number (chosen number will appear in red) and press RETURN. Numbers 0-9 and DISPLAY and ENTER are available for use as a customized channel number. DISPLAY and ENTER are shown as D and E respectively on the screen. The channel number button selected will be the one you press to call up your favorite channel.

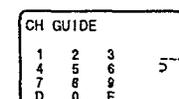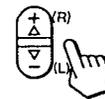

- 6 Press  $\Delta+$  or  $\nabla-$  to select the channel and press RETURN.

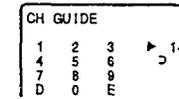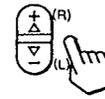

- 7 Repeat steps 5 and 6 to set other channels.

#### To cancel a setting

Select the channel you want to cancel in step 5, then press RESET.

---

## Using the customized channel number buttons

- 1 Press **CH GUIDE**.  
The **CHANNEL GUIDE** menu appears showing channel number buttons and the corresponding channels.
- 2 Press a channel number button, **DISPLAY** or **ENTER** on the commander to select the channel you want.


### To cancel the **CHANNEL GUIDE** menu

Press **CH GUIDE** while the **CHANNEL GUIDE** menu is displayed.

## Listening with headphones

### ■ For models **KV-13M10/14R10**

Plug the headphones into the headphones jack.

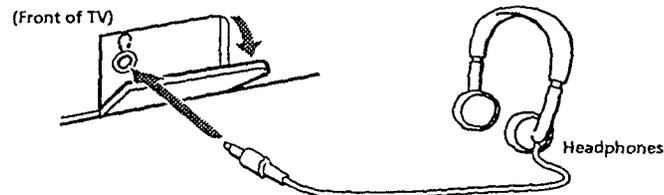


### Notes


- To prevent hearing damage due to sudden or prolonged excessive volume, do not raise the headphones volume too high while listening.
- Using the headphones jack will turn off the sound to TV speakers.
- If your TV is a monaural TV, the monaural sound will be heard from both headphones.

## SECTION 2 DISASSEMBLY


### 2-1. REAR COVER REMOVAL

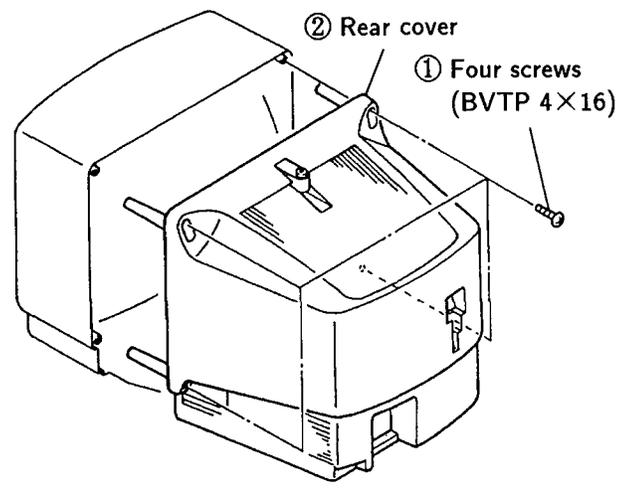


### 2-2. A BOARD REMOVAL

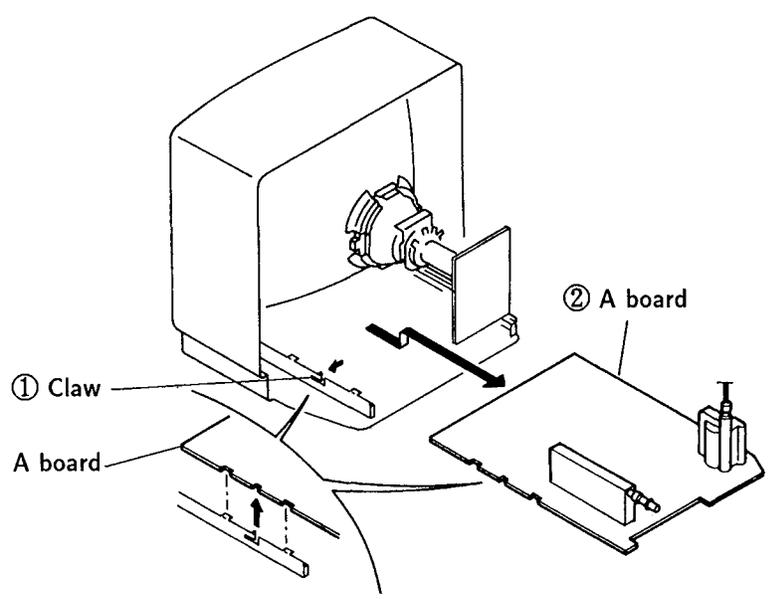

### 2-3. SERVICE POSITION

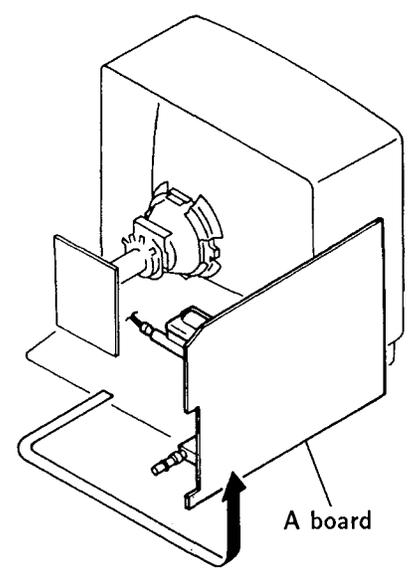


## 2-4. PICTURE TUBE REMOVAL

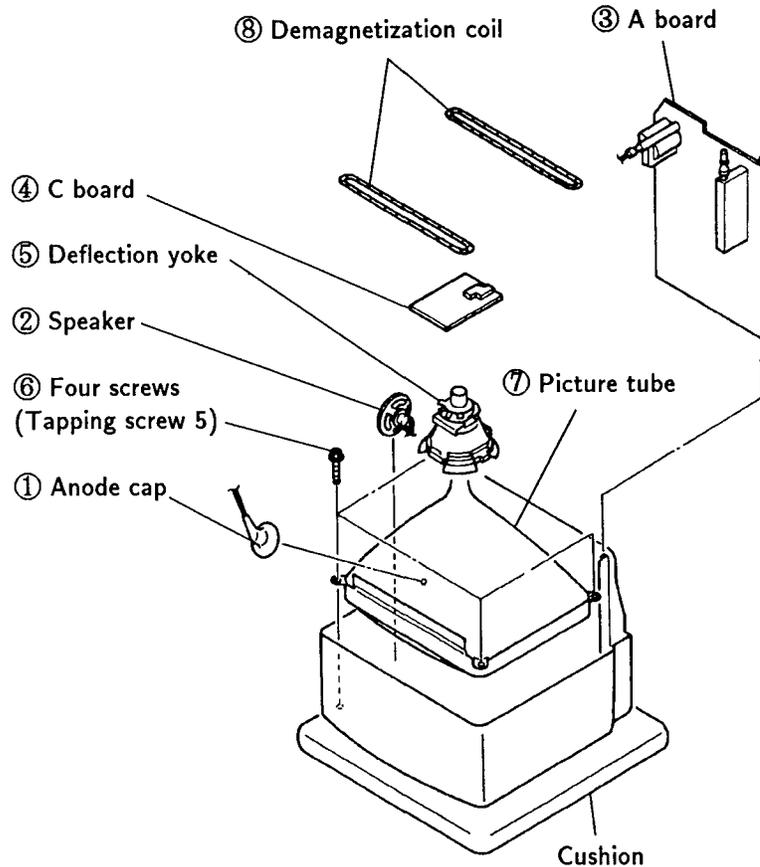

### • REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

### • REMOVING PROCEDURES

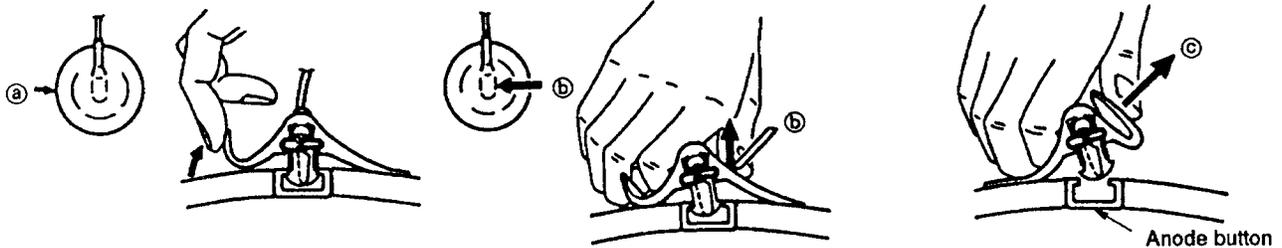



① Turn up one side of the rubber cap in the direction indicated by the arrow ③.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.

### • HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!  
 A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!  
 The shatter-hook terminal will stick out or hurt the rubber.

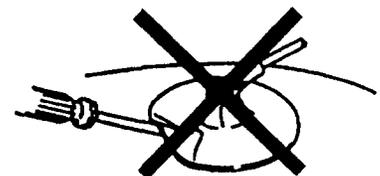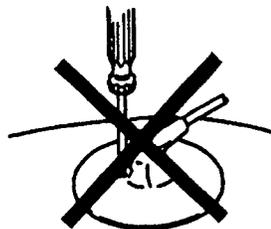

# SECTION 3 SET-UP ADJUSTMENTS

KV-13M10/MT1300/  
RM-Y116 RM-Y123  
KV-14R10/1460R  
RM-Y116 RM-Y123

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

The controls and switch should be set as follows unless otherwise noted:

|                    |        |
|--------------------|--------|
| PICTURE control    | normal |
| BRIGHTNESS control | normal |

**Preparation:**

- Feed in the white pattern signal.
- Before starting, degauss the entire screen.

**3-1. BEAM LANDING**

1. Input a raster signal with the pattern generator.
2. Loosen the deflection yoke mounting screw, and set the purity control to the center as shown in Fig.2
3. Turn the raster signal of the pattern generator to green.
4. Move the deflection yoke backward, and adjust with the purity control so that green is in the center and red and blue are at the sides evenly. (Fig.3)
5. Move the deflection yoke forward, and adjust so that the entire screen becomes green. (Fig.1)
6. Switch over the raster signal to red and blue and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw.
8. When landing at the corner is not right, adjust by using the disk magnets. (Fig.4)

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G 2) and White Balance

**Note:** Test Equipment Required.

1. Color bar Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multi-ner

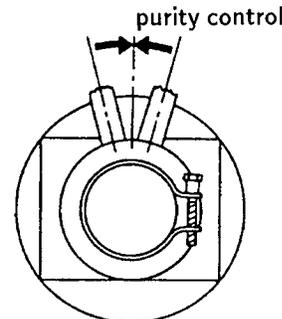


Fig.2

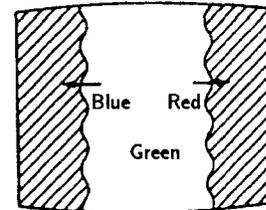


Fig.3

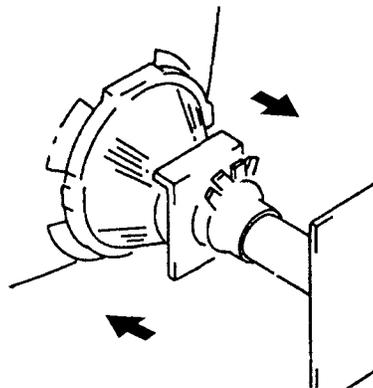


Fig.1

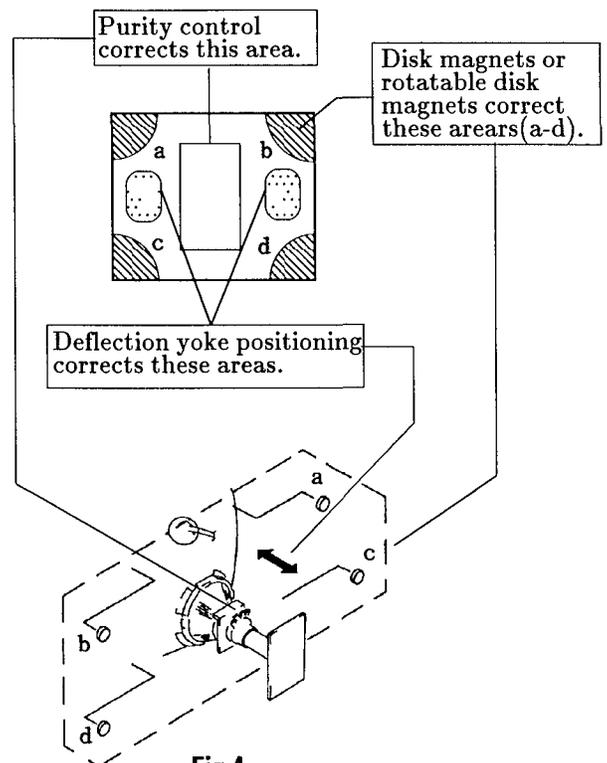


Fig.4

### 3-2. CONVERGENCE

#### Preparation:

- Before starting, perform FOCUS, H.SIZE, V.LIN and V.SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in dot pattern.

#### (1) Horizontal and Vertical Static Convergence



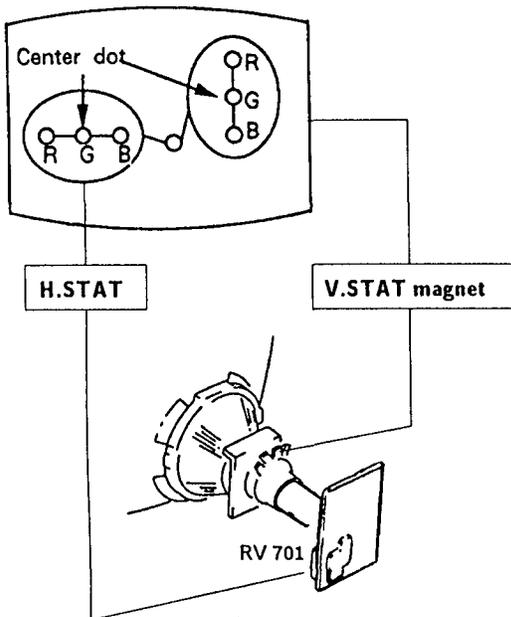


Fig.5

1. Adjust H.STAT VR to converge red, green and blue dots the in center of the screen.(Horizontal movement)
  2. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement)
  3. If the red, green and blue dots do not converge on the center of screen with H.STAT VR, perform horizontal convergence adjustment using H.STAT VR and V.STAT magnet as shown below. (In this case, H.STAT VR and V.STAT magnet effect each other.)
- Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

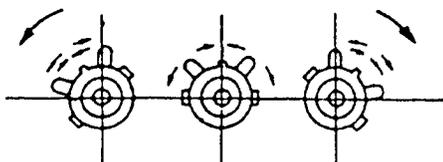

4. When the V.STAT magnet is moved in the direction of arrow (a) and (b), red, green and blue dots move as shown below.

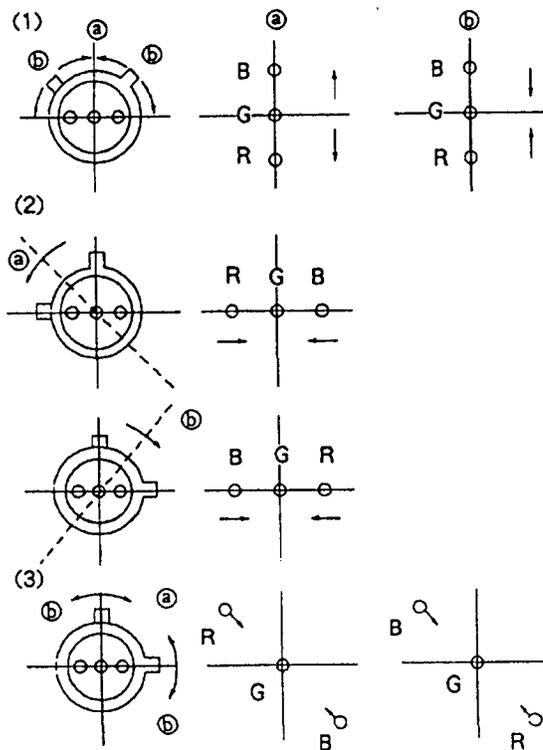

If the blue dot does not converge with red and green dots, perform following steps.

Move BMC magnet (a) to correct insufficient H.static convergence.

Rotate BMC magnet (b) to correct insufficient V.static convergence.

In either case, repeat Beam Landing Adjustment.

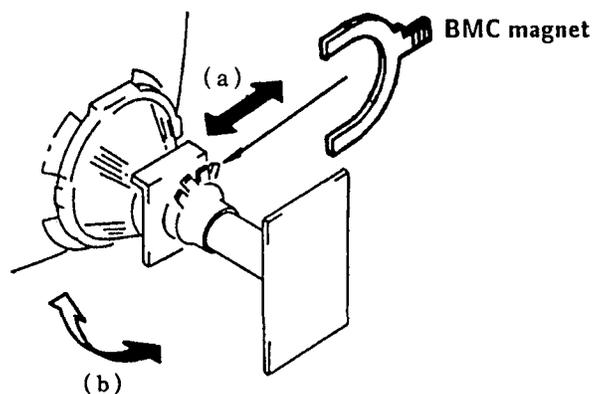


Fig.6

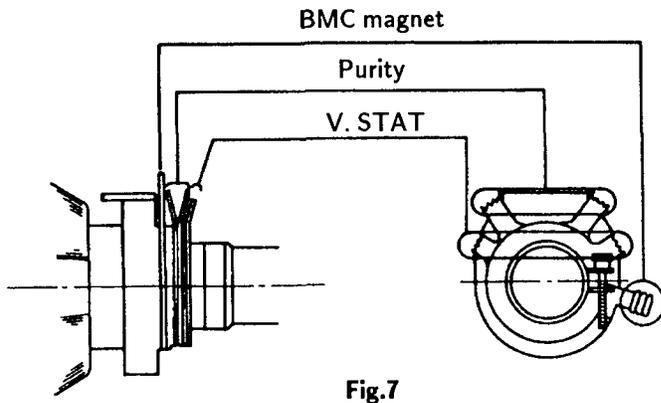


Fig.7

**(2) Dynamic Convergence Adjustment**

**Preparation:**

● Before starting perform Horizontal and Vertical static convergence Adjustment.

1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.
3. Move the deflection yoke for best convergence as shown below.
4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

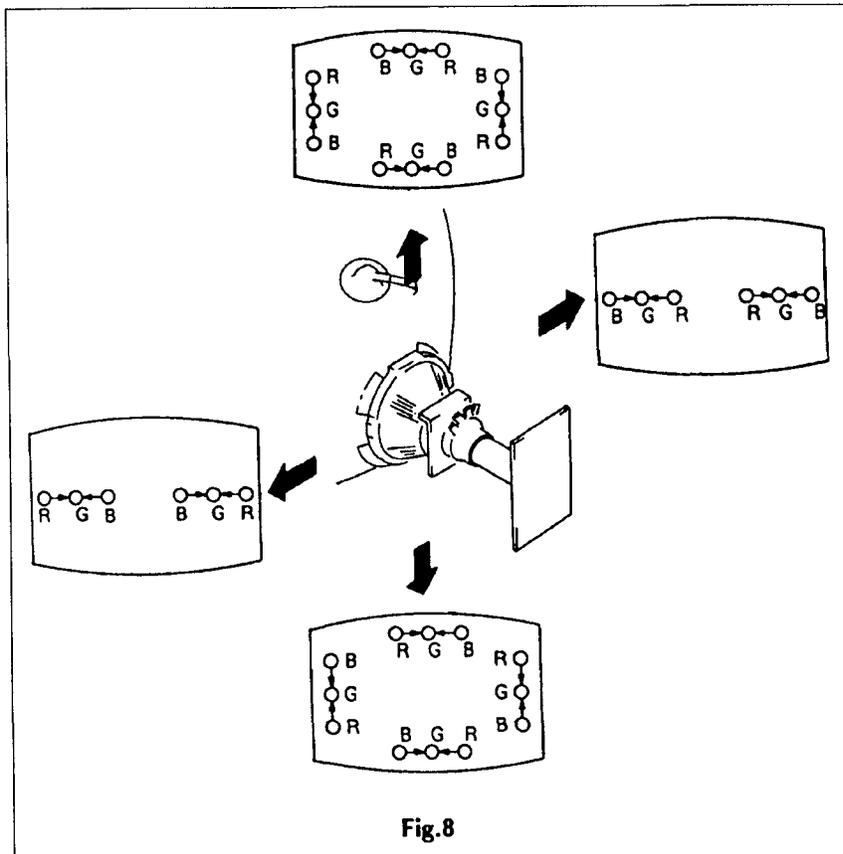


Fig.8

**(3) Screen-corner Convergence**


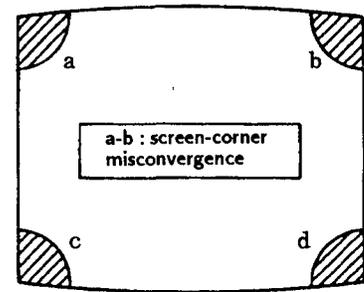


Fig.9



Affix a Permalloy ass'y corresponding to the misconverged areas

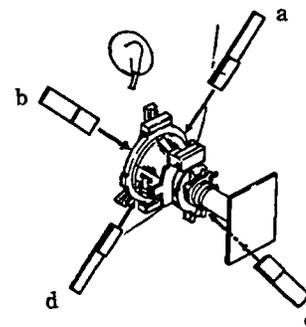

Permalloy assembly

### 3-3. FOCUS

Adjust FOCUS (RV 703) control for best picture.

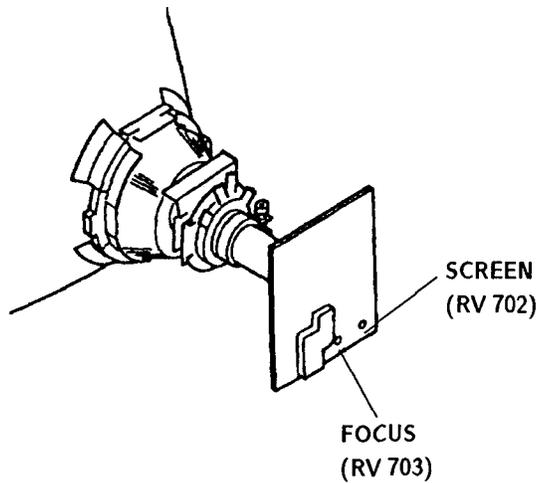


Fig.10

### 3-4. SCREEN(G 2)

1. Input a dots pattern.
2. Set the PICTURE and BRIGHT controls at minimum and COLOR control at normal.
3. Adjust BKG VRs so that voltages on the red, green and blue cathodes are 160 V dc with an oscilloscope as shown in Fig.11.
4. Observe the screen and adjust SCREEN (G 2 RV 702) to obtain the faintly visible background of dot signal.

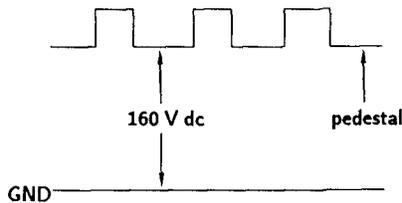



Fig.11

### 3-5. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

#### SERVICE MODE PROCEDURE


1. Standby mode.(Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **POWER** on the Remote Commander. (Press each button within a second.)

#### SERVICE ADJUSTMENT MODE IN

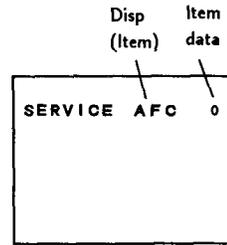

3. The CRT displays the item Being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **MUTING** then **ENTER** to write into memory.

#### SERVICE ADJUSTMENT MODE MEMORY

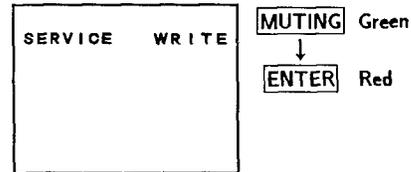

7. Turn set off and on to exit.

### 3-6. WHITE BALANCE ADJUSTMENTS

1. Input an entire white signal.
2. Set to service adjustment mode.
3. Set the PICTURE and BRIGHT to minimum.
4. Adjust with SBRT if necessary.
5. Select G CUT and B CUT with **1** and **4**.
6. Adjust with **3** and **6** for the best white balance.
7. Set the PICTURE and BRIGHT to maximum.
8. Select GAMP and BAMP with **1** and **4**.
9. Adjust with **3** and **6** for the best white balance.
10. Write into the memory by pressing **MUTING** then **ENTER**.

## SECTION 4 SAFETY RELATED ADJUSTMENTS

### A BOARD

#### **☒ R525 CONFIRMATION METHOD (HV HOLD-DOWN CONFIRMATION) AND READJUSTMENTS**

The following adjustments should always be performed when replacing the following components (marked with **☒** on the schematic diagram).

IC502, IC601, Q554, Q555, D505, D506, D507, D510, DY, C511, C513, C528, C531, R511, R519, R520, R523, R525, R527, R557, R558, R559, R560, R617, R618, T504 (FBT)

#### 1. Preparation before confirmation

- 1) Turn the POWER switch ON, and receive entirely white signal and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that the voltage of the check terminal of TP85 is more than 90VDC when the set is operating normally with  $120.0 \pm 2.0$ VAC supply.

#### 2. Hold-down operation confirmation

- 1) Connect the currentmeter between the 7th pin of FBT (T504) and the land of it with connect polarity.
- 2) Receive White Signal and adjust the ABL current to follows with the PICTURE and the BRIGHT controls.  
 $1040 \pm 100 \mu\text{A}$
- 3) Confirm the voltage of A board TP-91 is  $115.0 \pm 0.5$ VDC.
- 4) Connect the Digital Voltmeter and DC power Supply via 1SS 119 to TP-85.
- 5) Increase the DC power voltage gradually until the Picture just blanks out.
- 6) Read the digital voltmeter indication.
- 7) Turn DC power Source off immediatary.

#### STANDARD

Less or equal to 124.5 VDC


- 8) Receive Dot Signal and adjust the ABL current to follows, with the PIX and the BRT controls.  
 $40+100/-50 \mu\text{A}$
- 9) Repeat steps from (3) to (7).

#### STANDARD

Less or equal to 124.5 VDC

#### 3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R525 (a component marked with **☒**).

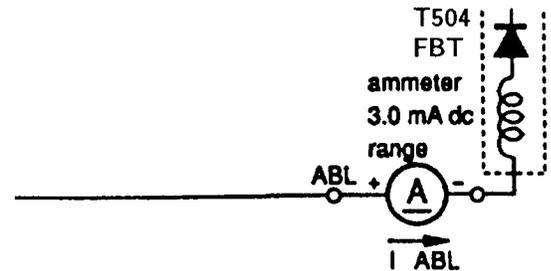


#### **B+ VOLTAGE CONFIRMATION AND ADJUSTMENT**

The following adjustments should always be performed when replacing the following components. (marked with **☒** on the schematic diagram).

IC101, IC601, Q609, R030, R617, R618, R629, R630, R636, R637

- 1) Supply  $130 \pm 2\%$ V AC to with variable autotrans-former.
- 2) Input an entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Set to Service adjustment Mode.
- 5) Select PADJ with **[1]** and **[4]**.
- 6) Adjust with **[6]** for the 63 level.
- 7) Confirm the voltage of A BOARD TP91 is less than 123.0V DC.
- 8) If step 7) is not satisfied, replace the components repeat above steps.
- 9) Supply  $120 \pm 2.0$ V AC to with variable auto trans former.
- 10) Adjust with **[3]** and **[6]** for the  $115 \pm 0.5$ V DC.
- 11) Write into the memory by pressing **[MUTING]** then **[ENTER]**.

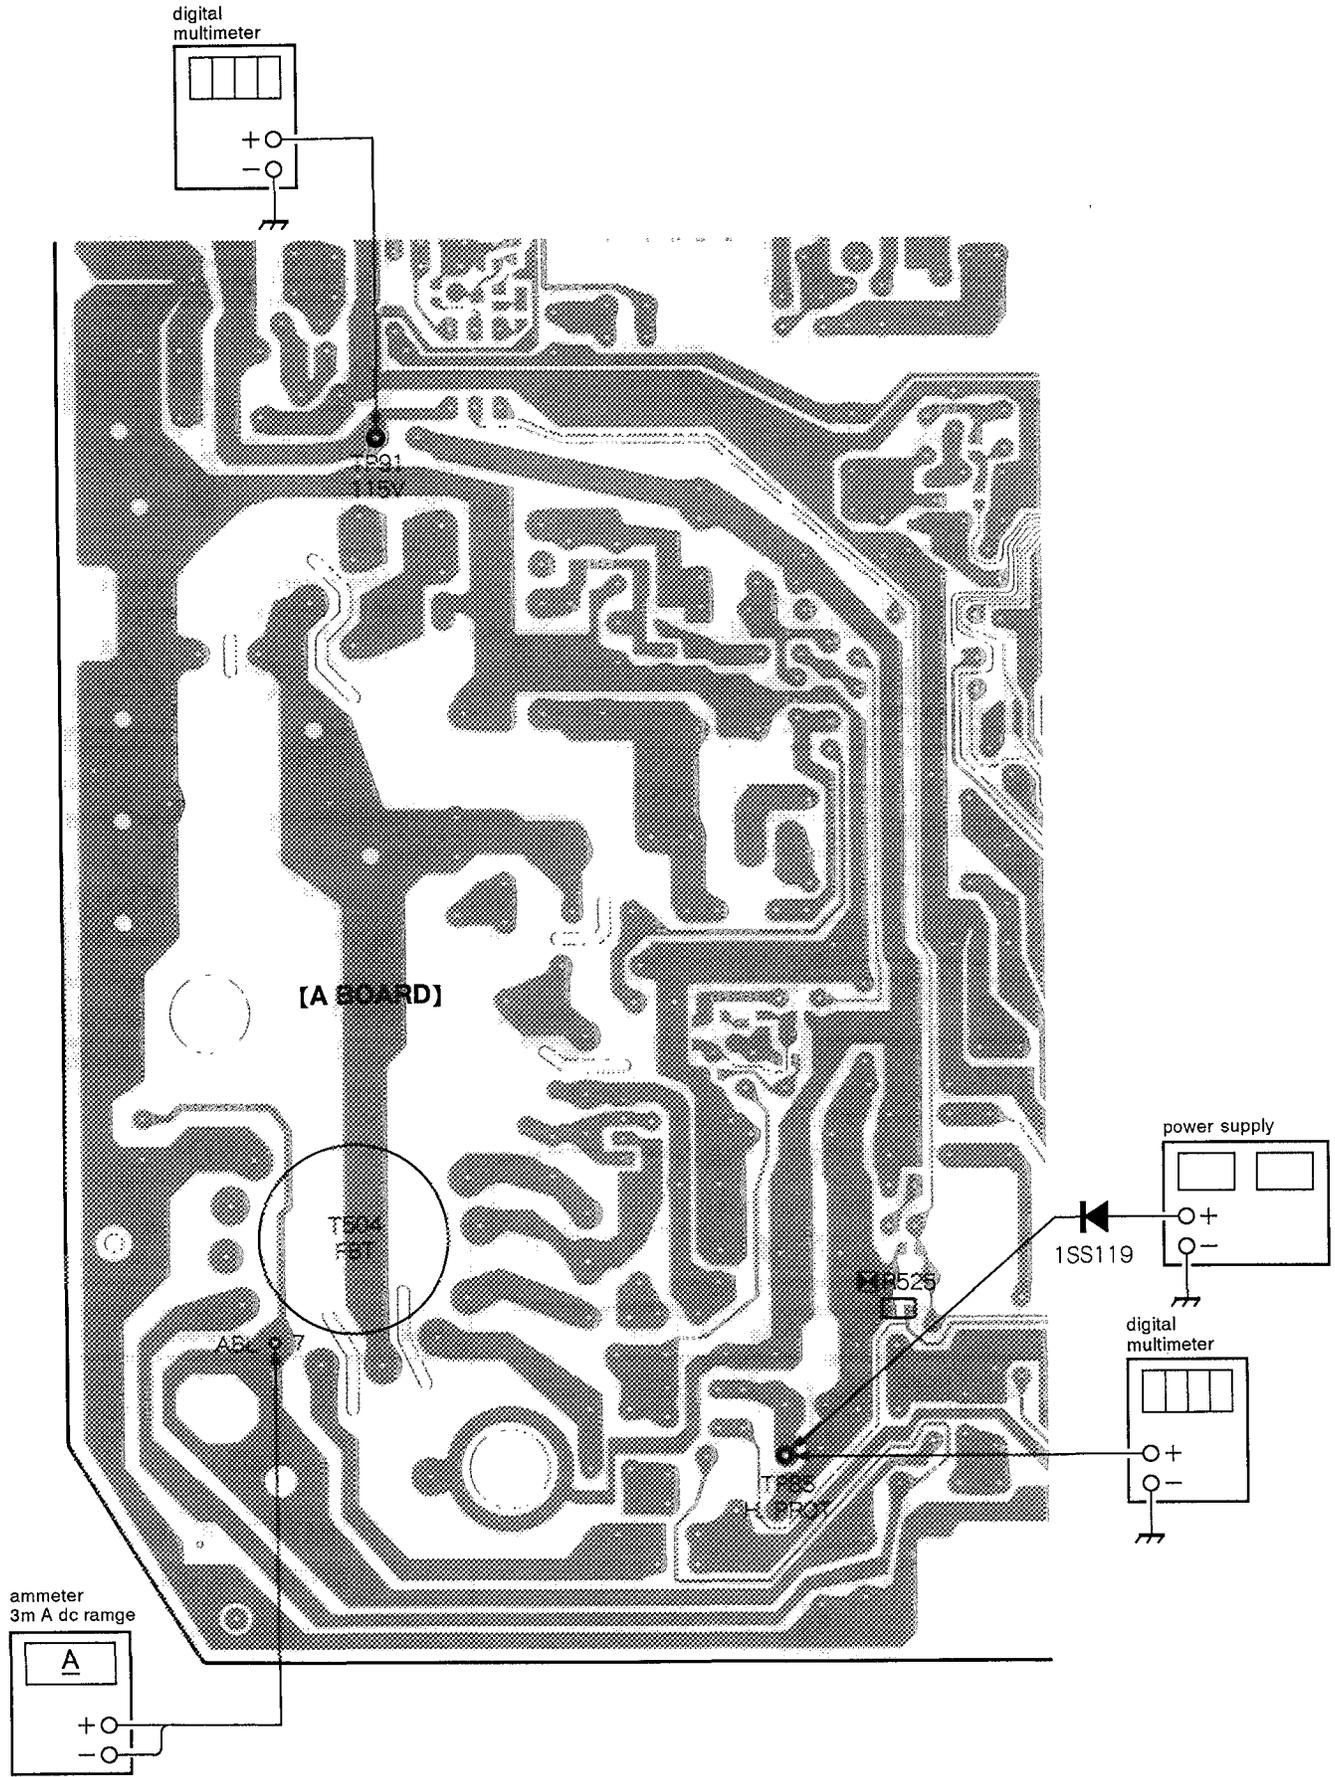

## SECTION 5 CIRCUIT ADJUSTMENTS

### 5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

Use of Remote Commander (RM-Y116/Y123) can be performed circuit adjustments about this model.

NOTE : Test Equipment Required.


1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

#### 1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

##### SERVICE MODE PROCEDURE


1. Standby mode.(Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **POWER** on the Remote Commander. (Press each button within a second.)

##### SERVICE ADJUSTMENT MODE IN

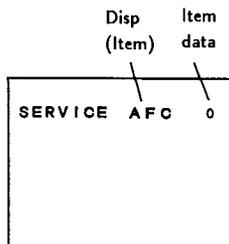


3. The CRT displays the item Being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **MUTING** then **ENTER** to write into memory.

##### SERVICE ADJUSTMENT MODE MEMORY

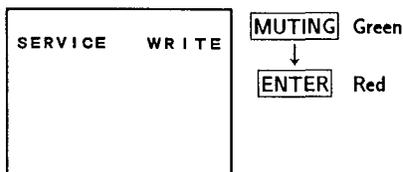

7. Press **8** then **ENTER** on the Remote Commander to initialize.

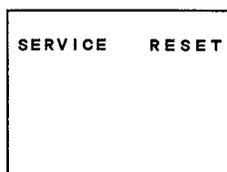

Carry out step 7) when adjusting IDs 0 to 4 and when replacing and adjusting IC102.


Factory original setting

8. Turn set off and on to exit.

#### 2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again, confirm they were adjusted.


#### 3. ADJUST BUTTONS AND INDICATOR

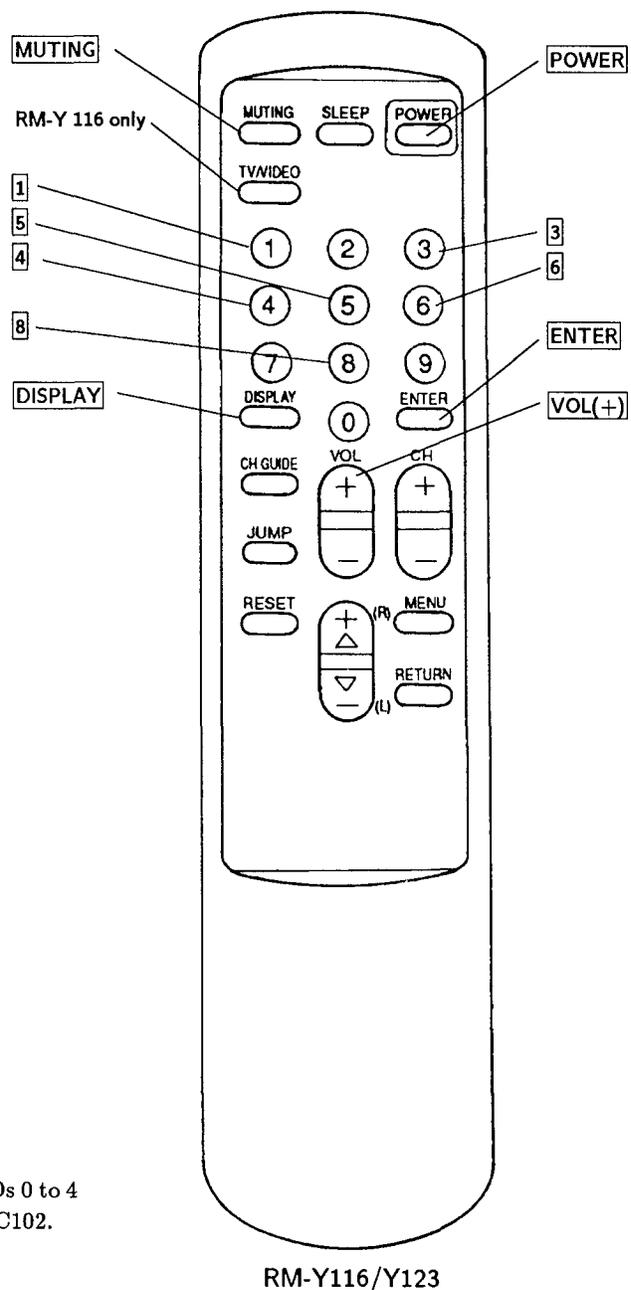

**4. AN ITEM OF ADJUSTMENTS**

| No. | Disp. | Item             | Data range | Ave. data |
|-----|-------|------------------|------------|-----------|
| 1   | AFC   | AFC Loop Gain    | 0~3        | * 0       |
| 2   | HFRE  | H. Frequency     | 0~127      | 78        |
| 3   | VFRE  | V. Frequency     | 0~31       | 15        |
| 4   | VPOS  | V. Center        | 0~31       | 18        |
| 5   | VSIZ  | V. Size          | 0~63       | 16        |
| 6   | VLIN  | V. Linearity     | 0~15       | 9         |
| 7   | VSCO  | V. Correction    | 0~15       | 6         |
| 8   | HPOS  | H. Center        | 0~15       | 5         |
| 9   | VCOM  | V. Compensation  | 0~7        | * 2       |
| 10  | GAMP  | Green Amp        | 0~31       | 19        |
| 11  | BAMP  | Blue Amp         | 0~31       | 19        |
| 12  | GCUT  | Green Cut Off    | 0~15       | 8         |
| 13  | BCUT  | Blue Cut Off     | 0~15       | 7         |
| 14  | CROM  | Chroma Trap      | 0~63       | 26        |
| 15  | SPIX  | Sub Contrast     | 0~63       | 24        |
| 16  | SHUE  | Sub Hue          | 0~63       | 25        |
| 17  | SCOL  | Sub Color        | 0~63       | 30        |
| 18  | SBRT  | Sub Bright       | 0~63       | 25        |
| 19  | SVOL  | Sub Volume       | 0~15       | * 0       |
| 20  | SHAP  | Sharpness        | 0~15       | * 7       |
| 21  | VSMO  | V Pull in Range  | 0, 1       | * 0       |
| 22  | REF   | Reference line   | 0~3        | * 2       |
| 23  | ROFF  | Red Out          | 0, 1       | —         |
| 24  | GOFF  | Green Out        | 0, 1       | —         |
| 25  | BOFF  | Blue Out         | 0, 1       | —         |
| 26  | ABLM  | ABL Mode         | 0, 1       | * 0       |
| 27  | NOTC  | Notch On/Off     | 0, 1       | —         |
| 28  | DRGB  | OSD intensity    | 0, 1       | * 0       |
| 29  | DISP  | Display Position | 0~63       | 4         |
| 30  | PADJ  | Plus B Adjust    | 0~63       | 43        |
| 31  | ID-0  | Model ID         | 0~127      | by Model  |
| 32  | ID-1  | Model ID         | 0~127      | by Model  |
| 33  | ID-2  | Model ID         | 0~127      | by Model  |
| 34  | ID-3  | Model ID         | 0~127      | by Model  |
| 35  | ID-4  | Model ID         | 0~127      | by Model  |

Note : No. from 1 to 35 is to show adjustment order.

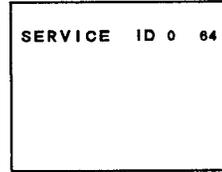

Note : IC101 of the A circuit board inputs a V sync signal to pin ⑤, and is always in operation. If on V sync signal is input to pin ⑤, there will be a waiting period of 2-4 seconds, and the power is shut off. When entering the service mode, the above function is cancelled and operation is possible.

\* : Set-up value

Please adjust the function values as shown below when IC 102 on A board was replaced.

KV-13M10

| No. | Disp. | Data |
|-----|-------|------|
| 31  | ID-0  | 64   |
| 32  | ID-1  | 8    |
| 33  | ID-2  | 64   |
| 34  | ID-3  | 1    |
| 35  | ID-4  | 16   |

KV-MT1300

| No. | Disp. | Data |
|-----|-------|------|
| 31  | ID-0  | 0    |
| 32  | ID-1  | 8    |
| 33  | ID-2  | 64   |
| 34  | ID-3  | 1    |
| 35  | ID-4  | 16   |

KV-14R10

| No. | Disp. | Data |
|-----|-------|------|
| 31  | ID-0  | 64   |
| 32  | ID-1  | 8    |
| 33  | ID-2  | 32   |
| 34  | ID-3  | 1    |
| 35  | ID-4  | 16   |

KV-1460R

| No. | Disp. | Data |
|-----|-------|------|
| 31  | ID-0  | 0    |
| 32  | ID-1  | 8    |
| 33  | ID-2  | 32   |
| 34  | ID-3  | 1    |
| 35  | ID-4  | 16   |

## 5-2. A BOARD ADJUSTMENTS

### RF AGC ADJUSTMENT (IF BLOCK VR)

1. Input a color-bar signal.
2. Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
3. Confirm them at every channel.

### H.FREQUENCY ADJUSTMENT (HFRE)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Connect a frequency counter to base of Q 550 (TP-86 H.DRIVE).
4. Call the item of AFC, set to 3 level (free run).
5. Select HFRE with **[1]** and **[4]**.
6. Adjust with **[3]** and **[6]** for the  $15734 \pm 60$  Hz.
7. Call the item of AFC again, adjust the level "0".
8. Write into the memory by pressing **[MUTING]** then **[ENTER]**.

### V.FREQUENCY ADJUSTMENT (VFRE)


**KV-13M10/14R10 only**

1. Select video 1 with no connecting the signal.
2. Set to Service adjustment Mode.
3. Connect the frequency counter across connector VDY (+) (CN501) connector and ground.
4. Select VFRE with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for the  $55 \pm 0.5$ Hz.
6. Write the memory by pressing **[MUTING]** then **[ENTER]**.

### V.FREQUENCY ADJUSTMENT (VFRE)


**KV-MT1300/1460R only**

1. Connect a capacitor (10  $\mu$ F) across pin **[44]** of IC 301 (V. SYNC) and ground.
2. Set to Service adjustment Mode.
3. Connect the frequency counter across connector VDY (+) (CN501) connector and ground.
4. Select VFRE with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for the  $55 \pm 0.5$ Hz.
6. Write the memory by pressing **[MUTING]** then **[ENTER]**.
7. Disconnect a capacitor from IC 301.

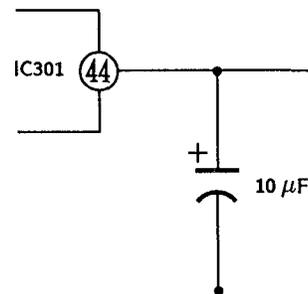

### CROMA TRAP ADJUSTMENT (CROM)

1. Input a red signal
2. Set to Service adjustment Mode.
3. Connect an oscilloscope CN703 Pin **[1]** (R OUT) of C board ground.
4. Select CROM with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for the 0 level.

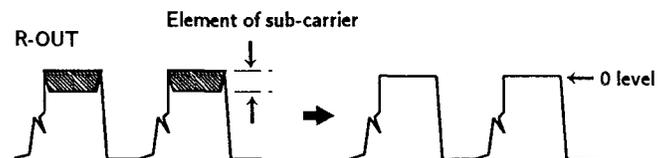


6. Write the memory by pressing **[MUTING]** then **[ENTER]**.

### SUB CONTRAST ADJUSTMENT (SPIX)


1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Set the conditions as follows.

PICTURE ..... MAX  
COLOR ..... MIN  
BRIGHT ..... MIN

R OFF ..... ON (1)  
G OFF ..... OFF (0)  
B OFF ..... OFF (0)

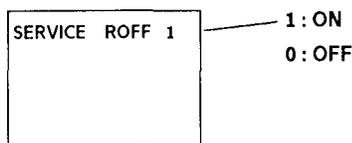

4. Connect an oscilloscope to CN703 Pin① (R OUT) of C board and ground.
5. Select SPIX with **1** and **4**.
6. Adjust with **3** and **6** for the  $1.9 \pm 0.05$  Vp-p.

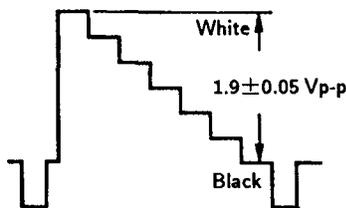


7. Write the memory by pressing **MUTING** then **ENTER**.
8. Return the following back to normal after adjustment.

PICTURE ..... MAX  
BRIGHT ..... CENTER  
COLOR ..... CENTER  
R OFF ..... ON  
G OFF ..... ON  
B OFF ..... ON

### DISPLAY POSITION ADJUSTMENT (DISP)

1. Input a color-bar signal.
2. Set to service adjustment Mode.
3. Select DISP with **1** and **4**.
4. Adjust with **3** and **6** for the bar center.
5. Write the memory by pressing **MUTING** then **ENTER**.
6. Check if the text is displayed on the screen.

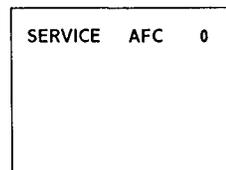


### SUB BRIGHT ADJUSTMENT (SBRT)

1. Input a cross-hatch signal.
2. Set to service adjustment mode.
3. Set the PICTURE and BRIGHT to minimum.
4. Select SBRT with **1** and **4**.
5. Adjust with **3** and **6** for obtain a faintly visible cross-hatch.
6. Write into the memory by pressing **MUTING** then **ENTER**.

### SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)

1. Input a color-bar signal.
2. Set to service adjustment Mode.
3. Connect an oscilloscope to CN703 Pin③ (B OUT) of C board.
4. Select SHUE and SCOL with **1** and **4**.
5. Adjust with **3** and **6** for the  $V1=V4$  (SCOR) and  $V2=V3$  (SHUE).

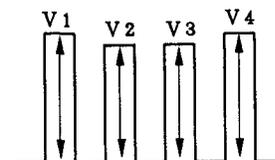


6. Write into the memory by pressing **MUTING** then **ENTER**.

### V.SIZE ADJUSTMENT (VSIZ)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VSIZ with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical size.
5. Write into the memory by pressing **MUTING** then **ENTER**.


V. SIZE (VSIZ)

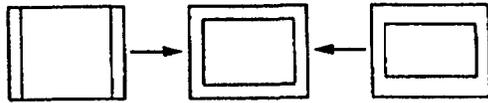

### V.CENTER ADJUSTMENT (VPOS)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VPOS with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical center.
5. Write into the memory by pressing **MUTING** then **ENTER**.

V. CENTER (VPOS)

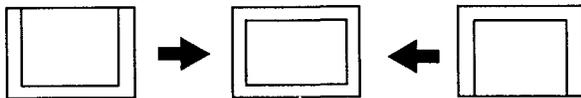


### H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE).

1. Input a cross-hatch signal.
2. Set the Service adjustment mode.
3. Select HPOS with **1** and **4**.
4. Adjust with **3** and **6** to the best horizontal center.
5. Write into the memory by pressing **MUTING** then **ENTER**.

H. CENTER (HPOS)

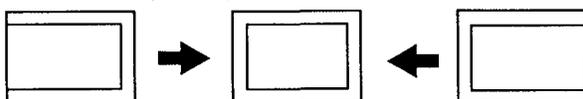

### V LINEARITY (VLIN) AND V CORRECTION (VSCO) ADJUSTMENTS

1. Input a cross-hatch signal.
2. Set to Service adjustment Mode.
3. Select VLIN and VSCO with **1** and **4**.
4. Adjust with **3** and **6** for the best picture.
5. Write the memory by pressing **MUTING** then **ENTER**.

V LINEARITY (VLIN)



V CORRECTION (VSCO)






6-1. BLOCK DIAGRAMS

SECTION 6  
DIAGRAMS

KV-13M10/MT1300/  
RM-Y116 RM-Y123  
KV-14R10/1460R  
RM-Y116 RM-Y123


KV-13M10/MT1300/  
RM-Y116 RM-Y123  
KV-14R10/1460R  
RM-Y116 RM-Y123

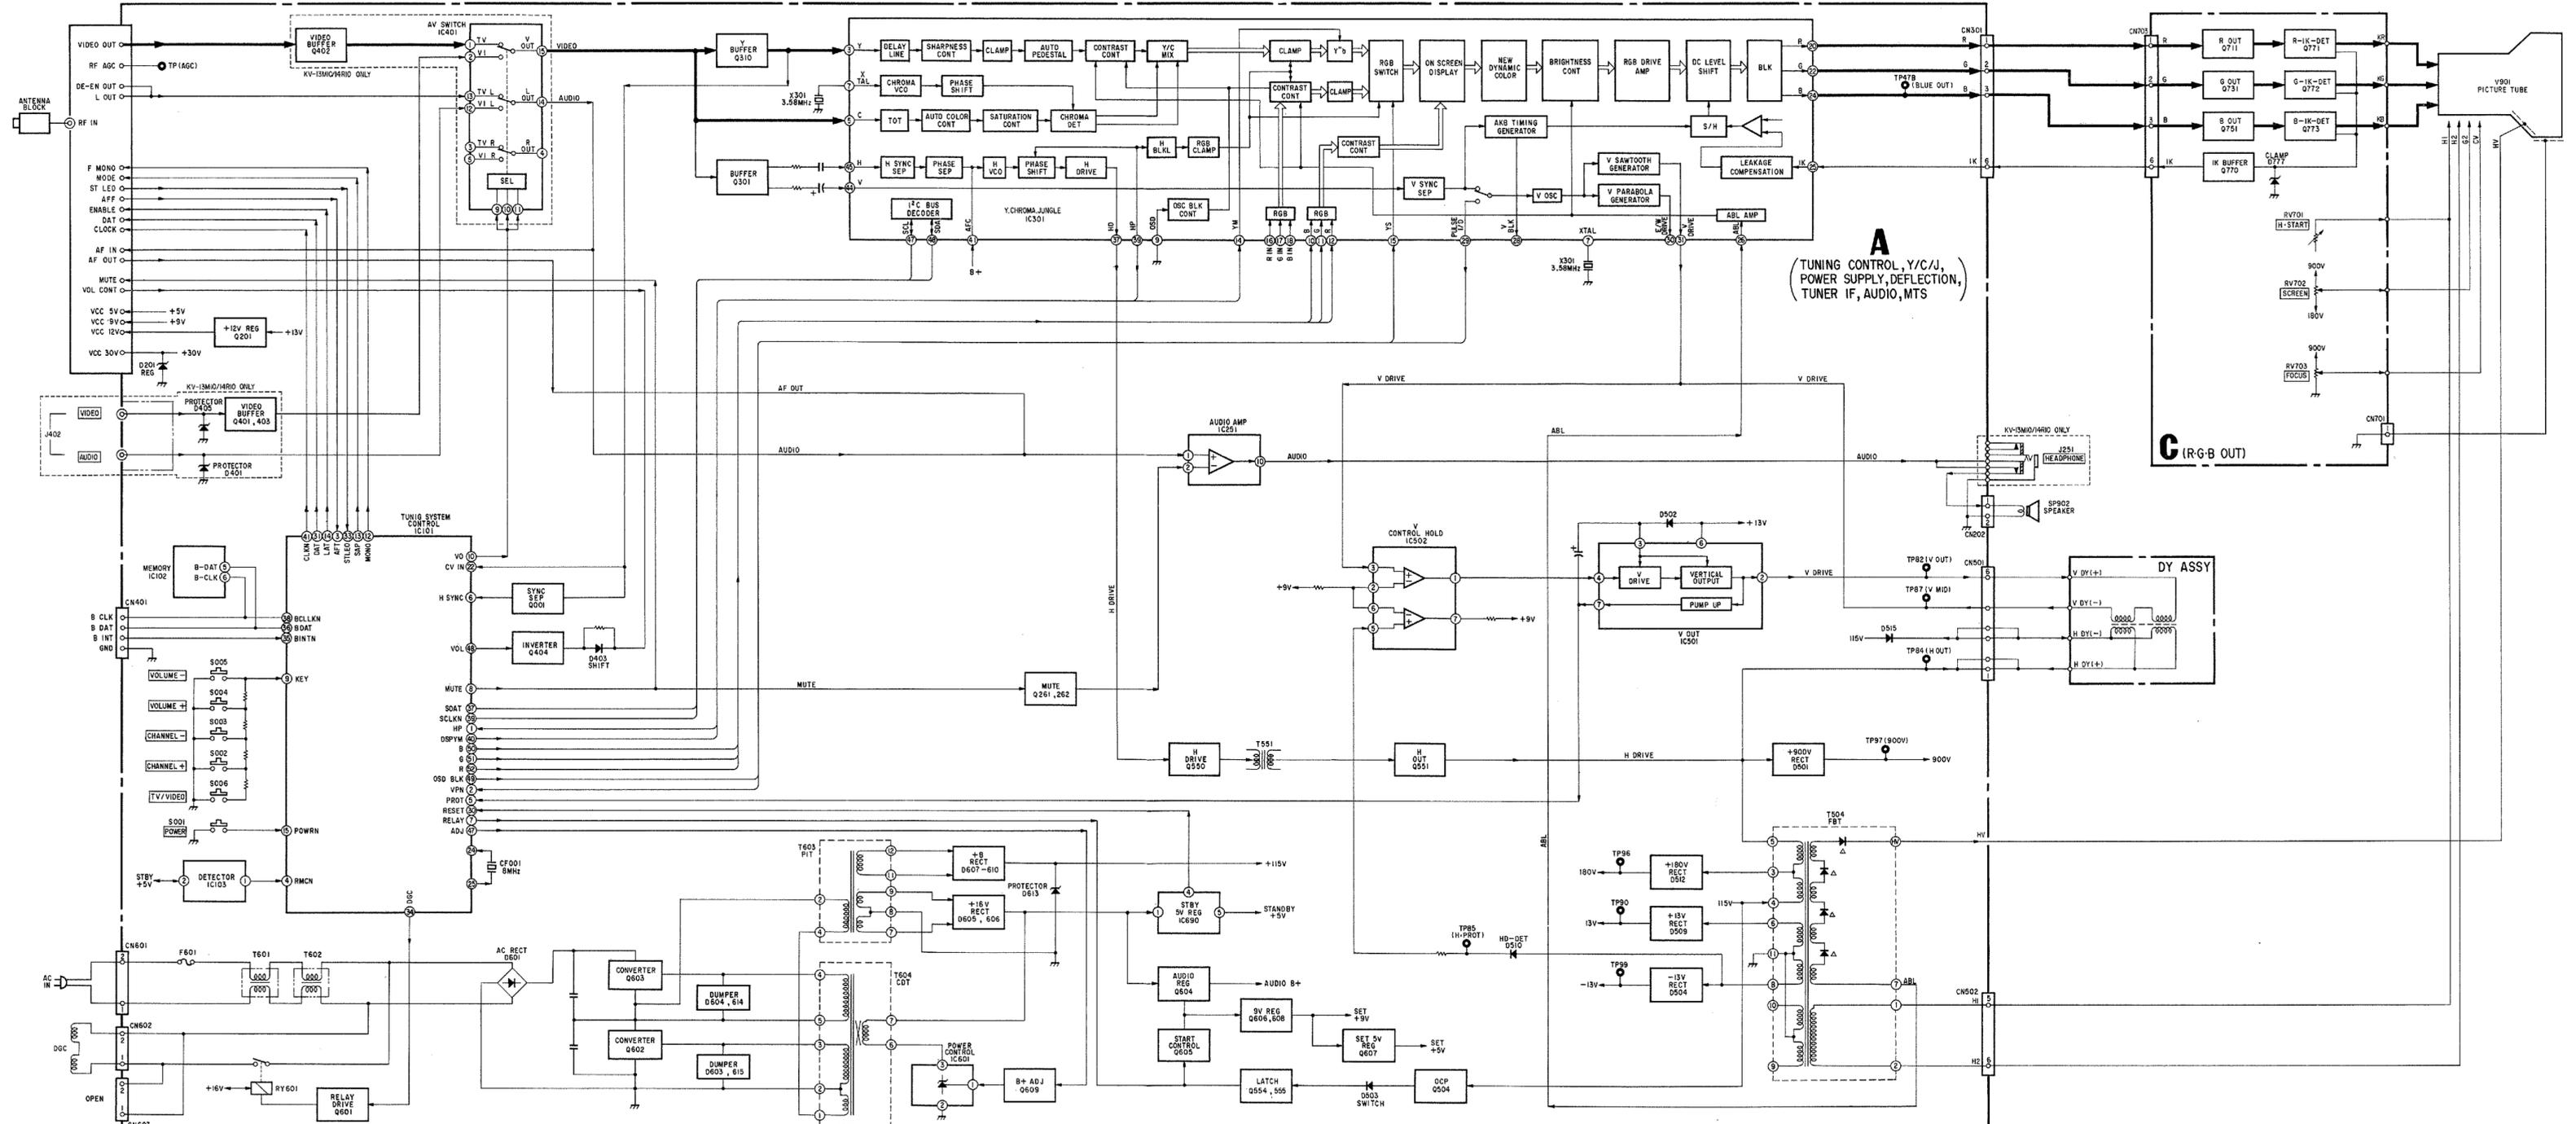

**KV-13M10/MT1300/**  
RM-Y116 RM-Y123  
**KV-14R10/1460R**  
RM-Y116 RM-Y123

**A** TUNING CONTROL, Y/C/J,  
POWER SUPPLY, DEFLECTION,  
TUNER/IF, AUDIO MTS

- A BOARD -

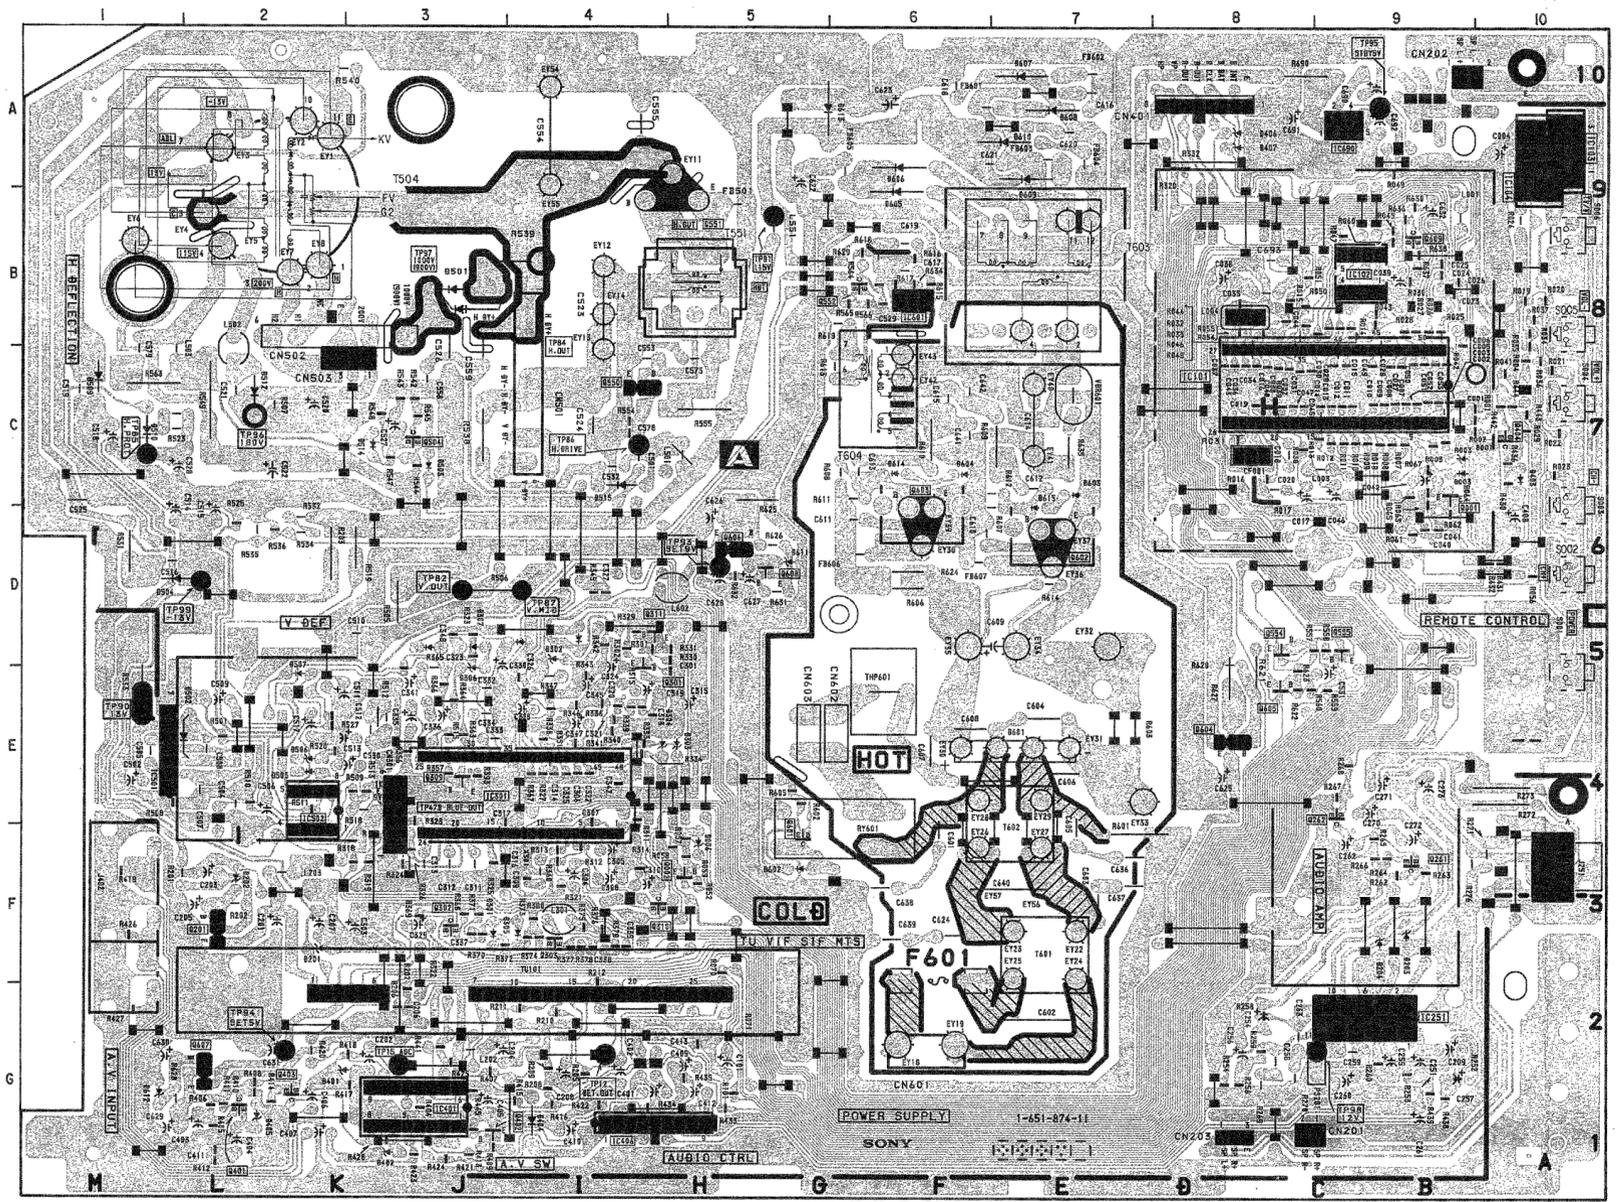


| IC         |      | DIODE |      |
|------------|------|-------|------|
| IC101      | C-8  | D001  | C-9  |
| IC102      | B-9  | D003  | C-9  |
| IC103      | A-10 | D201  | F-2  |
| IC251      | G-9  | D302  | D-4  |
| IC301      | E-3  | D401  | G-2  |
| IC401      | G-3  | D403  | C-10 |
| IC501      | E-1  | D405  | G-2  |
| IC502      | E-2  | D501  | B-3  |
| IC601      | B-6  | D502  | E-2  |
| IC690      | A-9  | D503  | C-3  |
| TRANSISTOR |      | D504  | D-1  |
| Q001       | C-9  | D505  | E-2  |
| Q201       | F-2  | D507  | E-2  |
| Q261       | F-9  | D509  | C-1  |
| Q262       | E-9  | D510  | C-1  |
| Q301       | D-4  | D512  | C-2  |
| Q310       | F-4  | D514  | C-3  |
| Q401       | G-2  | D515  | C-4  |
| Q402       | G-3  | D601  | E-7  |
| Q403       | G-2  | D602  | F-5  |
| Q404       | C-10 | D603  | C-7  |
| Q504       | C-3  | D604  | C-6  |
| Q550       | C-4  | D605  | A-6  |
| Q551       | A-5  | D606  | A-6  |
| Q554       | D-8  | D607  | A-7  |
| Q555       | D-9  | D608  | A-7  |
| Q601       | F-5  | D609  | A-7  |
| Q602       | D-7  | D610  | A-7  |
| Q603       | C-6  | D611  | D-5  |
| Q604       | E-8  | D612  | G-1  |
| Q605       | E-8  | D613  | A-6  |
| Q606       | D-5  | D614  | C-6  |
| Q607       | G-2  | D615  | C-7  |
| Q608       | D-5  |       |      |

A BOARD \* MARK


| Ref. No. | Location | KV-1300 | KV-13M10   | KV-14R10   | KV-1460R |
|----------|----------|---------|------------|------------|----------|
| C010     | F-3      | -       | 0.001      | 0.001      | -        |
| C017     | F-3      | 1       | 1          | -          | -        |
| C019     | G-3      | 560p    | 560p       | -          | -        |
| C020     | G-2      | 0.1     | 0.1        | -          | -        |
| C045     | F-2      | 2200p   | 2200p      | -          | -        |
| C046     | F-2      | 47 25V  | 47 25V     | -          | -        |
| C047     | F-3      | 100p    | 100p       | -          | -        |
| C048     | G-3      | 1000p   | 1000p      | -          | -        |
| C270     | C-12     | -       | 10         | 10         | -        |
| C402     | B-4      | -       | 1          | 1          | -        |
| C403     | A-5      | -       | 10         | 10         | -        |
| C404     | A-6      | -       | 100 16V    | 100 16V    | -        |
| C406     | A-7      | -       | 1          | 1          | -        |
| D401     | A-7      | -       | RD13ESB    | RD13ESB    | -        |
| D405     | A-7      | -       | RD13ESB    | RD13ESB    | -        |
| IC401    | B-7      | -       | MC14053BCP | MC14053BCP | -        |
| J251     | C-12     | -       | O          | O          | -        |
| J402     | A-7      | -       | 2P         | 2P         | -        |
| JW201    | C-12     | 5MM     | -          | -          | 5MM      |
| JW203    | C-12     | -       | 5MM        | 5MM        | -        |
| L003     | F-2      | 100 uH  | 100 uH     | -          | -        |
| R009     | F-3      | -       | 220        | 220        | -        |
| R016     | G-3      | 470     | 470        | -          | -        |
| R017     | G-3      | 1M      | 1M         | -          | -        |
| R038     | F-3      | 1k      | 1k         | -          | -        |
| R039     | G-3      | 15k     | 15k        | -          | -        |
| R205     | B-3      | 4.7k    | -          | -          | 4.7k     |
| R208     | C-3      | -       | 4.7k       | 4.7k       | -        |
| R271     | C-11     | -       | 1k         | 1k         | -        |
| R272     | C-11     | -       | 330        | 330        | -        |
| R273     | C-11     | -       | 330        | 330        | -        |
| R405     | A-5      | -       | 15k        | 15k        | -        |
| R406     | A-5      | -       | 5.6k       | 5.6k       | -        |
| R407     | B-6      | 100     | -          | -          | 100      |
| R408     | B-6      | -       | 0          | 0          | -        |
| R409     | B-6      | -       | 0          | 0          | -        |
| R410     | B-6      | -       | 1k         | 1k         | -        |
| R411     | A-6      | -       | 470        | 470        | -        |
| R412     | A-6      | -       | 470        | 470        | -        |
| R413     | B-6      | -       | 100k       | 100k       | -        |
| R414     | B-6      | -       | 100k       | 100k       | -        |
| R415     | B-6      | -       | 0          | 0          | -        |
| R418     | A-7      | -       | 1k         | 1k         | -        |
| R419     | A-7      | -       | 82         | 82         | -        |
| R420     | C-7      | -       | 1k         | 1k         | -        |
| R423     | B-7      | -       | 1k         | 1k         | -        |
| R425     | B-7      | -       | 3.3k       | 3.3k       | -        |
| R426     | A-7      | -       | 470k       | 470k       | -        |
| R441     | B-7      | -       | 100        | 100        | -        |
| R445     | B-7      | -       | 22k        | 22k        | -        |

○: TO BE MOUNT  
-: NOT MOUNT

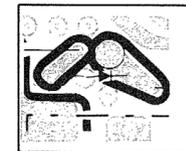

**NOTE:**  
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

6-2. CIRCUIT BOARDS LOCATION

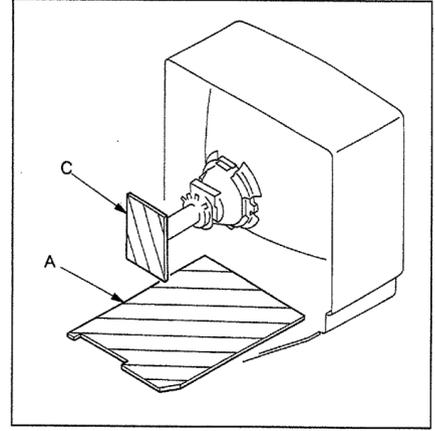

6-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50V or less are not indicated except for electrolytic and tantalums.
  - All electrolytics are in 50V unless otherwise specified.
  - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm  
Rating electrical power 1/4W

- All resistors are in ohms.  $\text{k}\Omega=1000\Omega$ ,  $\text{M}\Omega=1000\text{K}\Omega$
- : nonflammable resistor.
- : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved. (Refer to R525 on Page 17, 18.)
- When replacing the part in below table be sure to perform the related adjustment.

| Part replaced ()  | Adjustment ()           |
|---|-------------------------|
| IC502, IC601, Q554, Q555, D505, D506, D507, D510, DY, C511, C513, C528, C531, R511, R519, R520, R523, R525, R527, R557, R558, R559, R560, R617, R618, T504(FBT) | HV HOLD-DOWN (R525)     |
| IC101, IC601, Q609, R030, R617, R618, R629, R630, R636, R637  | B+ VOLTAGE CONFIRMATION |

- All voltages are in V.
- Voltage are dc with respect to ground unless otherwise noted.
- Readings are taken with a 10  $\text{M}\Omega$  digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- Circled numbers are waveform references.
- : B+ Line.
- : signal path.

Reference information

|           |         |                          |
|-----------|---------|--------------------------|
| RESISTOR  | : RN    | METAL FILM               |
|           | : RC    | SOLID                    |
|           | : FPRD  | NONFLAMMABLE CARBON      |
|           | : FUSE  | NONFLAMMABLE FUSIBLE     |
|           | : RW    | NONFLAMMABLE WIREWOUND   |
|           | : RS    | NONFLAMMABLE METAL OXIDE |
|           | : RB    | NONFLAMMABLE CEMENT      |
|           | : *     | ADJUSTMENT RESISTOR      |
| COIL      | : LF-8L | MICRO INDUCTOR           |
| CAPACITOR | : TA    | TANTALUM                 |
|           | : PS    | STYROL                   |
|           | : PP    | POLYPROPYLENE            |
|           | : PT    | MYLAR                    |
|           | : MPS   | METALIZED POLYESTER      |
|           | : MPP   | METALIZED POLYPROPYLENE  |
|           | : ALB   | BIPOLAR                  |
|           | : ALT   | HIGH TEMPERATURE         |
|           | : ALR   | HIGH RIPPLE              |

Note: The symbol display is on the component side.

The components identified by shading and mark are critical for safety. Replace only with part number specified.


The symbol indicate fast operating fuse. Replace only with fuse of same rating as marked.

Note: Les composants identifiés par un tramé et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



Le symbole indique une fusible a action rapide. Doit être remplacé par une fusible de meme valeur, comme maque.



- C BOARD -

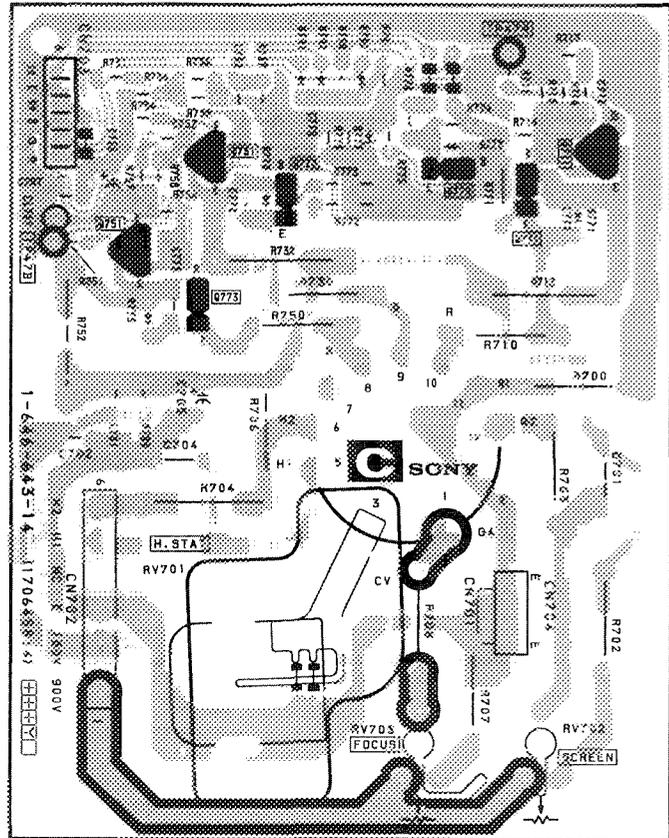


• C BOARD WAVEFORMS

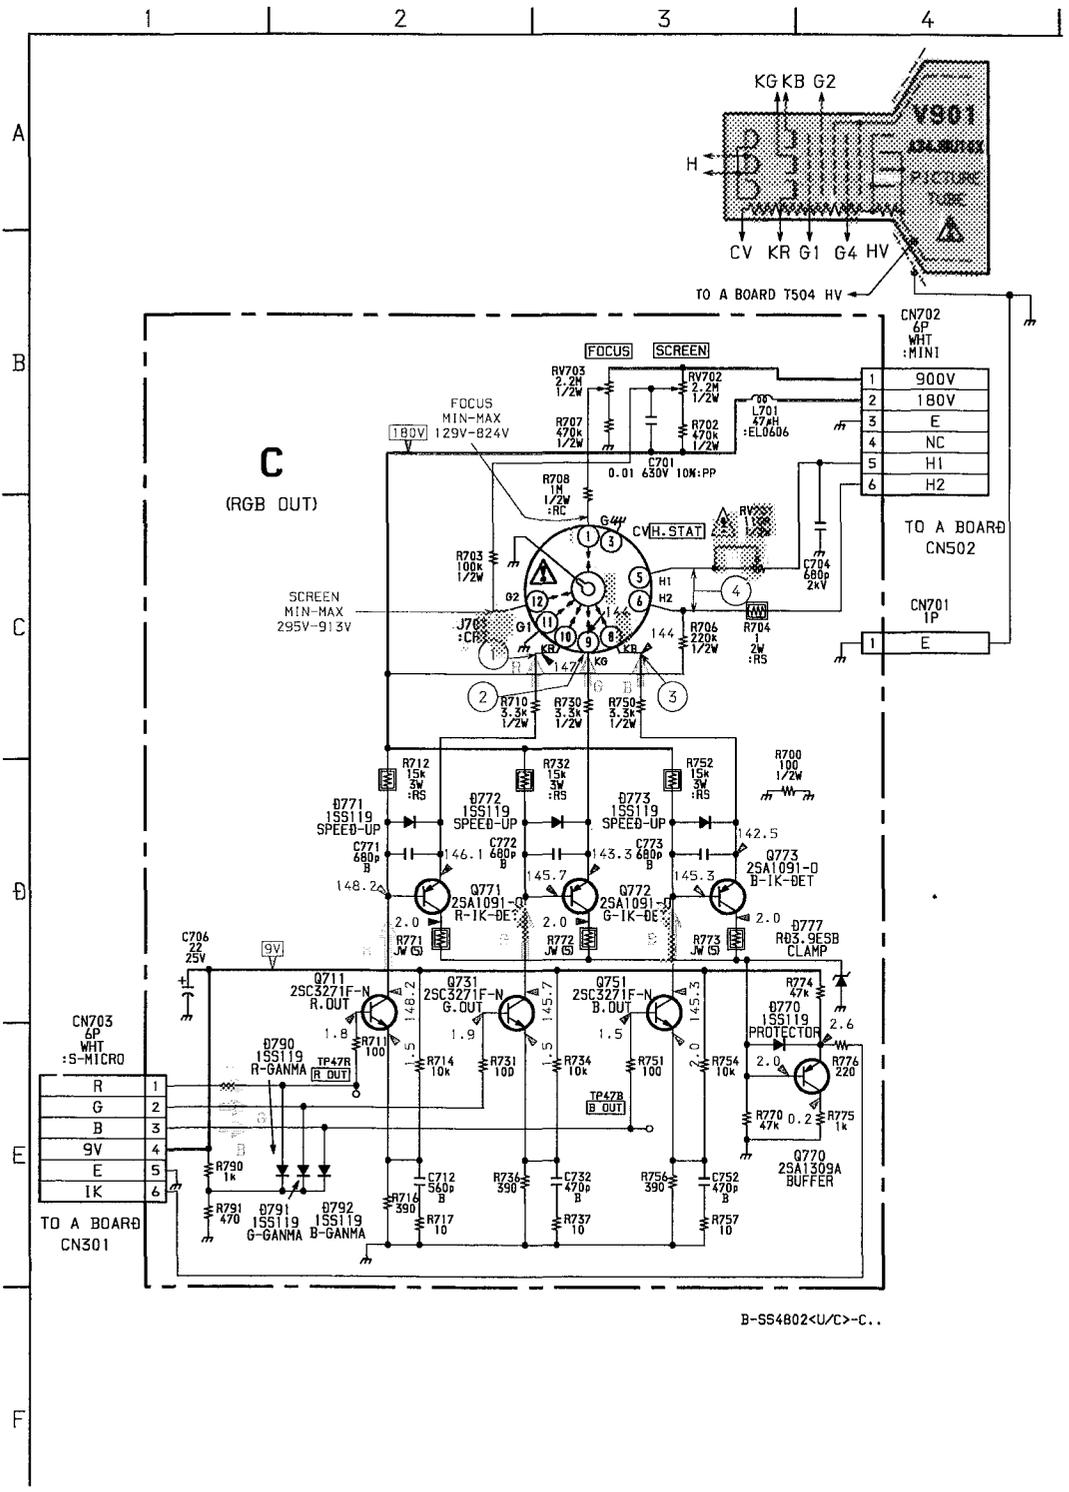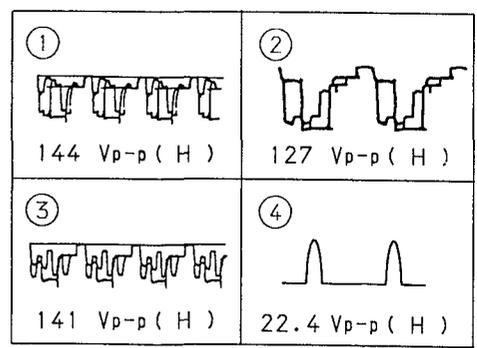


# 6-4. SEMICONDUCTONS


AN1431T

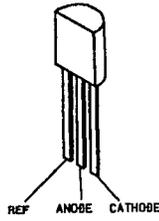

BU4053BC  
HC14053BFP  
MC14053BCP  
#P04053BC

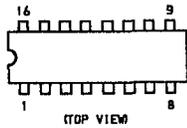

LA7830

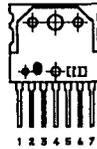


L78LR05D-MA




M37265M4-SV4812




RC4558P  
ST24C01B1  
#PC4558P

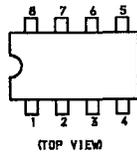


SBX1790-51

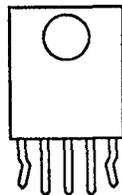

T0A2009A

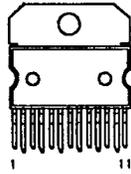


#PC1406HA

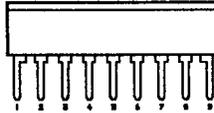


2SA1091-0



2SA1037K  
2SA1162-G/2SA  
2SB709A-QRS-TX  
2SD601A-Q

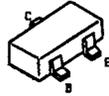


2SA1175  
2SA1309A

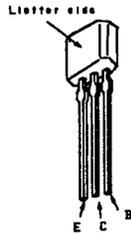

2SB564  
2SB733-34  
2SC3209LK  
2SD774-34




2SC2611  
2SC3271F-N

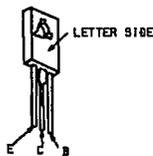

2SC4663NPR-F




2SD1877S-SONY-CA

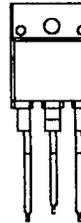


2SD2137-OP




01N20R R03.9ESB2  
R010ESB2 R05.1ESB1  
R013ESB1 R05.6ESB2  
R013ESB2 R06.8ESB2  
R030ESB2 1SS119  
R030ESB4 1SS119TD  
R036ESB2

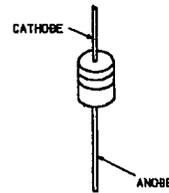


01NL20  
EL1Z  
GP08D  
RGP02-17PKG23

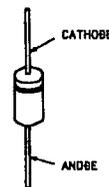

02S4MF

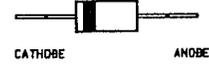

03SB60F

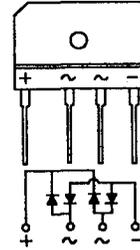

# SECTION 7 EXPLODED VIEW

**NOTE:**


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**7-1. CHASSIS**

- : BVTP4 × 16 7-685-663-79
- △: BVTP4 × 12 7-685-661-14

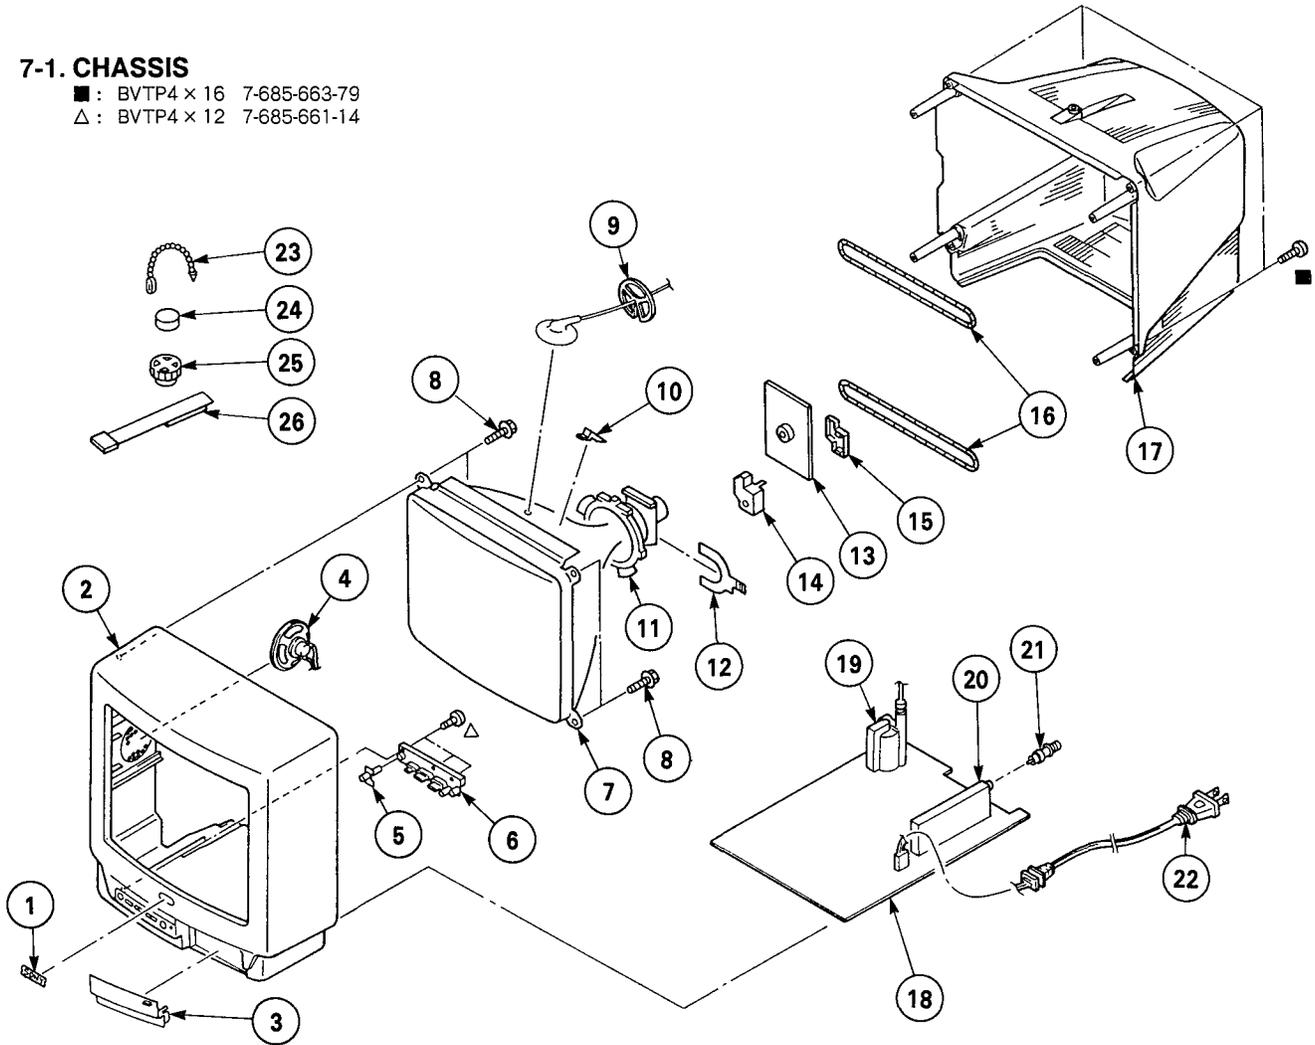

(KV-13M10/14R10 only)

| REF. NO. | PART NO.       | DESCRIPTION                      | REMARK       | REF. NO. | PART NO.       | DESCRIPTION                           | REMARK |
|----------|----------------|----------------------------------|--------------|----------|----------------|---------------------------------------|--------|
| 1        | 4-393-157-01   | EMBLEM (NO.6), SONY              |              | 13       | *A-1331-346-A  | C BOARD, COMPLETE                     |        |
| 2        | X-4031-909-1   | CABINET ASSY (WITE BEZEL ASSY)   | 3 (KV-13M10) | 14       | *4-374-912-01  | COVER (MAIN), CV VOL                  |        |
|          | X-4031-933-1   | CABINET ASSY (WITE BEZEL ASSY)   | 3 (KV-14R10) | 15       | *4-374-913-01  | COVER (REAR LID), CV VOL              |        |
|          | 4-044-855-01   | CABINET (WITE BEZEL) (KV-1460R)  |              | 16       | ▲ 1-428-346-31 | COIL, DEMAGNETIZATION                 |        |
|          | 4-045-060-01   | CABINET (WITE BEZEL) (KV-MT1300) |              | 17       | 4-044-857-01   | COVER, REAR                           |        |
| 3        | 4-044-856-01   | DOOR, CONTROL (KV-13M10/14R10)   |              | 18       | *A-1297-261-A  | A BOARD, COMPLETE (KV-13M10)          |        |
| 4        | 1-504-256-11   | SPEAKER (8CM)                    |              |          | *A-1297-307-A  | A BOARD, COMPLETE (KV-1460R)          |        |
| 5        | 4-039-846-01   | FILTER, REMOTE                   |              |          | *A-1297-311-A  | A BOARD, COMPLETE (KV-14R10)          |        |
| 6        | 4-039-849-01   | BUTTON, MULTI                    |              |          | *A-1297-364-A  | A BOARD, COMPLETE (KV-MT1300)         |        |
| 7        | ▲ 1-735-561-05 | PICTURE TUBE (A34J8U10X)         |              | 19       | ▲ 1-453-142-11 | TRANSFORMER ASSY, FLYBACK (KV-17C2A5) |        |
| 8        | 4-041-267-01   | SCREW (5), TAPPING               |              | 20       | ▲ 8-598-047-00 | TUNER EXP-LARDI                       |        |
| 9        | *3-704-372-01  | HOLDER, HV CABLE                 |              | 21       | 1-766-374-11   | PLUG, F-PIN                           |        |
| 10       | 4-041-361-01   | SPACER, DEFLECTION YOKE          |              | 22       | ▲ 1-765-486-11 | CORD, POWER (WITH CONNECTOR) 10A/25V  |        |
| 11       | ▲ 1-451-418-11 | DEFLECTION YOKE YL4NDK2          |              | 23       | 4-308-870-00   | CLIP, LEAD WIRE                       |        |
| 12       | 1-452-277-00   | MAGNET, BMC                      |              | 24       | 1-452-032-00   | MAGNET, DISK; 10 MM φ                 |        |
|          |                |                                  |              | 25       | 1-452-094-00   | MAGNET, ROTATABLE DISK; 15 MM φ       |        |
|          |                |                                  |              | 26       | X-4308-815-0   | PERMALLOY ASSY, CONVERGENCE           |        |



Les composants identifiés par  
une trame et une marque  $\Delta$   
sont critiques pour la sécurité  
Ne les remplacer que par une  
pièce portant le numéro spécifique.

The components identified by  
shading and mark  $\Delta$  are critical  
for safety  
Replace only with part number  
specified

**A**

| REF. NO.   | PART NO            | DESCRIPTION         | REMARK           | REF. NO.   | PART NO.   | DESCRIPTION                     | REMARK              |
|--|--------------------|---------------------|------------------|--|--|---------------------------------|---------------------|
| C348   | 1-163-129-00       | CERAMIC CHIP        | 330PF 5%         | C623   | 1-123-024-21                                     | ELECT                           | 33MF 160V           |
| C402   | 1-124-903-11       | ELECT               | 1MF 20% 50V      | <del>C624 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del>                               | <del>1000PF</del>               | <del>10% 400V</del> |
| C403   | 1-126-964-11       | ELECT               | 10MF 20% 50V     | C625   | 1-126-933-11                                     | ELECT                           | 100MF 20% 16V       |
| C404   | 1-126-933-11       | ELECT               | 100MF 20% 16V    | C628   | 1-104-664-11                                     | ELECT                           | 47MF 20% 25V        |
| C406   | 1-124-903-11       | ELECT               | 1MF 20% 50V      | C631   | 1-104-664-11                                     | ELECT                           | 47MF 20% 25V        |
| C408   | 1-126-964-11       | ELECT               | 10MF 20% 50V     | C632   | 1-126-964-11                                     | ELECT                           | 10MF 20% 50V        |
| C409   | 1-126-964-11       | ELECT               | 10MF 20% 50V     | <del>C636 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del>                               | <del>1000PF</del>               | <del>10% 400V</del> |
| C501   | 1-137-399-11       | FILM                | 0.1MF 5% 50V     | <del>C637 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del>                               | <del>1000PF</del>               | <del>10% 400V</del> |
| C502   | 1-126-233-11       | ELECT               | 22MF 20% 50V     | <del>C638 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del>                               | <del>1000PF</del>               | <del>10% 400V</del> |
| C504   | 1-130-489-00       | FILM                | 0.033MF 5% 50V   | <del>C639 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del>                               | <del>1000PF</del>               | <del>10% 400V</del> |
| C505   | 1-164-058-11       | CERAMIC             | 33PF 5% 50V      | <del>C640 <math>\Delta</math> 1-136-311-51</del> | <del>FILM</del>                                  | <del>0.47MF</del>               | <del>20% 125V</del> |
| C506   | 1-126-233-11       | ELECT               | 22MF 20% 50V     | C641   | 1-137-374-11                                     | FILM                            | 0.047MF 5% 50V      |
| C507   | 1-102-038-00       | CERAMIC             | 0.001MF 500V     | C642   | 1-137-374-11                                     | FILM                            | 0.047MF 5% 50V      |
| C508   | 1-102-038-00       | CERAMIC             | 0.001MF 500V     | C690   | 1-124-902-00                                     | ELECT                           | 0.47MF 20% 50V      |
| C509   | 1-126-948-11       | ELECT               | 100MF 20% 35V    | C691   | 1-126-935-11                                     | ELECT                           | 470MF 20% 16V       |
| C510   | 1-108-702-11       | MYLAR               | 0.068MF 10% 100V | C692   | 1-104-664-11                                     | ELECT                           | 47MF 20% 25V        |
| C511   | 1-124-927-11       | ELECT               | 4.7MF 20% 50V    | <CONNECTOR>                                      |  |                                 |                     |
| C512   | 1-164-096-11       | CERAMIC             | 0.01MF 50V       | CN202  | 1-564-505-11                                     | PLUG, CONNECTOR                 | 2P                  |
| C513   | 1-126-964-11       | ELECT               | 10MF 20% 50V     | CN301  | *1-564-509-11                                    | PLUG, CONNECTOR                 | 6P                  |
| C514   | 1-104-664-11       | ELECT               | 47MF 20% 25V     | CN401  | *1-560-124-00                                    | PLUG, CONNECTOR (2.5MM)         | 4P                  |
| C515   | 1-126-941-11       | ELECT               | 470MF 20% 25V    | CN501  | *1-580-798-11                                    | CONNECTOR PIN (DY)              | 6P                  |
| C516   | 1-102-244-00       | CERAMIC             | 220PF 10% 500V   | CN502  | 1-508-768-00                                     | PIN, CONNECTOR (5MM PITCH)      | 6P                  |
| C517   | 1-126-935-11       | ELECT               | 470MF 20% 16V    | CN601  | *1-580-843-11                                    | PIN, CONNECTOR (POWER)          |                     |
| C518   | 1-126-941-11       | ELECT               | 470MF 20% 25V    | CN602  | 1-508-786-00                                     | PIN, CONNECTOR (5MM PITCH)      | 2P                  |
| C519   | 1-102-244-00       | CERAMIC             | 220PF 10% 500V   | CN603  | 1-508-786-00                                     | PIN, CONNECTOR (5MM PITCH)      | 2P                  |
| C520   | 1-107-652-91       | ELECT               | 10MF 20% 250V    | <DIODE>  |  |                                 |                     |
| C521   | 1-102-244-00       | CERAMIC             | 220PF 10% 500V   | D001   | 8-719-109-84                                     | DIODE RD5.1ESB1                 |                     |
| C522   | 1-123-024-21       | ELECT               | 33MF 160V        | D003   | 8-719-911-19                                     | DIODE 1SS119                    |                     |
| C523   | 1-136-108-00       | FILM                | 0.43MF 5% 200V   | D201   | 8-719-110-72                                     | DIODE RD30ESB2                  |                     |
| C525   | 1-106-387-00       | MYLAR               | 0.068MF 10% 200V | D302   | 8-719-109-84                                     | DIODE RD5.1ESB1                 |                     |
| C526   | 1-162-114-00       | CERAMIC             | 0.0047MF 2KV     | D401   | 8-719-110-36                                     | DIODE RD13ESB2 (KV-13M10/14R10) |                     |
| C527   | 1-126-233-11       | ELECT               | 22MF 20% 50V     | D403   | 8-719-911-19                                     | DIODE 1SS119                    |                     |
| C528   | 1-107-635-91       | ELECT               | 4.7MF 20% 160V   | D405   | 8-719-110-36                                     | DIODE RD13ESB2 (KV-13M10/14R10) |                     |
| C530   | 1-104-664-11       | ELECT               | 47MF 20% 25V     | D501   | 8-719-028-72                                     | DIODE RGPO2-17EL-6433           |                     |
| C531   | 1-104-664-11       | ELECT               | 47MF 20% 25V     | D502   | 8-719-908-03                                     | DIODE GPO8D                     |                     |
| C553   | 1-102-228-00       | CERAMIC             | 470PF 10% 500V   | D503   | 8-719-911-19                                     | DIODE 1SS119                    |                     |
| <del>C554 <math>\Delta</math> 1-109-681-11</del> | <del>FILM</del>    | <del>0.0057MF</del> | <del>3%</del>    | <del>1.5KV</del>                                 | D504   | 8-719-302-43                    | DIODE EL1Z          |
| <del>C555 <math>\Delta</math> 1-162-116-91</del> | <del>CERAMIC</del> | <del>680PF</del>    | <del>10%</del>   | <del>2KV</del>                                   | D505   | 8-719-911-19                    | DIODE 1SS119        |
| <del>C558 1-106-371-00</del>                     | <del>MYLAR</del>   | <del>0.015MF</del>  | <del>10%</del>   | <del>100V</del>                                  | D506   | 8-719-110-08                    | DIODE RD8.2ESB2     |
| <del>C559 <math>\Delta</math> 1-162-119-91</del> | <del>CERAMIC</del> | <del>330PF</del>    | <del>10%</del>   | <del>2KV</del>                                   | D507   | 8-719-911-19                    | DIODE 1SS119        |
| <del>C575 1-106-371-00</del>                     | <del>MYLAR</del>   | <del>0.015MF</del>  | <del>20%</del>   | <del>200V</del>                                  | D509   | 8-719-302-43                    | DIODE EL1Z          |
| <del>C578 <math>\Delta</math> 1-108-379-91</del> | <del>MYLAR</del>   | <del>0.015MF</del>  | <del>10%</del>   | <del>100V</del>                                  | <del>D510 <math>\Delta</math> 8-719-302-43</del> | <del>DIODE EL1Z-V1</del>        |                     |
| <del>C601 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del> | <del>1000PF</del>   | <del>10%</del>   | <del>400V</del>                                  | <del>D512 8-719-302-43</del>                     | <del>DIODE EL1Z</del>           |                     |
| <del>C602 <math>\Delta</math> 1-136-311-51</del> | <del>FILM</del>    | <del>0.47MF</del>   | <del>20%</del>   | <del>125V</del>                                  | <del>D514 8-719-911-19</del>                     | <del>DIODE 1SS119</del>         |                     |
| <del>C603 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del> | <del>1000PF</del>   | <del>10%</del>   | <del>400V</del>                                  | <del>D515 8-719-908-03</del>                     | <del>DIODE GPO8D</del>          |                     |
| <del>C605 <math>\Delta</math> 1-161-741-71</del> | <del>CERAMIC</del> | <del>1000PF</del>   | <del>10%</del>   | <del>400V</del>                                  | <del>D601 <math>\Delta</math> 8-719-510-51</del> | <del>DIODE D3S863F</del>        |                     |
| C609   | 1-104-759-11       | ELECT               | 470MF 20% 200V   | D602   | 8-719-911-19                                     | DIODE 1SS119                    |                     |
| C610   | 1-164-625-11       | CERAMIC             | 680PF 10% 500V   | D603   | 8-719-510-48                                     | DIODE D1N20R                    |                     |
| C611   | 1-164-625-11       | CERAMIC             | 680PF 10% 500V   | D604   | 8-719-510-48                                     | DIODE D1N20R                    |                     |
| C612   | 1-136-169-00       | FILM                | 0.22MF 5% 50V    | D605   | 8-719-022-97                                     | DIODE D2S4MF                    |                     |
| C613   | 1-136-169-00       | FILM                | 0.22MF 5% 50V    | D606   | 8-719-022-97                                     | DIODE D2S4MF                    |                     |
| C614   | 1-129-719-91       | FILM                | 0.027MF 10% 630V | D607   | 8-719-510-26                                     | DIODE D1N120                    |                     |
| C615   | 1-164-625-11       | CERAMIC             | 680PF 10% 500V   | D608   | 8-719-510-26                                     | DIODE D1N120                    |                     |
| C616   | 1-165-127-11       | CERAMIC             | 470PF 10% 500V   | D609   | 8-719-510-26                                     | DIODE D1N120                    |                     |
| C617   | 1-137-366-11       | FILM                | 0.0022MF 5% 50V  | D610   | 8-719-510-26                                     | DIODE D1N120                    |                     |
| C618   | 1-165-127-11       | CERAMIC             | 470PF 10% 500V   | D611   | 8-719-110-17                                     | DIODE RD10ESB2                  |                     |
| C619   | 1-106-367-00       | MYLAR               | 0.01MF 10% 200V  | D612   | 8-719-109-90                                     | DIODE RD5.6ESB3                 |                     |
| C620   | 1-165-127-11       | CERAMIC             | 470PF 10% 500V   | D613   | 8-719-303-49                                     | DIODE R2M                       |                     |
| C621   | 1-165-127-11       | CERAMIC             | 470PF 10% 500V   |  |  |                                 |                     |
| C622   | 1-126-952-11       | ELECT               | 1000MF 20% 16V   |  |  |                                 |                     |

The components identified by shading and mark  $\Delta$  are critical for safety  
Replace only with part number specified.

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité  
Ne les remplacer que par une pièce portant le numéro spécifié.

KV-13M10/MT1300/  
RM-Y116 RM-Y123  
KV-14R10/1460R  
RM-Y116 RM-Y123

A

| REF.NO.           | PART NO.                | DESCRIPTION                         | REMARK | REF.NO. | PART NO.     | DESCRIPTION                           | REMARK                     |
|-------------------|-------------------------|-------------------------------------|--------|---------|--------------|---------------------------------------|----------------------------|
| D614              | 8-719-510-48            | DIODE D1N20R                        |        | Q310    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| D615              | 8-719-510-48            | DIODE D1N20R                        |        | Q401    | 8-729-216-22 | TRANSISTOR 2SA1162-G (KV-13M10/14R10) |                            |
|                   |                         | <FILTER>                            |        | Q402    | 8-729-216-22 | TRANSISTOR 2SA1162-G (KV-13M10/14R10) |                            |
| CF001             | 1-579-952-21            | VIBRATOR, CERAMIC                   |        | Q403    | 8-729-216-22 | TRANSISTOR 2SA1162-G (KV-13M10/14R10) |                            |
|                   |                         | <FUSE>                              |        | Q404    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| <del>F601</del>   | <del>1-576-193-11</del> | <del>FUSE 6.3A/125V</del>           |        | Q504    | 8-729-105-08 | TRANSISTOR 2SA1330-06                 |                            |
|                   | 1-533-223-11            | CLIP, FUSE: F601                    |        | Q550    | 8-729-140-96 | TRANSISTOR 2SD774-34                  |                            |
|                   |                         | <FERRITE BEAD>                      |        | Q551    | 8-729-810-49 | TRANSISTOR 2SD1877S-SONY-CA           |                            |
| FB501             | 1-410-396-41            | FERRITE BEAD INDUCTOR 0.45UH        |        | Q554    | 8-729-216-22 | TRANSISTOR 2SA1162-G                  |                            |
| FB601             | 1-412-911-11            | INDUCTOR, FERRITE BEAD              |        | Q555    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| FB602             | 1-412-911-11            | INDUCTOR, FERRITE BEAD              |        | Q601    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| FB603             | 1-412-911-11            | INDUCTOR, FERRITE BEAD              |        | Q602    | 8-729-025-77 | TRANSISTOR 2SC4663NPR-F               |                            |
| FB604             | 1-412-911-11            | INDUCTOR, FERRITE BEAD              |        | Q603    | 8-729-025-77 | TRANSISTOR 2SC4663NPR-F               |                            |
| FB605             | 1-410-396-41            | FERRITE BEAD INDUCTOR 0.45UH        |        | Q604    | 8-729-140-93 | TRANSISTOR 2SB733-34                  |                            |
| FB606             | 1-410-396-41            | FERRITE BEAD INDUCTOR 0.45UH        |        | Q605    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| FB607             | 1-410-396-41            | FERRITE BEAD INDUCTOR 0.45UH        |        | Q606    | 8-729-423-99 | TRANSISTOR 2SD2137-0P                 |                            |
|                   |                         | <IC>                                |        | Q607    | 8-729-140-96 | TRANSISTOR 2SD774-34                  |                            |
| IC101             | 8-759-274-78            | IC M37265M4-A11SP                   |        | Q608    | 8-729-216-22 | TRANSISTOR 2SA1162-G                  |                            |
| IC102             | 8-759-280-75            | IC ST24C01CB1                       |        | Q609    | 8-729-422-27 | TRANSISTOR 2SD601A-Q                  |                            |
| IC103             | 8-741-790-11            | IC SBX1790-11                       |        |         |              | <RESISTOR>                            |                            |
| IC251             | 8-759-980-43            | IC TDA2009A                         |        | R001    | 1-216-065-00 | METAL GLAZE 4.7K 5%                   | 1/10W                      |
| IC301             | 8-752-059-67            | IC CXA1465AS                        |        | R002    | 1-216-073-00 | METAL GLAZE 10K 5%                    | 1/10W                      |
| IC401             | 8-759-140-53            | IC UPD4053BC (KV-13M10/14R10)       |        | R003    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| IC501             | 8-759-801-98            | IC LA7830                           |        | R004    | 1-216-049-00 | METAL GLAZE 1K 5%                     | 1/10W                      |
| IC502             | 8-759-145-58            | IC UPC4558C                         |        | R005    | 1-216-073-00 | METAL GLAZE 10K 5%                    | 1/10W                      |
| IC601             | 8-759-420-24            | IC AN1431T-TA                       |        | R007    | 1-216-057-00 | METAL GLAZE 2.2K 5%                   | 1/10W                      |
| IC690             | 8-759-805-37            | IC L78LR05D-MA                      |        | R008    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
|                   |                         | <JACK>                              |        | R009    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W<br>(KV-13M10/14R10)  |
| J251              | 1-568-267-21            | JACK (KV-13M10/14R10)               |        | R012    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| J402              | 1-695-239-11            | JACK BLOCK, PIN 2P (KV-13M10/14R10) |        | R013    | 1-216-049-00 | METAL GLAZE 1K 5%                     | 1/10W                      |
|                   |                         | <COIL>                              |        | R014    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| L001              | 1-408-409-00            | INDUCTOR 10UH                       |        | R015    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| L002              | 1-408-421-00            | INDUCTOR 100UH                      |        | R016    | 1-216-041-00 | METAL GLAZE 470 5%                    | 1/10W<br>(KV-13M10/MT1300) |
| L003              | 1-408-421-00            | INDUCTOR 100UH (KV-13M10/MT1300)    |        | R017    | 1-216-121-00 | METAL GLAZE 1M 5%                     | 1/10W<br>(KV-13M10/MT1300) |
| L202              | 1-408-408-00            | INDUCTOR 8 2UH                      |        | R018    | 1-216-049-00 | METAL GLAZE 1K 5%                     | 1/10W                      |
| L501              | 1-412-553-11            | INDUCTOR 3 3MMH                     |        | R019    | 1-216-065-00 | METAL GLAZE 4.7K 5%                   | 1/10W                      |
| <del>L502</del>   | <del>1-410-669-31</del> | <del>INDUCTOR 33UH</del>            |        | R020    | 1-216-069-00 | METAL GLAZE 6.8K 5%                   | 1/10W                      |
| <del>L503</del>   | <del>1-412-531-61</del> | <del>INDUCTOR 33UH</del>            |        | R021    | 1-216-045-00 | METAL GLAZE 680 5%                    | 1/10W                      |
| L551              | 1-412-533-21            | INDUCTOR 47UH                       |        | R022    | 1-216-047-00 | METAL GLAZE 820 5%                    | 1/10W                      |
| L602              | 1-410-670-31            | INDUCTOR 39UH                       |        | R023    | 1-216-057-00 | METAL GLAZE 2.2K 5%                   | 1/10W                      |
|                   |                         | <IC LINK>                           |        | R025    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| <del>PS201A</del> | <del>1-532-637-91</del> | <del>LINK IC 1.0A</del>             |        | R026    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
|                   |                         | <TRANSISTOR>                        |        | R027    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
| Q001              | 8-729-216-22            | TRANSISTOR 2SA1162-G                |        | R028    | 1-216-041-00 | METAL GLAZE 470 5%                    | 1/10W                      |
| Q201              | 8-729-140-96            | TRANSISTOR 2SD774-34                |        | R029    | 1-216-049-00 | METAL GLAZE 1K 5%                     | 1/10W                      |
| Q261              | 8-729-216-22            | TRANSISTOR 2SA1162-G                |        | R030    | 1-216-073-00 | METAL GLAZE 10K 5%                    | 1/10W                      |
| Q262              | 8-729-422-27            | TRANSISTOR 2SD601A-Q                |        | R031    | 1-216-045-00 | METAL GLAZE 680 5%                    | 1/10W                      |
| Q301              | 8-729-216-22            | TRANSISTOR 2SA1162-G                |        | R032    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
|                   |                         |                                     |        | R033    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
|                   |                         |                                     |        | R034    | 1-216-295-00 | METAL GLAZE 0 5%                      | 1/10W                      |
|                   |                         |                                     |        | R036    | 1-216-295-00 | METAL GLAZE 0 5%                      | 1/10W                      |
|                   |                         |                                     |        | R038    | 1-216-049-00 | METAL GLAZE 1K 5%                     | 1/10W<br>(KV-13M10/MT1300) |
|                   |                         |                                     |        | R039    | 1-216-077-00 | METAL GLAZE 15K 5%                    | 1/10W<br>(KV-13M10/MT1300) |
|                   |                         |                                     |        | R041    | 1-216-073-00 | METAL GLAZE 10K 5%                    | 1/10W                      |
|                   |                         |                                     |        | R044    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |
|                   |                         |                                     |        | R045    | 1-216-065-00 | METAL GLAZE 4.7K 5%                   | 1/10W                      |
|                   |                         |                                     |        | R046    | 1-216-033-00 | METAL GLAZE 220 5%                    | 1/10W                      |

A

| REF. NO. | PART NO.     | DESCRIPTION | REMARK           | REF. NO. | PART NO.     | DESCRIPTION | REMARK          |
|----------|--------------|-------------|------------------|----------|--------------|-------------|-----------------|
| R047     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R339     | 1-216-045-00 | METAL GLAZE | 680 5% 1/10W    |
| R048     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W     | R341     | 1-216-687-11 | METAL CHIP  | 33K 0.50% 1/10W |
| R049     | 1-216-089-91 | METAL GLAZE | 47K 5% 1/10W     | R343     | 1-216-071-00 | METAL GLAZE | 8.2K 5% 1/10W   |
| R050     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R345     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W    |
| R052     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       | R346     | 1-216-057-00 | METAL GLAZE | 2.2K 5% 1/10W   |
| R054     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R347     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W    |
| R056     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R351     | 1-216-085-00 | METAL GLAZE | 33K 5% 1/10W    |
| R057     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R356     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R058     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R360     | 1-216-041-00 | METAL GLAZE | 470 5% 1/10W    |
| R060     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       | R363     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W    |
| R061     | 1-216-045-00 | METAL GLAZE | 680 5% 1/10W     | R366     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R062     | 1-216-097-00 | METAL GLAZE | 100K 5% 1/10W    | R367     | 1-216-109-00 | METAL GLAZE | 330K 5% 1/10W   |
| R063     | 1-216-121-00 | METAL GLAZE | 1M 5% 1/10W      | R405     | 1-216-077-00 | METAL GLAZE | 15K 5% 1/10W    |
| R064     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R406     | 1-216-067-00 | METAL GLAZE | 5.6K 5% 1/10W   |
| R065     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R407     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W    |
| R067     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R408     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R101     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R409     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R202     | 1-249-415-11 | CARBON      | 680 5% 1/4W      | R410     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R203     | 1-215-899-11 | METAL OXIDE | 15K 5% 2W F      | R411     | 1-216-041-00 | METAL GLAZE | 470 5% 1/10W    |
| R205     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R412     | 1-216-041-00 | METAL GLAZE | 470 5% 1/10W    |
| R206     | 1-216-689-11 | METAL GLAZE | 39K 5% 1/10W     | R413     | 1-216-097-00 | METAL GLAZE | 100K 5% 1/10W   |
| R207     | 1-216-083-00 | METAL GLAZE | 27K 5% 1/10W     | R414     | 1-216-097-00 | METAL GLAZE | 100K 5% 1/10W   |
| R208     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R415     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R209     | 1-216-069-00 | METAL GLAZE | 6.8K 5% 1/10W    | R418     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R210     | 1-216-033-00 | METAL GLAZE | 220 5% 1/10W     | R419     | 1-216-023-00 | METAL GLAZE | 82 5% 1/10W     |
| R211     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W      | R420     | 1-249-417-11 | CARBON      | 1K 5% 1/4W      |
| R253     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R422     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R254     | 1-216-015-00 | METAL GLAZE | 39 5% 1/10W      | R423     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R258     | 1-216-051-00 | METAL GLAZE | 1.2K 5% 1/10W    | R425     | 1-216-061-00 | METAL GLAZE | 3.3K 5% 1/10W   |
| R260     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       | R426     | 1-216-113-00 | METAL GLAZE | 470K 5% 1/10W   |
| R263     | 1-216-075-00 | METAL GLAZE | 12K 5% 1/10W     | R428     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R264     | 1-216-041-00 | METAL GLAZE | 470 5% 1/10W     | R430     | 1-216-061-00 | METAL GLAZE | 3.3K 5% 1/10W   |
| R265     | 1-216-085-00 | METAL GLAZE | 33K 5% 1/10W     | R431     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W      |
| R266     | 1-216-085-00 | METAL GLAZE | 33K 5% 1/10W     | R433     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R267     | 1-216-089-91 | METAL GLAZE | 47K 5% 1/10W     | R436     | 1-216-057-00 | METAL GLAZE | 2.2K 5% 1/10W   |
| R268     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R439     | 1-216-069-00 | METAL GLAZE | 6.8K 5% 1/10W   |
| R270     | 1-249-385-11 | CARBON      | 2.2 5% 1/4W      | R441     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W    |
| R271     | 1-249-417-11 | CARBON      | 1K 5% 1/4W       | R442     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W    |
| R272     | 1-249-411-11 | CARBON      | 330 5% 1/4W      | R445     | 1-216-081-00 | METAL GLAZE | 22K 5% 1/10W    |
| R273     | 1-249-411-11 | CARBON      | 330 5% 1/4W      | R501     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W    |
| R301     | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | R505     | 1-216-349-00 | METAL OXIDE | 1 5% 1W F       |
| R302     | 1-216-057-00 | METAL GLAZE | 2.2K 5% 1/10W    | R506     | 1-216-429-00 | METAL OXIDE | 270 5% 1W F     |
| R311     | 1-216-678-11 | METAL CHIP  | 13K 0.50% 1/10W  | R507     | 1-247-891-00 | CARBON      | 330K 5% 1/4W    |
| R312     | 1-216-079-00 | METAL GLAZE | 18K 5% 1/10W     | R508     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W     |
| R313     | 1-216-653-11 | METAL CHIP  | 1.2K 0.50% 1/10W | R509     | 1-216-101-00 | METAL GLAZE | 150K 5% 1/10W   |
| R314     | 1-216-117-00 | METAL GLAZE | 680K 5% 1/10W    |          |              |             |                 |
| R315     | 1-216-053-00 | METAL GLAZE | 1.5K 5% 1/10W    |          |              |             |                 |
| R321     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W      |          |              |             |                 |
| R322     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       |          |              |             |                 |
| R323     | 1-216-121-00 | METAL GLAZE | 1M 5% 1/10W      |          |              |             |                 |
| R324     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W     |          |              |             |                 |
| R325     | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |          |              |             |                 |
| R326     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W     |          |              |             |                 |
| R327     | 1-216-077-00 | METAL GLAZE | 15K 5% 1/10W     |          |              |             |                 |
| R328     | 1-216-025-00 | METAL GLAZE | 100 5% 1/10W     |          |              |             |                 |
| R333     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       |          |              |             |                 |
| R334     | 1-216-295-00 | METAL GLAZE | 0 5% 1/10W       |          |              |             |                 |
| R336     | 1-216-121-00 | METAL GLAZE | 1M 5% 1/10W      |          |              |             |                 |
| R338     | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W      |          |              |             |                 |

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

KV-13M10/MT1300/  
RM-Y116 RM-Y123  
KV-14R10/1460R  
RM-Y116 RM-Y123

**A** **C**

| REF. NO.                      | PART NO.     | DESCRIPTION | REMARK           | REF. NO.                        | PART NO.     | DESCRIPTION                           | REMARK          |
|-------------------------------|--------------|-------------|------------------|---------------------------------|--------------|---------------------------------------|-----------------|
| R510                          | 1-216-055-00 | METAL GLAZE | 1.8K 5% 1/10W    | R637                            | 1-216-073-00 | METAL GLAZE                           | 10K 5% 1/10W    |
| R511                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | R690                            | 1-216-355-11 | METAL OXIDE                           | 3.3 5% 1W F     |
| R512                          | 1-215-445-00 | METAL       | 10K 1% 1/4W      |                                 |              | <RELAY>                               |                 |
| R513                          | 1-216-645-11 | METAL CHIP  | 560 0.50% 1/10W  | <del>R601Δ 1-755-032-11</del>   |              | RELAY                                 |                 |
| R515                          | 1-216-675-11 | METAL CHIP  | 10K 0.50% 1/10W  |                                 |              | <SWITCH>                              |                 |
| R518                          | 1-215-431-00 | METAL       | 2.7K 1% 1/4W     | S001                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| R519                          | 1-215-879-11 | METAL OXIDE | 47K 5% 1W F      | S002                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| R520                          | 1-216-648-11 | METAL CHIP  | 750 0.50% 1/10W  | S003                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| R523                          | 1-215-471-00 | METAL       | 120K 1% 1/4W     | S004                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| <del>R525Δ</del>              |              | METAL CHIP  | 10K 1% 1/10W     | S005                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| R527                          | 1-216-678-11 | METAL CHIP  | 13K 0.50% 1/10W  | S006                            | 1-571-532-21 | SWITCH, TACTIL                        |                 |
| R531                          | 1-216-359-00 | METAL OXIDE | 6.8 5% 1W F      |                                 |              | <TRANSFORMER>                         |                 |
| R532                          | 1-215-457-00 | METAL       | 33K 1% 1/4W      | <del>T501Δ 1-853-142-11</del>   |              | TRANSFORMER ASSY. FLYBACK (MX-E70245) |                 |
| R533                          | 1-216-359-00 | METAL OXIDE | 6.8 5% 1W F      | <del>T551 1-437-195-11</del>    |              | TRANSFORMER HORIZONTAL DRIVE          |                 |
| R534                          | 1-215-462-00 | METAL       | 51K 1% 1/4W      | <del>T601Δ 1-423-895-11</del>   |              | TRANSFORMER LINE FILTER (LFT)         |                 |
| R536                          | 1-216-667-11 | METAL CHIP  | 4.7K 0.50% 1/10W | <del>T602Δ 1-423-895-11</del>   |              | TRANSFORMER LINE FILTER (LFT)         |                 |
| R538                          | 1-215-864-00 | METAL OXIDE | 150 5% 1W F      | <del>T603Δ 1-426-819-11</del>   |              | TRANSFORMER CONVERTER (FLT)           |                 |
| R539                          | 1-215-870-11 | METAL OXIDE | 1.5K 5% 1W F     | <del>T604Δ 1-423-906-31</del>   |              | TRANSFORMER CONVERTER (PRT)           |                 |
| R540                          | 1-249-441-11 | CARBON      | 100K 5% 1/4W     |                                 |              | <THERMISTOR>                          |                 |
| R542                          | 1-216-083-00 | METAL GLAZE | 27K 5% 1/10W     | <del>T8P601Δ 1-810-511-21</del> |              | THERMISTOR POSITIVE                   |                 |
| R543                          | 1-218-764-11 | METAL CHIP  | 330K 0.50% 1/10W |                                 |              | <TUNER>                               |                 |
| R544                          | 1-216-654-11 | METAL CHIP  | 1.3K 0.50% 1/10W | <del>TU101Δ 8-538-047-00</del>  |              | TUNER BTP-L4401                       |                 |
| R545                          | 1-216-097-00 | METAL GLAZE | 100K 5% 1/10W    |                                 |              | <VARISTOR>                            |                 |
| R547                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | VDR601                          | 1-810-551-21 | VARISTOR                              |                 |
| R548                          | 1-216-113-00 | METAL GLAZE | 470K 5% 1/10W    |                                 |              | <CRYSTAL>                             |                 |
| R549                          | 1-216-369-00 | METAL OXIDE | 1 5% 2W F        | X301                            | 1-760-190-41 | VIBRATOR, CRYSTAL                     |                 |
| R554                          | 1-216-043-00 | METAL GLAZE | 560 5% 1/10W     |                                 |              | *****                                 |                 |
| R555                          | 1-215-897-11 | METAL OXIDE | 6.8K 5% 2W F     | *A-1331-346-A                   |              | C BOARD, COMPLETE                     |                 |
| R557                          | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    |                                 |              | *****                                 |                 |
| R558                          | 1-216-065-00 | METAL GLAZE | 4.7K 5% 1/10W    | *4-374-912-01                   |              | COVER (MAIN), CV VOL                  |                 |
| R559                          | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W      | *4-374-913-01                   |              | COVER (REAR LID), CV VOL              |                 |
| R560                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              | <CAPACITOR>                           |                 |
| <del>R583Δ 1-215-882-71</del> |              | METAL OXIDE | 22 5% 2W F       | C701                            | 1-136-601-11 | FILM                                  | 0.01MF 10% 630V |
| <del>R601Δ 1-202-892-91</del> |              | SOLID       | 4.7K 20% 1/2W    | C701                            | 1-137-490-11 | FILM                                  | 0.01MF 10% 1KV  |
| R602                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     | C704                            | 1-162-116-00 | CERAMIC                               | 680PF 10% 2KV   |
| R605                          | 1-216-057-00 | METAL GLAZE | 2.2K 5% 1/10W    | C706                            | 1-124-916-11 | ELECT                                 | 22MF 20% 25V    |
| R606                          | 1-260-288-11 | CARBON      | 0.47 5% 1/2W     | C712                            | 1-164-082-11 | CERAMIC                               | 560PF 10% 50V   |
| R607                          | 1-247-889-00 | CARBON      | 270K 5% 1/4W     |                                 |              |                                       |                 |
| R608                          | 1-247-889-00 | CARBON      | 270K 5% 1/4W     | C732                            | 1-164-081-11 | CERAMIC                               | 470PF 10% 50V   |
| R609                          | 1-216-355-11 | METAL OXIDE | 3.3 5% 1W F      | C752                            | 1-164-081-11 | CERAMIC                               | 470PF 10% 50V   |
| R610                          | 1-216-355-11 | METAL OXIDE | 3.3 5% 1W F      | C771                            | 1-164-083-11 | CERAMIC                               | 680PF 10% 50V   |
| R611                          | 1-247-889-00 | CARBON      | 270K 5% 1/4W     | C772                            | 1-164-083-11 | CERAMIC                               | 680PF 10% 50V   |
| R612                          | 1-247-889-00 | CARBON      | 270K 5% 1/4W     | C773                            | 1-164-083-11 | CERAMIC                               | 680PF 10% 50V   |
| R613                          | 1-249-409-11 | CARBON      | 220 5% 1/4W      |                                 |              |                                       |                 |
| R614                          | 1-247-891-00 | CARBON      | 330K 5% 1/4W     |                                 |              |                                       |                 |
| R615                          | 1-216-101-00 | METAL GLAZE | 150K 5% 1/10W    |                                 |              |                                       |                 |
| R616                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              |                                       |                 |
| R617                          | 1-216-661-11 | METAL CHIP  | 2.7K 0.50% 1/10W |                                 |              |                                       |                 |
| R618                          | 1-215-471-00 | METAL       | 120K 1% 1/4W     |                                 |              |                                       |                 |
| R619                          | 1-247-811-31 | CARBON      | 150 5% 1/4W      |                                 |              |                                       |                 |
| R620                          | 1-249-430-11 | CARBON      | 12K 5% 1/4W      |                                 |              |                                       |                 |
| R621                          | 1-260-099-11 | CARBON      | 1K 5% 1/2W       |                                 |              |                                       |                 |
| R622                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              |                                       |                 |
| R623                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              |                                       |                 |
| R625                          | 1-216-355-11 | METAL OXIDE | 3.3 5% 1W F      |                                 |              |                                       |                 |
| R626                          | 1-247-811-31 | CARBON      | 150 5% 1/4W      |                                 |              |                                       |                 |
| R628                          | 1-249-415-11 | CARBON      | 680 5% 1/4W      |                                 |              |                                       |                 |
| R629                          | 1-216-687-11 | METAL CHIP  | 33K 0.50% 1/10W  |                                 |              |                                       |                 |
| R630                          | 1-216-687-11 | METAL CHIP  | 33K 0.50% 1/10W  |                                 |              |                                       |                 |
| R631                          | 1-249-431-11 | CARBON      | 15K 5% 1/4W      |                                 |              |                                       |                 |
| R632                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              |                                       |                 |
| R634                          | 1-216-073-00 | METAL GLAZE | 10K 5% 1/10W     |                                 |              |                                       |                 |
| R635                          | 1-212-857-00 | FUSIBLE     | 10 5% 1/4W F     |                                 |              |                                       |                 |
| R636                          | 1-216-049-00 | METAL GLAZE | 1K 5% 1/10W      |                                 |              |                                       |                 |

• The components identified by **Δ** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

